



# TG 300 Operating Instructions

## [Product Support](#)

Congratulations , you have just purchased one of the finest spot cleaning guns available today. It is manufactured from the best available materials and parts, to TEKMAR's high quality Standards. When used as directed it should provide years of trouble free service.

For safe operation it is important to understand that this is not a toy, it is a high powered airless spray gun, which has the potential when not used as directed, to cause a serious puncture wound.

### **SAFE OPERATING INSTRUCTIONS**

***Never point the gun at any part of your body or at any other person.***

***Always check electric cord for damage before using. If damaged do not effect temporary repair.***

***Only use with adequate ventilation and always wear eye protection.***

***Use only approved cleaning solvents. Never spray flammable solutions into the air.***

### **INSTRUCTION FOR USE**

1. Fill fluid bottle 4/5 full and replace on gun. Squeeze trigger until gun primes and fluid comes out of the nozzle.
2. Place garment to be cleaned on a clean absorbent cloth or exhaust surface. Direct a jet of cleaning solvent through stain in a circular motion, until soil is flushed through.
3. To avoid ringing adjust nozzle to wide spray pattern and spray around wet edge to feather out giving a smooth transition from wet to dry.
4. Always test fabric in an inconspicuous area to ensure color fastness.

### **CARE OF GUN**

No routine maintenance of the gun is required, however to ensure it's long life never use with a corrosive or water based cleaner (this will also void warranty).

Periodically and if the gun is to be stored for any period of time, drain it of any cleaning fluid and run a light machine oil (3 in 1 type) for a few seconds

© 2000 by Tekmar-Technical Marketing, Ltd.