



RK5000PS-3U/RK5000-3U Rack Mount Chassis



For Fiber Optic Modules

C1972M-A (10/06)

Contents

- Important Safety Instructions 5
- Regulatory Notices 6
- Description 7
 - Models 7
 - Front View (RK5000PS-3U) 8
 - Back View (RK5000PS-3U) 8
 - Front View (RK5000-3U) 9
 - Back View (RK5000-3U) 9
- Installation 10
 - Package Contents 10
 - Mounting a Chassis 10
 - Installing a Module 11
 - Installing a Blank Module 11
- Service 12
 - Removing the Power Bus 12
 - Replacing an Internal Power Supply 13
- Specifications 14


List of Illustrations


- 1 RK5000PS-3U Front View 8
- 2 RK5000PS-3U Back View 8
- 3 RK5000-3U Front View 9
- 4 RK5000-3U Back View 9
- 5 Mounting an RK5000PS-3U/RK5000-3U into a Rack 10
- 6 Module Installation 11
- 7 Blank Module Installation 11
- 8 Power Bus Removal 12
- 9 Internal Power Supply Replacement 13

 
Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the points where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases shall be placed on the apparatus.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
17. Installation should be done only by qualified personnel and conform to all local codes.
18. Unless the unit is specifically marked as a NEMA Type 3, 3R, 3S, 4, 4X, 6, or 6P enclosure, it is designed for indoor use only and it must not be installed where exposed to rain and moisture.
19. Use only installation methods and materials capable of supporting four times the maximum specified load.
20. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
21. Only use replacement parts recommended by Pelco.

The product and/or manual may bear the following marks:

 **WARNING:** This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit

 This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

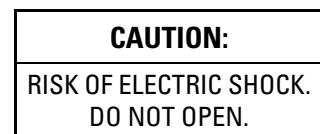

Regulatory Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RADIO AND TELEVISION INTERFERENCE

This equipment has been tested and found to comply with the limits of a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission's rules.

In order to maintain compliance with FCC regulations shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and television reception.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Description

The RK5000PS-3U rack mount chassis supports fiber optic modules. The chassis has 12 slots and an internal double-width power supply. You can insert up to 12 single-width modules or a combination of single-width and double-width modules into the slots. For redundancy, you can use the optional external power supply (EPS5000-120). It provides redundant power for up to two fully populated RK5000PS-3U chassis. You can mount the chassis, which is 3 rack units (RU) high, into an EIA-standard, 19-inch rack.

The RK5000-3U chassis has 14 slots and requires an external power supply. You can insert up to 14 single-width modules or a combination of single-width and double-width modules into the slots. You can mount the chassis, which is 3 rack units (RU) high, into an EIA-standard, 19-inch rack. You can use the optional EPS5000-120 external power supply, which consists of dual 120 watt, hot swappable power supplies, to power up to two fully populated RK5000-3U chassis. The EPS5000-120 is 1 RU high and rack mountable.

You can fill the empty module slots on either chassis with single-width blank modules (RK5001B-3U) and double-width blank modules (RK50002B-3U).

 **WARNING:** The internal double-width power supply must remain in the slots in which it is shipped. Do not relocate to the other slots.

MODELS

RK5000PS-3U	Rack mountable chassis with power supply, 3 RU
RK5000-3U	Rack mountable chassis, 3 RU; external power supply required

FRONT VIEW (RK5000PS-3U)

- ❶ Rack Ears (2)
- ❷ Power Supply
- ❸ Module Slots (12)
- ❹ Alarm from Module LED
- ❺ Power Fail LED
- ❻ Pelco Badge

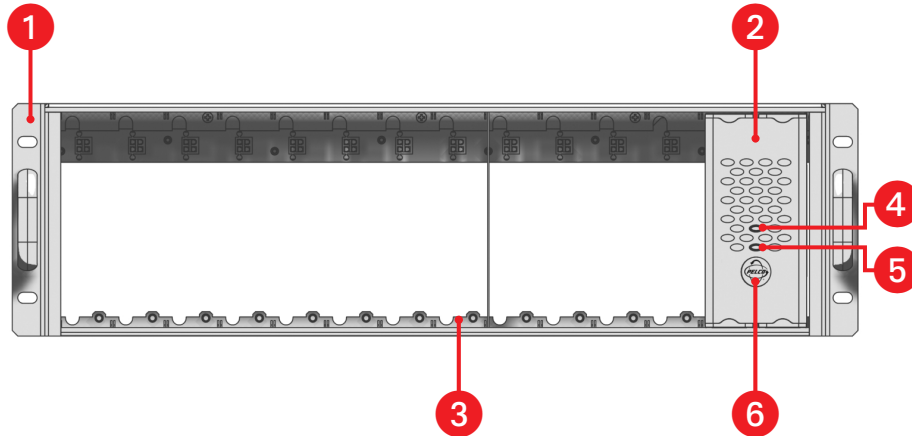 


Figure 1. RK5000PS-3U Front View

BACK VIEW (RK5000PS-3U)

- ❶ Thumbscrews for Fastening Modules (12)
- ❷ External Connector for Redundant Power Supply
- ❸ Relay Output Connector with Screw Terminal
- ❹ Power Button
- ❺ Power Cord Connector

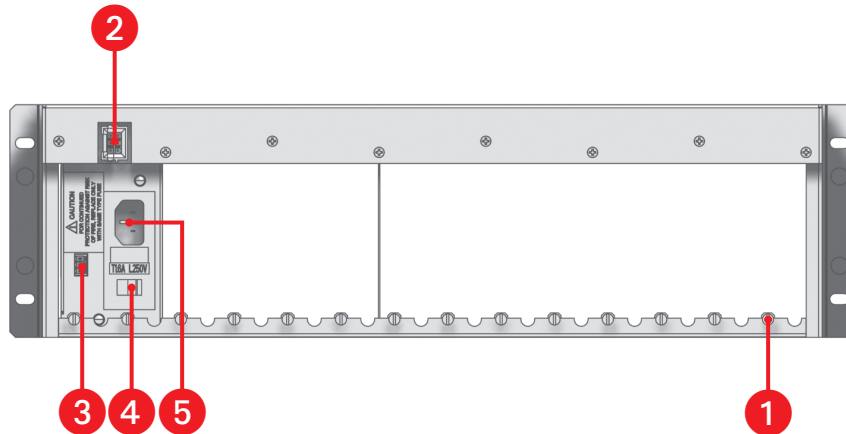 


Figure 2. RK5000PS-3U Back View

FRONT VIEW (RK5000-3U)

- 1 Rack Ears (2)
- 2 Module Slots (14)

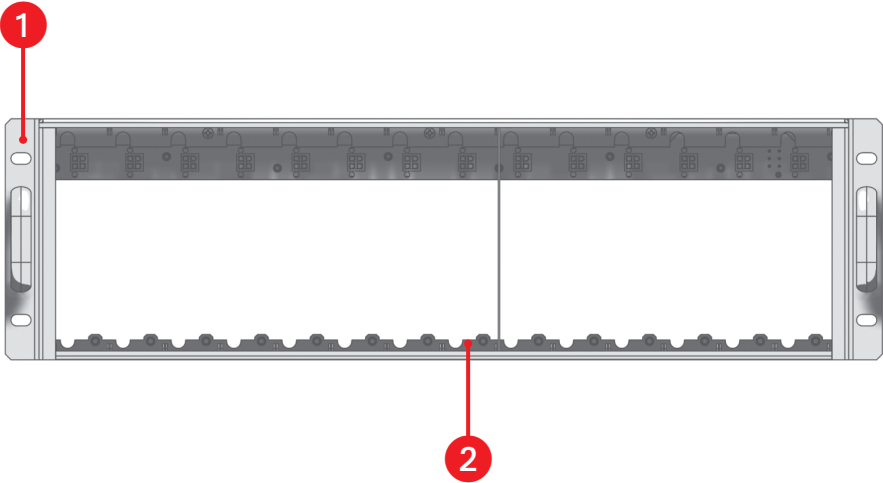 


Figure 3. RK5000-3U Front View

BACK VIEW (RK5000-3U)

- 1 External Connector for Redundant Power Supply
- 2 Thumbscrews for Fastening Modules (14)

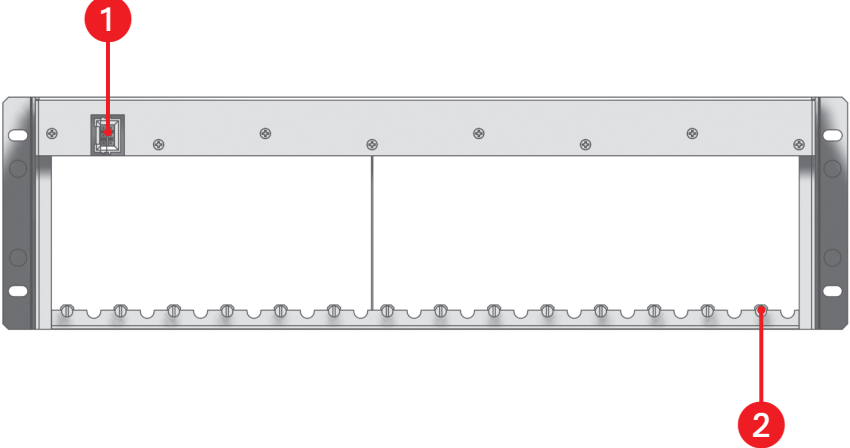 


Figure 4. RK5000-3U Back View

Installation

PACKAGE CONTENTS

RK5000PS-3U

- 1 Rack mount chassis
- 4 Screws and washers for rack mounting

RK5000-3U

- 1 Rack mount chassis
- 4 Screws and washers for rack mounting

MOUNTING A CHASSIS

⚠ WARNING: To ensure adequate ventilation, 1 RU of space is required above and below the RK5000PS-3U.

The procedure for mounting an RK5000PS-3U and an RK5000-3U into a rack is exactly the same. To mount a chassis, follow these steps and refer to Figure 5.

1. Insert the chassis into the rack.
2. Secure the chassis with the supplied screws and washers.

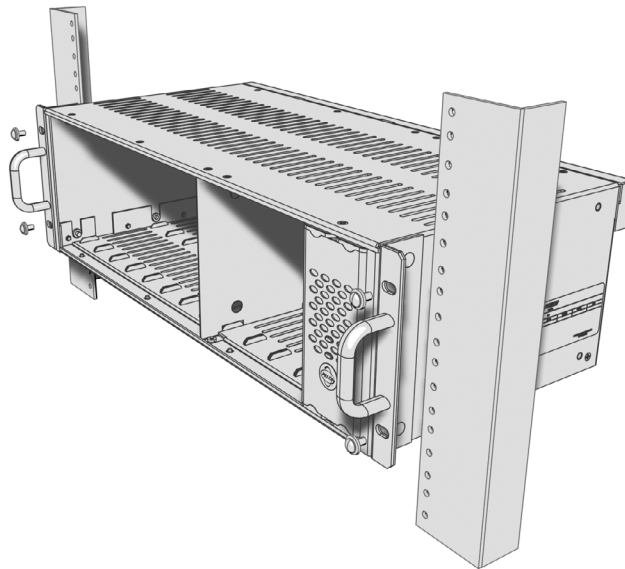 


Figure 5. Mounting an RK5000PS-3U/RK5000-3U into a Rack

INSTALLING A MODULE

You can install single-width or double-width modules into the empty slots on the RK5000PS-3U chassis and RK5000-3U chassis. To install a module, follow these steps and refer to Figure 6.

1. Insert the module into an empty slot of the chassis.
2. Secure the module by tightening the thumbscrew on the back of the chassis.

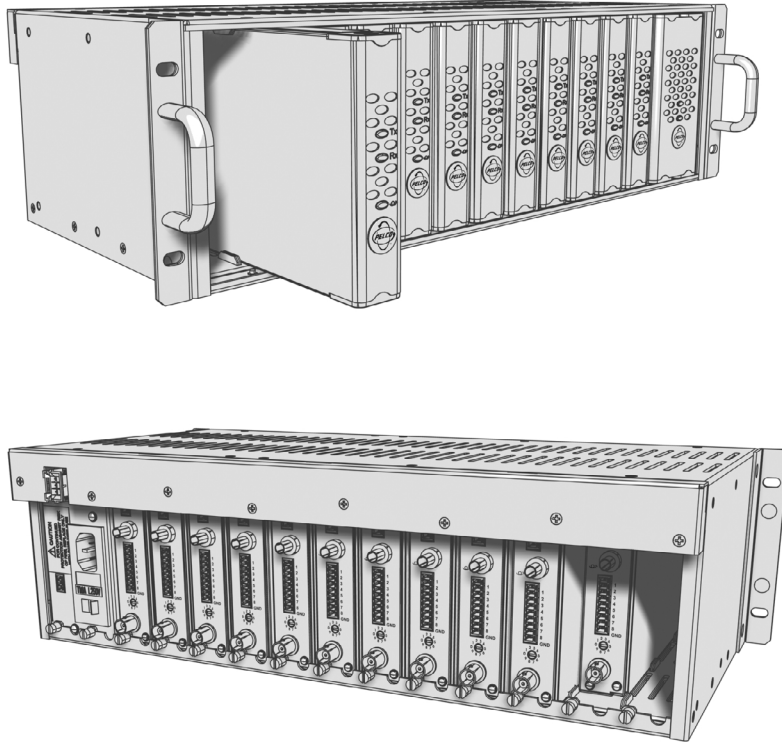 


Figure 6. Module Installation

INSTALLING A BLANK MODULE

You can use single-width or double-width blank modules to fill the empty module slots on the chassis. To attach a blank module, follow these steps and refer to Figure 7.

1. Insert the blank module into the empty slot on the chassis.
2. Secure the blank module by tightening the thumbscrew on the back of the chassis.

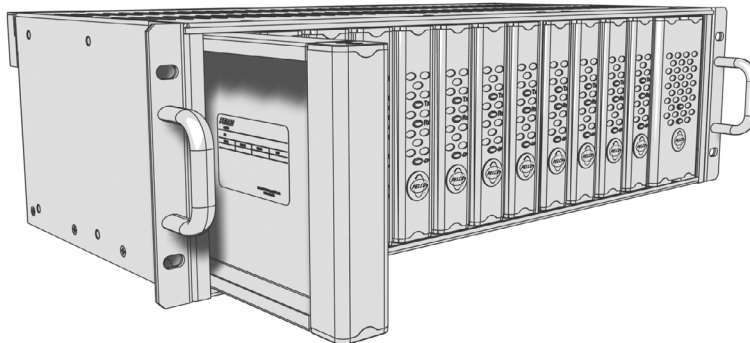 


Figure 7. Blank Module Installation

Service

REMOVING THE POWER BUS

You must remove the power bus from the RK5000PS-3U if you want to use the power supplies that are provided with the Fiber modules.

⚠ WARNING: Using the power supplies that are provided with the Fiber modules with the power bus on the RK5000PS-3U can cause damage to the unit.

To remove the power bus, follow these steps and refer to Figure 8.

1. Turn off the power supply.
2. Remove the power supply.
3. Unscrew the five Phillips flat head screws.

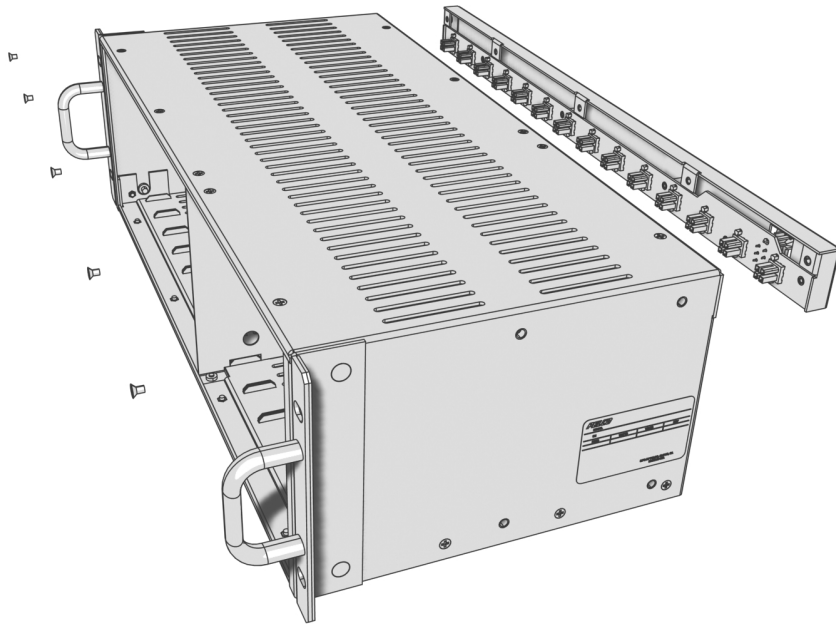 


Figure 8. Power Bus Removal

REPLACING AN INTERNAL POWER SUPPLY

You can easily replace the internal power supply in the RK5000PS-3U in case of failure. The front of the power supply has two LEDs. The top LED turns red when there is an alarm condition from one of the modules. The bottom LED turns red when the power supply fails. To replace an internal power supply, follow these steps and refer to Figure 9.

1. Unplug the power cord.
2. Unscrew the two thumbscrews on the back of the chassis that hold the power supply.
3. Remove the power supply.
4. Insert the new power supply.
5. Secure the power supply by tightening the two thumbscrews on the back of the chassis.
6. Plug in the power cord.
7. Turn on the power supply.

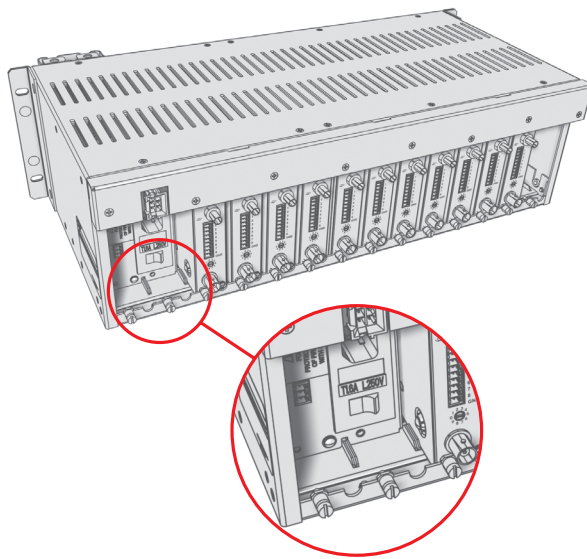 


Figure 9. Internal Power Supply Replacement

Specifications

RK5000PS-3U

ELECTRICAL

Input Voltage	100-240 VAC
Input Current	1.0 A
Output Voltage	12 VDC
Output Current	10 A
Fuse Rating	1.6 A
Redundant Capability	Yes with optional EPS5000-120 power supply

MECHANICAL

Number of Slots	12 for modules and 2 for power supply
Module Orientation	Vertical
Rack Units	3
Construction	Aluminum
Finish	Black

GENERAL

Operating Temperature	32° to 122°F (0° to 50°C)
Operating Humidity	80% maximum relative humidity, noncondensing
Storage Humidity	95% maximum relative humidity, noncondensing
Dimensions	5.22" H x 18.99" W x 8.85" D (13.26 x 48.23 x 22.48 cm)
Mounting	Fits 19-inch, EIA-standard rack
Unit Weight	8.01 lb (3.63 kg), with power supply 25.53 lb (11.58 kg), fully populated

RK5000-3U

MECHANICAL

Number of Slots	14 for modules
Module Orientation	Vertical
Rack Units	3
Construction	Aluminum
Finish	Black

GENERAL

Dimensions	5.22" H x 18.99" W x 8.85" D (13.26 x 48.23 x 22.48 cm)
Mounting	Fits 19-inch, EIA-standard rack
Unit Weight	5.19 lb (2.35 kg), chassis only 25.63 lb (11.63 kg), fully populated

PRODUCT WARRANTY AND RETURN INFORMATION

WARRANTY

Pelco will repair or replace, without charge, any merchandise proved defective in material or workmanship **for a period of one year** after the date of shipment.

Exceptions to this warranty are as noted below:

- Five years on FR/FT/FS Series fiber optic products and TW3000 Series unshielded twisted pair transmission products.
- Three years on Genex® Series products (multiplexers, server, and keyboard).
- Three years on Camclosure® and fixed camera models, except the CC3701H-2, CC3701H-2X, CC3751H-2, CC3651H-2X, MC3651H-2, and MC3651H-2X camera models, which have a five-year warranty.
- Three years on PMCL200/300/400 Series LCD monitors.
- Two years on standard motorized or fixed focal length lenses.
- Two years on Legacy®, CM6700/CM6800/CM9700 Series matrix, and DF5/DF8 Series fixed dome products.
- Two years on Spectra®, Esprit®, ExSite™, and PS20 scanners, including when used in continuous motion applications.
- Two years on Esprit and WW5700 Series window wiper (excluding wiper blades).
- Two years (except lamp and color wheel) on Digital Light Processing (DLP®) displays. The lamp and color wheel will be covered for a period of 90 days. The air filter is not covered under warranty.
- Eighteen months on DX Series digital video recorders, NVR300 Series network video recorders, and Endura™ Series distributed network-based video products.
- One year (except video heads) on video cassette recorders (VCRs). Video heads will be covered for a period of six months.
- Six months on all pan and tilts, scanners or preset lenses used in continuous motion applications (that is, preset scan, tour and auto scan modes).

Pelco will warrant all replacement parts and repairs for 90 days from the date of Pelco shipment. All goods requiring warranty repair shall be sent freight prepaid to Pelco, Clovis, California. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

Pelco assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the Products. Pelco's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party or product liability, relating to the Products shall not exceed the price paid by the Dealer to Pelco for such Products. In no event will Pelco be liable for any special, incidental or consequential damages (including loss of use, loss of profit and claims of third parties) however caused, whether by the negligence of Pelco or otherwise.

The above warranty provides the Dealer with specific legal rights. The Dealer may also have additional rights, which are subject to variation from state to state.

If a warranty repair is required, the Dealer must contact Pelco at (800)289-9100 or (559) 292-1981 to obtain a Repair Authorization number (RA), and provide the following information:

1. Model and serial number
2. Date of shipment, P.O. number, Sales Order number, or Pelco invoice number
3. Details of the defect or problem

If there is a dispute regarding the warranty of a product which does not fall under the warranty conditions stated above, please include a written explanation with the product when returned.

Method of return shipment shall be the same or equal to the method by which the item was received by Pelco.

RETURNS

In order to expedite parts returned to the factory for repair or credit, please call the factory at (800) 289-9100 or (559) 292-1981 to obtain an authorization number (CA number if returned for credit, and RA number if returned for repair).

All merchandise returned for credit may be subject to a 20% restocking and refurbishing charge.

Goods returned for repair or credit should be clearly identified with the assigned CA or RA number and freight should be prepaid. Ship to the appropriate address below.


If you are located within the continental U.S., Alaska, Hawaii or Puerto Rico, send goods to:

Service Department
Pelco
3500 Pelco Way
Clovis, CA 93612-5699

If you are located outside the continental U.S., Alaska, Hawaii or Puerto Rico and are instructed to return goods to the USA, you may do one of the following:

If the goods are to be sent by a COURIER SERVICE, send the goods to:

Pelco
3500 Pelco Way
Clovis, CA 93612-5699 USA

 Green The materials used in the manufacture of this document and its components are compliant to the requirements of Directive 2002/95/EC.



This equipment contains electrical or electronic components that must be recycled properly to comply with Directive 2002/96/EC of the European Union regarding the disposal of waste electrical and electronic equipment (WEEE). Contact your local dealer for procedures for recycling this equipment.

REVISION HISTORY

Manual #	Date	Comments
C1972M	11/04	Original version.
C1972M-A	10/06	Added Warning to <i>Description</i> section and <i>Mounting a Chassis</i> section. Revised electrical specifications.



Worldwide Headquarters
3500 Pelco Way
Clovis, California 93612 USA

USA & Canada
Tel: 800/289-9100
Fax: 800/289-9150

International
Tel: 1-559/292-1981
Fax: 1-559/348-1120

www.pelco.com

ISO9001