Bell

6131 USER MANUAL

Table of Contents T



Important Safety Instructionsii	i
Chapter 1: Introduction .1 Welcome .1 How To Use This Guide .1 About Your Bell TV Account .1 Watching TV Now .1 Additional Services .1 About Satellite TV Reception .1 Why Connect To A Phone Line .1 Moving On-Screen Logo .1	-2 -4 -5 -6 -7
Chapter 2: Satellite Receiver.2Remote Control.2Satellite Receiver Front Panel.2Satellite Receiver Back Panel.2Using The Menus.2Using Text Fields.2	2-6 2-6 2-7 2-9
Chapter 3: Finding Programs to Watch	-2 -2 -3
Chapter 4: Pay-Per-View	-2
Chapter 5: Favourites Lists.5What Are Favourites Lists?.5Creating Or Changing Favourites Lists.5Naming Favourites Lists.5Using Favourites Lists.5	-2 -2 -3
Chapter 6: Locks	i-2 i-4 i-4 i-5 i-6
Chapter 7: Interactive TV	'-1 '-2

Chapter 8: Timers	
Timers	
Using The Timers List8-4	
Setting Up An Automatic Timer8-4	
Setting Up A Manual Timer	
Deleting A Timer8-6 Overlapping Timers8-6	
•	
Chapter 9: Remote Controls9-1	
Changing The Address9-2	
Checking The Remote Control Address9-3	
Confirming Remote Control Operation	
Controlling Other Components9-4	
Recover Button9-1	
Chapter 10: Receiver Customization	
Using Caller ID	
Changing Languages	
Using Closed Captioning	
Using Dolby® Surround Sound	
Changing The Program Guide Order10-	
Changing The Guide Display	
Resetting To Factory Defaults	
Scheduling Receiver Updates	-10
Chapter 11: Connections and Setup11-	
Connecting To A TV	
Connecting To Your Dish Antenna	6
Connecting The Phone Line11-	
Using Troubleshooting Tools	9
Chapter 12: Reference	-1
Troubleshooting Tables	
Remote Control Device Codes12-	-15
Index I-1	

Important Safety Instructions


- Read these instructions.
- Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or groundingtype plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Use only attachments/accessories specified by the manufacturer.
- 12. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Apparatus shall not be exposed to dripping or slashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

User Guide

Note to Satellite TV System Installer: This reminder is provided to call the satellite TV system installer's attention to Article 820-40 of the *National Electrical Code* (NEC) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

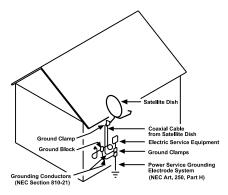

Safety Tips

- Unplug the receiver from the AC power outlet *before* cleaning.
- The use of accessories or attachments not recommended by the receiver manufacturer will void the *Limited Warranty*.
- Do not place the receiver in an enclosure such as a cabinet without proper ventilation.
- Do not stack the receiver on top of or below other electronic devices.
- Operate the receiver using *only* the type of power source indicated on the marking label. Unplug the receiver power cord by gripping the power plug, *not* the cord.
- Do not overload wall outlets or extension cords, as this can result in a risk of fire or electrical shock.
- Never insert objects of any kind into the receiver through openings, as the objects
 may touch dangerous voltage points or short out parts. This could cause fire or
 electrical shock.
- Make sure that the outdoor parts of the antenna system are grounded in accordance with local, state, federal, and National Electrical Code (NEC) requirements.
- Do not locate the antenna near overhead light or power circuits, or where it can fall
 into such power lines or circuits. When installing the antenna, take extreme care to
 avoid touching such power lines or circuits, as contact with them can be fatal.
- Do not attempt to service the receiver yourself, as opening or removing covers
 may expose you to dangerous voltage, and will void the Limited Warranty. Refer
 all servicing to authorized service personnel.
- Use an outlet that contains surge suppression or ground fault protection. For added
 protection during a lightning storm, or when the receiver is left unattended and
 unused for long periods of time, unplug the power cord from the wall outlet, disconnect the lines between the receiver and the antenna, and disconnect the telephone line. This will provide some protection against damage caused by lightning
 or power line surges.

Page iv