

Truck-Link



©2001 McCarney Technologies Inc.



MTI

[This page is intentionally left blank.]

CONTENTS

1	General Information	1
1.1	Copyright.....	2
1.2	Support	2
1.3	General Introduction.....	2
1.3.1	Product Components.....	2
1.4	How This Manual Is Organized	3
1.5	Conventions Used in This Manual	4
1.6	Warranty, Liabilities, and Legal Statements	4
1.6.1	Disclaimer	4
1.6.2	FCC	4
1.6.3	Limited Warranty.....	4
1.6.4	Service Under Warranty	5
1.6.5	Service Out of Warranty	5
1.6.6	Extended Warranty	5
2	Packaging and Handling Information	7
2.1	Part Numbers, Descriptions, Dimensions and Weights	8
2.2	Unpacking and Inspection	9
3	Installation Information	11
3.1	Locating the Truck-Link CPU in the Vehicle	12
3.2	Routing Cables	13
3.3	Mounting the Cellular Phone Connector Jack (Optional).....	15
3.4	Mounting the Cellular Phone Handset (Optional).....	16
3.5	Mounting the Driver Display (Optional).....	16
3.6	Mounting the GPS/Cellular Antenna	17
3.7	Connecting the Theft Detection Base Station (Optional).....	18
3.8	Connecting the Vehicle Power Cable.....	19
3.9	Initial Operational Test.....	20
3.10	Setup of Cellular Phone.....	21

LIST OF FIGURES

Figure 1: Desired Location of Truck-Link CPU in a Class 8 Sleeper	12
Figure 2: Desired Location of Truck-Link CPU in a Class 8 Day Cab	12
Figure 3: Details of Slide Mount	13
Figure 4: Detail of Connections on the Truck-Link CPU.....	14
Figure 5: Details of Cable Routing	14
Figure 6: Data Bus Access Panel.....	15
Figure 7: Possible Location for Cellular Phone Connector Jack	15
Figure 8: Possible Location of Driver Display	16
Figure 9: GPS/Cellular Antenna	17
Figure 10: Possible Location of GPS/Cellular Antenna	17
Figure 11: Detail of Connections to Truck-Link CPU.....	18
Figure 12: Anti-Theft Port Connection.....	18
Figure 13: Access Panel for Data Bus	19
Figure 14: Vehicle Data Bus VMACIII.....	20
Figure 15: Status Lights on the Truck-Link CPU.....	20

LIST OF TABLES

Table 1: Parts List.....	8
Table 2: Connection Points and Sequence.....	19

1 GENERAL INFORMATION

This chapter covers the following topics:

- Copyright Information
- Contacts for Product Support
- General Introduction
- Organization of This Manual
- Conventions Used in This Manual
- Warranty Information

1.1 Copyright

© 2001 McCarney Technologies Inc. All rights reserved. This manual may not be reproduced in whole or in part, by photocopy or other means, without the permission of McCarney Technologies Inc.

1.2 Support

Website

<http://www.mccarneytechnologies.com>

E-mail

techsupport@mccarneytechnologies.com

FAX

+1 (604) 304-9937

Mailing Address

McCarney Technologies Inc.
2130-21331 Gordon Way
Richmond, BC
Canada V6W 1J9
Ph: +1 (604) 304-9933

1.3 General Introduction

Truck-Link is a system developed by MTI engineers for the life-cycle maintenance and materials management of fleet vehicles. It monitors and wirelessly transmits “real-time” data. Truck-Link provides both data and voice communications. What makes Truck-Link a superior system is the use of technology to turn problems into solutions or to intercept problems before they begin. Truck-Link has diagnostic circuitry that performs “real time” monitoring of vehicle operating parameters. It detects, captures, and stores or forwards captured files to remote operation centers. Truck-Link records information in 30-second increments, providing data on functions 15 seconds before and after a violation of the vehicle's acceptable parameters in any monitored engine area. This capability allows a repair facility to access essential diagnostic data.

1.3.1 Product Components

1.3.1.1 Truck-Link Central Processing Unit

The Central Processing Unit (CPU) utilizes a Motorola 68332 base processor to process information received from the vehicle data bus (J1708/1587), GPS location, and cellular data. This information is processed in real-time and transmitted wirelessly to a host computer.

1.3.2.2.1 Backup Battery

A backup-battery is resident within Truck-Link's central processing unit and, in the event of a failure in the vehicle electrical circuitry, this battery provides necessary power to the Truck-Link.

1.3.2.2.2 GPS Receiver

Included is a 12 channel Rockwell GPS receiver, which can locate any vehicle anywhere in North America down to the block and the cross street.

1.3.2.2.2 Cellular Phone Transceiver

A three-watt Motorola analog cellular phone with the widest range available is part of the Truck-Link package. This phone provides a signal that is 5 to 7 times stronger than a conventional cell phone.

1.3.1.2 Cellular Phone Handset (Optional)

A standard Motorola handset, which has a large backlit display and a high-contrast display window, is used.

1.3.1.3 Driver Display (Optional)

The system provides a driver display digital message screen, on which a driver can receive "real time" text directions to or through an unfamiliar location. It connects to the Truck-Link CPU with a 9-pin cable.

A further enhancement of the Driver Display is a button which can be used to signal the fleet base of an extraordinary event.

1.3.1.4 Theft Detection System (Optional)

Truck-Link's add-on theft detection system is a small device that is easily mounted out of sight on the vehicle. If the vehicle is moved in an unauthorized manner, Truck-Link automatically alerts fleet dispatch.

Truck-Link is equipped with a GPS receiver, which enables fleet operations to determine the vehicle's exact geographical location, monitor its movement, and direct police to intercept.

The Theft Detection module is activated/deactivated through the *SnapShotHD* software. A back-up battery assures that even if the vehicle's power is disconnected, Truck-Link will transmit the location to the base station.

1.3.1.5 GPS/Cellular Antenna

A low profile unitized antenna for both GPS and cellular communication can be easily and quickly mounted on any vehicle




1.4 How This Manual Is Organized

This manual is divided into three sections. Section 1, *General Information*, provides contact information, an overview of the Truck-Link system, a description of the conventions used in the manual, and warranty information.

Section 2, *Packing and Handling Information*, provides a parts list and basic handling information.

Section 3, *Installation Information*, outlines how to install and configure Truck-Link.

1.5 Conventions Used in This Manual

	Warning: This symbol indicates important information about product safety.
	Caution: This symbol indicates important information about the installer's safety.
	Note: This symbol indicates important information that may improve the installation.

1.6 Warranty, Liabilities, and Legal Statements

1.6.1 Disclaimer

MTI makes no representations or warranties with respect to this manual. Further, MTI reserves the right to make changes to the specifications of the product described within this manual at any time without notice and without obligation of MTI to notify any person of such revisions or changes.

1.6.2 FCC

“Warning: This equipment generates, uses, and can radiate radio frequency energy, and if not installed in accordance with the instruction manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to correct the interference.”

1.6.3 Limited Warranty

MTI hereby warrants its products to the immediate purchaser of this product, and to no others in the line of commerce. Any other users, purchasers, or bystanders involved with this product are expressly excluded from this warranty. MTI hereby warrants its product for fitness for ordinary purposes for which such goods are used. MTI warrants to the purchaser that each product manufactured to be delivered hereunder will be free from defects in material, workmanship, and title. MTI warrants that each product manufactured will deliver the performance described in our sales literature, provided such product is properly cared for, and operated under normal conditions with knowledgeable supervision. The warranty is valid for a period of one year from the date of shipment. If, within that time, the product delivered hereunder does not meet the warranty specified above, the purchaser must notify MTI promptly.

Thereupon, MTI shall correct any defect, either by repairing any defective part or parts, or making available at MTI's factory a repaired or replacement part. It will be the sole decision of MTI as to which manner of correction shall be employed. Said warranty extends only to the immediate purchaser and not the purchaser's customers, subsequent purchasers, bystanders, or any other person who may have contact with MTI's product.

In the event of any defective units, the liability of MTI hereunder shall be limited to replacing or repairing any defective units, which are returned FOB. to MTI's factory. The option as to returning versus replacing the part shall be solely that of MTI. Equipment or parts, which have been subject to abuse, misuse, accident, alterations, neglect, unauthorized repair, or improper installation, are not covered by this warranty. MTI shall have the right of final determination as to the existence and cause of any defects. In no case shall products be returned without first obtaining permission from MTI prior to shipment. In the event of return or replacement of defective parts, the warranty period shall be tolled for the duration of the return or repair. The warranty shall continue for the remainder of the original period, or for 30 days, upon date of shipment by MTI to the purchaser.

In no event will MTI be liable for any incidental or consequential damages. If there should be any liability found, it shall be limited to the original purchase price of the product in question if said product is found to be defective. This warranty is in lieu of all other warranties, whether expressed, implied, or statutory, including implied warranties of merchantability of fitness. There are no warranties that extend beyond the description on the face hereof.

1.6.4 Service Under Warranty

If technical problems are experienced with your system, please call the MTI at 604.304.9933, or fax to 604.304.9937.

1.6.5 Service Out of Warranty

If your system is out of warranty, you should follow the same procedure when requesting service of returned parts. You will be responsible for all parts, service, and shipping costs. On-site service is available. Contact MTI for current rates. Should your company require a purchase order for out-of-warranty repairs, inform your MTI representative of that requirement during the initial call.

1.6.6 Extended Warranty

MTI offers an extended warranty contract. To take advantage of this extended warranty, you must sign the extended warranty contract and return it, together with full payment to MTI prior to the end of your normal warranty period. The extended warranty period is one additional year. Shipping and labor charges are not included in the extended warranty, and are the only expenses you incur during this period.

[This page is intentionally left blank.]

2 PACKAGING AND HANDLING INFORMATION

This chapter covers the following topics:

- Part Numbers, Description, Dimensions and Weights
- Unpacking and Inspection

2.1 Part Numbers, Descriptions, Dimensions and Weights

The Truck-Link system is shipped in one container. Table 1, below, describes the parts which comprise the Truck-Link system (note that this list includes the optional components). This list may be used as a checklist for the package contents.

Part Number	Qty.	Description	Dimensions	Weight
10-01-000	1	Truck-Link CPU	8"x11"x3"	
10-02-000	1	Driver Display (Optional)	4.5"x7.5"x1.5"	
10-04-000/ 10-04-001	1	Cellular Handset (Optional)	2"x8"	
10-01-100	1	Antenna with Cable Attached	5"dia. 7.5"ht.	
20-03-000	1	Theft Detection Device with Attached Cable (Optional)	*	*
	1	Theft Detection Badge (Optional)	*	*
MTI-C-10	1	Driver Display Connector Cable	25'	
MTI-C-2	1	Handset Extension Cable	25'	
MTI-C-11	1	Vehicle Power Cable	25'	
	2	1 5/8" Bulkhead Grommet	n/a	
	1	3/4" Black Wire Loom	20'	
	1	1/4" Black Wire Loom	20'	
	2	Double-Sided Foam Tape	2"	
	6	3/16"x1" Bolts		
	4	Pop Rivets to Mount Antenna		
	2	Screws to Mount Handset Cable Jack		
	2	Screws to Mount Handset Cradle		
	6	Plastic Tie-Wraps		

Table 1: Parts List

* For security reasons, this information cannot be reproduced.

2.2 Unpacking and Inspection

In most cases, the system will not be completely unpacked and installed the day it arrives at your facility.



Note: These unpacking and inspection instructions should be used if you are checking the delivery of the goods without proceeding with the actual installation.

Open the shipping container and carefully remove each item. The table in section 2.1 can be used as a checklist and can also be used as a part identification sheet. If the Truck-Link can be immediately installed in a truck, proceed to “Installation” (Section 3) of this manual.



Note: If there is any shipping damage to report, record it on the shipping receipt, and notify MTI immediately.

[This page is intentionally left blank.]

3 INSTALLATION INFORMATION

This section covers the following tasks:

- Locating the Truck-Link CPU in the Vehicle
- Routing Cables
- Mounting the Cellular Phone Connector Jack
- Mounting the Cellular Phone Handset (Optional)
- Mounting the Driver Display (Optional)
- Mounting the GPS/Cellular Antenna
- Connecting the Theft Detection Base Station (Optional)
- Connecting the Vehicle Power Cable
- Initial Operational Test
- Setup of Cellular Phone (Optional)

3.1 Locating the Truck-Link CPU in the Vehicle

The Truck-Link CPU, part number 10-01-000, must be installed inside the cab of the truck. Some possible locations include under the bed in a conventional sleeper or behind the passenger seat in a day cab



	<p>Warning: Possible damage to equipment can occur if unit is subjected to water. Mounting of the Truck-Link CPU must be in a waterproof environment.</p>
	<p>Note: When choosing a location for the Truck-Link CPU, consider that the vehicle, driver display and the Handset Extension cables are 25 feet and the antenna cable is 20 feet.</p>

Figure 1, below, indicates the desired location of the Truck-Link CPU in a Class 8 sleeper.

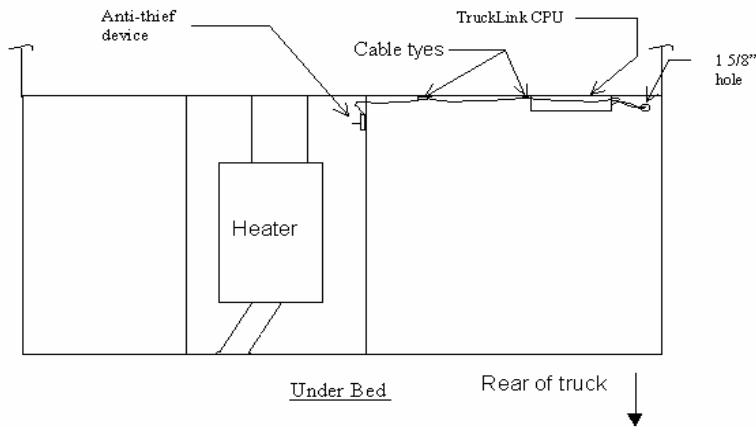


Figure 1: Desired Location of Truck-Link CPU in a Class 8 Sleeper

Figure 2, below, indicates the desired location of the Truck-Link CPU in a Class 8 day cab.

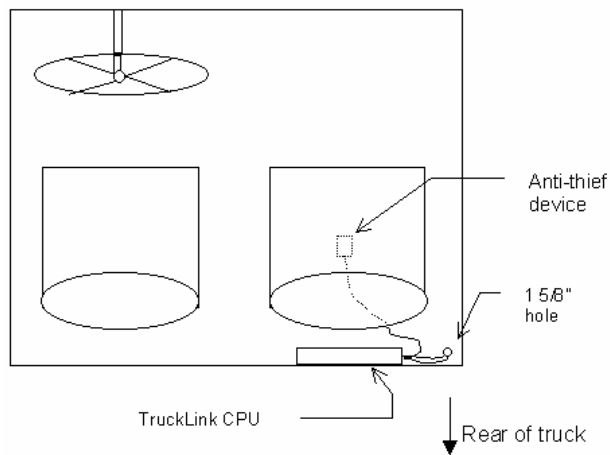


Figure 2: Desired Location of Truck-Link CPU in a Class 8 Day Cab

As illustrated in Figure 3, below, the Truck-Link is fitted with a moveable slide mount. This unique feature allows the Trunk-Link CPU to be securely mounted

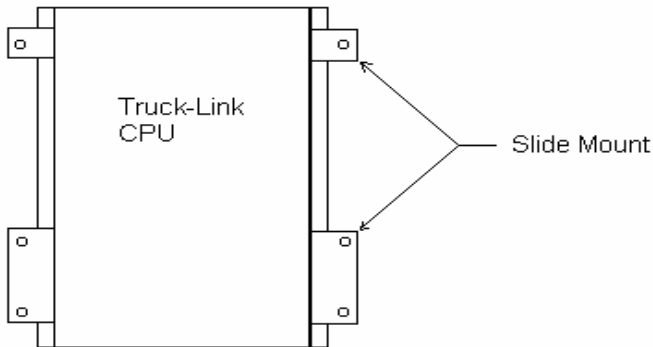


Figure 3: Details of Slide Mount

- 1 Once a location has been selected, temporarily secure the Truck-Link in place and mark the attaching hole placement with a suitable marker.
- 2 Using a drill with a 1/4" metal bit, drill the six holes to mount the Truck-Link CPU.
- 3 Secure the Truck-Link CPU with the six 3/16" x 1" bolts and six locknuts.

3.2 Routing Cables

- 1 Carefully lay out the Vehicle Power Cable (p/n MTI-C-11), the Driver Display Connector Cable (p/n MTI-C-10), and the Handset Extension Cable (p/n MTI-C-2).



Note: The cable end with the part number identification connects to the Truck-Link CPU.

- 2 Drill a 1 1/8" hole in the floorboard of the vehicle cab. This hole should be near the Truck-Link CPU. See Figures 1 and 2 for suggestions.



Note: It is possible to route all cables under the carpet thereby preventing the need to drill a 1 5/8" hole in the floorboard of the truck's cab. Skip to step 5 if this method is chosen.

- 3 Route the Vehicle Power Cable (p/n MTI-C-11), the Driver Display Cable (p/n MTI-C-10), and the Handset Extension Cable (p/n MTI-C-4), through a 1 5/8" bulkhead grommet and then through the 1 5/8" hole that was cut in the floorboard of the cab.
- 4 Secure the bulkhead grommet in the 1 5/8" access hole.

- 5 Connect the Vehicle Power Cable (p/n MTI-C-11) to the “Vehicle” Connector on the Truck-Link CPU. Connect the Driver Display Cable (p/n MTI-C-10) to the “Driver Display” Connector on the Truck-Link CPU. Connect the Handset Extension Cable (p/n MTI-C-4) to the “Phone Handset” Port on the Truck-Link CPU. See Figure 4, below.

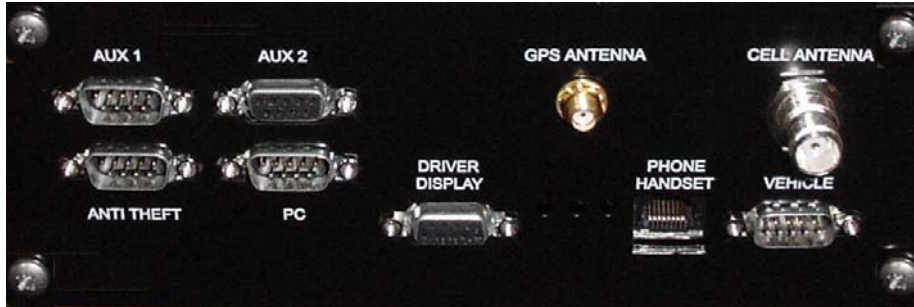


Figure 4: Detail of Connections on the Truck-Link CPU

- 6 Insert the cables into the $\frac{3}{4}$ " black wire loom.
- 7 As illustrated in Figure 5, below, route the cable loom forward to the engine firewall. Secure the cables under the vehicle cab using wire ties or equivalent.

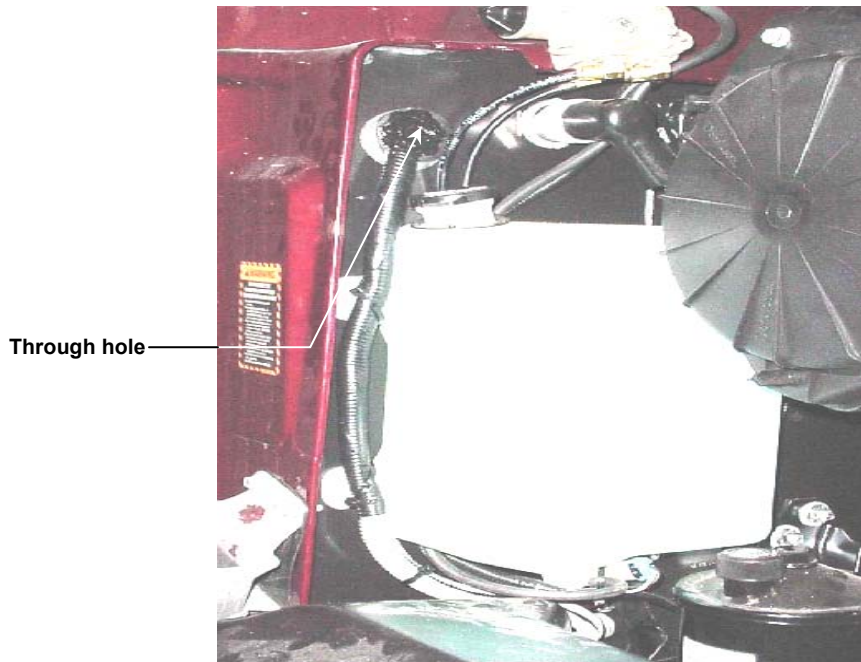


Figure 5: Details of Cable Routing

- 8 Remove the data bus access panel (see Figure 6, below).

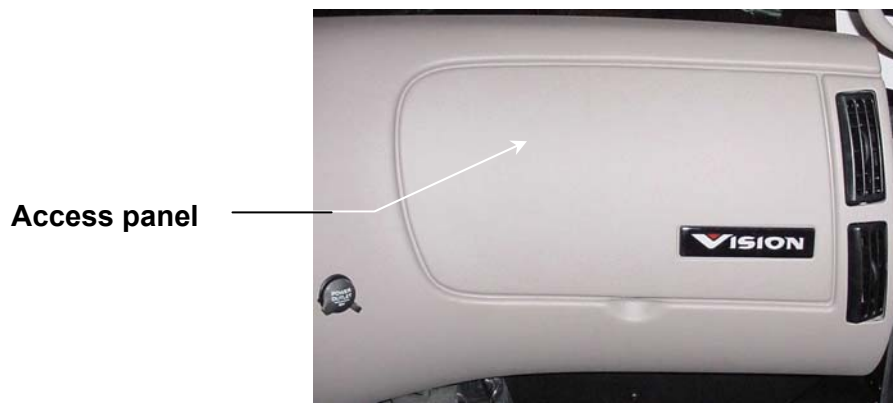


Figure 6: Data Bus Access Panel

- 9 Drill a 1 1/8" hole in the firewall of the vehicle cab. This hole should be in close proximity of the vehicle's data bus connection. See Figure 5 for suggestions.
- 10 Route the Vehicle Power Cable (p/n MTI-C-11), the Driver Display Cable (p/n MTI-C-10), and the Handset Extension Cable (p/n MTI-C-4), through a 1 5/8" bulkhead grommet and then through the 1 5/8" hole that was cut in the floorboard of the cab.
- 11 Secure the bulkhead grommet in the 1 5/8" access hole.



Warning: Do not make electrical connections at this time.

3.3 Mounting the Cellular Phone Connector Jack (Optional)

- 1 Determine the ideal location of the Cellular Phone Connector Jack (see Figure 7, below).



Figure 7: Possible Location for Cellular Phone Connector Jack

- 2 Use two sheet metal screws (included) to securely mount the Cellular Phone Connector Jack.

3.4 Mounting the Cellular Phone Handset (Optional)

- 1 Determine the ideal location of the Cellular Phone Handset.



Note: The driver must have easy access to the Handset.

- 2 Use four sheet metal screws (included) to securely mount the Handset.

3.5 Mounting the Driver Display (Optional)

- 1 Determine the ideal location of the Driver Display (see Figure 8, below).



Note: The driver must have easy access to the Driver Display. The Drivers Display should not block access to other devices, such as parking brakes, trailer brakes, radio, etc.

- 2 Use four sheet metal screws (included) to securely mount the Driver Display.



Figure 8: Possible Location of Driver Display

3.6 Mounting the GPS/Cellular Antenna

- 1 Determine the ideal location of the Antenna (illustrated in Figure 9, below). An ideal location is on the top of the cab or sleeper (illustrated in Figure 10, below).



Figure 9: GPS/Cellular Antenna



Warning: The GPS/Cellular Antenna must be mounted so that there is no obstruction between it and the sky.

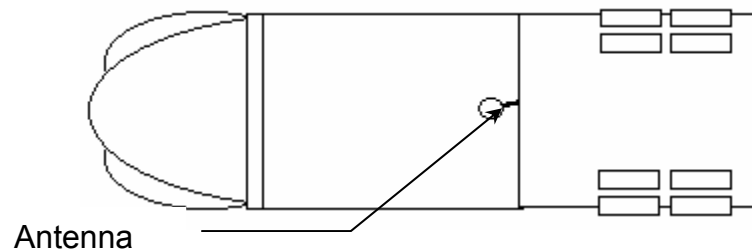


Figure 10: Possible Location of GPS/Cellular Antenna

- 2 Drill four holes in the appropriate location on the vehicle's cab.
- 3 Apply silicone sealant to all four holes.
- 4 Using the four pop-rivets (supplied), secure the antenna in place.
- 5 Apply silicone sealant to the top of each pop-rivet.
- 6 Insert the antenna cables into the 1/4" black wire loom.
- 7 Secure cable harness loom to vehicle cab. Use P-clamps or plastic ties.
- 8 Route cable harness loom through the bulkhead grommet near the Truck-Link CPU.
- 9 Connect the antenna cables to the Truck-Link CPU. (see Figure 11, below).

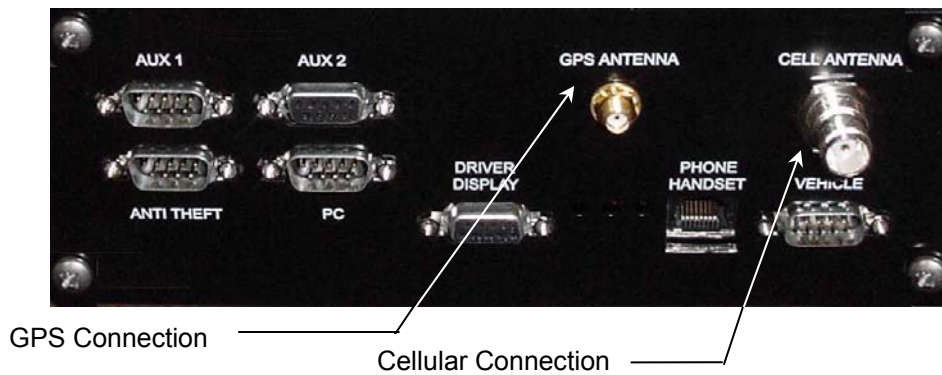


Figure 11: Detail of Connections to Truck-Link CPU

10 Dress all cables.

3.7 Connecting the Theft Detection Base Station (Optional)

1 Determine the ideal location of the Theft Detection Base Station.



Note: When mounting the base station, an attempt should be made to conceal the device. The cable is six (6') feet in length and is integrated into the base station.

2 Connect the Theft Detection Cable to the Truck-Link Theft Detection Port (see Figure 12, below).

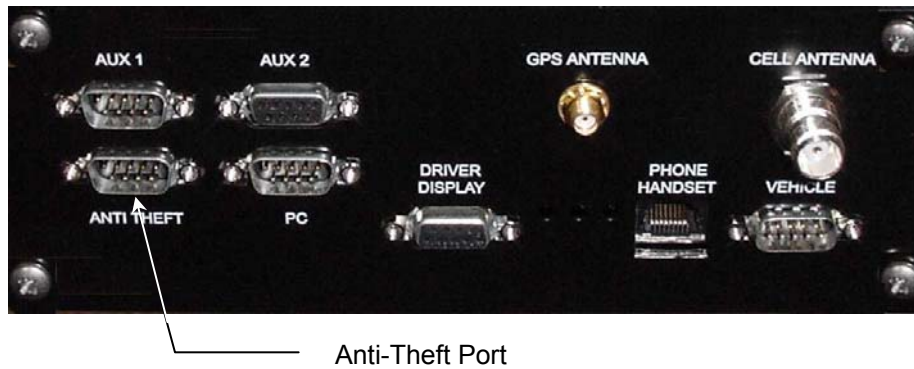


Figure 12: Anti-Theft Port Connection

3 Route cable to the base station mounting position.

4 Use the double-sided foam tape (included) to securely mount the base station.

3.8 Connecting the Vehicle Power Cable

- 1 Remove the Vehicle Data Bus Access Panel (see Figure 13, below).



Caution: *The vehicle's data bus connector has voltage applied when the vehicle battery is connected. It is strongly recommended that you disconnect the battery before proceeding! Use extreme caution!*

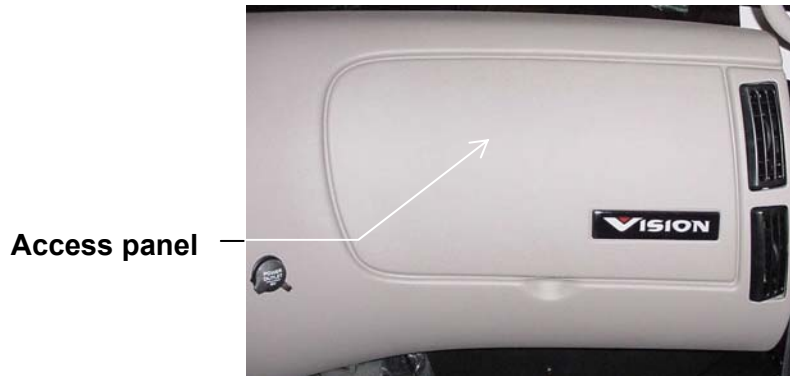


Figure 13: Access Panel for Data Bus



Caution: *To prevent damage to the vehicle and/or the Truck-Link CPU ensure that the vehicle key is in the off position if the vehicle battery is not disconnected.*

- 2 See Table 2, below, for connection points and connection sequence.

Connection Sequence	Wire Color	Vehicle Data Bus Connection	Truck-Link Pin Number
1	Green	"A" bus +	1
2	White	"B" bus -	2
3	Black	GND	3
4	Brown	"ING" Ignition	5
5	Red	"Batt" V+	4

Table 2: Connection Points and Sequence

- 3 Connect the Vehicle Power Cable to the Vehicle Data Bus. It is imperative that the connection sequence as defined in Table 2 be followed. Figure 14, below, illustrates a Vehicle Data Bus.

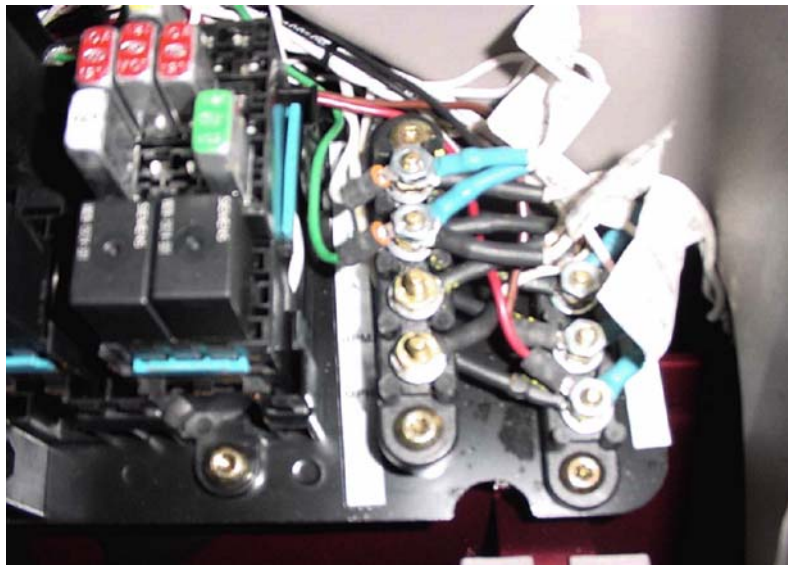


Figure 14: Vehicle Data Bus VMACIII

- 4 Dress Vehicle Cable.
- 5 Install the Vehicle Data Bus Access Panel.

3.9 Initial Operational Test

- 1 Power (+12 volts) from the vehicle will be applied to the Truck-Link CPU.
- 2 Observe L1, L2 and L3 on the connector end of the Truck-Link CPU (see Figure 15, below).

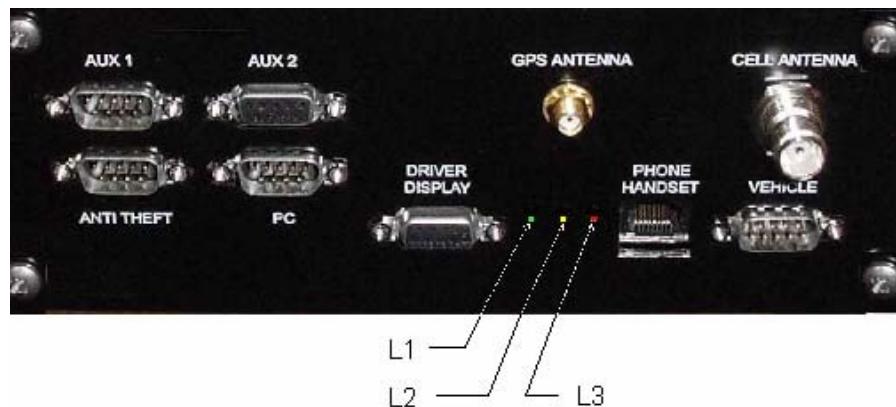


Figure 15: Status Lights on the Truck-Link CPU

- 3 L1 will blink at a rate of twice per second.
- 4 L2 will blink at a rate of once per second.
- 5 L3 will be on steady.

3.10 Setup of Cellular Phone

- 1 The cellular phone has been factory preset for your area and specific calling plan.
- 2 To place an outgoing call:
 - Press the '*' key
 - Enter the 'phone number' you wish to call, including '1' and the 'area code'.
 - Press the 'SEND' key
 - Press the 'PWR' key

For Example:

*→1→Area Code→7 digit phone number→'SEND'→'PWR'