

CLUTCH


CLUTCH UNIT REMOVAL/INSTALLATION

A5U051016000W01

Note

- The clutch release cylinder can be removed from the transmission with the clutch pipe connected.

- Remove in the order indicated in the table.
- Install in the reverse order of removal.

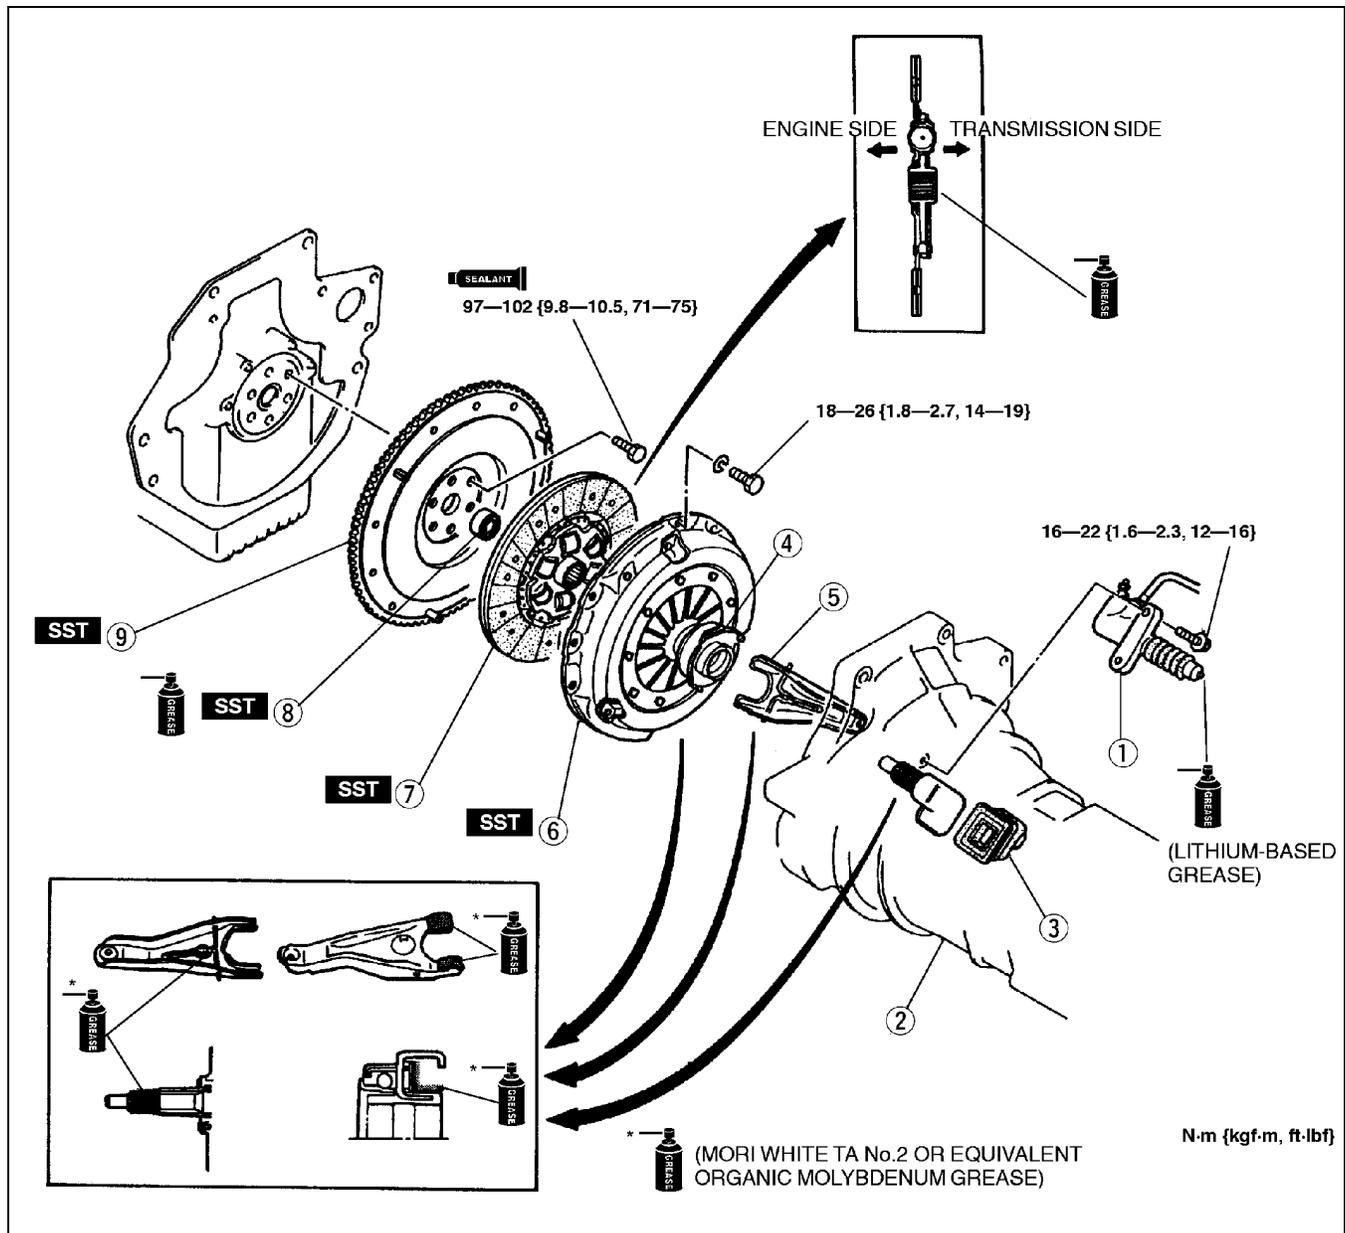

05-10

1	Clutch release cylinder
2	Transmission (See 05-11A-4 MANUAL TRANSMISSION REMOVAL/INSTALLATION [M15M-D]) (See 05-11B-3 MANUAL TRANSMISSION REMOVAL/INSTALLATION [Y16M-D])
3	Boot
4	Clutch release collar (See 05-10-14 CLUTCH RELEASE COLLAR INSPECTION)
5	Clutch release fork

6	Clutch cover (See 05-10-12 Clutch Cover, Clutch Disc Removal Note) (See 05-10-13 Clutch Cover Installation Note)
7	Clutch disc (See 05-10-12 Clutch Cover, Clutch Disc Removal Note) (See 05-10-13 Clutch Disc Installation Note)
8	Pilot bearing (See 05-10-12 Pilot Bearing Removal Note) (See 05-10-13 Pilot Bearing Installation Note)
9	Flywheel (See 05-10-12 Flywheel Removal Note) (See 05-10-12 Flywheel Installation Note)

X5U510WAF