

# SERVICE MANUAL

XBR25 XBR55

# **Table of Contents**

<b>Troubleshooting Guide</b>	
Electronic System	3
Mechanical System.	3
Repair Procedures	
Procedure 1 (Test adapter for voltage)	4
Procedure 2 (Check harness for voltage)	4
Procedure 3 (Check for DC voltage from console)	4
Procedure 4 (Tighten seat carraige)	5
Procedure 5 (Engineering mode)	6
XBR Series Warranty	
Contacting Technical Service	7
Treadmill Warranty	
Warranty Policy	
Parts Order Form	
Warranty Labor Credit Form	11
XBR25	
Exploded view	12
Parts list	
XBR55	
Exploded view	16
Parts list	17 - 20

# **ELECTRONIC SYSTEM**

No power There is no power to the console.	1. 2. 3.	Unit must be plugged into an outlet with power. Test adapter for DC voltage using volt meter. (procedure 1) Remove the console and test the wire harness with a volt meter for DC voltage. (procedure 2) Make sure all wires are plugged into the controller securely.
No resistance change	1. 2.	Remove side covers to access the controller. Check for DC voltage where main harness plugs into controller. (procedure 3)

# **MECHANICAL SYSTEM**

Loose seat carraige

1. See procedure 4.

#### PROCEDURE 1: Test Adapter for voltage

- 1.1 Turn meter on setting to test for AC voltage.
- 1.2 Put leads in the two holes in adapter plug.
- 1.3 There should be at least 24 volts.
- 1.4 If you do have voltage but no power to display, go to procedure 2. If you dont have the voltage, replace the adapter (assuming the outlet has power).

### PROCEDURE 2: Test harness for voltage

- 2.1 Turn meter on setting to test for DC voltage.
- 2.2 Remove console.
- 2.3 Put one lead on pin #2 and the other lead on pin #3. There should be around 6 volts.
- 2.4 If there is voltage there but no power to the display, the console needs to be replaced.

### PROCEDURE 3: Test for DC voltage from console

- 3.1 Remove the cover beneith the seat to access the controller.
- 3.2 Turn the meter on setting to test for DC voltage.
- 3.3 Leave the harness connected to the controller and put the leads on the 2nd and 5th wires. (You will probably need to remove some of the glue from the back of the harness)



- 3.4 Press start and set the resistance to level 1. As you increse the resistance you should see the voltage reading increase as well.
- 3.5 If the reading is not going up as you go up in resistance, the problem is either the console or the harness. If the readings are what they should be, go to next step.
- 3.6 With meter still on DC setting, put leads into the back of the 2 pin connector pictured below. This is the connector for the wires that go to the brake coil.



- 3.7 At level 1 the voltage reading should be zero. At level 2 and above, if you get any reading the controller is working.
- 3.8 If you dont hav any voltage, the controller needs to be replaced. If there is voltage but still no resistance, the brake coil needs to be replaced.


## PROCEDURE 4: Tighten seat carraige

If the seat assembly on the recumbent bike is loose and wobbles from side to side, follow these instructions to tighten it up.

(Front wheel assembly on Left side)



(Rear wheel assembly on Left side)

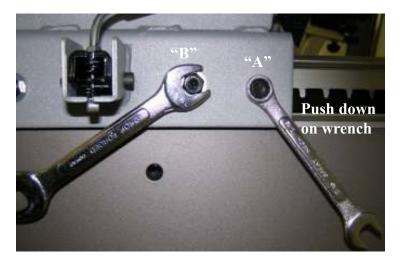

- 1. Loosen the nyloc nut (B) with a 13mm wrench.
- 2. Press down on (A) with an 11mm wrench.
- 3. While pressing down on (A), tighten the nyloc nut (B).
- 4. Use this procedure on all 4 seat wheel assemblies.

There are two wheels on each assembly. By pressing down on (A) you are turning the assembly so that the inside wheel (which is connected to "B") is pressed to the top of the track while the outer wheel (which is connected to "A") remains pressed to the bottom of the track.

## **PROCEDURE 5: Engineering Mode**

- 1. Press and hold the START, ENTER, and STOP buttons until display beeps.
- 2. "ENGINEERING MODE" will scroll across the screen, press ENTER.
- 3. Press the UP and/or DOWN buttons to scroll through the following sub menus:
  - Key Test
  - Display Test
  - Functions
  - Security
  - Factory Set
  - Exit
- 4. Press ENTER to access the desired program.
- 5. Press STOP to exit Engineering Mode.

## - Key Test

Press ENTER. Press all buttons on console.

## - Display Test

Press ENTER. Console will test each segment or LED. Look to see if there are any burned out or not working.

### - Functions

## - Security

Child Lock On/Off ----- Press ENTER to turn on or off.

## - Factory Set

Press ENTER to go back to original factory settings. This will reset saved user programs.

#### - Exit

Press ENTER to exit Engineering Mode.

# **CONTACTING CUSTOMER SERVICE**

It is the responsibility of the Dealer to assemble and setup any Spirit product they have sold, as well as diagnose problems and perform service, regardless of the product's location. Recognizing the importance of insuring the consumer's satisfaction, Spirit technical support will always be available to assist the Dealer in diagnosing a problem. All warranties are valid from the original date of purchase by the original purchaser.

## PARTS ORDERS Fax 870-930-9013

Fax your order using a completed parts purchase order to (870) 930-9013. Please do not call to place your parts orders, fax only. Service technicians are available to assist in the repair of treadmills. If taking parts orders by telephone, technical service calls will go unanswered. Standard shipping is FedEx ground. If you need an order shipped by another method, you must pay for shipping.

## **CUSTOMER SERVICE**

Call 800-258-4555

## **Calling from Store Location**

Dial 1 to reach the first available technician, or select the extension number for a particular technician. *You must have the serial number of the machine when you call.* 

- Charles WoodCustomer Support ext. 626
- Terry Jordan Customer Support ext. 627
- Kevin Thomas
- Nathan Price Customer Support ext. 629
- Carla Nichols
- Travis LawrenceCustomer Support ext. 633
- Lonnie HaygoodCustomer Support ext. 636
- Corey LemieuxCustomer Support ext . 637

If the technician you choose is unavailable, leave a detailed message. Leave only one message. Do not call another extension. Do not leave multiple messages. This results in a duplication of effort and keeps our technicians from assisting you and other customers in a prompt manner.

# **Calling from Customer Location**

Dial 0 for an operator. Relay to the operator that you are a dealer and in a customer's home. You will be assisted by the first available technician.

# **BIKE WARRANTY**

Spirit Manufacturing Inc. warrants all its bike parts for a period of 5 years from the date of retail sale, as determined by sale receipt, or in the absence of a sales receipt eighteen (18) months from the original factory shipping date, whichever comes first. Spirit's responsibilities include providing new or remanufactured parts, at Spirit's option, and technical support to our independent dealers and servicing organizations. In the absence of a dealer, or service organization, this warranty will be administered by Spirit directly to a consumer. An extended warranty period applies to the following components:

Home use	<b>XBR25</b>	<b>XBR55</b>
Labor	1 Year	2 Years
Frame weldments	Lifetime	Lifetime
Brake	Lifetime	Lifetime
All Other Components	5 Years	5 Years

# WARRANTY POLICY

#### **Parts Returns**

It is very important that you have not only the model number but also the serial number on hand when placing a parts order. If a serial number is provided at the time a warranty parts order is placed the required parts will be sent to you at no charge. If the unit is no longer covered under warranty the parts will be billed to you on 30 day payment terms.

If a warranty replacement part is required to be returned to Spirit it will be noted on the packing list included in your shipment. Also noted on the packing list will be the amount you will be invoiced if the parts are not returned within 30 days.

#### Parts Required to be Returned for Credit

Upper Electronics - XE Series

**Paperwork Requirement:** A copy of your invoice or packing list and diagnostic form (if included with replacement part) must be returned with the defective part to receive warranty consideration.

### Warranty Labor Reimbursement Procedure

Complete Request for Warranty Labor Credit Form.

Fax completed form to (870) 930-9013.

Once Spirit has received your returned parts, your request will be processed and returned by fax to you.

#### What is Not Covered

- 1) Failures created due to improper installation or maintenance.
- 2) Repairs requiring only simple adjustments, fuses, or calibrations.
- 3) Damages sustained from shipping Freight claim must be filed with your carrier.
- 4) Repairs that are made beyond the warranty period.
- 5) Repairs where the customer is paying the base labor fee to the dealer.
- 6) Units that are dealer stock or floor models.
- 7) Trips for diagnostic visit.
- 8) Residential units in a commercial setting.

#### Credit will not be issued for repairs in which:

- 1) Parts required for return are not returned to Spirit within 30 days.
- 2) All paperwork is not completed or returned.
- 3) Spirit confirms that work was not completed.

#### Warranty Labor Reimbursement Policy

Spirit has established a set of guidelines that are fair to both independent service companies and to Spirit. Our policy on labor warranty reimbursement is simple...we pay a one time flat completion fee of \$80 per service occurrence. Once all work required to complete the repair has been finished and all parts required for return have been returned to Spirit either credit or payment in the amount of \$80 will be issued to your company. The one-time flat completion fee of \$80 will be paid only when the repair is complete and the unit has been returned to proper working condition. If your company needs consideration for labor or trip fees that are higher than Spirit's standard fees, they will be evaluated on a case-by-case basis. (e.g. - travel to perform service work in Manhattan). Any change in the fee schedule must be approved in writing by Spirit before any work is performed.

#### For Dealers That Wish To Use Third Party Service

It is Spirit's policy that all dealers service products that they sell to end users. If your company chooses to use an independent company for service, you are responsible for all service work. Our labor reimbursement policies apply in every case and any charges in excess of Spirit's one time flat completion fee will be billed back to the selling dealer. In certain circumstances, we will work directly with an independent service company, but we will not pay for any service that deviates from our policy for dealers wishing to have this arrangement. Dealers will be responsible to the service company for all charges disallowed by Spirit. Any deviation from Spirit policy must be approved in advance in writing.



Fax to:	870-930-9013					
Attention:						

# Fill in completely for processing. All orders are shipped F.O.B. Spirit Mfg., Jonesboro, Arkansas.

Dealer Name	Ad	ccount No.		Ship to		
Street & No.				Street & No.		
City	State	e Zi <sub>l</sub>	0	City	State	Zip
Phone Number	Fax	Number		Phone Number	Fax Number	
	D 1 D 1 M	AU ( )				D + 10 +
Purchase Order No.	urchase Order No. Dealer Buyer's Name All parts ordered are considered stock orders unless a serial number is listed below each parts' description box. A serial number listed will qualify it for warranty evaluation.					Date of Order

Purchase Order No.	Dealer Buyer's Name	All parts ordered are considered stock orders unless a serial number is lis parts' description box. A serial number listed will qualify it for warranty	Date of Order	
Qty.	Part No.	Description	Unit Price	Amount

Order Cor	npletion	- Orders	must be	sig	med!

If a part is not accompanied by a serial number, it will be assumed that the part order is for stock. We encourage all dealers to stock parts. Spirit will always be fair to all dealers on credit for parts. Spirit reserves the right to subject parts returns to a 20% restocking fee if Spirit determines that the dealer has excessively ordered parts randomly to repair a problem.

Buyer Signature	Date
, , , , , , , , , , , , , , , , , , , ,	


Shipping Instructions: (All orders will be shipped via ground delivery					
unless otherwise indicated.) Buyer will	be responsible for all expe-				
dited shipping charges.					
Special Instructions: 2nd Day Air					
	Next Day Air				
	Saturday Delivery				
Initial Your Special Shipping Instructions I					
(Orders for expedited shipping without initials	will be shipped via ground delivery.)				

# **REQUEST FOR WARRANTY LABOR CREDIT**

WARRANTY ADMINISTRATOR

Labor Warranty 🔲 Spirit is re			t is re	sponsible		www.spirifilness.com					
							P.O. BO	X 2037	JONESBORO	), ARKANSAS 7	2402
Date of Repa	ir	Model#		Serial Number							
Service Com	pany		Svc	CoAcct Number	Owne	er's Nam	ne				
						Du (m a m²a	Address				
						owner's	Address				
Selling Deale Number	r			Selling Dlr A	Acct Phone	e Numbe	er With Area Code			Date Sold	
Problem				1							
Repair Done											
								F.	ACTORY USE	ONLY	
QUANTITY	PART NUMBER		PAR	T DESCRIPTION		WTY	TEST RESULTS		UNIT PRICE	WORK ORDER	INVOICE
				FACT	ORY USE ON	LY		FREIG	SHT <sup>.</sup>		
				LABOR				SHIPP			
				TRIP						EDIT WILL BE	ISSUED TO
				TOTAL LABOR				DEA	LERACCOUN —	IT. 	
										BE RETURNED CTED OTHERW	
Authoriza	tion No									BE RETURNED AYS OF REPAIR	
									— SHADED ARE	AS FACTORY U	SE ONLY

XBR25 Exploded View

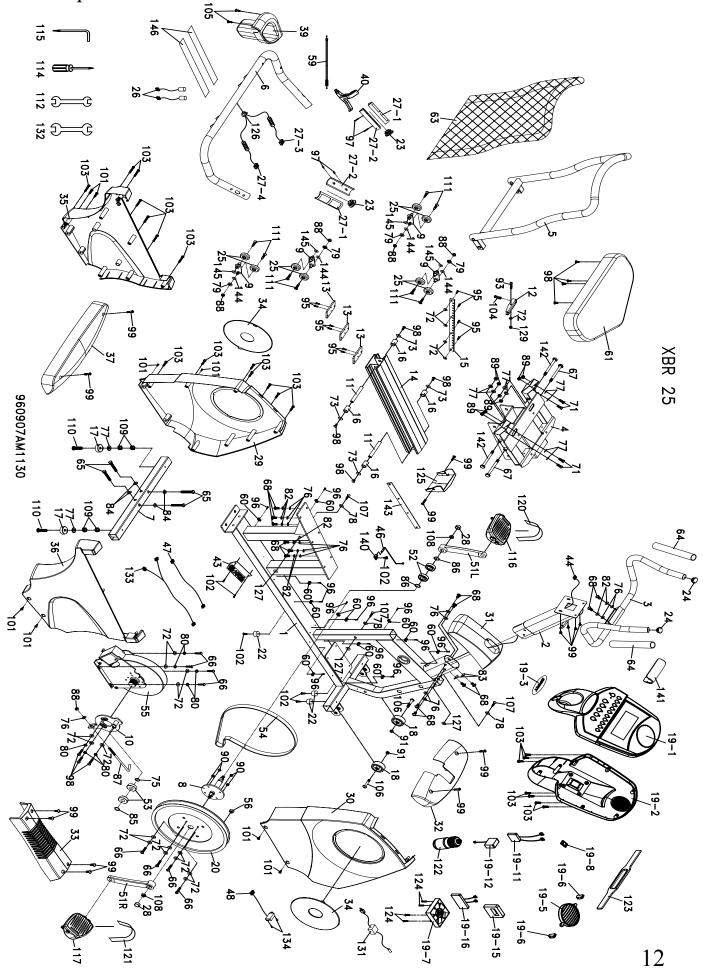


# **XBR25** Part List

Danta Na	Decayintion	Part#
raris No.	<b>Description</b> Main Frame	002160
2	Console Mast	
3	Handle Bar Front	002136
		002185
4	Seat Carriage	002188
5	Seat Back Frame	002189
6	Handle Bar Seat	002192
7	Rear Stabilizer Bar	002005
8	Drive Pulley Axle	002006
9	Seat Wheel Adjustment Plate	002007
10	Idler Wheel Assembly	002159
11	Seat Stop Axle	002009
12	Seat Position Latch	
13	Backing Plate	
14	Aluminum Seat Track	002128
15	Seat Position Index Plate	
16	Seat Stop	002014
17	35 x 10 Cushion Foot Pad (Leveling Foot)	022943
18	~54 Transportation Wheel	000179
19	Console Assembly	002157
19~1	Top Console Cover	002130
19~2	Bottom Console Cover	006063
19~3	Badge, Console	002131
19~5	Deflector Fan Grill	000983
19~6	Fan Grill Anchor	000807
19~7	Fan Motor	000808
19~8	Fan Power Switch	000982
19~11	Interface Daughter Board	X
19~12	Heart Rate Receiver	002149
19~15	Console PCB Board	X
19~16	Console Rubber Key	
20	330 X 10 Drive Pulley	000908
22	25 X 15M/M Foot Pad (Leveler)	010124
23	~32 (1.8T) End Cap, Seat Handlebar	002015
24	~25.4 (2.0T) End Cap, Front Handlebar	002016
25	~38 Seat Wheel Assy. Wheel ONLY 002086	002017
26	300mm Handpulse Jack	002018
27	Handpulse W/Cable <b>Assembly</b> (A.B)	002080
27~1	Handpulse Assembly Top	X
27~2	Handpulse Assembly Bottom	X
27~3	750mm Handpulse Wire A	002081
27~4	950mm Handpulse Wire B	002082
28	M22x1.0 / 25 End Cap, Crank Arm	002019
29	Front Side Case (L)	002017
30	Front Side Case (R)	002143
30 31	Console Mast Cover	002138
31		
	Front Stabilizer Cover	002139
33	Step Cover	002140
34	Round Disk Cover, Crank	002141

35	Rear Chain Cover (L)	002147
36	Rear Chain Cover (R)	002148
37	Rear Stabilizer Cover	002142
39	Beverage Holder (L)	002146
40	Release Lever	002031
43	Controller	002099
44	Computer Cable	002132
46	Sensor W/Cable	002133
<b>47</b>	2P x 750mm_Wire Brake Coil Harness	002037
48	1200mm_AC Wire Assembly	002127
51L	Crank Arm (L)	002040
51R	Crank Arm(R)	002041
52	6004 Bearing, Crank Axle	002042
53	6203 Bearing For Idler Wheel	021987
54	Belt - 1222J	002094
55	Induction Brake	002104
56	Magnet	010041
59	Seat Fore/Aft Release Cable	002046
60	Wire Tie Mount	010083
61	Seat Bottom Cushion	002047
63	Mesh Seat Back	002048
64	Foam, Front Handle Bar	002049
65	3/8" x 2- 1/4"_Hex Head Screw	000063
66	1/4" x 3/4"_Hex Head Screw	030097
67	3/8" x4"_Hex Head Screw	030049
68	5/16" x15_Hex Head Screw	022803
71 72	3/8"×1-3/4"_Hex Head Screw	030046
72 73	1/4"x13x1T_Flat Washer	000078
73 75	1/4"x19x1.5T_Flat Washer	022919
75 76	~17x 23.5 x 1T_Flat Washer	022975
7 <b>0</b> 77	5/16" x 19 x 1.5T_Flat Washer 3/8" x 19 x 1.5T_Flat Washer	030045 000076
<b>78</b>	5/8 x 19 x 1.51_Flat Washer 5x16x1.5T Flat Washer	000070
79	8x <sup>2</sup> 18x3T Curled Lock Washer	030043
80	~1/4" Spilit Washer	030043
82	8x1.5T Spilit Washer	030041
83	5/16" x20x 1.5T Curved Washer	030017
84	3/8" x 25 x 1.5T Flat Washer	030040
85	~17 C Clip	000196
86	~20 C Clip	002050
87	J Bolt - M8 x 160m/m	002083
88	M8 x 7T _Nyloc Nut	022288
89	3/8"x 7T Nyloc Nut	000080
90	1/4" x 5T Nyloc Nut	030098
91	5/16" x 6T Nyloc Nut	030039
93	M6 x40mm Socket Head Cap Screw	030024
95	M5x15_Flat Head Socket Screw	030022
96	~3.5x16_Tapping Screw	022979
97	~3x20_Tapping Screw	000839

98	M6x15 Phillips Head Screw	030038
99	M5x12 Phillips Head Screw	030037
101	5x16 Tapping Screw - Plated	010150
102	5x19_Tapping Screw	030057
103	~3.5x12 Self Tapping Screw	010113
104	~ 13.5x28.5 _Seat Release Spring	0002051
105	~4×16 _Self Tapping Screw	000050
106	5/16" x1- 3/4"_Button Head Socket Screw	000086
107	~3.5x20_Self Tapping Screw	030021
108	M10x1.0_Nut, Crank Arm	002052
109	3/8" x 7T_Nut	010108
110	3/8" x 2"_Thumb Head Socket Screw	022885
111	M5x10.~14×2T_Flat Phillips Head Screw	030034
112	12/14mm Wrench	030036
114	Phillips Head Screw Driver	023091
115	M5 Allen Wrench	000089
116	Pedal (L)	002105
117	Pedal (R)	002106
120	Pedal Strap (L)	002057
121	Pedal Strap (R)	002058
122	Drink Bottle	030059
123	Chest Strap	022675
124	~3.5x32 m/m_Self Tapping Screw	000914
125	Plastic Seat Carriage Cover	002152
126	HGP Wire Grommet	002060
127	5/16"×16×1T_Flat Washer	
129	M6_Nyloc Nut	002126
131	AC Transformer - Adapter	002107
132	14/15mm Wrench	030023
133	2050mm_Handpulse Wire Harness	002134
134	M3×10_Phillips Head Screw	030019
140	Sensor Bracket	002113
141	Front Handle Bar Cover	002114
142	3/8"×4-1/4"_Hex Head Screw	
143		
144	~8×20×1T_White Washer	
145	~13×19×1T_Flat Washer	
	Hardware Kit	002129
	Decal (Side)	002181
	Decal (Console)	008020
	Console Overlay	006198
	Button Overlay	006199

# XBR55 Exploded View

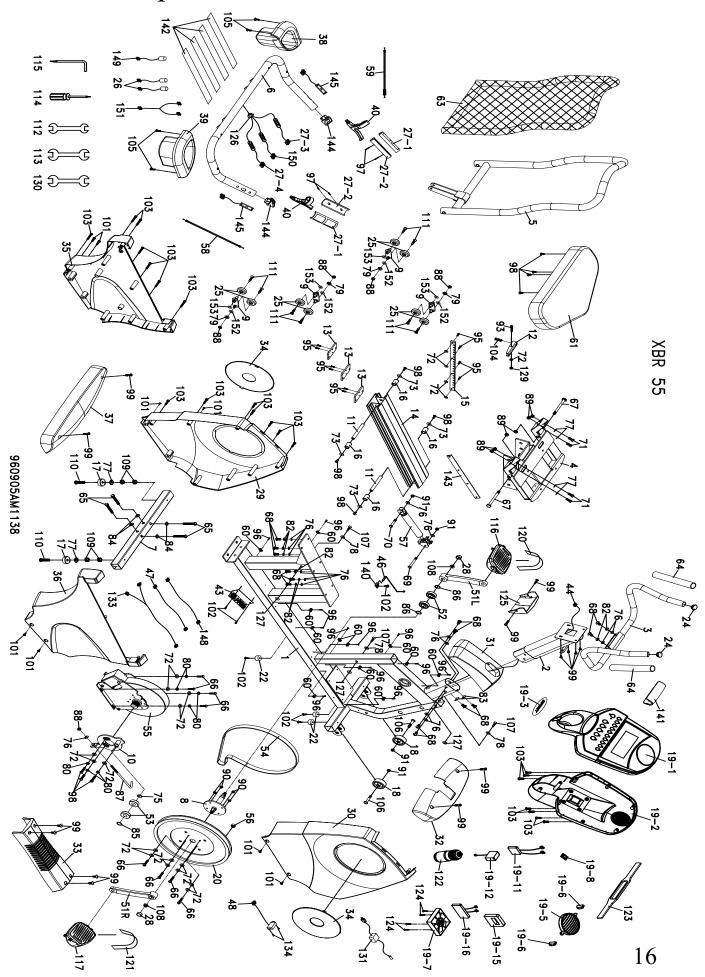

# XBR55 Part List

Part N	<u>.</u>	Part#
1	Main Frame	
2	Console Mast	002136
3	Handle Bar Front	002185
4	Seat Carriage Assy #002208	002187
5	Seat Back Frame	002186
6	Handle Bar Seat	002192
7	Rear Stabilizer Bar	002005
8	Drive Pulley Axle	002006
9	Seat Wheel Adjustment Plate Assy# 002017	002007
10	Idler Wheel Assembly	002000
11 12	Seat Stop Axle	002009
13	Seat Position Latch	002010
13 14	Backing Plate Aluminum Seat Track	002129
1 <del>4</del> 15	Seat Position Index Plate	002128
16		002013 002014
17	Seat Stop Leveling Foot	022943
18	~54 Transportation Wheel	000179
19	Console Assembly	002164
19~1	Top Console Cover	002104
19~2	Bottom Console Cover	006063
19~3	SPIRIT LOGO/P020029	002131
19~5	Deflector Fan Grill	000983
19~6	Fan Grill Anchor	000807
19~7	Fan Motor	000808
19~8	Fan Power Switch	000982
19~11	Interface Daughter Board	X
19~12	Heart Rate Receiver	002149
19~15	Console PCB Board	
19~16	Console Rubber Key	
20	Drive Pulley	000908
22	Foot Pad	010124
24	<sup>~</sup> 25.4 (2.0T)_Button Head End Cap	002016
25	Seat Wheel, Aluminum Axle (Seat Wheel only)	002086
26	300mm_Handpulse Wire, Coiled	002018
27	Handpulse W/Cable Assembly	
27~1	Handpulse Assembly Top	001017
27~2	Handpulse Assembly Bottom	001018
27~3	750mm_Handpulse Wire A	002081
27~4	950mm_Handpulse Wire B	002082
28	Crank Arm End Cap	002019
29	Front Side Case (L)	002143
30	Front Side Case (R)	002163
31	Console Mast Cover	002138
32	Front Stabilizer Cover	002139
33	Step Cover	002140

Part N	o. Description	Part #
34	Round Disk Cover, Crank	002141
35	Rear Chain Cover (L)	002147
36	Rear Chain Cover (R)	002148
37	Rear Stabilizer Cover	002142
38	Beverage Holder (L)	002145
39	Beverage Holder (R)	002146
40	Release Lever	002031
43	Controller	002099
44	Computer Cable (Upper)	002132
46	Sensor W/Cable	002133
<b>47</b>	750mm_Brake Coil Harness	002150
48	1200mm_AC Wire Assembly	002127
51L	Crank (L)	002040
51R	Crank (R)	002041
52	Bearing, Pulley Axle	002042
53	Bearing For Idler Wheel	021987
54	Belt	002094
55	Induction Brake	002104
<b>56</b>	Magnet	010041
57	Gas Cylinder	002151
58	Seat Recline Release Cable (84.5cm x 76cm)	002045
59	Seat Fore/Aft Release Cable (81 x 68)	002046
60	Wire Tie Mount	010083
61	Seat Bottom Cushion	002047
63	Mesh Seat Back	002048
64	Foam, Front Handle Bar	002049
65	3/8" x 2- 1/4"_Hex Head Screw	000063
66	1/4" x 3/4"_Hex Head Screw	030097
67	3/8" x4" _Hex Head Screw	030049
68	5/16" x15_Hex Head Screw	022803
69 70	5/16" x2- 1/2"_Hex Head Screw	030048
70 71	5/16" x1- 3/4" Hex Head Screw	030047
71 72	3/8"×1-3/4"_Hex Head Screw 1/4"x13x1T Flat Washer	030046 000078
73	1/4 x13x11_Flat Washer 1/4"x19x1.5T Flat Washer	022919
75 75	~ 17x 23.5 x 1T Flat Washer	022975
7 <b>6</b>	5/16" x 19 x 1.5T Flat Washer	030045
7 <b>0</b> 77	3/8" x 19 x 1.5T Flat Washer	000076
<b>78</b>	~ 5x16x1.5T_Flat Washer	000070
79	* 8x* 18x3T Curled Lock Washer	030043
80	~ 1/4" Spilit Washer	030042
82	8x1.5T Spilit Washer	030041
83	5/16" x20x 1.5T Curved Washer	030017
84	3/8" x 25 x 1.5T Flat Washer	030040
85	~ 17 C Clip	000196
86	~ 20 C Clip	002050
87	J Bolt	
88	M8 x 7T _Nyloc Nut	022288

Part N	o. Description	Part #
89	3/8"x 7T_Nyloc Nut	000080
90	1/4" x 5T_Nyloc Nut	030098
91	5/16" x 6T_Nyloc Nut	030039
93	M6 x40mm_Socket Head Cap Screw	030024
95	M5x15_Flat Head Socket Screw	030022
96	~ 3.5x16_Tapping Screw	022979
97	<sup>~</sup> 3x20_Tapping Screw	000839
98	M6x15_Phillips Head Screw	030038
99	M5x12_Phillips Head Screw	030037
101	5x16_Tapping Screw	010110
102	5x19_Tapping Screw	030057
103	~3.5x12 _Self Tapping Screw	010113
104	Seat Release Spring (13.5 x 28.5)	002051
105	4x16_Self Tapping Screw	000050
106	5/16" x1- 3/4"_Button Head Socket Screw	000086
107 108	3.5x20_Self Tapping Screw	030021 002052
108	M10x1.0_Nut 3/8" x 7T Nut	010108
110	3/8" x 2" Thumb Head Socket Screw	022885
111	M5x10.~ 14×2T Flat Head Phillips Screw	030034
112	12/14mm Wrench	030034
113	13/15mm Wrench	030035
114	Phillips Head Screw Driver	023091
115	L Allen Wrench	0_5 0 / 1
116	Pedal (L)	002053
117	Pedal (R)	002054
118	Pedal Foam (L)	002055
119	Pedal Foam (R)	002056
120	Pedal Strap (L)	002057
121	Pedal Strap (R)	002058
122	Drink Bottle	030059
123	Chest Strap	022675
124	~3.5x32 m/m _Self Tapping Screw	000914
125	Plastic Seat Carriage Cover	
126	HGP Wire Grommet	
127	5/16"×16×1T_Flat Washer	000105
129	M6_Nyloc Nut	002126
130	13/14mm Wrench	
131	AC Transformer	002107
133	2050mm_Handpulse Wire Harness	002134
134	M3×10_Phillips Head Screw	030019
140	Sensor Rack Front Handle Por Cover	022989
141 143	Front Handle Bar Cover	002114
143 144	Seat Position Index Plate, Fixing Plate Handlebar Pubber End Cap	002162
144 145	Handlebar Rubber End Cap XBR Handle Switches	002162
145 146	"Up" Label	002161
140	Op Lauci	002204

Part N	o. Description	Part #
147	"Down" Label	002205
148	Adjustment Switch Cable (Upper)	002153
149	Adjustment Switch with earphone cable	
150	Adjustment Switch Connecting Cable	002154
151	Adjustment Switch Cable (Lower)	002155
152	8×20×1T_White Washer	
153	~ 13×19×1T_Flat Washer	
	Hardware Kit	002184
	Console Overlay	006198
	Button Overlay	006199