



## Troubleshooting Navionics Charts in Furuno Plotters

Units with SONAR/RADAR/SOUNDER/FISHFINDER must be set to **FULL MAP** to read the Navionics charts.

- **1650 & 1850 Models:** Press **PLOT** button until the full map is displayed.
- **NavNet Series:** Press **DISP** button for full map screen.

1. Make sure you have the corresponding software version (please direct all software to Furuno at [www.furuno.com](http://www.furuno.com)).

- Press **MENU** button
- Press **SYSTEM CONFIGURATION** softkey
- Press **SYSTEM SETUP** softkey
- Press **TEST & CLEAR** softkey
- Press **MEMORY I/O TEST** softkey
- Press **DISPLAY UNIT TEST** softkey
  - Read program number line. You will see a 10-digit number, the last 3-digits of this number will indicate the software version. For example, a program number of 1950001010 would indicate software version 10.

2. Make sure all info is turned on

- Press **MENU BUTTON**
- Press **CHART SETUP**
- Press **CHART CONFIGURATION**
  - TEXT INFO – ON**
  - CHART BORDERS – ON**
  - LIGHT SECTOR INFO – ON**
  - CHART DISPLAY – DETAILED**
  - OBJECT INFO – ALL ON**
  - CAUTION & ROUTING DATA – ON**
  - MARINE FEATURES – ON**
  - LAND FEATURES – ON**
  - Under the **CONTOUR LINE** section (to the right of the above menu on the soft key section)
    - SPOT SOUNDINGS – ON**
    - SAFE CONTOUR – SHADING**
    - DEPTH CONTOUR - ALL**