

TM40 User Guide - Magellan and Spectra SP Systems


MAGELLAN™

SP
SPECTRA



P ▲ R ▲ D O X™

Main Screen

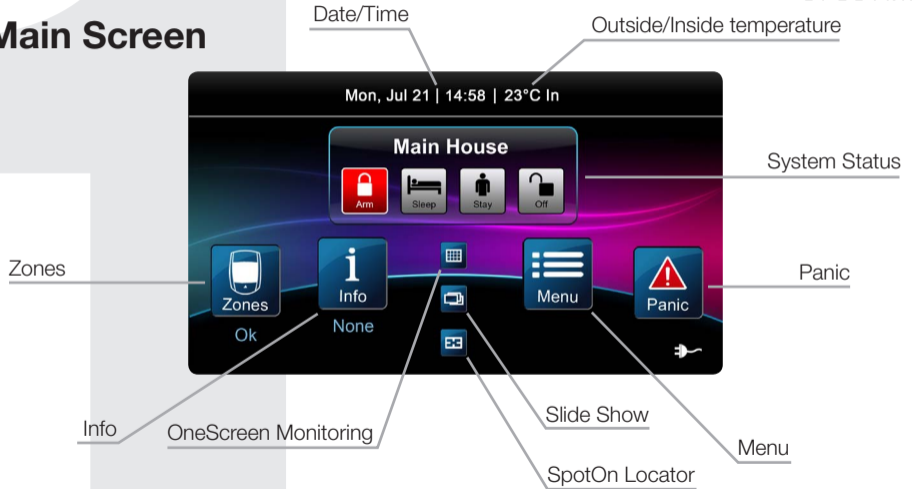

Arming/Disarming your System

Arming/Disarming your system:

1. Select arming method by pressing corresponding button from main screen.
2. Enter code (4 to 6 digits).



Menu

For menu options press the Menu button and follow the on-screen prompts. Menu options include:

- Bypass Zones
- PGMs
- Alarm Clock
- Zone Chiming
- Clean Screen
- Add-on
- Settings
- System Setup



Entering User Programming

Enter user programming:

1. Press **Menu**.
2. Press **System Setup**.
3. Enter Master Code.
4. From the Master Programming menu press **Users**.



Programming a New User

Programming a new user:

1. Press the **Add** button to add a user.
2. Enter new user code and press the **Save** button.
3. Confirm user code by entering a 2nd time then press **Save**.
4. Option to learn remote in, press button on remote or press **Skip**.
5. User is now valid.




Settings Screen

Setting screen accessed through Menu then Settings.


Settings include:

- Display Settings
- Sound
- Slide show
- Home Page
- Language
- Update Firmware
- Calibrate Sensor
- Product Info

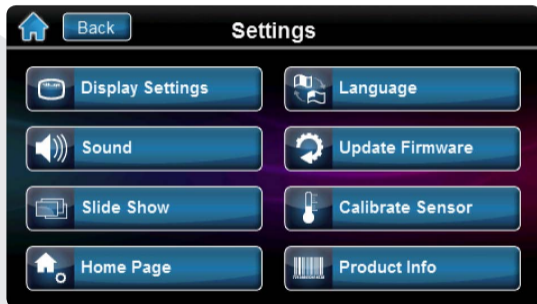

OneScreen Monitoring™

To Access OneScreen Monitoring*:

1. Press the  button.
2. View open/closed zones (an open door means a zone is open).
3. Press on the **Settings** button (top right corner) to access more options.

*OneScreen Monitoring is an optional feature.
Please contact your installer for more information.




MAGELLAN™

SP
SPECTRA

SpotOn Locator™

To Access SpotOn Locator*:

1. Press the  button.
2. Follow the onscreen instructions on how to upload photos, images, or schematics for your personalized floor plans.
3. Follow the onscreen instructions on how to add/move/delete zones from your floor plan.

*SpotOn Locator is an optional feature. Please contact your installer for more information.



SlideShow

To Access SlideShow:

1. Press the  button to view the default slideshow.
2. Press on **Menu, Settings** then **SlideShow** to access more options.





microSD Card

To remove/replace the microSD:

1. Push down on the microSD card to unlock.
2. Gently pull out the microSD card to remove.
If desired, replace card.



Warranty: For complete warranty information on this product, please refer to the Limited Warranty Statement found on the Web site www.paradox.com/ terms. Your use of the Paradox product signifies your acceptance of all warranty terms and conditions. One or more of the following US patents may apply: 7046142, 6215399, 6111256, 6104319, 5920259, 5886632, 5721542, 5287111, and RE39406 and other pending patents may apply. Canadian and international patents may also apply. © 2013 Paradox Ltd. All rights reserved. Specifications may change without prior notice. www.paradox.com

