


Operating Instructions

VIESSMANN

Vitotrol 200

Remote control for a single heating circuit
Part No. 7133 378

 Please file in Service Binder

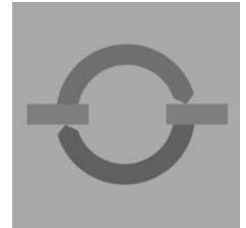

Vitotrol 200



CSA[®]
C US
Certified as a component part
of Viessmann boilers only

Safety Instructions

Safety and Installation Requirements

Please ensure that these instructions are read and understood before commencing installation. Failure to comply with the instructions listed below can cause product/property damage, severe personal injury, and/or loss of life.

Working on the equipment

The installation, adjustment, service, and maintenance of this product must be done by a **licensed professional heating contractor** who is qualified and experienced in the installation, service, and maintenance of hot water boilers. There are no user serviceable parts on the boiler, burner, or control.

Ensure **main power** supply to equipment, the heating system, and all external controls has been **deactivated**. **Close main oil or gas supply valve**. Take precautions in both instances to avoid accidental activation of power during service work.



Ensure that the installation literature of other components is referred to.

Overview of Operating and Display Elements

With the Vitotrol Remote Control you can adjust

- "normal room temperature"
- the operating mode
- party and economy mode

right from your living area.

 
Adjustments of

- timer cycles
- "reduced room temperature"
- domestic hot water temperature
- heating curves
- time and date
- holiday program

must be made at the Vitotronic control unit.



See Operating Instructions of heating system with Vitotronic control.

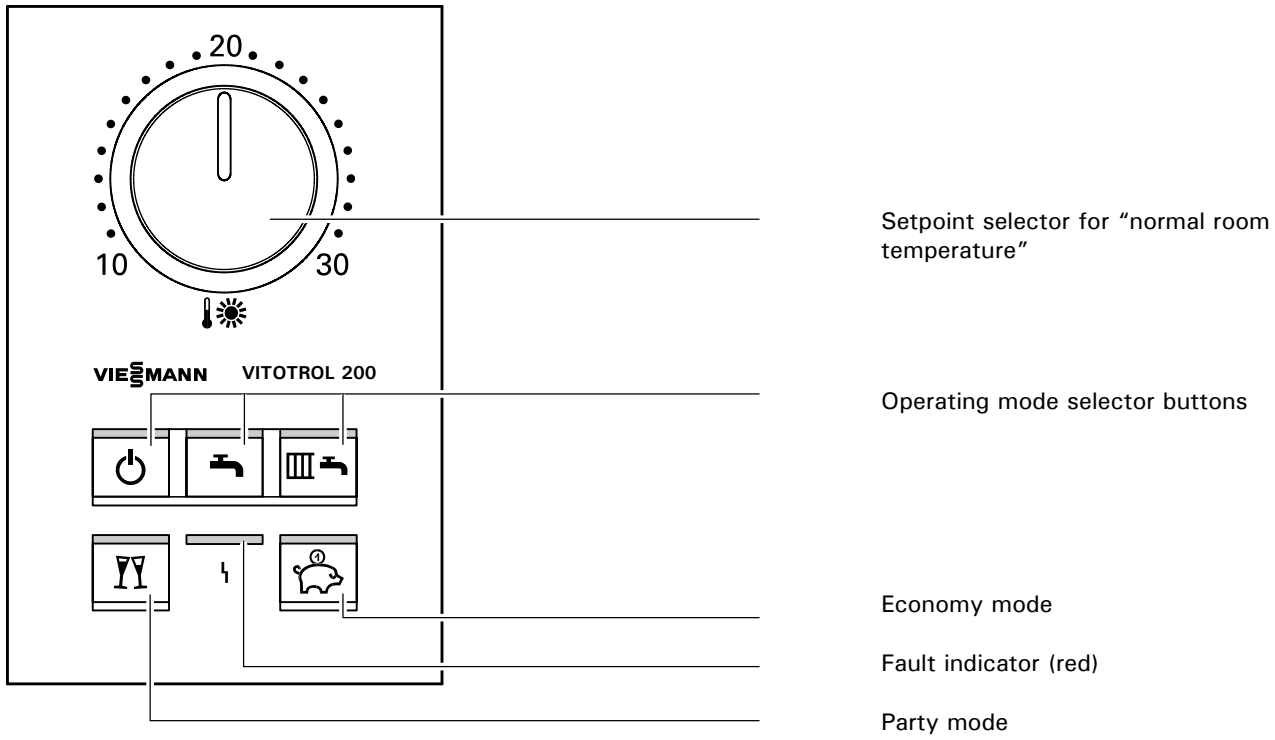

Changing Room Temperature

Factory default setting: 68 °F / 20 °C.
"Normal room temperature" is adjustable between 50 and 86 °F / 10 to 30 °C.


→ **Example**

For a comfortably warm living area.

Set desired temperature with dial "↓*"


Selecting the Operating Mode (Winter, Summer)

Select one of the operating modes according to your personal preference.
After activating the corresponding selector button, the indication light will appear:

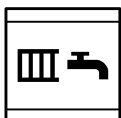


Space and domestic hot water heating → *E.g. in the winter time and transitional periods*

- Space heating with alternating normal and reduced room temperatures according to the set timer cycle
- Domestic hot water heating (if DHW tank connected) and DHW recirculation pump (if installed) according to the set timer cycle
- Frost protection of heating circuit

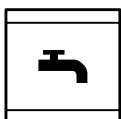

Domestic hot water heating only → *E.g. for the summer time*

- No space heating
- Domestic hot water heating (if DHW tank connected) and DHW recirculation pump (if installed) according to the set timer cycle
- Frost protection of heating circuit

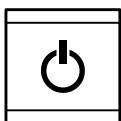


Shut-down operation

- No space heating
- No domestic hot water heating
- Frost protection of heating circuit

Activating the Economy Mode

The economy mode can only be activated in the operating mode "III↔".
If you would like to heat economically for a short period of time, activate the economy mode. The economy mode automatically lowers the set room temperature.


To activate the economy mode

Press , the economy button is lit and will remain lit during economy operation.


→ **Example**

If no one is at home during the day.

To deactivate the economy mode


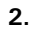

- The economy mode will deactivate automatically once changing to space heating with "reduced room temperature" takes place.
- If you would like to deactivate the economy mode prematurely, press  again, the indicator light will go off.

Activating the Party Mode

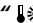Activate the party mode, if you require space and hot water heating independent of the set operating mode or timer cycle and for a short period of time. During the party mode your living area will be heated at “**normal room temperature**” set on dial “”.



You can adjust room temperature (party temperature) according to your personal preference.

To activate the party mode

1. Set desired party temperature on dial → **Example**
“”.
If you would like to stay up longer, when you have guests.
2. Press , the party button is lit and will remain lit during party operation.
3. Reset dial “” to previous value.

IMPORTANT


The party mode and the party temperature can also be set on the Vitotronic control unit.

During the party mode your living space will be heated at the temperature that was selected with the  or  button on the Vitotronic control unit.




See *Operating Instructions of heating system with Vitotronic control*

To deactivate the party mode

- The party mode deactivates when the heating system switches automatically to heating at “normal room temperature”.
- If you would like to deactivate the party mode prematurely, press  again, the indicator light will go off.

Diagnosis and Correction

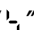Fault operation of the heating system will be indicated by the flashing red error message “” (see “Overview of Operating and Display Elements”).

The fault type can be retrieved from the Vitotronic control unit.



See *Operating Instructions of heating system with Vitotronic control*.

