 
 


Install the SIM card and battery

1. Remove the back cover and insert the SIM card.

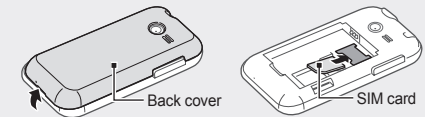 


2. Insert the battery and replace the back cover.

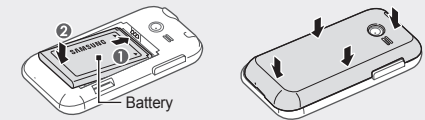

Charge the battery

1. Plug the supplied travel adapter.

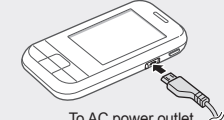

2. When charging is finished, unplug the travel adapter.

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Select the profile you are using.

If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

3. Select **Volume** → **Call alert**.
4. Scroll left or right to adjust the volume level and select **Save**.

To adjust the volume of the touch tone

In Idle mode, press the Volume key to adjust the volume.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the volume.

In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

5. Enter your message text and select **Done**.
 - ▶ See "Enter text."
- For sending as a text message, skip to step 7. For attaching multimedia, continue with step 6.

6. Select **Add media** and add an item.
7. Select **Send** to send the message.

To view text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.

To make a fake call

 
In Idle mode, press and hold the Volume key down.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

1. Remove the back cover.
2. Insert a memory card with the gold-coloured contacts facing down.

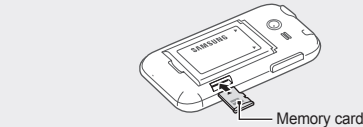

3. Push the memory card in the memory card slot until it locks in place.
4. Replace the back cover.

Change your ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Select the profile you are using.

If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Select **Voice call ringtone**.
4. Select a memory location (if necessary).
5. Select a ringtone and select **Set**.

To switch to another profile, select it from the list.

Call a recently dialled number

1. In Idle mode, press [↶] to display a list of recent numbers.
2. Scroll left or right to a call type.
3. Select the number you want and press [↶] to dial.

Use widgets

Learn to use widgets on the idle screen.

Available widgets may vary depending on your region or service provider.

Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and select **OK**.

The first time you access Mobile tracker, you will be prompted to create and confirm a password.

3. Select **Mobile tracker** to turn on the mobile tracker.
4. Select **Recipients** → **Add recipients** → **Contacts**. You can also enter a phone number including a country code (with +). Skip to step 7.

5. Select **Multiple**.
6. Select contacts → **Add**.
7. When you are finished setting the recipients, select **Save**.
8. Select the sender input field.
9. Enter a sender's name and select **Done**.
10. Select **Save** → **Accept**.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys; for example: [↶] (represents the Power/End key)

Turn your phone on or off

To turn your phone on,

1. Press and hold [↶].
2. Enter your PIN and select **Done** (if necessary).

To turn your phone off, repeat step 1 above.

To open a widget

1. In Idle mode, scroll left or right to a panel of the idle screen.
2. Select a widget to activate on the idle screen.

To organise your widget

You can organise each panel of the idle screen with your favourite widgets.

1. In Menu mode, select **Settings** → **Display** → **Widgets**.
2. Select a widget for each screen and select **Save**.

To set menus on the shortcut widget

1. In Menu mode, select **Settings** → **Display** → **Shortcuts**.
2. Select a shortcut.
3. Select a menu to assign to the shortcut and select **Save**.

Enter text

To change the text input mode

- Select **EN** to change the input language.
- Select ●**T9** to switch between T9 and ABC modes. ●**T9** turns green in T9 mode.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Select **Sending SOS** to activate the SOS messaging feature.
3. Select **Recipients** → **Add recipients** → **Contacts**. You can also enter a recipient number. Skip to step 6.
4. Select **Multiple**.
5. Select contacts → **Add**.
6. When you are finished setting the recipients, select **Save** to save the recipients.
7. Select **Repeats**, set the number of times to repeat the SOS message, and select **Save**.
8. Press [↵] → **Yes**.

To send an SOS message

1. With the touch screen and the keys locked, press the Volume key four times to send an SOS message to preset numbers.
2. To exit SOS mode, press and hold [⏏].

Use the touch screen

Learn basic actions to use the touch screen.

To avoid scratching the touch screen, do not use sharp tools.

For the optimal use of the touch screen, remove the protection film before using your phone.

- Tap: Touch once with your finger to select or launch a menu, option, or application.
- Tap and hold: Tap and hold your finger on an item to open a pop-up option list.
- Drag: Tap and drag your finger up, down, left, or right to move to items on lists.
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.

- Select **123** or **sym** to switch to Number or Symbol mode.
- Select ↑ to change case.

T9 mode

1. Press appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, select ↵ to insert a space. If the correct word does not display, select ⏏ to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

- To move the cursor, select ⬅ and then the virtual navigation key.
- To delete characters one by one, select ✕.
- To enter punctuation marks, select 1 repeatedly.

Use the camera

To capture photos

1. In Menu mode, select **Camera** to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Select 📷 to take a photo. The photo is saved automatically.

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

To capture videos

1. In Menu mode, select **Camera** to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select 📹 to switch to Recording mode.
4. Aim the lens at the subject and make any adjustments.
5. Select 📹 to start recording.
6. Select 📹 to stop recording. The video is saved automatically.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

Access menus

To access your phone's menus,

1. In Idle mode, select **Menu** to access Menu mode.
2. Scroll left or right to a main menu screen.
3. Select a menu or application.
4. Press [↵] to move up one level; Press [↶] to return to Idle mode.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

1. In Idle mode, select **Keypad** and enter an area code and a phone number.
2. Press [↵] to dial the number.
3. To end the call, press [↶].

Answer a call

1. When a call comes in, press [↵].
2. To end the call, press [↶].

Add a new contact

The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **More** → **Settings** → **Save new contacts to** → a memory location.

1. In Idle mode, select **Keypad** and enter a phone number.
2. Select 📇.
3. Select **Create contact** → a memory location (if necessary).
4. Select a number type (if necessary).
5. Enter contact information.
6. Select **Save** to add the contact to memory.

Send and view messages

To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Select the recipient field → **Enter manually**.
3. Enter a recipient number and select **Done**.
4. Select **Tap to add text**.

SAMSUNG ELECTRONICS	
Declaration of Conformity (R&TTE)	
We, Samsung Electronics	
declare under our sole responsibility that the product	
GSM Mobile Phone : GT-C3500	
to which this declaration relates, is in conformity with the following standards and/or other normative documents.	
SAFETY	EN 60950-1 : 2006+A11:2009 EN 50332-1 : 2000 EN 50332-2 : 2003
EMC	EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009)
SAR	EN 50360 : 2001 EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006)
We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.	
The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):	
EABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK* Identification mark: 0168	
The technical documentation kept at :	
Samsung Electronics QA Lab.	
which will be made available upon request. (Representative in the EU)	
Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK*	
2010.11.15	 Joong-Hoon Choi / Lab Manager (place and date of issue) (name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.