

b.Alert user manual

C.1102.11016B

10/9/2011
Kassandra NV
Vincent Spruytte



1. CONTENT

1.	content.....	2
2.	parts.....	4
3.	positioning remote sensors.....	5
3.1.	single semi-trailer.....	5
3.2.	dual trailer.....	6
3.3.	what to avoid.....	6
3.4.	problem solving.....	7
4.	front panel.....	8
5.	setup USB stick.....	9
6.	startup unit.....	10
6.1.	procedure.....	10
6.2.	Error coding.....	10
6.2.1.	no setup data.....	10
6.2.2.	no connection with the cabin sensor.....	10
6.2.3.	interface not working.....	10
7.	menu structure.....	11
7.1.	principle.....	11
7.2.	main menu.....	11
7.3.	the sensors.....	11
7.4.	the gsm modem.....	12
7.5.	the batteries.....	12
7.6.	random fun.....	13
8.	alarm.....	14
8.1.	phase 1.....	14
8.2.	phase 2.....	14
8.3.	reset alarm.....	14
9.	de-activate.....	15

10. drive 16

11. charge remote units..... 17

12. upgrade software..... 18

13. problem solving..... 19

14. figures and tables..... 20

2. PARTS



Figure 1 package

The package contains

- The main unit (MU) to install in the cabin
 - o 1 mobile phone antenna
 - o 1 WIFI antenna
 - o 1 cable to connect to different alarm outputs
- 1 cabin sensor
- 2 remote sensors
- 1 power charge cable for both remote sensors and for main unit
- 1 connector to connect the unit to a permanent power line
- 1 USB stick with the setup

3. POSITIONING REMOTE SENSORS

3.1. SINGLE SEMI-TRAILER



Figure 2 position of sensor at the back

The sensors have to be positioned on the chassis of the trailer.

One sensor as far as possible to the back, one sensor as far as possible to the front.

One sensor to the left, one to the right. It does not matter if the front is left and the back right or vice versa. One should avoid that the back sensor is behind a metal structure as shown on Figure 2 and Figure 3.

The sensors need to be connected with their magnets horizontally (bottom) and vertically, i.e. on the side to avoid losing them during driving.



Figure 3 position of sensor at the front

3.2. DUAL TRAILER

The sensors have to be positioned on the chassis of the trailer.

One sensor in the middle of the first part, one in the middle of the second part.

One sensor to the left, one to the right. It does not matter if the front is left or right or vice versa. One should avoid that the back sensor is behind a metal structure as shown on \$.

The sensors need to be connected with their magnets horizontally (bottom) and vertically, i.e. on the side to avoid losing them during driving.

3.3. WHAT TO AVOID

- Positioning of sensors behind a metal box
- Positioning of sensors at another angle than perpendicular to the long side of the trailer

3.4. PROBLEM SOLVING

- In the menu structure of 7.3 it is possible to see the connection quality of the sensors
- When there is no contact with the sensors or one of both sensors
 - Put them in the cabin. The LED should light up. If no, the battery is too low
 - If the LED light up, go to the trailer and position the sensors
 - The LED's should stay on, if not, the position of the sensor is shielded and one should find another position
 - By changing left/right
 - By putting the sensor a bit more to the front or to the back

4. FRONT PANEL

The front panel has 4 elements, as can be seen on Figure 4.

- On the left: start/stop button
- On the right
 - 4 indicator LED's
 - 4 control buttons
- In the middle : USB connector

5. SETUP USB STICK

The USB stick contains the setup information concerning the working of the system and the procedure to give an alarm.

Every alarm is given in 2 steps and it is possible to choose how this is given. This information is on the usb stick.

Before starting the system, the usb stick needs to be placed in its position in the front of the MU.



Figure 4 front panel MU without USB



Figure 5 front panel with USB

6. STARTUP UNIT

6.1. PROCEDURE

- Push shortly the left button. The blue LED will go on
- It takes 3 minutes to start the system and to warm up. **During this time, no further indication is given.**
- LED 3 start working
- LED's 1 to 4 will start consecutively
- The LED's start indicating following the normal working of the system (see further)

6.2. ERROR CODING

6.2.1. NO SETUP DATA

When there is no usb stick or the setup files are missing, the system is not able to start. A error will be given by the LED's 1 and 4 who will be blinking.

6.2.2. NO CONNECTION WITH THE CABIN SENSOR

When the cabin sensor is not connected or there is something wrong with the cabling, the LED's 2 an error will be given by the LED's 2 and 3 who will be blinking.

6.2.3. INTERFACE NOT WORKING

If the human interface¹ is not working, the system will shutdown automatically.

¹ Modem, LED's, buttons, ...

7. MENU STRUCTURE

7.1. PRINCIPLE

There are 5 menu levels

- Main menu
- Details about the sensors
- Details about the GSM modem
- Details about the batteries of the remote units
- Random LED's

With button 2 it is possible to walk through these menu levels. Every time one pushes this button the menu goes one step further.

To be able to know which menu is active, the last menu, the random up lighting LED's is created as a reference. The next menu is again the main menu.

7.2. MAIN MENU

Table 1 main menu

LED 1	Sensors and system activated
LED 2	Mobile phone activated and online
LED 3	Battery level 1
LED 4	Battery level 2

The battery levels give an indication of the battery level of the RU with the lowest battery level. When 2 LED's (3 and 4) are up, they are at maximum load.

When both LED's are out, it is time to charge the RU.

7.3. THE SENSORS

Table 2 sensor menu

LED 1	System activated
LED 2	Cabin sensor activated
LED 3	Remote unit 1 activated
LED 4	Remote unit 2 activated

7.4. THE GSM MODEM

Table 3 the modem

LED 1	GSM modem present
LED 2	SIM card present and pin code ok
LED 3	GSM modem active
LED 4	GSM modem online

7.5. THE BATTERIES

Table 4 main menu

LED 1	Level 1
LED 2	Level 2
LED 3	Level 3
LED 4	Level 4

The battery levels give an indication of the battery level of the RU with the lowest battery level. When 4 LED's are up, they are at maximum load.

When only LED 1 is on, it is time to charge the RU.

7.6. RANDOM FUN

Reference menu. LED's will go on and off in a random way.

8. ALARM

The alarm is given in 2 phases.

With the setup program and the USB stick, it is possible to define what happens at what level:

- Buzzer in cabin
- Message on mobile phone
- 3 digital outputs to connect to
 - Board computer
 - Horn
 - Lights
 - ...

8.1. PHASE 1

It is best to use this as a mild alarm and to activate some actions that could scare of a real intruder and do not disturb anybody further when the intrusion was caused by a accidental situation like a foot ball shot to the side of the trailer.

8.2. PHASE 2

With this phase, a real intrusion is detected. The maximum of actions should be taken.

On the unit, the four LED's are blinking.

8.3. RESET ALARM

The alarm can be reset by pushing button 1. The system goes back to the main menu.

9. DE-ACTIVATE

When the truck is loaded or unloaded, or when the driver needs to open the trailer, for instance for inspection by the custom services, an alarm should not be given.

By pushing button 4, the system is deactivated and will not give an alarm. The LED's 1 and 4 are blinking.

By pushing button 4 again, the system is re-activated.

When the truck drives of, without re-activation, the system will be re-activated after the truck has stopped again.

10. DRIVE

When the truck drives, this is detected automatically and the system is de-activated. The moment the truck is stopped, the system starts again.

11. CHARGE REMOTE UNITS

The remote units can be charged with the cable delivered with the system.

It can be connected to any power between 6V and 30V.

A full charge takes ca 4.5 hours.

12. UPGRADE SOFTWARE

When necessary, it is possible to put a software upgrade on the USB stick (see manual software).

When the system is started and it finds the upgrade file, the upgrade is performed automatically and the system is restarted.

14. FIGURES AND TABLES

Figure 1 package	4
Figure 2 position of sensor at the back	5
Figure 3 position of sensor at the front	6
Figure 4 front panel MU without USB.....	9
Figure 5 front panel with USB	9
Table 1 main menu.....	11
Table 2 sensor menu	12
Table 3 the modem	12
Table 4 main menu.....	12