

User Manual of Android Tablet


Thank you for purchasing Teclast products. This is the universal user manual of Android Tablet which introduces the base functions. The application of this manual is to let you to have easy control in it and enjoy its value. The tablet user interface and functions shown in this manual are for reference only. It may be different from the actual product you purchased. Please make the object as the standard. Please read this manual carefully before use. The version number of this manual is Ver1.0.

Announcements:

1. Please noted that the new battery is only able to achieve the best performance after two or three charge and discharge cycles completely.
2. For the first three times charge battery, please make sure the charging time should be 8-10 hours at least. After it, the battery can be full charged about 4 hours. These make lithium battery achieved its best performance in the future.
3. To prevent data loss, it is recommended that users should be back up important data, especially before the firmware upgrade. We are not be responsible for any losses caused by data loss.
4. This machine is a high-precision electronic product, please do not disassemble by yourself.
5. Please avoid any strong beat or collide the player.
6. Avoid using the player in the following environments: high temperature, low temperature, humid, dusty, powerful magnetic field and long-term exposure under sunlight.
7. It's allow to wipe the device's casing gently by wet cloth drying, and any other chemical solution cleaning is strictly prohibited.
8. The device cannot be suffered any drip and splash, and it should not be placed near something like cups filled liquid.
9. To avoid hearing damage, please choose the appropriate volume while listening.
10. Do not alter any part of the device.
11. Please only use the batteries, chargers and accessories manufacturers allowed. It will be violate the warranty regulations or may be dangerous if you use any other ones
12. Please follow the relevant local environmental regulations to dispose the discarded device and accessories.
13. If there are any questions during using, please contact the local dealer or our company's customer service center directly.
14. All specifications or others are subject to change without notice.
15. Teclast tablets don't support Apple iPhone's headphones.

Manual Catalogue:

1. Product specifications
2. Appearance and Key Description
3. Operation keys introduction
4. Getting Started
 - 4.1. Open the player
 - 4.2. Transfer data
 - 4.3. The use of functions
 - 4.3.1. WIFI
 - 4.3.2. Play Music
 - 4.3.3. Play video
 - 4.3.4. Picture browsing
 - 4.3.5. Photograph
 - 4.3.6. Recording
 - 4.3.7. G-SENSOR
 - 4.3.8. Download and Use Application
 - 4.4. Charging Step
 - 4.4.1. Charge the unit via Micro-USB adapter.
- 4.5. Abnormal restart
5. Frequently Asked Questions
 - 5.1. Appearance and Key Descriptions:

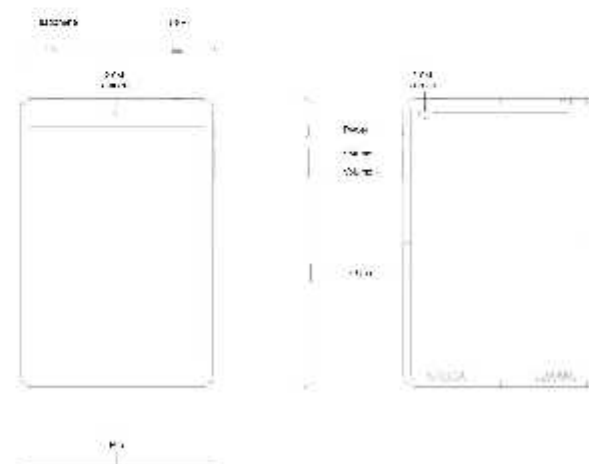

1 2
4 3

6.3.2. Music

Simply click the "Music" into the music player interface, you can download different styles of Music players according to your preference. The unit can support music format of MP3, wav, aac or ogg.



6.3.3. Video

Click on the "Video Player" for video playback, you can download different styles according to your preference Video player, the product can support video formats: 3gp, webm, mov, MP4, flv, mkv, divx, rmvb, tp, ts, m2ts, m2v, mov, vob, mpg, mpeg, dat, wmv, rm, smv



5.2. Introduction operation buttons:

- 5.2.1. Power: Long press to open the device, short press to wake up the device while standby, long press to off the device.
- 5.2.2. Volume +/-: Short press to adjust the volume.

**Note: The number of Buttons and their location on the tablet are different in different Teclast models.

6. User Guide

- 6.1. Boot device
According to "Power" button in the Appearance and Keys description, long press it to turn on the device.
- 6.2. Transfer data
Connect the device with computer PC through the USB cable in package, a PC with a computer connection (to open USB data connection), the need to transfer music / video / file copy in the computer's hard drive, switch to the MID disk paste can achieve data transfer.
- 6.3. The use of functions:
 - 6.3.1. WIFI
Turn on the WIFI in "Settings" menu, click search, select the available network and connect it via enter the correct password.

