


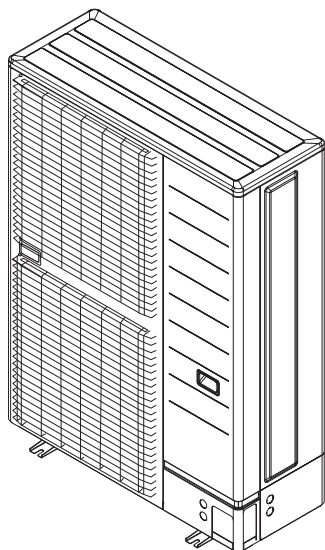

AJYA36LALH
AJYA40LALH
AJYA45LALH
AJYA54LALH

AJHA36LALH
AJHA40LALH
AJHA45LALH
AJHA54LALH

INSTALLATION MANUAL

OUTDOOR UNIT

For authorized service personnel only.

INSTALLATIONSANLEITUNG

AUSSENGERÄT

Nur für autorisiertes Fachpersonal.

MANUEL D'INSTALLATION

UNITÉ EXTÉRIEURE

Uniquement réservé aux techniciens agréés.

MANUAL DE INSTALACIÓN

UNIDAD EXTERIOR

Sólo para personal de servicio autorizado.

MANUALE D'INSTALLAZIONE

UNITÀ ESTERNA

A uso esclusivo del personale tecnico autorizzato.

ΕΓΧΕΙΡΙΔΙΟ ΕΓΚΑΤΑΣΤΑΣΗΣ

ΕΞΩΤΕΡΙΚΉ ΜΟΝΑΔΑ

Μόνο για εξουσιοδοτημένο τεχνικό προσωπικό.

MANUAL DE INSTALAÇÃO

UNIDADE EXTERIOR

Apenas para técnicos de assistência autorizados.

РУКОВОДСТВО ПО УСТАНОВКЕ

ВНЕШНИЙ МОДУЛЬ

Только для авторизованного обслуживающего персонала.

KURULUM KILAVUZU

DIŞ ÜNİTE

Yalnızca yetkili servis personeli için.

English

Deutsch

Français

Español

Italiano

Ελληνικά

Português

Русский

Türkçe

CAUTION

**R410A
REFRIGERANT**

This Air Conditioner contains and operates
with refrigerant R410A.

THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED
BY QUALIFIED PERSONNEL.

Refer to Commonwealth, State, Territory and local legislation,
regulations, codes, installation & operation manuals, before
the installation, maintenance and/or service of this product.

FUJITSU GENERAL LIMITED

PART NO. 9380545026-02

Contents

1. SAFETY PRECAUTIONS	1
2. ABOUT THE UNIT	2
2. 1. Precautions for using R410A refrigerant	2
2. 2. Special tools for R410A	2
2. 3. Accessories	2
2. 4. Optional parts	3
3. INSTALLATION WORK	3
3. 1. Selecting an installation location	3
3. 2. Drain processing	3
3. 3. Installation dimensions	3
3. 4. Transporting the unit	4
3. 5. Installation the unit	5
4. SYSTEM CONFIGURATION	5
4. 1. System configuration	5
4. 2. Pipe selection	5
4. 3. Protection of pipes	6
5. PIPE INSTALLATION	6
5. 1. Brazing	6
5. 2. Indoor unit pipe connections	6
5. 3. Opening the knockout hole	7
5. 4. Pipe connection	7
6. ELECTRICAL WIRING	8
6. 1. The precautions of electrical wiring	8
6. 2. Knockout hole	9
6. 3. Selecting power supply cable and breaker	9
6. 4. Transmission line	9
6. 5. Wiring method	11
6. 6. External input and external output	12
7. FIELD SETTING	13
7. 1. Field setting switches	13
7. 2. DIP switch setting	13
7. 3. Rotary switch setting	13
7. 4. Push button setting	14
7. 5. Address setting for signal amplifiers	16
7. 6. Indoor unit address setting	16
7. 7. Resistance measurement of transmission cable (Measure with breaker OFF)	17
8. PIPE INSTALLATION II	17
8. 1. Sealing test	17
8. 2. Vacuum process	18
8. 3. Additional charging	18
8. 4. Installing insulation	19
8. 5. Filling with putty	19
9. TEST OPERATION	19
9. 1. Indoor unit connection check	19
9. 2. Test run	20
9. 3. Test run method	20
9. 4. Checklist	22
10. LED Display	22
10. 1. Normal operation mode	22
10. 2. Error display mode	22
11. INFORMATION	22

1. SAFETY PRECAUTIONS

- Be sure to read this Installation manual thoroughly before installation.
- The warnings and precautions indicated in this Installation manual contain important information pertaining to your safety. Be sure to observe them.
- After installing the unit, perform a test run to make sure the unit operates normally. Then, explain to the customer how to operate and maintain the unit.
- Please pass this Installation manual together with the Operating manual to the customer. Please ask the customer to keep the Operating manual and Installation manual at hand for future reference during the moving or repair of the main unit.



WARNING!

This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.

Consult the retail store or professional technicians to install the main unit according to the Installation manual.
Improper installation will cause serious accidents such as refrigerant leakage, water leakage, electric shock, and fire.
Manufacturer's guarantee will be invalid when instructions in the Installation manual are ignored during installation.

For installation purposes, be sure to use the parts supplied by the manufacturer or other prescribed parts.
Using non-specified parts will cause serious accidents such as falling unit, refrigerant leakage, water leakage, electric shock, and fire.

To install a unit that uses the R410A refrigerant, use dedicated tools and piping materials that have been manufactured specifically for R410A use.
Because the pressure of the R410A refrigerant is approximately 1.6 times higher than the R22, failure to use dedicated piping material or improper installation can cause rupture or injury.
It will also cause serious accidents such as refrigerant leakage, water leakage, electric shock, and fire.

Do not use this equipment with air or any other unspecified refrigerant in the refrigerant lines.
Excess pressure can cause a rupture.

Be sure to install the unit as prescribed, so that it can withstand earthquakes and typhoons or other strong winds.
Improper installation can cause the unit to topple or fall, or other accidents.

Ensure that the outdoor unit is securely installed at a place that can withstand the weight of the unit.
Improper installation will cause injuries caused by falling unit.

If there is a refrigerant leakage, make sure that it does not exceed the concentration limit.
If a refrigerant leakage exceeds the concentration limit, it can lead to accidents such as oxygen starvation.

If a refrigerant leakage occurs during operation, immediately vacate the premises and thoroughly ventilate the area.
If the refrigerant is exposed to fire, it will create a hazardous gas.

Electrical work must be performed in accordance with this Installation manual by a person certified under the national or regional regulations. Be sure to use a dedicated circuit for the unit.
An insufficient power supply circuit or improperly performed electrical work can cause serious accidents such as electric shock or fire.

For wiring, use the prescribed type of cables, connect them securely, making sure that there are no external forces of the cables applied to the terminal connections.
Improperly connected or secured cables can cause serious accidents such as overheating the terminals, electric shock, or fire.

Securely install the electrical box cover on the unit.
An improperly installed electrical box cover can cause serious accidents such as electric shock or fire through exposure to dust or water.

Do not turn ON the power until all work has been completed.
Turning ON the power before the work is completed can cause serious accidents such as electric shock or fire.

After the installation, make sure there is no refrigerant leakage.
If the refrigerant leaks into the room and becomes exposed to a source of fire such as a fan heater, stove, or burner, it will create a hazardous gas.

Use a wall hole pipe. Otherwise, it may cause a short circuit.

Do not place the outdoor unit near the handrail of the balcony.
Children may climb onto the outdoor unit, lean over the handrail and fall over.

Use only a specified power cable. Poor connection, poor insulation, and exceeding the allowable current will lead to electric shock and fire.

Attach the connecting cables securely to the terminal. Or secure it firmly with a "wiring suppressor".
Loose connection will lead to malfunction, electric shock, and fire.

Install a breaker (Included with earth leakage circuit breaker) to cut off all AC main current at the same time.
If you do not install a breaker, it may cause electric shock and fire.

During installation, make sure that the refrigerant pipe is attached firmly before you run the compressor. Do not operate the compressor under the condition of refrigerant piping not attached properly with 2-way or 3-way valve open. This may cause abnormal pressure in the refrigeration cycle that leads to rupture and even injury.
During the pump-down operation, make sure that the compressor is turned off before you remove the refrigerant piping. Do not remove the connection pipe while the compressor is in operation with 2-way or 3-way valve open. This may cause abnormal pressure in the refrigeration cycle that leads to breakage and even injury.

 CAUTION!	This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.
This unit must be installed by qualified personnel with a capacity certificate for handling refrigerant fluids. Refer to regulation and laws in use on installation place.	
The installation must be carried out in compliance with regulations in force in the place of installation and the installation instructions of the manufacturer.	
This unit is part of a set constituting an air conditioner. It must not be installed alone or with non-authorized by the manufacturer.	
This unit contains no user-serviceable parts. Always consult authorized service personnel to repairs.	
When moving, consult authorized service personnel for disconnection and installation of the unit.	
- Obtain the distribution network operator's agreement about the power capacity of the power supply system, specification of the cable and the harmonic current, and etc. when you connect the outdoor unit with the power supply. - This unit must be connected to a power supply with impedance of 0.398 ohm and below. If the power supply does not satisfy this requirement, please consult the power supplier. - This product is intended for professional use. Be sure to use a dedicated power circuit. Never use a power supply shared by another appliance.	
The units are not explosion proof and therefore should not be installed in explosive atmosphere.	
Do not install the unit in the following areas: - Area with high salt content, such as at the seaside. It will deteriorate metal parts, causing the parts to fall or the unit to leak water. - Area filled with mineral oil or containing a large amount of splashed oil or steam, such as a kitchen. It will deteriorate plastic parts, causing the parts to fall or the unit to leak water. - Area that generates substances that adversely affect the equipment, such as sulfuric gas, chlorine gas, acid, or alkali. It will cause the copper pipes and brazed joints to corrode, which can cause refrigerant leakage. - Area containing equipment that generates electromagnetic interference. It will cause the control system to malfunction, preventing the unit from operating normally. - Area that can cause combustible gas to leak, contains suspended carbon fibers or flammable dust, or volatile inflammables such as paint thinner or gasoline. If gas leaks and settles around the unit, it can cause a fire. - Avoid installing the unit at places where it will come into contact with animals' urine or ammonia.	
The units are not explosion proof and therefore should not be installed in explosive atmosphere.	
Do not use the unit for special purposes, such as storing food, raising animals, growing plants, or preserving precision devices or art objects. It can degrade the quality of the preserved or stored objects.	
Ground the unit. Do not connect the ground cable to a gas pipe, water pipe, lightning rod, or a telephone ground cable. Improper grounding may cause electric shock.	
Perform draining for the unit according to the Installation manual. Check that the water is properly drained. If the drain processing is improperly installed, water may drip down from the unit, wetting the furniture.	
Do not touch the fins with bare hands.	
Be sure not to start or stop the operation of air conditioning with power breaker. Otherwise, it may cause malfunction or water leakage.	
When setting it up near the equipment that generates electromagnetic waves and the equipment that generates the higher harmonics wave, be sure to take measures against noise. Otherwise, it may cause malfunction or failure.	
When energizing to the crankcase heater, please turn on the power 12 hours or earlier before operation begins. When the energizing time is short, it may cause failure. Besides, please do not turn off power during the busy season.	
Children should be monitored to ensure they do not play with the device.	
This product is not intended to be used by people (including children) with physical, sensory or mental disability, or persons lacking experience or knowledge unless they have been given by the through a person responsible for their safety, supervision or instruction concerning the use of the device.	

2. ABOUT THE UNIT

2.1. Precautions for using R410A refrigerant


Pay careful attention to the following points:
- Since the working pressure is 1.6 times higher than that of R22 models, some of the piping and installation and service tools are special. (See the table in the SPECIAL TOOLS FOR R410A section.) Especially, when replacing a conventional refrigerant (other than R410A) model with a new refrigerant R410A model, always replace the conventional piping and flare nuts with the R410A piping and flare nuts. - Models that use refrigerant R410A have a different charging port thread diameter to prevent erroneous charging with R22, R407C and for safety. Therefore, check beforehand. [The charging port thread diameter for R410A is 1/2 UNF 20 threads per inch.] - Be more careful than the installation of the refrigerant (other than R410A) models, not to enter foreign matters (oil, water, etc.) and other refrigerant into the piping. Also, when storing the piping, securely seal the openings by pinching, taping, etc. - When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases, and always charge from the liquid phase side whose composition is stable.

2.2. Special tools for R410A

Tool name	Contents of change for R22 tool
Gauge manifold	Pressure is huge and cannot be measured with a conventional gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended to use a gauge manifold with a high pressure display range -0.1 to 5.3 MPa and a low pressure display range -0.1 to 3.8 MPa.
Charging hose	To increase pressure resistance, the hose material and base size were changed.
Vacuum pump	A conventional vacuum pump can be used by installing a vacuum pump adapter. - A conventional vacuum pump can be used by installing a vacuum pump adapter. - Be sure that the pump oil does not back flow into the system. Use one capable for vacuum suction of -100.7kPa (5 Ton, -755mmHg).
Gas leakage detector	Special gas leakage detector for HFC refrigerant R410A.

2.3. Accessories

 Use connecting parts as required.
Do not throw away the connecting parts until the installation has been complete.

Name and shape	Q'ty	Application
Specifications manual 	1	—
Installation manual 	1	(This book)
Drain cap 	3	For outdoor unit drain piping work
Drain pipe 	1	For outdoor unit drain piping work
Cable tie 	2	For binding power cable and transmission cable
Reducer 	1	For connecting gas pipe (For 54 model)

2. 4. Optional parts

CAUTION

The following parts are optional parts specific to R410A refrigerant.
Do not use parts other than those listed below.

2. 4. 1. Separation tube kit

Separation tube uses the following parts.

Separation tube	Total cooling capacity of indoor unit (kw)
UTP-AX090A	ALL

2. 4. 2. Header

Header uses the following parts. A header is used for connecting the indoor units.

Header		Total cooling capacity of indoor unit (kw)
3-6 Branches	3-8 Branches	
UTR-H0906L	UTR-H0908L	ALL

3. INSTALLATION WORK

Please obtain the approval of the customer when selecting the location of installation and installing the main unit.

3. 1. Selecting an installation location

WARNING

Install the unit in a location that can withstand its weight, and where it will not topple or fall.

- Calculate the proper refrigerant concentration if you will be installing it in an enclosed location.

$$\frac{\text{Total amount of replenished refrigerant in refrigerant facility (kg)}}{\text{Capacity of smallest room where unit is installed (m}^3\text{)}} \leq \frac{\text{Refrigerant concentration (kg/m}^3\text{)}}{(0.3\text{kg/m}^3)}$$

- If the results of the calculation exceed the concentration limit, increase the room surface area or install a ventilation duct.

CAUTION

Please install the outdoor unit without slant. (within 3 degrees)

Install this unit in a location with good ventilation.

If the unit must be installed in an area within easy reach of the general public, install as necessary a protective fence or the like to prevent their access.

Install the unit in an area that would not inconvenience your neighbors, as they could be affected by the airflow coming out from the outlet, noise, or vibration.
If it must be installed in proximity to your neighbors, be sure to obtain their approval.

If the unit is installed in a cold region that is affected by snow accumulation, snow fall, or freezing, take appropriate measures to protect it from those elements.
To ensure a stable operation, install inlet and outlet ducts.

Install the unit in an area that would not cause problems even if the drain water is discharged from the unit. Otherwise, provide drainage that would not affect people or objects.

Install the unit in an area that has no heat sources, vapors, or the risk of the leakage of flammable gas in the vicinity.

Install the unit in an area that is away from the exhaust or vent ports that discharge vapor, soot, dust, or debris.

Install the indoor unit, outdoor unit, power supply cable, transmission cable and remote control cable at least 1 meter away from a television or radio.
The purpose of this is to prevent TV reception interference or radio noise. (Even if they are installed more than 1 meter apart, you could still receive noise under some signal conditions.)

Keep the length of the piping of the indoor and outdoor units within the allowable range.

For maintenance purposes, do not bury the piping.

3. 2. Drain processing


CAUTION

Perform drain work in accordance with this Manual, and ensure that the drain water is properly drained. If the drain work is not carried out correctly, water may drip down from the unit, wetting the furniture.

When the outdoor temperature is 0 °C or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold weather.

- As the drain water flows out of the outdoor unit during heating operation, install the drain pipe and connect it to a commercial 16mm hose.
- When installing the drain pipe, plug all the holes other than the drain pipe mounting hole in the bottom of the outdoor unit with putty so there is no water leakage.

(Unit: mm)

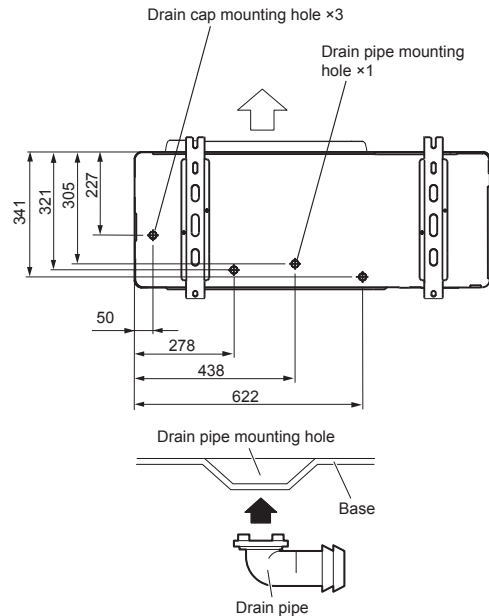

3. 3. Installation dimensions

CAUTION

Provide sufficient installation space, such as transportation route, maintenance space, ventilation space, refrigerant piping space, and passageways.

Pay attention to the specifications of the installation space as shown in the figure. If the unit is not installed according to specifications, it may cause short circuit or poor performance. The unit may be prone to lapse into non-operation due to high pressure protection.

When there is a wall in front of the unit, provide a space of 500mm or more as maintenance space.
When there is a wall at the right side of the unit, provide a space of 25mm or more as maintenance space.

An outdoor temperature of 35 °C (DB) in air-conditioned operation is assumed for the installation space in this item. If the outdoor temperature exceeds 35 °C (DB) and the outdoor unit is operating at a load exceeding its rated ability, provide a larger inlet space.

If you are installing more outdoor units than indicated here, please ensure sufficient space or consult your distributing agent as it may affect the performance due to short circuit and other problems.


Consider the transportation route, installation space, maintenance space, and access, and install the unit in a location with sufficient space for the refrigerant piping.

Observe the installation space specifications that are shown in the figures.

Keep the same space at rear air intake.

Provide the same space for the air intake at the rear of the outdoor unit.

If the installation is not performed according to the specifications, it could cause a short circuit and result in a lack of operating performance. As a result, the outdoor unit might easily be stopped by high-pressure protection.

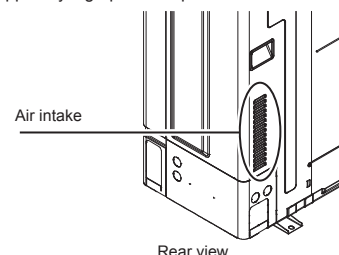


CAUTION

Installation methods not shown in the following examples are not recommended.
Performance may drop significantly.


3.3.1. Single outdoor unit installation

When the upward area is open (Unit: mm)


(1) Obstacles at rear only

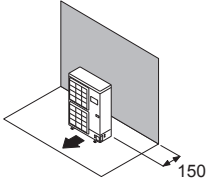


(2) Obstacles at rear and sides only

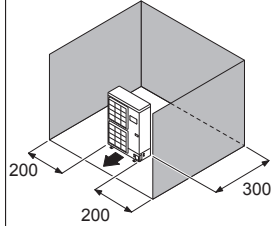

(3) Obstacles at front only

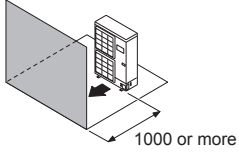


(4) Obstacles at front and rear only

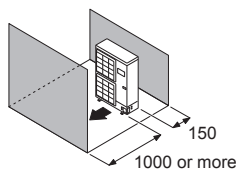


When an obstruction is present also in the upward area (Unit: mm)

(1) Obstacles at rear and above only

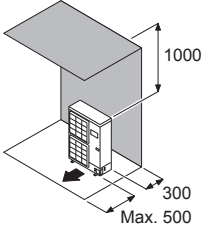

(2) Obstacles at rear, sides, and above only

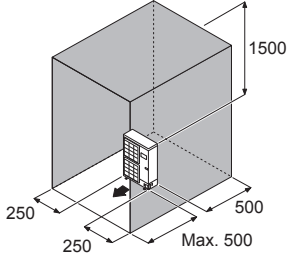


3.3.2. Multiple outdoor unit installation


- Provide at least 25 mm of space between the outdoor units if multiple units are installed.
- When routing the piping from the side of an outdoor unit, provide space for the piping.
- No more than 3 units must be installed side by side.
When 3 units or more are arranged in a line, provide the space as shown in the following example when an obstruction is present also in the upward area.

When the upward area is open (Unit: mm)


(1) Obstacles at rear only

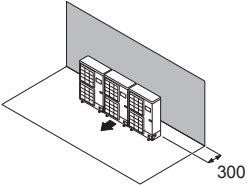

(2) Obstacles at front only

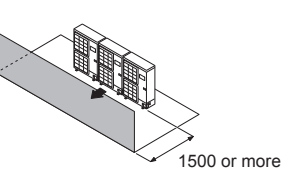


(3) Obstacles at front and rear only

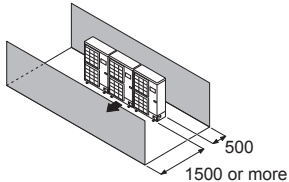

When an obstruction is present also in the upward area (Unit: mm)


- Obstacles at rear and above only

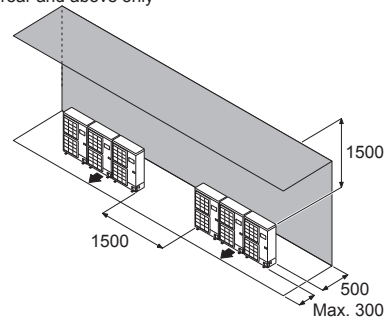


3.3.3. Outdoor units installation in multi row

- * The following settings are not recommended in case of cooling by a low outside temperature.

(1) Single parallel unit arrangement

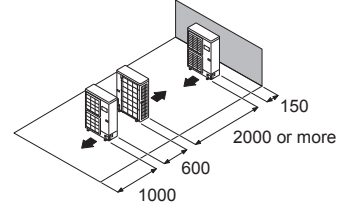

(2) Multiple parallel unit arrangement

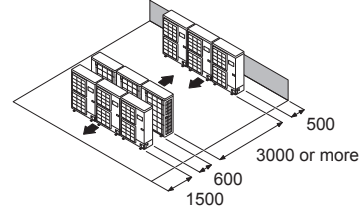

3. 4. Transporting the unit

WARNING

Do not touch the fins.
Otherwise, personal injury could result.

CAUTION

When carrying the unit, hold the handles on the right and left sides and be careful.
If the outdoor unit is carried from the bottom, hands or fingers may be pinched.

- Carry slowly in the manner as shown on "Fig. B" holding the handles "Fig. A" in right and left sides. (Be careful not to touch with hands or objects.)
- Be sure to hold the handles on the sides of the unit. Otherwise, the suction grilles on the sides of the unit may be deformed.

Fig. A



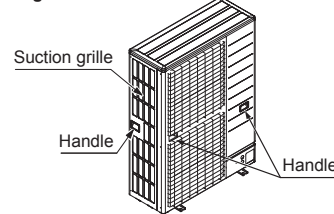


Fig. B

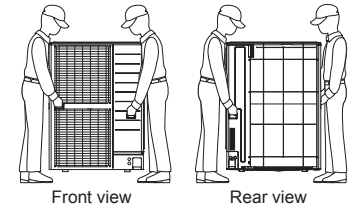


3.5. Installation the unit

- Please install the outdoor unit without slant. (within 3 degrees)
- Install 4 anchor bolts at the locations indicated with arrows in the figure.
- To reduce vibration, do not install the unit directly on the ground. Install it on a secure base (such as concrete blocks).
- The foundation shall support the legs of the unit and have a width of 50mm or more.
- Depending on the installation conditions, the outdoor unit may spread its vibration during operation, which may cause noise and vibration. Therefore, attach damping materials (such as damping pads) to the outdoor unit during installation.
- Install the foundation, making sure that there is enough space for installing the connection pipes.
- Secure the unit to a solid block using foundation bolts. (Use 4 sets of commercially available M10 bolts, nuts, and washers.)
- The bolts should protrude 20mm. (Refer to the figure.)
- If overturning prevention is required, purchase the necessary commercially available items.

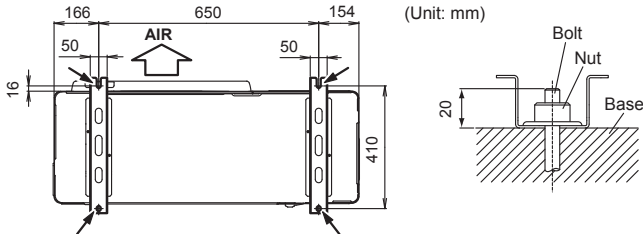


Do not install directly on the ground, this may result in equipment failure.
Make sure the height of the base is 50 mm from the ground. Otherwise, there is a risk that the drainage water will freeze between the device and the surface, disabling drainage.

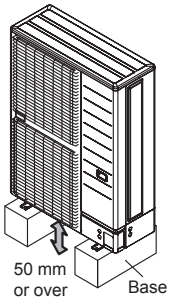

CAUTION

 In areas with heavy snowfall, where intake and outlet of the outdoor unit can become blocked by snow. It is recommended that unit be installed under a canopy or elevated on a high stand. Failure to do so will result in poor heating performance and/or premature failure of equipment.



4. SYSTEM CONFIGURATION


4.1. System configuration

CAUTION

Always keep to the limit on the total amount of refrigerant. Exceeding the limit on the total amount of refrigerant when charging will lead to malfunction.

- Between outdoor unit and the farthest indoor unit
 $a+f \leq 120\text{m}$, $a+p \leq 120\text{m}$
- Between the first separation tube and the farthest indoor unit
 $f \leq 40\text{m}$, $p \leq 40\text{m}$
- Between the nearest indoor unit and the outdoor unit
 $a+b+h \geq 5\text{m}$, $a+c+q \geq 5\text{m}$
- Between outdoor unit and the first separation tube
 $a \geq 3\text{m}$
- Difference in height between outdoor units and indoor units (H1)
30m: For the indoor unit stated below
30m: For the outdoor unit stated below
- Difference in height between indoor units and indoor units
 $H2 \leq 15\text{m}$, $H3 \leq 15\text{m}$
- Maximum total equivalent pipe length
 $a+f+h+j+l+n+p+q+s+u \leq 180\text{m}$
- Total refrigerant amount $\leq 15.7\text{kg}$

Fig. A

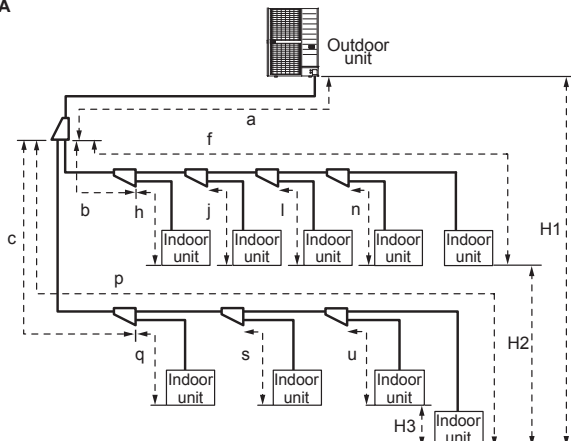

4.2. Pipe selection

CAUTION

This unit is designed specifically for use with the R410A refrigerant.

Pipes for R407C or R22 may not be used with this unit.

Do not use existing pipes.

Improper pipe selection will degrade performance.

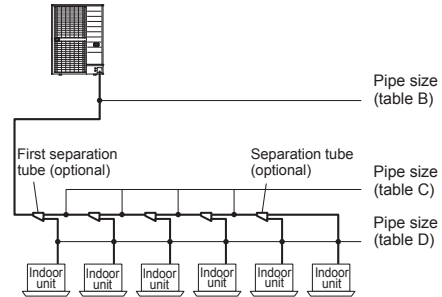


Table. A (Wall thickness and pipe material for each diameter)

Outside Diameter	mm (in.)	6.35 (1/4)	9.52 (3/8)	12.70 (1/2)	15.88 (5/8)	19.05 (3/4)
Wall Thickness ^{*2}	mm (in.)	0.8 (0.032)	0.8 (0.032)	0.8 (0.032)	1.0 (0.039)	1.2 (0.047)
Material	COPPER ^{*1} JIS H3300 C1220-T-O or equivalent					

Please select the pipe size in accordance with local rules.

*1. Allowable tensile stress $\geq 33 \text{ (N/mm}^2\text{)}$

*2. Endurance pressure of the pipes 4.2MPa

Table. B (Diameter of piping used between outdoor unit and first separation tubes or headers)

MODEL	Outdoor unit cooling capacity (kW)	Diameter of piping [mm(in.)]			
		Between outdoor unit and the farthest indoor unit < 90m ^{*3}		Between outdoor unit and the farthest indoor unit $\geq 90\text{m}^{\text{*3}}$	
		Liquid pipe	Gas pipe	Liquid pipe	Gas pipe
AJ□A36LALH	11.2	9.52 (3/8)	15.88 (5/8)	9.52 (3/8)	19.05 (3/4)
AJ□A40LALH	12.1	9.52 (3/8)	15.88 (5/8)	9.52 (3/8)	19.05 (3/4)
AJ□A45LALH	14.0	9.52 (3/8)	15.88 (5/8)	9.52 (3/8)	19.05 (3/4)
AJ□A54LALH	15.5	9.52 (3/8)	19.05 (3/4)	9.52 (3/8)	19.05 (3/4)

*3. Pipe Length: "a+f" or "a+p" of "4.1. SYSTEM CONFIGURATION"

Table. C (Diameter of piping used between separation tubes)

Total cooling capacity of indoor unit [kW]	Outside diameter [mm(in.)]		Separation tube ^{*4}	Header ^{*4}
	Liquid pipe	Gas pipe		
4.4 to 11.1	9.52 (3/8)	15.88 (5/8)	UTP-AX090A	UTR-H0906L UTR-H0908L
11.2 to 20.1	9.52 (3/8)	19.05 (3/4)		

*4. For the installation method, please refer to the installation manuals for indoor unit, separation tubes or headers.

If pipe diameter Table C > Table B, select pipe size from Table B.

"Total cooling capacity of indoor unit" is the total value for the cooling capacity of indoor unit connected downstream.

Use a standard separation tube for pipe branching. Do not use a T tube as it does not separate the refrigerant evenly.

Table. D (Diameter of piping used between separation tube and indoor unit)

Model code of indoor unit	Outside diameter [mm(in.)]	
	Liquid pipe	Gas pipe
07 to 14	6.35 (1/4)	12.70 (1/2)
18 to 30	9.52 (3/8)	15.88 (5/8)
36 to 54 ^{*5}	9.52 (3/8)	19.05 (3/4)

*5. If pipe diameter Table D > Table C, using of pipe size from Table C is preferable. (Use reducer to change the diameter of connection pipe.)

Table.E (Indoor unit capacity comparison table - The indication of power is different depending on the model.)

Capacity [kW]	Model code of indoor unit
2.2	07
2.8	09
3.6	12
4.5	14
5.6	18
7.1	24
9.0	30
11.2	36
12.5	45
14.0	54

In the case of ARXB07LALH: equivalent to model code of indoor unit
Model code 07 → Capacity=2.2kW

4. 3. Protection of pipes

Location	Working period	Protection method
Outdoor	1 month or more	Pinch pipes
	Less than 1 month	Pinch or tape pipes
Indoor	—	Pinch or tape pipes


- Protect the pipes to prevent the entry of moisture and dust.
- Especially pay attention when passing the pipes through a hole or connecting the end of a pipe to the outdoor unit.

5. PIPE INSTALLATION

5. 1. Brazing

CAUTION

If air or another type of refrigerant enters the refrigeration cycle, the internal pressure in the refrigeration cycle will become abnormally high and prevent the unit from exerting its full performance.

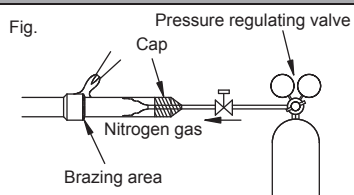

Apply nitrogen gas while brazing the pipes.

Nitrogen gas pressure: 0.02 MPa (= pressure felt sufficiently on the back of your hand)

If a pipe is brazed without applying nitrogen gas, it will create an oxidation film. This can degrade performance or damage the parts in the unit (such as the compressor or valves).

Do not use flux to braze pipes. If the flux is the chlorine type, it will cause the pipes to corrode. In addition, if the flux contains fluoride, it will affect the refrigerant piping system due to deterioration of refrigerant oil.


For brazing material, use phosphor copper that does not require flux.

5. 2. Indoor unit pipe connections


CAUTION

For details, refer to the Installation Instruction Sheet of each part.

Separation tube

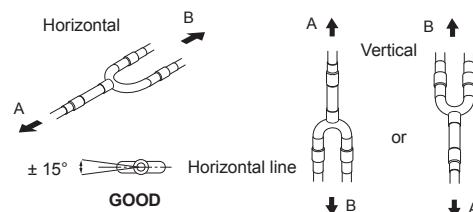

 
A : Outdoor unit or Refrigerant branch kit
B : Indoor unit or Refrigerant branch kit




PROHIBITED

Header

 
Gas pipe




Liquid pipe

 

 $H_1 = 0$ to 10 mm
($\alpha_1: 0^\circ$ to 1°)
 $\beta_1: -10^\circ$ to 10°



 
$H_2 = 0$ to 10 mm
($\alpha_2: 0^\circ$ to 1°)
 $\beta_2: -10^\circ$ to 10°



CAUTION

Do not connect a separation tube after a header.

Leave the distance 0.5 m or more for straight part to branch tube and header.

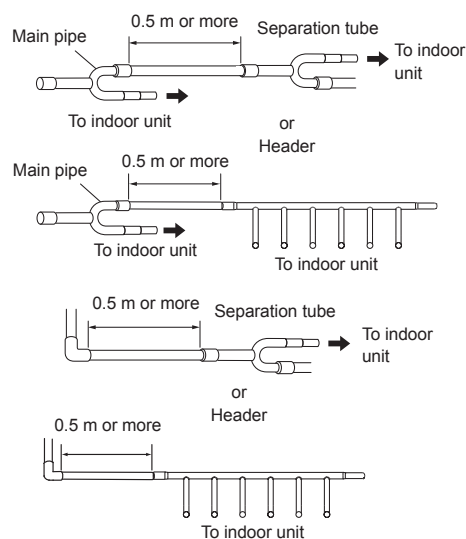

5. 3. Opening the knockout hole

CAUTION

Be careful not to deform or scratch the panel while opening the knockout holes.

To protect the piping insulation after opening a knockout hole, remove any burrs from the edge of the hole. It is recommended to apply rust prevention paint to the edge of the hole.

- Pipes can be connected from 4 directions, front, lateral side, rear side and bottom. (Fig. A)
- When connecting at the bottom, remove the service panel and piping cover on the front of the outdoor unit, and open the knockout hole provided at the bottom corner of the piping outlet.
- It can be installed as shown on "Fig. B" cutting out the 2 slits as indicated on "Fig. C". (When cutting slits, use a steel saw.)

Fig. A

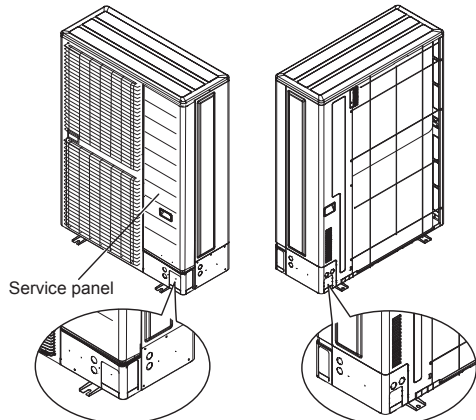


Fig. B



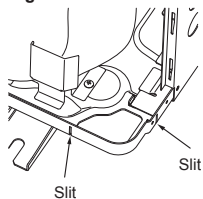


Fig. C

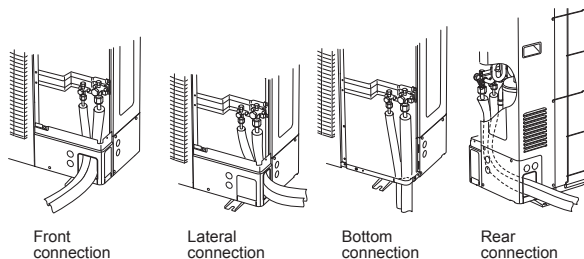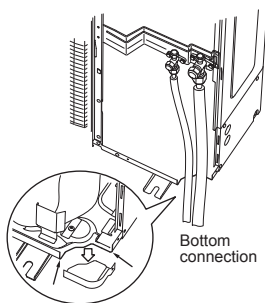

5. 4. Pipe connection

CAUTION


Do not use mineral oil on a flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.

While brazing the pipes, be sure to blow dry nitrogen gas through them.

The maximum lengths of this product are shown in the table. If the units are further apart than this, correct operation cannot be guaranteed.

5. 4. 1. Flaring

- Use special pipe cutter and flare tool exclusive for R410A.
- Cut the connection pipe to the necessary length with a pipe cutter.
 - Hold the pipe downward so that the cuttings will not enter the pipe and remove any burrs.
 - Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool. Leakage of refrigerant may result if other flare nuts are used.
 - Protect the pipes by pinching them or with tape to prevent dust, dirt, or water from entering the pipes.

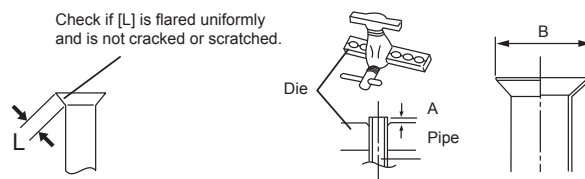

Pipe outside diameter [mm (in.)]	Dimension A (mm) Flare tool for R410A, clutch type	Dimension B ⁰ - 0.4 [mm]
6.35 (1/4)	0 to 0.5	9.1
9.52 (3/8)		13.2
12.70 (1/2)		16.6
15.88 (5/8)		19.7
19.05 (3/4)		24.0

- When using conventional flare tools to flare R410A pipes, the dimension A should be approximately 0.5mm more than indicated in the table (for flaring with R410A flare tools) to achieve the specified flaring. Use a thickness gauge to measure the dimension A.

Width across flats



Pipe outside diameter [mm (in.)]	Width across flats of Flare nut [mm]
6.35 (1/4)	17
9.52 (3/8)	22
12.70 (1/2)	26
15.88 (5/8)	29
19.05 (3/4)	36

5. 4. 2. Bending pipes

CAUTION

To prevent breaking of the pipe, avoid sharp bends. Bend the pipe with a radius of curvature of 100mm or more.

If the pipe is bent repeatedly at the same place, it will break.

- If pipes are shaped by hand, be careful not to collapse them.
- Do not bend the pipes at an angle of more than 90°.
- When pipes are repeatedly bent or stretched, the material will harden, making it difficult to bend or stretch them any more.
- Do not bend or stretch the pipes more than 3 times.

5.4.3. Pipe connection


CAUTION

Be sure to install the pipe against the port on the indoor unit and the outdoor unit correctly. If the centering is improper, the flare nut cannot be tightened smoothly. If the flare nut is forced to turn, the threads will be damaged.

Do not remove the flare nut from the outdoor unit pipe until immediately before connecting the connection pipe.

After installing the piping, make sure that the connection pipes do not touch the compressor or outer panel. If the pipes touch the compressor or outer panel, they will vibrate and produce noise.


- (1) Detach the caps and plugs from the pipes.
- (2) Center the pipe against the port on the outdoor unit, and then turn the flare nut by hand.
- (3) Tighten the flare nut of the connection pipe at the outdoor unit valve connector.
- (4) After tightening the flare nut by hand, use a torque wrench to fully tighten it.

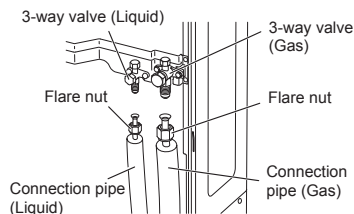

CAUTION

Hold the torque wrench at its grip, keeping it in a right angle with the pipe, in order to tighten the flare nut correctly.


- Outer panel may be distorted if fastened only with a wrench. Be sure to fix the elementary part with a holding wrench (spanner) and fasten with a torque wrench (refer to below diagram). Do not apply force to the blank cap of the valve or hang a wrench, etc., on the cap. If blank cap is broken, it may cause leakage of refrigerant.

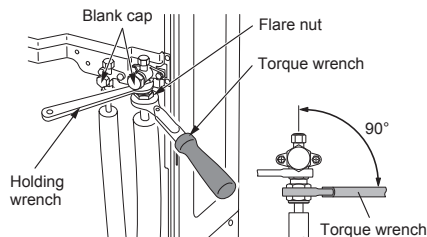

Flare nut [mm (in.)]	Tightening torque [N·m (kgf·cm)]
6.35 (1/4) dia.	16 to 18 (160 to 180)
9.52 (3/8) dia.	32 to 42 (320 to 420)
12.70 (1/2) dia.	49 to 61 (490 to 610)
15.88 (5/8) dia.	63 to 75 (630 to 750)
19.05 (3/4) dia.	90 to 110 (900 to 1100)

In the case of AJ*A54LALH

- It is necessary to change a connection pipe diameter by using Reducer.
- (1) Reducer must be brazed in the outside of the outdoor unit.
 - (2) Distance between 3-way-valve and reducer $\leq$ 1m
 - (3) The part of Reducer do insulation processing after brazing.

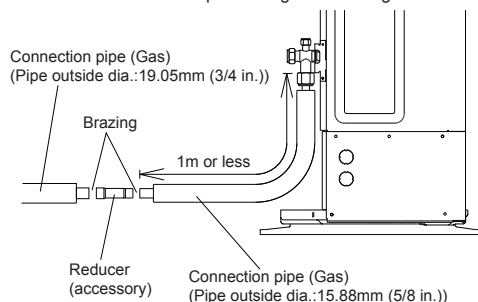


Example. Case of front connection

5.4.4. Handling precautions for the valves

- Mounted part of Blank cap is sealed for protection.
- Fasten blank cap tightly after opening valves.

Operating the valves

- Use a hexagon wrench (size 4mm).
- Opening
 - (1) Insert the hexagon wrench into the valve shaft, and turn it counterclockwise.
 - (2) Stop turning when the valve shaft can no longer be turned. (Open position)
- Closing
 - (1) Insert the hexagon wrench into the valve shaft, and turn it clockwise.
 - (2) Stop turning when the valve shaft can no longer be turned. (Closed position)

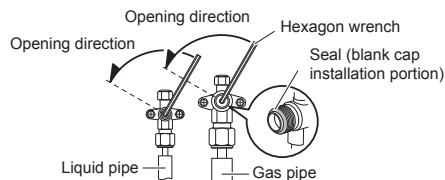

6. ELECTRICAL WIRING

6.1. The precautions of electrical wiring

WARNING

Wiring connections must be performed by a qualified person in accordance with specifications.

The rated supply of this product is 50Hz, 230V of 1-phase, 2-cable. Use a voltage within the range of 198-264V.

Before connecting the cables, make sure the power supply is OFF.

Select a breaker (Included with earth leakage circuit breaker) of appropriate capacity and install one at every power supply of an outdoor unit. Wrong selection of breakers or transition wiring will lead to electric shock and fire.

Do not connect AC power supply to the transmission line terminal board. Improper wiring can damage the entire system.

Install a breaker (Included with earth leakage circuit breaker) in accordance with the related laws and regulations.

Connect the connector cord securely to the terminal. Faulty installation can cause a fire.

Make sure to secure the insulation portion of the connector cable with the cord clamp. A damaged insulation can cause a short circuit.

Never install a power factor improvement condenser. Instead of improving the power factor, the condenser may overheat.

Before servicing the unit, turn the power supply switch OFF. Then, do not touch electric parts for 10 minutes due to the risk of electric shock.

Make sure to perform grounding work. Improper grounding work can cause electric shocks.

Always use a separate power supply line protected by a circuit breaker operating on all cables with a distance between contact of 3mm for this unit.

Do not modify power cable, use extension cable or branch wiring. Improper use may cause electric shock or fire by poor connection, insufficient insulation or over current.

Use crimp-type terminals and tighten the terminal screws to the specified torques, otherwise, abnormal overheating may be produced and possibly cause serious damage inside the unit.

Securely install the electrical box cover on the unit. An improperly installed service panel can cause serious accidents such as electric shock or fire through exposure to dust or water.

CAUTION

The primary power supply capacity is for the air conditioner itself, and does not include the concurrent use of other devices.

Do not use crossover power supply wiring for the outdoor unit.

If the electrical power is inadequate, contact your electric power company.

Install a breaker (Included with earth leakage circuit breaker) in a location that is not exposed to high temperatures.
If the temperature surrounding the breaker is too high, the amperage at which the breaker cuts out may decrease.

Use a breaker (Included with earth leakage circuit breaker) that is capable of handling high frequencies. Because the outdoor unit is inverter controlled, a high-frequency earth leakage circuit breaker is necessary to prevent a malfunction of the breaker itself.

When the electrical switchboard is installed outdoors, place it under lock and key so that it is not easily accessible.

Never bundle the power supply cable and transmission cable, remote control cable together. Separate these cable by 50 mm or more. Bundling these cables together will cause miss operation or breakdown.

Always keep to the maximum length of the transmission cable. Exceeding the maximum length may lead to erroneous operation.

The static electricity that is charged to the human body can damage the control PC board when handling the control PC board for address setting, etc.
Please keep caution to the following points.
Provide the grounding of Indoor unit, Outdoor unit and Option equipment.
Cut off the power supply (breaker).
Touch the metal section (such as the unpainted control box section) of the indoor or outdoor unit for more than 10 seconds. Discharge the static electricity in your body.
Never touch the component terminal or pattern on the PC board.

6.2. Knockout hole

CAUTION

Be careful not to deform or scratch the panel while opening the knockout holes.

After opening the knockout hole, remove the burr on the edges to prevent snapping of cables.
It is recommended to apply rust proof paint on the edges to prevent rust.

Knockout holes are provided for wiring. (Fig. A)

Knockout holes are provided 2 each in the same size in front, lateral and rear sides. (Fig. B)

Fig. A


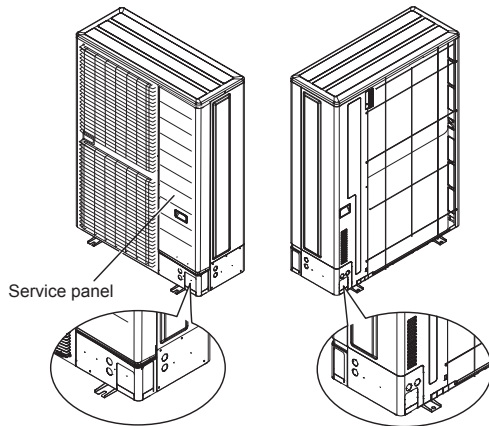


Fig. B

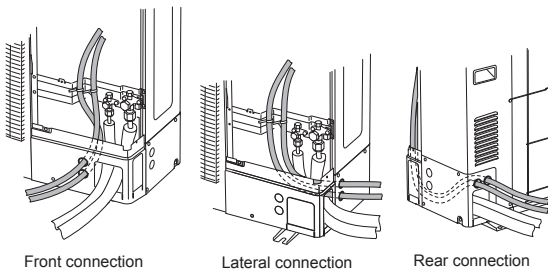

6.3. Selecting power supply cable and breaker

CAUTION

Regulation of cable size and circuit breaker differs from each locality, please refer in accordance with local rules.


Refer to the table for the wiring and breaker specifications of each installation condition.

MODEL	Breaker (Time delay fuse or circuit capacity)	
	Fuse capacity (A)	Leakage current
AJ□A36LALH	32	30mA 0.1sec or less
AJ□A40LALH	32	
AJ□A45LALH	32	
AJ□A54LALH	32	

MODEL	Outdoor unit power supply cable		
	Recommended cable size (mm ²)		Limited wiring length (m)
	Power cable	Earth cable	
AJ□A36LALH	6	4	18
AJ□A40LALH	6	4	18
AJ□A45LALH	6	4	18
AJ□A54LALH	6	4	18

- These values are recommended data.
- Specification: Use conformed cord with Type 60245 IEC66
Remarks : 230V ~ 50Hz 2Wire+ground
- Max. cable length: Set a length so that the voltage drop is less than 2%. Increase the cable diameter when the cable length is long.


Fig. In case of connected outdoor unit

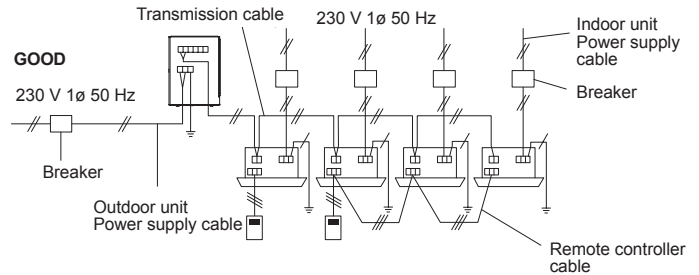

6.4. Transmission line

CAUTION

- Caution when wiring cable
When stripping off the coating of lead wire, always use the exclusive tool such as a wire stripper. If there is no exclusive tool available necessarily, carefully strip the coating by a cutter etc. so that the conductive wire is not damaged. If it is damaged, it may lead to an open circuit and a communication error.
- Pay attention to the following points while attaching wires on the terminal board.
Do not attach 2 wires on one side.
Do not twist wires.
Do not cross the wires.
Do not shorted at edge at root.

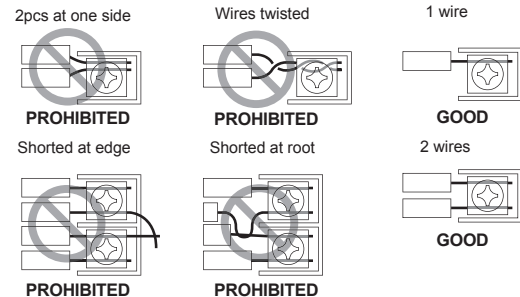

6. 4. 1. Transmission wiring specifications

Follow the specifications below for the transmission cable.

Use	Size	Cable type	Remarks
Transmission cable	0.33mm ²	22AWG LEVEL 4 (NEMA) non-polar 2core, twisted pair solid core diameter 0.65mm	LONWORKS® compatible cable

6. 4. 2. Wiring rules

(1) Total length of transmission cable

Total transmission line length: MAX 3600m

$EF+EG+GH+HJ+HK+KL < 3600\text{m}$ (Fig.2)

In the following cases, Signal Amplifier is required.

① When the total length of the transmission line exceeded 500m.

$AB+BC+BD > 500\text{m}$ (Fig.1)

② When the total number of units* is over 64.

③ Transmission line length between each unit* $\geq 400\text{m}$

(2) Length of transmission cable between 1 network segment (NS)

$EF+EG+GH+HJ+HK \leq 500\text{m}$ (Fig.2)

$KL \leq 400\text{m}$ (Fig.2)

Unit* means indoor unit, outdoor unit, Touch Panel Controller and System Controller, Signal Amplifier, single split adaptor, Network Converter etc..

Fig.1


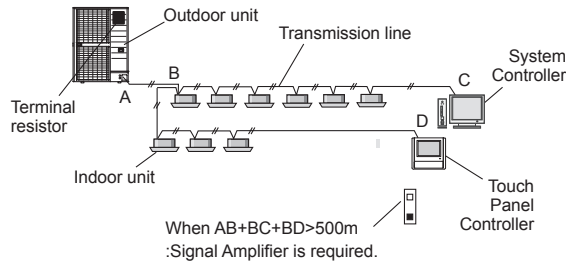


Fig.2

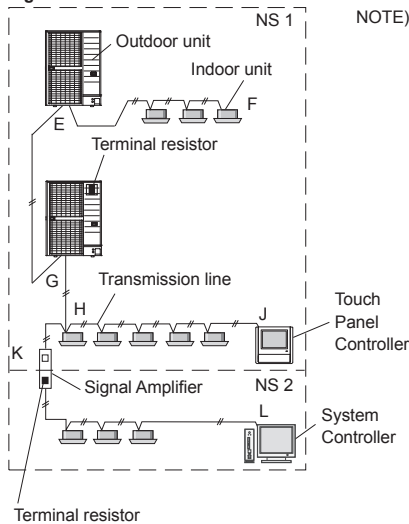


6. 4. 3. Enabling/Disabling automatic address setting


You can enable/disable automatic address setting for the indoor unit and the signal amplifier.

To enable automatic address setting for the indoor unit, connect the indoor unit to outdoor units under the same refrigerant system.(Fig.4)

Example: Disable Automatic Address setting

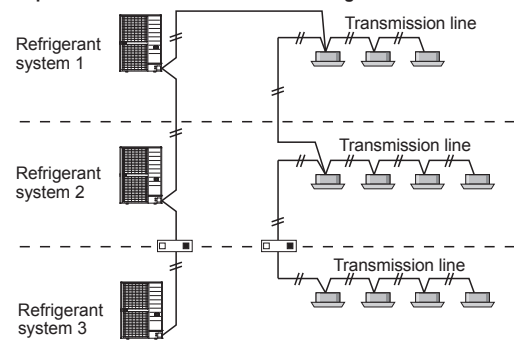


Example: Enable Automatic Address setting

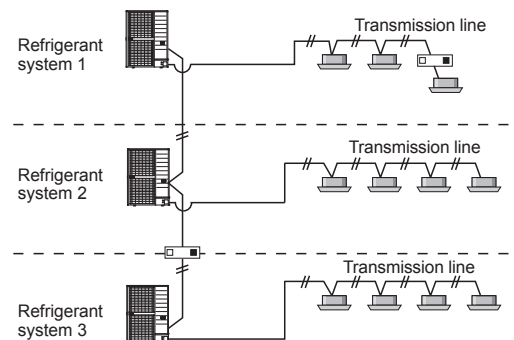

6. 5. Wiring method

6. 5. 1. Connection diagrams

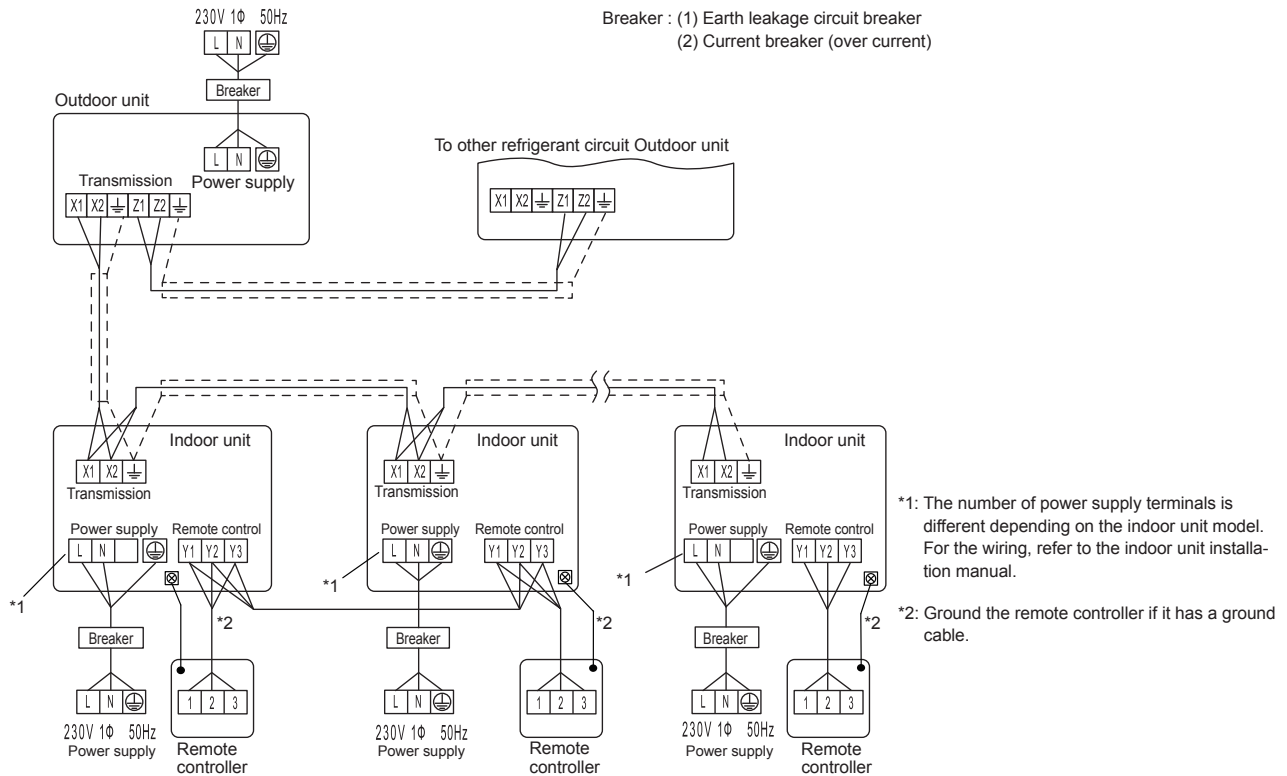


The wiring example for outdoor and indoor units is shown in figure.

6. 5. 2. Wiring procedure

- Remove the service panel. And connect the cable to the terminal in accordance with the terminal name plate.
- Use a ring terminal to connect the electric cables to the power supply terminal board.
- Keep the earth cable longer than the other cables.
- After connecting the electric cable, secure them with a cable clamp.
- Connect the cable without applying excessive tension.
- Use the specified cable type and connect the cable securely.

Secure with a cable clamp as shown in the figure below.

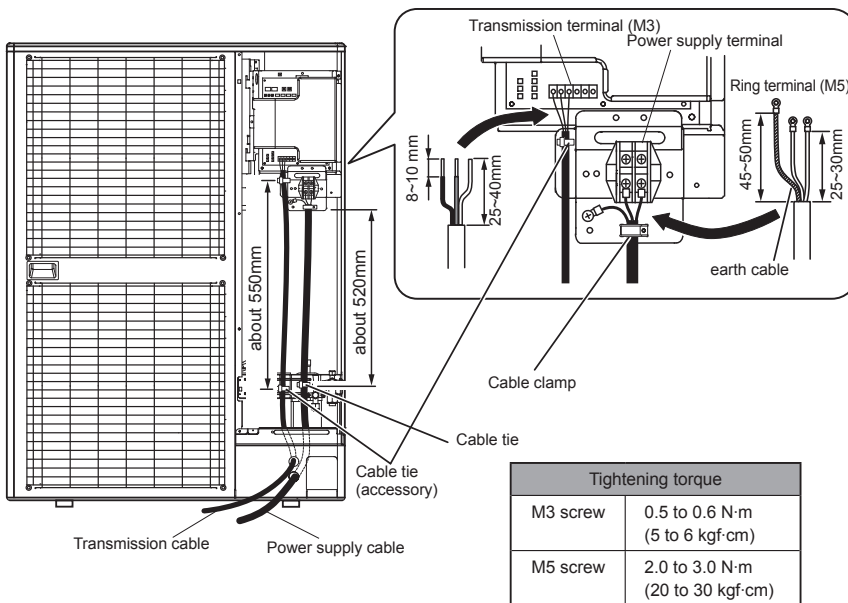

Sealing transmission cable


Connect both ends of the sealed wires of the transmission cable to the earth terminal of the equipment or to the earth screw near the terminal.
Be very careful that the screws are not overly tightened as the cables may snap and the terminal may be damaged.

Use one side of the twisted-pair cable
Be sure to use one side of a twisted-pair cable when using transmission cable with 2 sets of twisted-pair cables.


How to connect wiring to the terminal

Caution when wiring cable

- (1) Use crimp-type terminals with insulating sleeves as shown in the figure to connect to the terminal block.
- (2) Securely clamp the crimp-type terminals to the cables using an appropriate tool so that the cables do not come loose.
- (3) Use the specified cables, connect them securely, and fasten them so that there is no stress placed on the terminals.
- (4) Use an appropriate screwdriver to tighten the terminal screws. Do not use a screwdriver that is too small, otherwise, the screw heads may be damaged and prevent the screws from being properly tightened.
- (5) Do not tighten the terminal screws too much, otherwise, the screws may break.
- (6) See the table below for the terminal screw tightening torques.

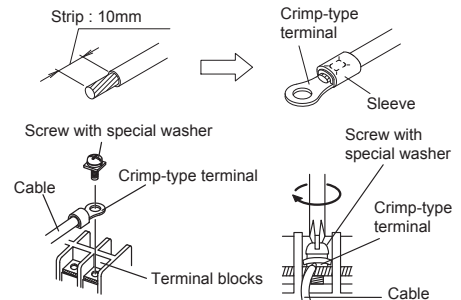


 Wind with insulation tape to prevent short circuit



6. 6. External input and external output

6. 6. 1. Terminal position

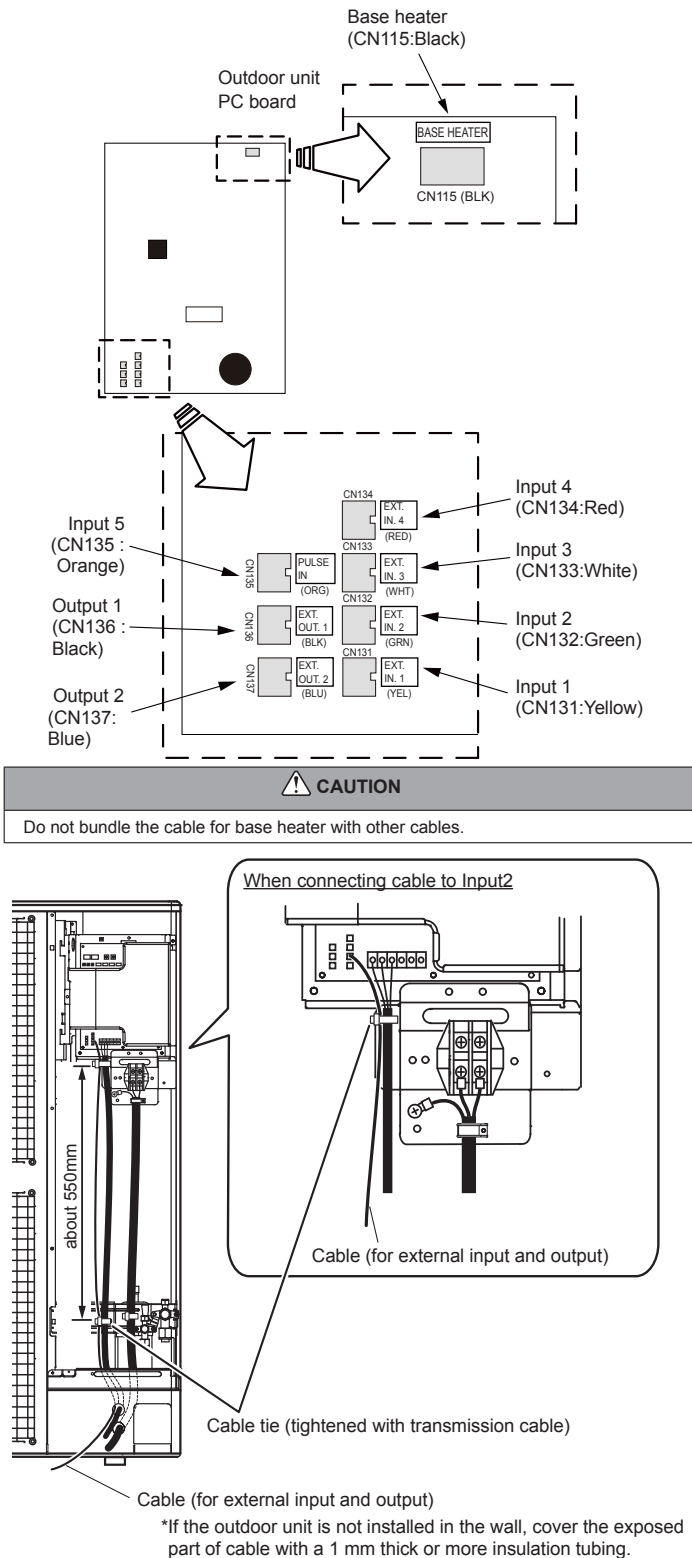


6. 6. 2. External input terminal

Service parts : EXTERNAL INPUT WIRE A (9368777005)

- Setting to low noise mode, cooling priority/heating priority selection, outdoor unit operation peak control setting, emergency/batch stop and electricity meter pulse are possible from the outside.

Wiring method and specifications

- A twisted pair cable (0.33mm² (22AWG)) should be used. Maximum length of cable is 150m.
- Use an external input and output cable with appropriate external dimension, depending on the number of cables to be installed
- For each input, pin No.1 is of positive polarity and pin No.2 is of ground level.

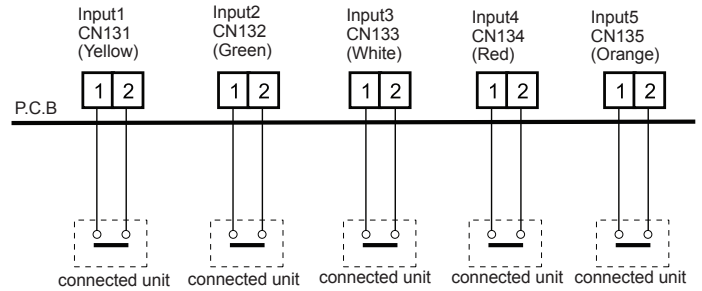

Operation behavior

Each input terminal works as follows.

Connector	Input signal	Status
Input1 CN131 (Yellow)	OFF	Normal operation
	ON	Low noise mode operation
Input2 CN132 (Green) *1	OFF	Cooling priority
	ON	Heating priority
Input3 CN133 (White)	OFF	Normal operation
	ON	Outdoor unit operation peak control
Input4 CN134 (Red)	OFF	Normal operation
	ON	Batch stop or Emergency stop operation *2, *3
Input5 CN135 (Orange) *4	No pulse	No information from electricity meter
	Pulse	Power usage information from electricity meter

The operations of each input terminal and the selection of function are set with the push button on the PC board of outdoor unit. About the setting, please refer to 7.4. Push button setting.

Note :

- *1: The "external input priority mode" must be set by pressing push button on PC board of outdoor unit. (Refer to "7.FIELD SETTING".)
- *2: Batch stop or Emergency stop pattern can be selected by outdoor unit PC board push button. (Refer to "7.FIELD SETTING".)
- *3: The emergency stop function mounted in the J-II does not guarantee the regulations of each country. For this reason, sufficient checking is necessary regarding use. Especially, since the fact that the equipment may not be emergency-stopped in the case of breaking of the wiring to the external input terminals and communication line, communication error due to noise, VRF external input circuit trouble, etc. must be considered, the provision of double measures that add direct interruption of the power supply by switch, etc. is recommended as a precaution.
- *4: Pulse input to CN135 must be width 50ms or more, and must be interval 50ms or more.

6. 6. 3. External output terminal

Service parts : EXTERNAL INPUT WIRE A (9368777005)

- You can detect the operation condition of outdoor unit and the abnormal situation of both indoor and outdoor unit.

Wiring method and specifications


Error display

This output indicates the outdoor unit and connected indoor unit's "Normal" or "Error" status.

Operation display

This output indicates the outdoor unit's "Operation" status.

Connector	Output voltage	Status
Output1 CN136 (Black)	0V	Normal
	DC 12-24 V *5	Error
Output2 CN137 (Blue)	0V	Stop
	DC 12-24 V *5	Operation

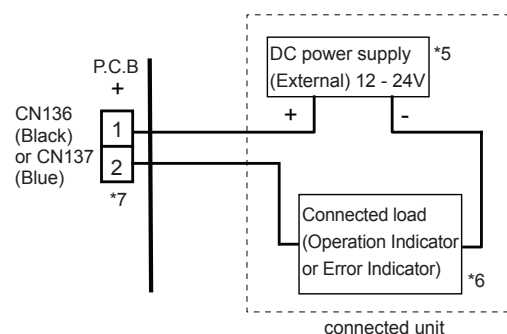

*5: Provide a DC12 to 24V power supply.
Select a power supply capacity with an ample surplus for the connected load.

*6: The allowable current is 30mA or less.
Provide a load resistance such that the current becomes 30mA or less.


*7: Polarity is [+] for pin 1 and [-] for pin 2. Connect correctly.
Do not impress a voltage exceeding 24V across pins 1-2.

- * A twisted pair cable (0.33mm² (22AWG)) should be used. Maximum length of cable is 150m.
- * Use an external input and output cable with appropriate external dimension, depending on the number of cables to be installed.

6.6.4. Base heater terminal

Service parts : WIRE WITH CONNECTOR (9708642000)

This is the output signal for base heater. Output signal ON, when the outdoor temperature goes down below 2°C, and signal OFF at the outdoor temperature 4°C.

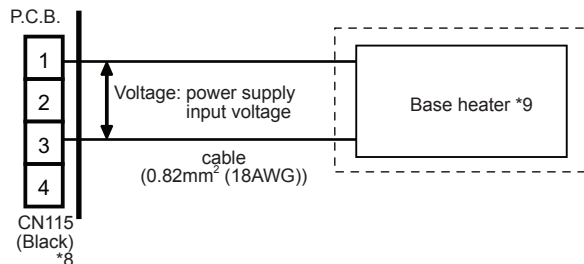

- * 8: Connect to pin 1 and pin 3. No connection pin2 and pin4.
- * 9: The allowable current is 1A or less.

7. FIELD SETTING

CAUTION

Discharge the static electricity from your body before setting up the DIP switches. Never touch the terminals or the patterns on the parts that are mounted on the PC board.

7.1. Field setting switches

Remove the service panel of the outdoor unit and the cover of the electrical component box to access the PC board of the outdoor unit.
PC board switches for various settings and LED displays are shown in the figure.


7.2. DIP switch setting

7.2.1. List of Settings

SET5 must be set for the DIP switch.

Configure the settings before turning on the power. Settings for SET1, SET2, SET3 and SET4 DIP switches are factory default ones. Do not change them.

DIP Switch	Function
SET1	Forbidden
SET2	Forbidden
SET3	Forbidden
SET4	Forbidden
SET5	Forbidden
SET5	Terminal resistor setting

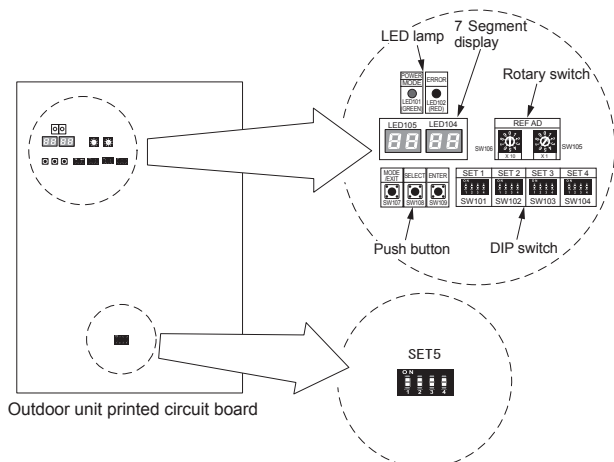

7.2.2. Terminating resistor setting

CAUTION

Be sure to set the terminal resistor according to specifications.
Set the terminal resistor for every network segment (NS).


If terminal resistor is set in multiple devices, the overall communication system may be damaged.
If terminal resistor is not set in a device, abnormal communication may occur.

- Be sure to set 1 terminal resistor in a network segment. You can set the terminal resistor at the outdoor unit or signal amplifier.
- When setting the terminal resistor of a signal amplifier, refer to the installation manual of the signal amplifier.
- When setting multiple terminal resistors, take note of the following items.
 - ① How many network segments are there in a VRF system?
 - ② Where will you set the terminal resistors in a network segment? (Condition for 1 segment: Total number of outdoor and indoor units and signal amplifiers is less than 64, or the total length of the transmission cable is less than 500m)
 - ③ How many outdoor units are connected to 1 refrigerant system?

Configure the setting (DIP switch SET5) of the terminal resistor of the outdoor units as shown below from conditions ① to ③.

SET5	Terminal resistor	Remarks
4		
OFF	Disable	-
ON	Enable	(Factory setting)

Figure: Terminal resistor setting

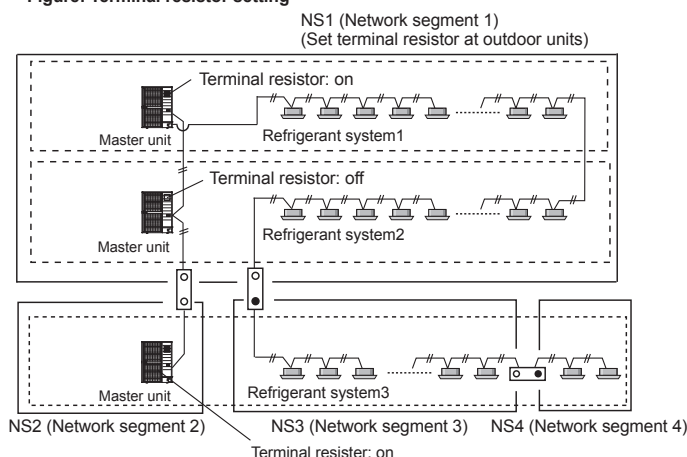

About the setting of terminal resistor

Outdoor unit	Signal amplifier
☒ :on ☐ :off	☒ Install ☐ Do not install

7.3. Rotary switch setting

The rotary switch (REF AD) sets the refrigerant circuit address of the outdoor unit. Configure the settings only on the master unit of a refrigerant system.
If multiple refrigerant systems are connected, set the rotary switch (REF AD) as shown in the table below.

Refrigerant circuit address	Rotary Switch Setting		Setting range	Type of switch
	REF AD			
	x10	x1		
0	0	0		
1	0	1		
2	0	2		
.	.	.		
.	.	.		
98	9	8		
99	9	9		

Rotary Switch (REF AD × 1): Factory setting "0"
Rotary Switch (REF AD × 10): Factory setting "0"

7. 4. Push button setting

Various functions can be set. Set when necessary.
Perform settings after all indoor units have stopped operation.


Table A: List of Settings

No	Setting Item		7 segment display		Factory default	Content
			First 2 digits	Last 2 digits		
0	Pipe length setting	Standard (40 to 65 m)	0	0	0 0	Pipe length means the length between outdoor unit and the nearest indoor unit.
		Short (less than 40 m)			0 1	
		Medium (65 to 90 m)			0 2	
		Long 1 (90 to 120 m)			0 3	
		(Forbidden)			0 4	
10	(Forbidden)		1	0	0 0	(Factory default)
11	Cooling capacity shift	Normal mode	1	1	0 0	Set this item when necessary.
		Save energy mode 1			0 1	
		High power mode 1			0 2	
		High power mode 2			0 3	
		(Forbidden)			0 4	
12	Heating capacity shift	Normal mode	1	2	0 0	Set this item when necessary.
		Save energy mode			0 1	
		High power mode 1			0 2	
		High power mode 2			0 3	
13	(Forbidden)		1	3	0 0	(Factory default)
14	(Forbidden)		1	4	0 0	(Factory default)
20	Switching between batch stop or emergency stop	Batch stop	2	0	0 0	This mode selects the pattern of the stop function to be operated by the external input terminal (CN134). • Batch stop: The stop of all indoor units connected to same refrigerant system due to input signal coming from CN134. • Emergency stop: When emergency stop is actuated, the indoor unit does not accept the operation command from the remote controller. On the other hand, when the emergency stop is released (no input from CN134), the air conditioner does not return to the original operation until operate indoor unit by the remote controller.
		Emergency stop			0 1	
21	Operation mode selecting method	Priority given to the first command	2	1	0 0	Select the priority setting of the operation mode. • Priority given to the first command: Priority is given to the operation mode which is set first. • Priority given to external input of outdoor unit: Priority is given to the operation mode which is set by the external input terminal (CN132). • Priority given to administrative indoor unit: Priority is given to the operation mode of the administrative indoor unit which is set by the wired remote controller.
		Priority given to external input of outdoor unit			0 1	
		Priority given to administrative indoor unit			0 2	
22	(Forbidden)		2	2	0 0	(Factory default)
23	(Forbidden)		2	3	0 0	(Factory default)
24	(Forbidden)		2	4	0 0	(Factory default)
25	(Forbidden)		2	5	0 0	(Factory default)
26	(Forbidden)		2	6	0 0	(Factory default)
27	(Forbidden)		2	7	0 0	(Factory default)
28	(Forbidden)		2	8	0 0	(Factory default)
29	(Forbidden)		2	9	0 0	(Factory default)
30	Outdoor unit capacity save setting	Level 1 (stop)	3	0	0 0	The capacity limit can be selected by the external input terminal (CN133) when operating with the "Outdoor unit capacity save function." The lower the level, the more the effect of energy saving, but the cooling/heating performance will also drop.
		Level 2			0 1	
		Level 3			0 2	
		Level 4			0 3	
		Level 5			0 4	
31	(Forbidden)		3	1	0 0	(Factory default)
40	Capacity priority setting (in low noise mode)	Off (quiet priority)	4	0	0 0	If the cooling/heating performance becomes insufficient when the low noise mode is set, it is possible to set "capacity priority" that automatically cancels the low noise mode (once performance is restored, the mode will automatically return to the low noise mode).
		On (capacity priority)			0 1	
41	Low noise mode setting	Off (Normal)	4	1	0 0	
		On (Low noise mode)			0 1	
42	(Forbidden)		4	2	0 0	(Factory default)
60	(Forbidden)		6	0	0 0	(Factory default)
70	Electricity meter No. settings 1	Setting number (x00)	7	0	0 0	Set the digit positions for integers and tens for the electricity meter connected to CN135. ※ Points to note on common No. 70 and 71 If the electricity meter No. is set to "0" or "201-299", the pulse entered into CN135 will be disabled.
		Setting number (x01)			0 1	
						
		Setting number (x99)			9 9	
71	Electricity meter No. settings 2	Setting number (0xx)	7	1	0 0	Set the digit position for the hundreds for the electricity meter connected to CN135.
		Setting number (1xx)			0 1	
		Setting number (2xx)			0 2	
72	Electricity meter pulse setting 1	Setting number (xx00)	7	2	0 0	Set the digit positions for the integers and tens of the pulse settings of the electricity meter connected to CN135. ※ Points to note on common No 72 and 73 If the electricity meter pulse is set to "0", the pulse entered into CN135 will be disabled.
		Setting number (xx01)			0 1	
						
		Setting number (xx99)			9 9	
73	Electricity meter pulse setting 2	Setting number (00xx)	7	3	0 0	Set the digit positions for the hundreds and thousands of the pulse settings of the electricity meter connected to CN135.
		Setting number (01xx)			0 1	
						
		Setting number (99xx)			9 9	
90	(Forbidden)		9	0	0 0	(Factory default)

(1) Turn on the power of the outdoor unit and enter standby mode.


- When system is normal

POWER/MODE lamp lights up. (ERROR lamp is off.)

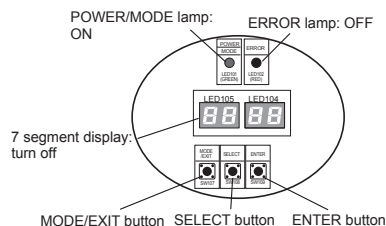


- When system is abnormal

Check the settings as there is an error in the settings for outdoor unit address (DIP switch SET3-1, 2) or number of connected slave units (DIP switch SET3-3, 4).

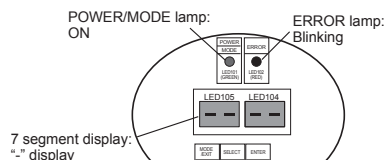

(2) Setting method

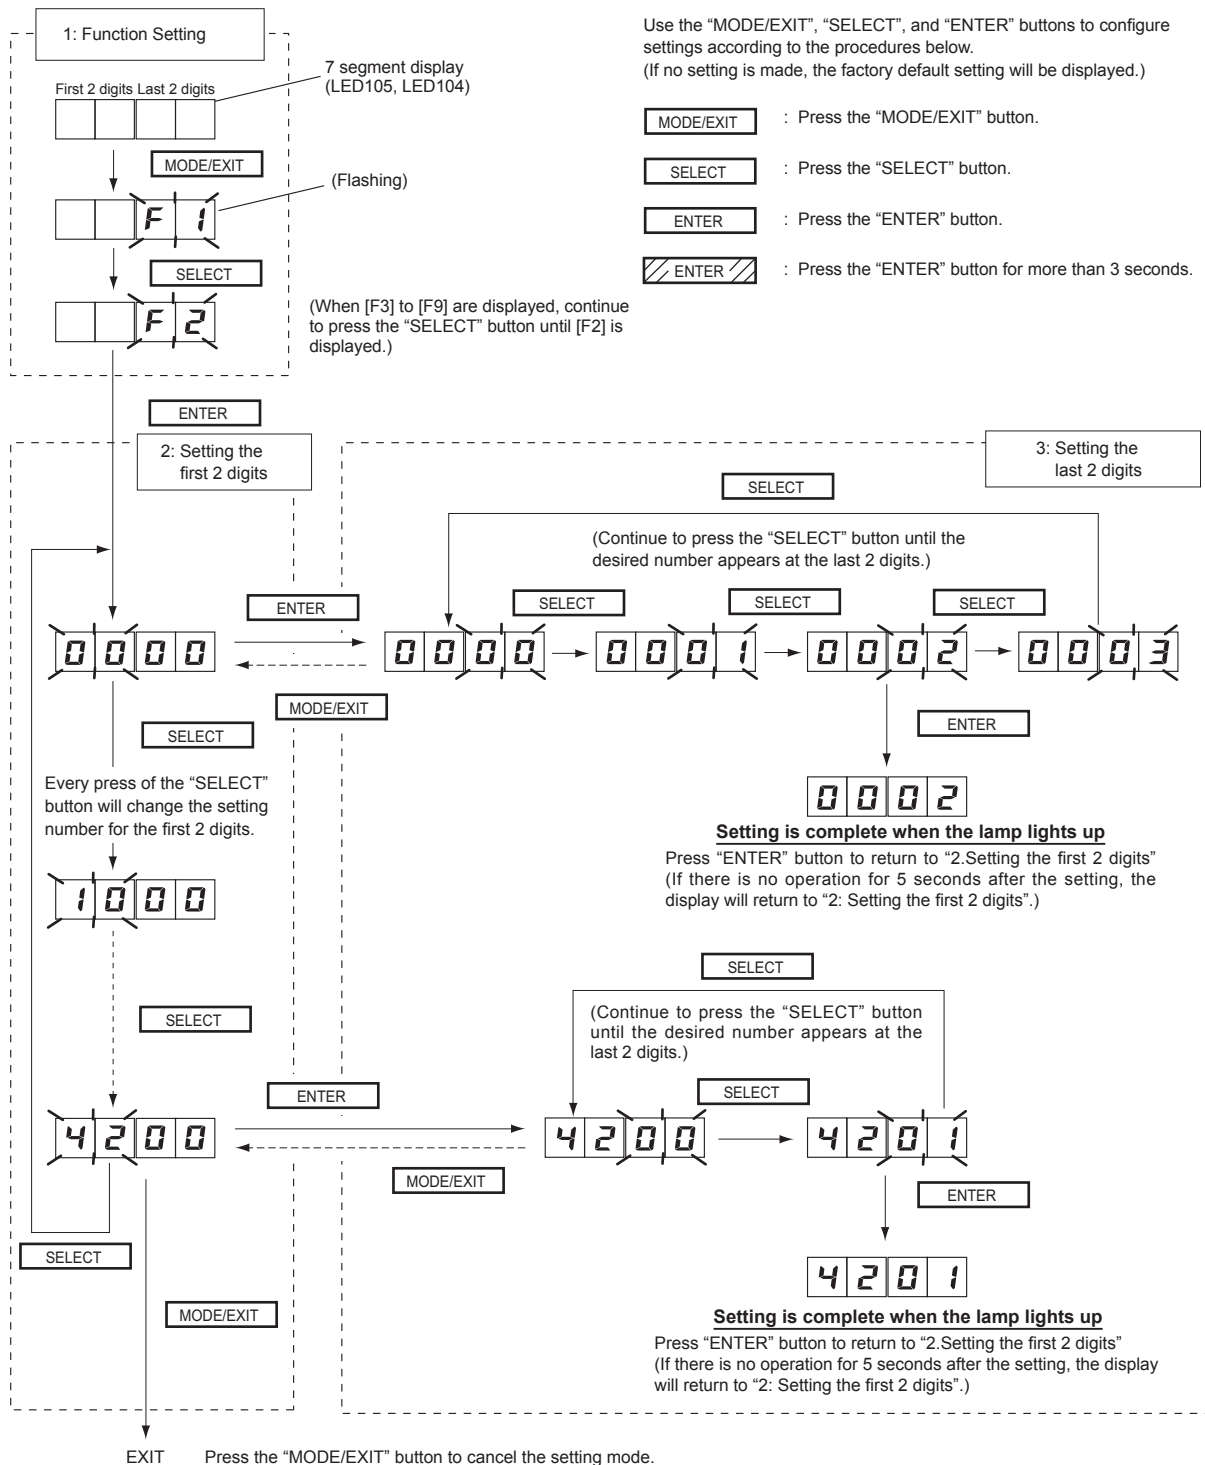


7. 5. Address setting for signal amplifiers

7. 5. 1. Address setting for signal amplifiers

When using signal amplifiers, the address for signal amplifiers must be set.
The address for signal amplifiers can be set automatically from 1 outdoor unit (master unit) on the network.
Refer to "Fig. Wiring example for automatic address setting" (7.6.1 chapter) for the wiring example.
(For manual setting of address, refer to the signal amplifier installation manual.)

7. 5. 2. Automatic address setting for signal amplifiers

When setting the address of the signal amplifier, please use the factory setting. (See the installation manual of the signal amplifier)
When the system is normal, nothing will be displayed on the 7 segment display.
When ERROR is displayed, inspect the units.
Use the "MODE/EXIT", "SELECT", and "ENTER" buttons on the outdoor unit PC board to configure settings according to the procedures below.

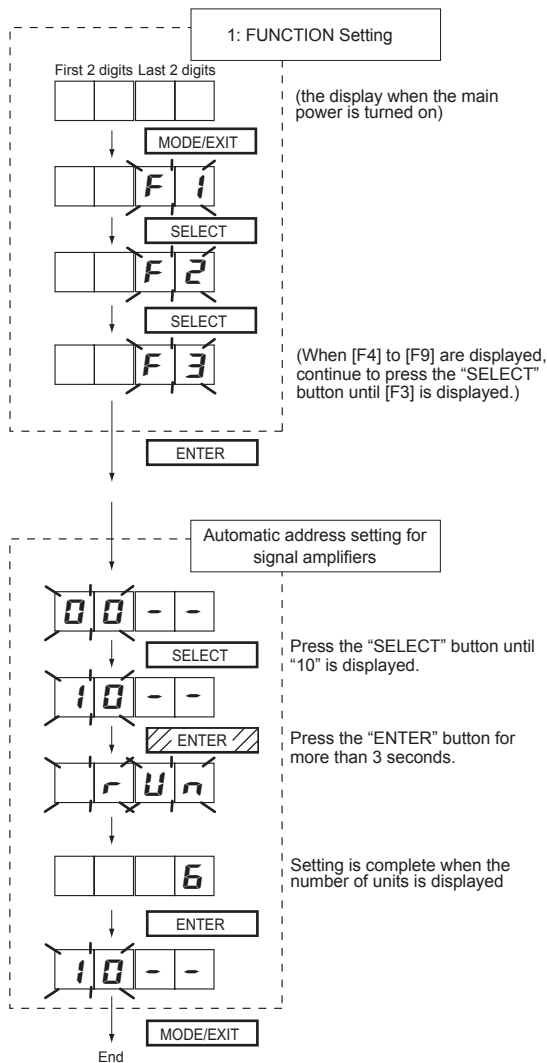

7. 6. Indoor unit address setting

7. 6. 1. Indoor unit address setting


Address must be set for the indoor unit.

Manual setting → •When setting with the switch inside the indoor unit, refer to the indoor unit operating manual.
•When setting with a remote control, refer to the remote control operating manual.

Automatic setting → •Check that the wiring is as shown in the figure below.
Operate using the outdoor master unit of each refrigerant system.

Fig. Wiring example for automatic address setting

(1) Signal amplifier wiring example
(2)(3)(4) Indoor unit wiring example
(Connect the indoor and outdoor units of the same refrigerant system as shown below.)

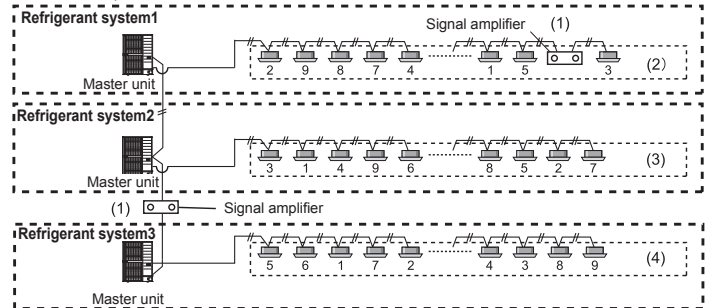

NOTE

- The automatic address function can be used for a maximum of 9 indoor units installed to the same refrigerant system. When network is connected to other refrigerant systems, the automatic address function cannot be used.
- The addresses of indoor units that have been configured automatically cannot be assigned in the order when they are installed. (Refer to the indoor unit installation manual for the procedures to check the addresses.)

7. 6. 2. Procedures to enable automatic address setting on indoor units


Check that the rotary switch IU AD on the indoor unit PC board is set to "00". If it is not set to "00", it means the address of that device is not set. (Factory default is "00").

Turn on the power of the indoor and outdoor units.

When the system is normal, nothing will be displayed on the 7 segment display.

When ERROR is displayed, inspect the units.

Use the "MODE/EXIT", "SELECT", and "ENTER" buttons on the outdoor unit PC board to configure settings according to the procedures below.

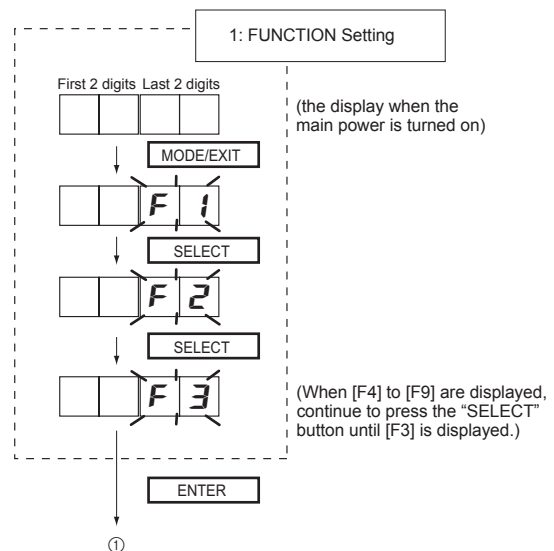

8. PIPE INSTALLATION II

Fig.A Connection system

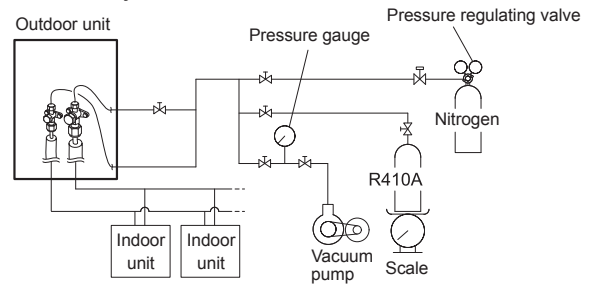


Fig.B

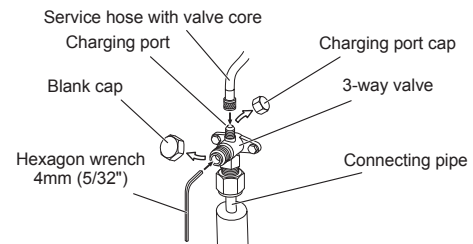


Table.A

Pipe	3-way valve	Blank cap	Charging port cap
Liquid valve	7.0 to 9.0 N·m (70 to 90 kgf·cm)	20.0 to 25.0 N·m (200 to 250 kgf·cm)	12.5 to 16.0 N·m (125 to 160 kgf·cm)
Gas valve	11.0 to 13.0 N·m (110 to 130 kgf·cm)	30.0 to 35.0 N·m (300 to 350 kgf·cm)	12.5 to 16.0 N·m (125 to 160 kgf·cm)

8.1. Sealing test

CAUTION

- Use only nitrogen gas.
Never use refrigerant gas, oxygen, in flammable gas or poisonous gas to pressurize the system. (If oxygen is used, there is the danger of an explosion.)
- Do not apply shock during sealing test.
It can rupture the pipes and cause serious injury.
- Do not turn on the power unless all operations are complete.
- Do not block the walls and the ceiling until the sealing test and the charging of the refrigerant gas have been completed.

After connecting the pipes, perform an sealing test.
Recheck that the 3-way valve are closed before performing a sealing test.
(Fig. B)
Pour nitrogen gas through both the liquid pipe and the gas pipe.
Pressurize nitrogen gas to 4.2 MPa to perform the sealing test.

Check all flare connection areas and brazed areas.
Then, check that the pressure has not decreased.
Compare the pressures after pressurizing and letting it stand for 24 hours, and check that the pressure has not decreased.
* When the outdoor temperature changes 5 °C, the test pressure changes 0.05 MPa.
If the pressure has dropped, the pipe joints may be leaking.

If a leakage is found, immediately repair it and perform a sealing test again.
* Decrease the pressure of nitrogen gas before blazing
After completing the sealing test, release the nitrogen gas from both valves.
Release the nitrogen gas slowly.

7.7. Resistance measurement of transmission cable (Measure with breaker OFF)

CAUTION

Do not turn on the power if the resistance between the terminals of the transmission cable is abnormal. Otherwise, the PC board may be damaged.

Measure the resistance between 2 terminals of a transmission cable.

(1) Transmission cable connecting indoor units, outdoor units, and signal amplifiers

Measure the resistance of the signal amplifier terminal and the terminal of the indoor and outdoor units connected farthest away from the device where terminal resistor is measured.

A value from the table is displayed, depending on the distance from the signal amplifier and the device where the terminal resistor is set.

This value is an estimate.

(2) Transmission cable connecting outdoor units in a refrigerant system

The resistance between the terminals of the transmission cable is 45-60 Ω.
This value is an estimate.

		Distance from termination resistor (m)				
		0 ~ 100	~ 200	~ 300	~ 400	~ 500
Approximate resistance (Ω)	0 ~ 50	A short circuit somewhere or 2 or more termination resistors are connected				
	50					
	60					
	70					
	80					
	90					
	100					
	110					
	120					
	130					
	140					
	150					
	160					
	170					
	180					
	190 ~	Faulty contact or wiring length over 500 m				
	1K ~ ∞	Faulty contact, open circuit, or no termination resistor				

 
 
8. 2. Vacuum process

 CAUTION
Do not turn on the power unless all operations are complete.
If the system is not evacuated sufficiently, its performance will drop.
Be sure to evacuate the refrigerant system using a vacuum pump.
The refrigerant pressure may sometimes not rise when a closed valve is opened after the system is evacuated using a vacuum pump. This is caused by the closure of the refrigerant system of the outdoor unit by the electronic expansion valve. This will not affect the operation of the unit.
Use a clean gauge manifold and charging hose that were designed specifically for use with R410A. Using the same vacuum equipment for different refrigerants may damage the vacuum pump or the unit.
Do not purge the air with refrigerants, but use a vacuum pump to evacuate the system.
- If moisture might enter the piping, follow below. (i.e., if doing work during the rainy season, if the actual work takes long enough that condensation may form on the inside of the pipes, if rain might enter the pipes during work, etc.) - After operating the vacuum pump for 2 hours, pressurize to 0.05 MPa (i.e., vacuum breakdown) with nitrogen gas, then depressurize down to -100.7kPa (-755mmHg) for an hour using the vacuum pump (vacuum process). - If the pressure does not reach -100.7kPa (-755mmHg) even after depressurizing for at least 2 hours, repeat the vacuum breakdown - vacuum process.
After vacuum process, maintain the vacuum for an hour and make sure the pressure does not rise by monitoring with a vacuum gauge.

Evacuation procedure

- Remove the blank caps of the gas pipe and liquid pipe and check that the valves are closed.
- Remove the charging port cap.
- Connect a vacuum pump and a pressure gauge to a charging hose and connect it to the charging port.
- Activate the vacuum pump and vacuum the indoor unit and connection piping until the pressure gauge becomes -100.7kPa (-755mmHg).
Evacuate from both the gas pipe and the liquid pipe.
- Continue evacuating the system for 1 hour after the pressure gauge reads -100.7kPa (-755mmHg).
- Remove the charging hose and reinstall the charging port cap.

8. 3. Additional charging

 CAUTION
Do not turn on the power unless all operations are complete.
After evacuating the system, add refrigerant.
Do not charge the system with a refrigerant other than R410A.
Always keep to the limit on the total amount of refrigerant. Exceeding the limit on the total amount of refrigerant will lead to malfunction during charging of refrigerant.
Do not reuse recovered refrigerant.
Use an electronic scale to measure the charging amount of refrigerant. Adding more refrigerant than the specified amount will cause a malfunction.
Charge refrigerant using the liquid pipe. Adding refrigerant through the gas pipe will cause a malfunction.
Add refrigerant by charging the system with the refrigerant in the liquid state. If the refrigerant cylinder is equipped with a siphon, it is not necessary to place the cylinder upright.
Check if the steel cylinder has a siphon installed or not before filling. (There is an indication "with siphon for filling liquid" on the steel cylinder.)
Filling method for cylinder with siphon  Set the cylinder vertical and fill with the liquid. (Liquid can be filled without turning bottom up with the siphon inside.)
Filling method for other cylinders  Turn bottom up and fill with liquid. (Be careful to avoid turning over the cylinder.)
Be sure to use the special tools for R410A for pressure resistance and to avoid mixing of impure substances.
If the units are further apart than the maximum pipe length, correct operation can not be guaranteed.
Make sure to back closing valve after refrigerant charging. Otherwise, the compressor may fail.
Minimize refrigerant release to the air. Excessive release is prohibited under the Freon Collection and Destruction Law.

8. 3. 1. Procedure for charging the system with refrigerant

- Remove the charging port cap from the liquid pipe.
 - Attach a charging hose to the refrigerant cylinder, and connect it to the charging port.
 - Add refrigerant by calculating the additional refrigerant volume in accordance with the calculation formula indicated below.
 - Remove the charging hose and install the charging port cap.
 - Remove the blank caps (gas pipe and liquid pipe) and open the valves.
 - Close the blank caps.
 - After adding refrigerant, indicate the added charging volume on the unit.
- * Tighten the blank caps and charging port caps to the torque values specified in the Table A.
To open and close the valves,
Use an M4 hexagon wrench.

8. 3. 2. Checking total amount of refrigerant and calculating the amount of refrigerant charge to be added

- The amount of refrigerant charge to be added is the total value of the basic refrigerant charge amount and the value calculated from the length of the liquid pipe.
- Round up the value to 2 decimal places.

Model	B Factory charged amount (kg)
AJ□A36LALH	4.80
AJ□A40LALH	4.80
AJ□A45LALH	5.30
AJ□A54LALH	5.30

Diameter of liquid pipe (mm)	a Additional amount for pipe length (kg/m)
Ø6.35	0.021
Ø9.52	0.058

- Calculation of additional amount for pipe length

$$A = \left(\begin{array}{|c|c|} \hline \text{Total length of} \\ \text{Ø9.52 mm} \\ \text{liquid pipe} \\ \hline m \\ \hline \end{array} \times \begin{array}{|c|} \hline a \\ \hline 0.058 \\ \hline \text{(kg/m)} \\ \hline \end{array} \right) + \left(\begin{array}{|c|c|} \hline \text{Total length of} \\ \text{Ø6.35 mm} \\ \text{liquid pipe} \\ \hline m \\ \hline \end{array} \times \begin{array}{|c|} \hline a \\ \hline 0.021 \\ \hline \text{(kg/m)} \\ \hline \end{array} \right)$$

kg

Total

= kg (Round up A to 2 decimal place)

- Calculation of total refrigerant amount

$$C = A + B = \left(\begin{array}{|c|} \hline \text{ } \\ \hline \text{kg} \\ \hline \end{array} \right) \quad (B : \text{Factory charged amount})$$

Note: Check the total refrigerant amount under the following conditions

Condition	Computational formula
Total amount of refrigerant	$C \leq 15.7\text{kg}$

<Calculation>

Outdoor unit: AJ□A54LALH

- Calculation of additional amount for outdoor unit
If liquid pipe piping length is the following
Ø9.52: 50m, Ø6.35: 35m

Additional charge volume:

$$A = 50(m) \times 0.058(\text{kg/m}) + 35(m) \times 0.021(\text{kg/m})$$

$$= 3.635\text{kg} \approx 3.64\text{kg}$$

- Check the total amount of refrigerant

$$C = A + B = 3.64\text{kg} + 5.30\text{kg} = 8.94\text{kg} \leq 15.7\text{kg}$$

→ No problem if the above condition is satisfied.

8. 4. Installing insulation

- Install insulation material after conducting the "8.1 Sealing Test".
- To prevent condensation and water droplets, install insulation material on the refrigerant pipe.
- Refer to the table to determine the thickness of the insulation material.
- If the outdoor unit is installed at a level that is higher than the indoor unit, the water that has condensed in the 3-way valve of the outdoor unit could travel to the indoor unit. Therefore, use putty in the space between the pipe and the insulation to prevent the entry of water.

Table. Selection of insulation

(for using an insulation material with equal heat transmission rate or below 0.040W/(m·k))

Relative humidity		Insulation material			
		Minimum thickness (mm)			
Pipe diameter (mm)	≤ 70%	≤ 75%	≤ 80%	≤ 85%	
	6.35	8	10	13	17
	9.52	9	11	14	18
	12.70	10	12	15	19
	15.88	10	12	16	20
	19.05	10	13	16	21

* When an ambient temperature and relative humidity exceed 32 °C, please strengthen heat insulation of refrigerant pipe.


8. 5. Filling with putty

⚠ WARNING

Fill the piping holes and wiring holes with putty (supplied locally) to avoid any gap (Fig A). If small animals such as insects enter the external unit, a short circuit may be caused near electrical components in the service panel.

- If the outdoor unit is installed at a level that is higher than the indoor unit, the water that has condensed in the 3-way valve of the outdoor unit could travel to the indoor unit. Therefore, use putty in the space between the pipe and the insulation to prevent the entry of water to the indoor units.

Fig. A

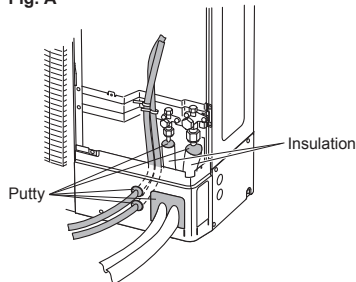

9. TEST OPERATION

9. 1. Indoor unit connection check

Normal operation will not be possible without performing the Indoor unit connection check.

9. 1. 1. Things to confirm before starting the Indoor unit connection check

To ensure safety, check that the following work, inspections and operations have been completed.


Check Item	Check Column
① Check that all work on the wiring connecting the outdoor unit and indoor units has been completed.	
② Is a breaker installed at the power supply cable of outdoor unit and every indoor units?	
③ Are the cables connected to the terminals without looseness, and in accordance with the specifications?	
④ Are all the indoor units stopped? Indoor unit connection check can not be performed if any unit is operating.	
⑤ Is the connection to Service tool (UTY-ASGX) and Web monitoring tool (UTY-AMGX) stopped?	

9. 1. 2. Restrictions applicable when performing the Indoor unit connection check

The Indoor unit connection check can be completed within several minutes.

9. 1. 3. Operating procedure for Indoor unit connection check

Please perform the indoor unit connection check according to following procedures.

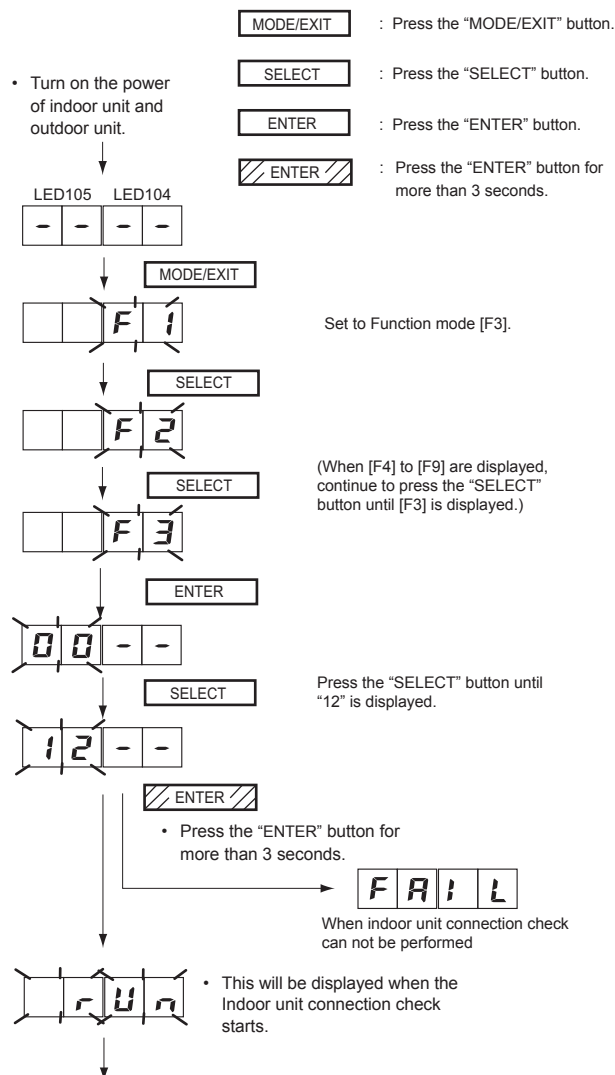

Perform test operation for each refrigerant system.

You can set "cooling test operation" or "heating test operation" with the push button on the outdoor unit PC board.


Test operation setting method

Use the "MODE/EXIT", "SELECT", and "ENTER" buttons on the indoor unit PC board to configure settings according to the procedures below.

Perform test run for refrigerant system.

You can set "cooling test run" or "heating test run" with the push button on the outdoor unit PC board.

Test run setting method

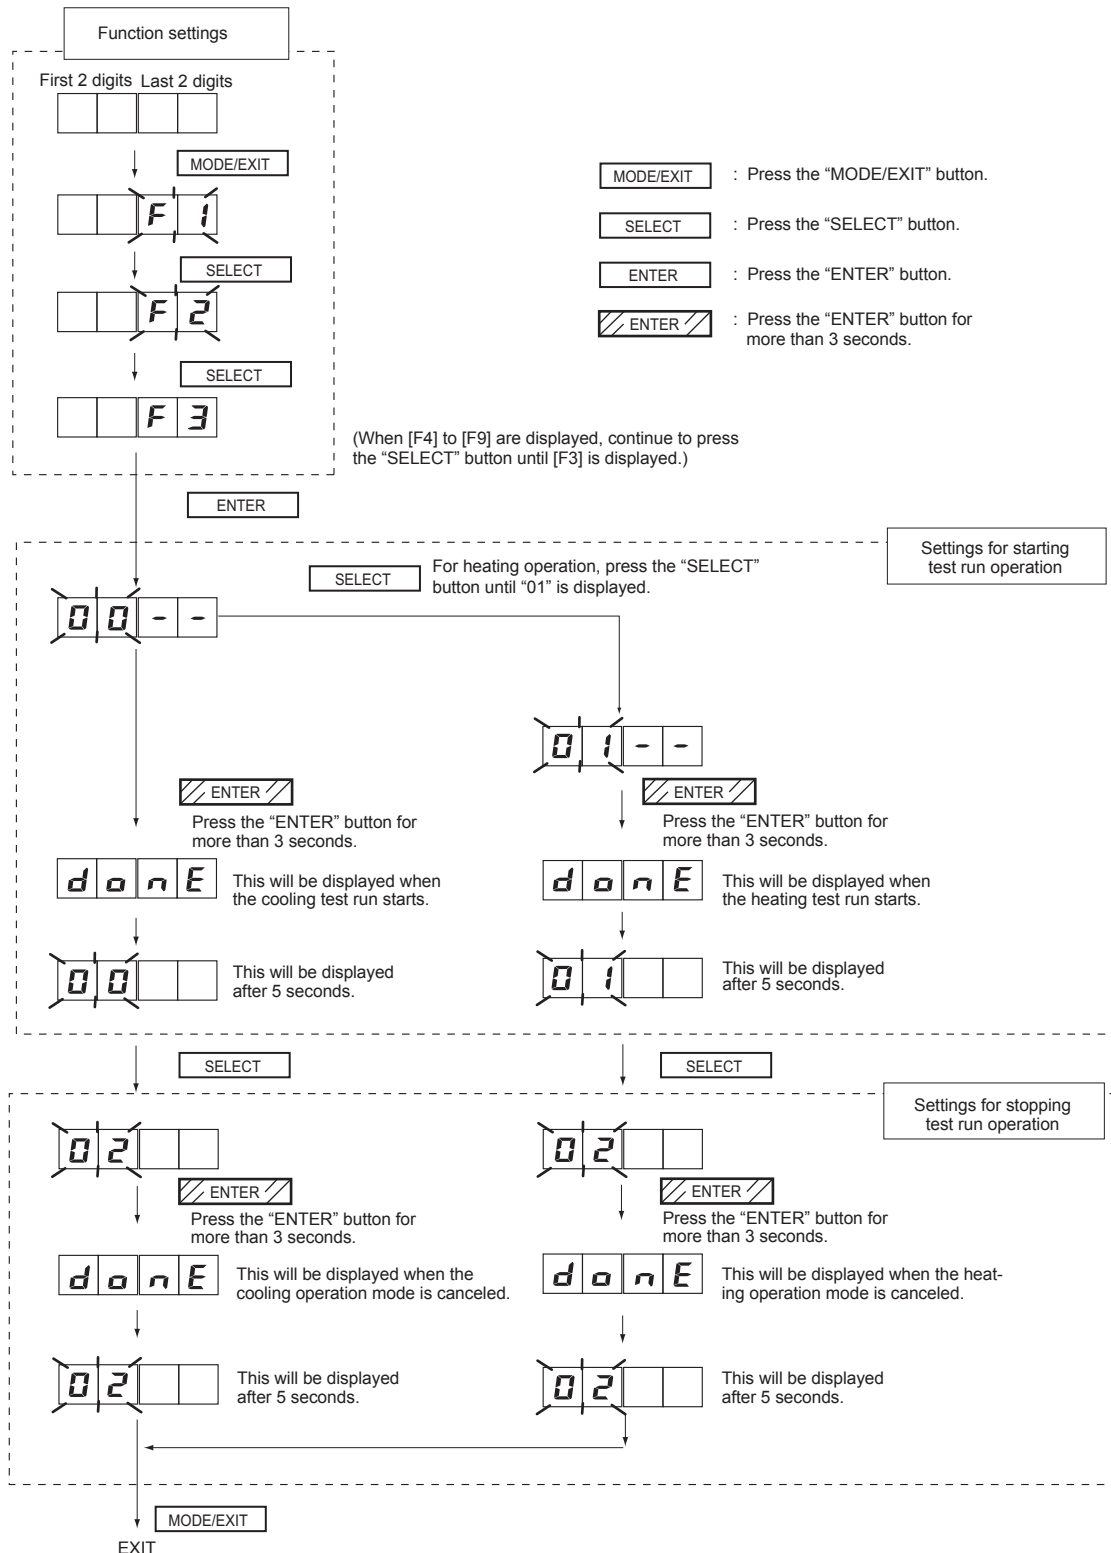

After the test operation is complete, turn off the power. Attach the cover of the electrical component box and the front panel of the outdoor unit.

- Note**
- Check that the indoor and outdoor units connected to the same refrigerant system are operating normally.
 - When indoor or outdoor units are not operating, or when the indoor and outdoor units of other refrigerant systems are operating, the indoor/outdoor unit address are not configured correctly.
 - The system will not operate normally with an incorrect DIP switch setting. Stop the system immediately and recheck the DIP switch setting.

9. 4. Checklist

	Check description	Check method	Criteria
1	High and low pressure values are normal.	Check it with a pressure gauge.	Cooling: low pressure approx. 0.8 MPa Heating: high pressure approx. 3.0 MPa
2	Drain water is discharged smoothly through the drain hose.	Check it by pouring water.	—
3	Indoor and outdoor unit fans are operating.	Check them visually.	—
4	Compressor operates after the indoor unit operates.	Check the operating sound.	—
5	Difference between inlet and outlet temperatures is normal.	Measure the inlet and outlet temperatures.	Temperature difference 10 degrees
6	Error is not displayed	Check the 7 segment display	Error blinking or no error code display

10. LED Display

You can determine the operating status by the lighting up and blinking of the LED display.

Check the status using the table below.

10. 1. Normal operation mode

Mode	CODE			DESCRIPTION
Operation	C	L		Cooling
	H	t		Heating
			o r	During oil recovery operation
			d F	During defrosting operation
			P C	During power saving operation
			L n	During low noise operation

10. 2. Error display mode

Mode	CODE			DESCRIPTION
Communication error	E	1	4. 2	Outdoor unit network communication 2 error
	E	1	4. 5	The number of indoor unit shortage
Indoor unit actuator error	E	5	U. 1	Indoor unit miscellaneous error
Outdoor unit PCB/Electrical component/ Switch error	E	6	2. 3	Outdoor unit EEPROM access error
	E	6	2. 6	Outdoor unit inverters communication error
	E	6	2. 8	Outdoor unit EEPROM data corruption error
	E	6	3. 1	Outdoor unit inverter error
	E	6	7. 2	Outdoor unit inverter PCB power short interruption error
	E	6	8. 2	Outdoor unit rush current limiting resistor temp. rise error (protective operation)
Outdoor unit sensor error	E	6	9. 1	Outdoor unit transmission PCB parallel communication error
	E	7	1. 1	Outdoor unit discharge temp. thermistor 1 error
	E	7	2. 1	Outdoor unit compressor temp. thermistor 1 error
	E	7	3. 3	Outdoor unit heat ex. liquid temp. thermistor error
	E	7	4. 1	Outside air temp. thermistor error
	E	7	5. 1	Outdoor unit suction gas temp. thermistor error
	E	7	7. 1	Outdoor unit heat sink temp. thermistor error
	E	8	2. 1	Outdoor unit sub-cool heat ex. gas inlet temp. thermistor error
	E	8	2. 2	Outdoor unit sub-cool heat ex. gas outlet temp. thermistor error
	E	8	3. 2	Outdoor unit liquid pipe temp. thermistor 2 error
	E	8	4. 1	Outdoor unit current sensor 1 error (permanent stop)
	E	8	6. 1	Outdoor unit discharge pressure sensor error
	E	8	6. 3	Outdoor unit suction pressure sensor error
	E	8	6. 4	Outdoor unit high pressure switch 1 error
Outdoor unit actuator error	E	9	3. 1	Outdoor unit inverter compressor start up error
	E	9	4. 1	Outdoor unit trip detection
	E	9	5. 5	Outdoor unit compressor motor loss of synchronization
	E	9	7. 1	Outdoor unit fan motor 1 lock error
	E	9	7. 4	Outdoor unit fan motor 1 undervoltage
	E	9	7. 5	Outdoor unit fan motor 1 temperature error (protective action)
	E	9	8. 1	Outdoor unit fan motor 2 lock error
	E	9	8. 5	Outdoor unit fan motor 2 temperature error (protective action)
	E	9	A. 1	Outdoor unit coil 1 (expansion valve 1) error
	E	9	A. 2	Outdoor unit coil 2 (expansion valve 2) error

Refrigerant system error	E	A	1. 1	Outdoor unit discharge temperature 1 error (permanent stop)
	E	A	3. 1	Outdoor unit compressor 1 temperature error
	E	A	4. 1	Outdoor unit high pressure error
	E	A	4. 2	Outdoor unit high pressure protective action 1
	E	A	5. 1	Outdoor unit low pressure error
	E	A	C. 4	Outdoor unit heat sink temperature error

LED lamp :

A: **A** C: **C** E: **E** F: **F** H: **H** J: **J** L: **L**
S: **S** P: **P** d: **d** n: **n** o: **o** r: **r** t: **t**
1: **1** 2: **2** 3: **3** 4: **4** 5: **5** 6: **6** 7: **7**
8: **8** 9: **9** 0: **0** U: **U**

11. INFORMATION

Main contents of label

Item	Detail
1. Model name	Model name
2. Serial number	Serial number
3. Electric characteristics	Phase, rated voltage, and frequency
4. Weight	Product weight
5. Capacity	Cooling/heating capacity under cooling/heating condition (refer to item 15)
6. Current	Electric current during cooling/heating operation under cooling/heating condition (refer to item 15)
7. Input power	Input during cooling/heating operation under cooling/heating condition (refer to item 15)
8. Max. Current	Maximum electric current (temperature condition is max. cooling condition [refer to item 16])
9. Air circulation	Air circulation
10. Noise level	Noise level
11. Refrigerant	Refrigerant type and initial charging amount
12. Max. pressure (HP/LP)	Means pressure of High Pressure side/ Low Pressure side
13. Protection	Protection level against dust and water
14. Working temperature	Working temperature
15. Condition of cooling/heating	Dry-bulb temperature and wet-bulb temperature under standard cooling/heating condition
16. Condition of max. cooling	Dry-bulb temperature and wet-bulb temperature at maximum electric current and input
17. Manufacture year	Manufacture year
18. Origin	Origin country
19. Manufacturer	Manufacturer FUJITSU GENERAL LIMITED Address: 1116, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan