

User Manual for Falke II Tactical Spec Reflex Sight

The Falke II Tactical Spec Reflex Sights (Falke II called below) are lightweight, durable and accurate designed to maintain all-important peripheral vision and depth perception while shooting. Due to its parallax free window construction of a dual layer of fused glass, the Falke II is capable of supreme accuracy at various ranges. Perfect for shotguns or rifles, Falke II is able to withstand heavy recoil. It comes with four different reticle patterns each with variable brightness control modes. The adjustable quick detach capability makes the Falke II a customizable reflex sight in a class by itself.

BATTERY INSTALLATION

Powered by (1) CR1632 battery.

To insert, remove or replace the reflex sight's batteries:

- 1) Unscrew the battery compartment cover (5) off the end for the brightness control knob (1) counter clockwise with a flat head screwdriver.
- 2) Remove the old battery from the battery compartment.
- 3) Insert the new battery with the positive (+) side up and replace the cover.
- 4) Screw on the battery compartment cover clockwise with a flat head screwdriver.

SELECTING THE RETICLE

The Falke II has the option of four different reticles. To select the desired reticle, adjust the reticle selector to the (4) left or right.

OPERATING THE BRIGHTNESS CONTROL KNOB

The Falke II is activated by using the brightness control knob. There are 5 brightness settings. In order to activate, look through the objective lens (1), and rotate the knob (2) to the desired setting. The reticle should appear.

MOUNTING

The Falke II includes an integrated rail that fits standard weaver bases. For safety reasons, allow at least 3 inches of clearance between the end of the Falke II and your eye when shooting. To mount:

- 1) Flip the quick detach lever (7) on the side, this will loosen the mount.
- 2) Place the unit on the rail with the objective lens (1) facing towards the muzzle and reticle selection knob (2) toward the shooter.
- 3) Confirm the sight is sitting flat on top of the rail, and that the cross bolt (9) is located in a recoil groove.
- 4) When the sight is in place, flip the quick detach lever back until it locks in place
To adjust the mount:
- 5) Remove the sight from the weaver mount. Underneath the unit is an adjustable nut (8) that when loosened or tightened adjusts the width of the mount. Adjust as needed with the wrench tool.
- 6) Repeat steps 1-6 until the reflex sight mounts securely to the firearm.