

# Installation manual: CA-1803BT "Athos"

## Before installation

This is the basic version of the installation manual and programming sequences. On the web site [www.jablotronalarms.com](http://www.jablotronalarms.com) in the download section you can find a full version of this manual or you can find it included in the installation kit on CD / DVD. **If you have no experience with CA-1803 installation, we recommend you to read the extended version of the manual to know all the parameters well.**

The immobilizer relay contact of car alarm is connected only in disarmed mode and if the ignition is on. Do not block circuits that are under voltage while the ignition is off. It could cause a serious damage of the vehicle.

The car alarm should only be installed by a professional installer. It is suitable for cars with a dashboard voltage supply of 12V or 24V with a negative ground connection. During the first power-up, the value of supply voltage is read and the inputs are set to default settings. The alarm is designed to be installed inside the car.

**For cars with a voltage supply of 24V, the following restrictions apply to car alarm installation:**

1. It is not possible to connect a hands-free set of type HF-03.
2. When used for acoustic signalling, the SIR output is switched to the power supply voltage. Consequently, this output switches to 24V, so it is necessary to use a siren of type SA-606-24V instead of the SA-530 which is supplied in the standard package. In this case it is necessary to set the confirmation beeps to 100 ms.

## Configuration table



SIM entry*	SMS instruction Text	Description
RESET EN 1 (After which, the entry is erased from the SIM)	MASTER RESET EN 1	<b>Mode setting. RESET 1 = alarm has its own remote control and provides signals for central locking. RESET 2 = alarm is operated by an original remote controller for central locking. RESET 3 = GSM pager for cars with an installed car alarm.</b> Performing the RESET instruction is indicated by 4 beeps. Consequently, all settings, enrolled remote controllers and wireless detectors will be erased.
Not applicable	MASTER UC uuuu	<b>User code setting</b> – the code allows you to operate the alarm remotely via SMS from unauthorized phones. uuuu is a new user code, 4 to 8 letters (A–Z & 0–9, case insensitive). Factory default user code is USER
Not applicable	MASTER MC xxxx	<b>Master code setting</b> –xxxx is a new master code (A–Z & 0–9, case insensitive). The code allows you to change the maintenance settings for the car alarm. Factory default master code is MASTER
TELn xx...x	MASTER TELn xx...x	<b>Setting of phone numbers to report alarms to n = 1 to 4</b>
DIALn xx...x	MASTER DIALn xx...x	<b>Setting the phone numbers to dial using Hands free. n = A, B, 1, 2</b>
DIP abcdefghij	MASTER DIP abcdefghij	<b>DIP parameter entry</b> – see the DIP table
SET abcdefghij	MASTER SET abcdefghij	<b>SET parameter entry</b> – see the SET table

## DIP parameters

DIP	Description	
	0	1
A	0 = silent arming/disarming without siren chirps <b>1 = 10 ms siren chirps when arming/disarming (non backed-up siren)</b> 2, 3, 4 ... 9 = siren chirps when arming/disarming (a siren of another type) lasting 20, 30, 40, 50, 100, 200, 300 or 500 ms	
B	Silent alarm	<b>Audible alarm</b>
C	SMS alarm report only	<b>SMS alarm report and siren sound phone call</b>
D	SMS remote control not confirmed by SMS reply	<b>SMS remote control instructions confirmed by SMS reply</b>
E	<b>0 = arming control by dialling-in disabled</b> 1 = arming control by dialling from TEL1 enabled 2 = arming control by dialling from TEL1 and TEL2 enabled 3 = arming control by dialling from TEL1, TEL2 and TEL3 enabled 4 = arming control by dialling from all TEL1 to TEL4 enabled	
F	<b>Arming control by dialling in is not confirmed by SMS</b>	Arming control by dialling in (see E) is confirmed by SMS to the phone which called the car alarm
G	<b>User can not change SMS Texts</b>	User can change SMS texts by TXT Sequence
H	<b>REARM disabled</b>	If the car is not entered within 1 minute after disarming, it will <b>REARM</b>
I	<b>0 = Immobilization by arming and by SMS instruction</b> 1 = Immobilization by arming and automatically 5 minutes after ignition is turned off (AUTOIMO) and also by SMS instruction 2 = Immobilization only by SMS instruction 3 = Immobilization and also by SMS instruction. If disarmed and ignition is turned off for more than 60 minutes the SMS STATUS is sent as an alert to possible forgotten arming.	
J	<b>Self-location disabled</b>	The car's location will be sent by SMS after an IMO instruction has been performed, or if the car stops after an immobilization SMS instruction

**Bold marked values = factory default**

### Steps to enroll RC-8x controllers:

1. The car alarm should be disarmed, with the ignition on.
2. Send the SMS instruction MASTER LEARN RC
3. The car alarm beeps 3 times and an LED starts to flash.
4. The RC-8x controller is enrolled by pressing buttons  and  simultaneously for approx. 3 sec. A siren chirp confirms the enrollment. By enrolling the first remote control all other remote controls previously enrolled will be erased (so enroll all the controllers intended for use, one by one).
5. Exit enrollment by turning the ignition off. The alarm confirms the enrollment by sending an SMS message to authorized phones TEL1 to TEL4.

## SET parameters

SET	Description	
	0	1
A	0 = open door signalling and INP activation while arming are both disabled <b>1 = open door signalling and INP activation while arming are both enabled</b> 2 = INP activation while arming enabled, open door signalling enabled with a 10 second delay 3 = INP activation while arming enabled, open door signalling disabled	
B	<b>Voltage detector disabled</b>	Voltage-drop detector enabled
C	lock / unlock signal duration (Reset 1) <b>0 = 0.5 / 0.5 sec</b> (suitable for electromagnetic locks) 1 = 4 / 4 sec (suitable for pneumatic locks) 2 = 60 / 0.5 sec (suitable for automatic window closing)	
D	DOOR input logic: <b>1 = activated by falling edge (grounding)</b> 2 = activated by rising edge (disconnecting from GND)	
E	INP1 logic: <b>1 = activated by falling edge (grounding)</b> 2 = activated by rising edge (disconnecting from GND)	
F	INP2 logic: 0 = activated by falling edge (grounding), it triggers an alarm also if disarmed (24 hour reaction) <b>1 = activated by falling edge (grounding)</b> 2 = activated by rising edge (disconnecting from GND)	
G	Central locking input logic: (Reset 2) <b>1 = activated by falling edge (grounding)</b> 2 = activated by rising edge (disconnecting from GND)	
H	0 = confirmation by turn lights for disarming is needed (Reset 2) <b>1 = confirmation by turn lights for arming and disarming is needed</b> 2 = confirmation by turn lights for arming and disarming is not needed so INP1 can be used as an alarm input	
I	<b>When armed, no monitoring of GPS location changes</b>	GPS location changes are monitored when armed
J	0 = AUX output is a bus for communication with CR-11A modules <b>1 = AUX output provides power for external sensors</b>	

**Bold marked values = factory default**

### Steps to enroll I detectors:

1. The car alarm should be disarmed, ignition on.
2. To enroll the **internal** detectors, send the SMS command MASTER LEARN INT (To enroll the **external** detectors, send the SMS command MASTER LEARN EXT)
3. The car alarm beeps 3 times and an LED starts to flash.
4. You can enroll a new detector to the system by inserting its batteries. If you enroll a first detector, you will erase all detectors from the associated groups (enroll all of them, which will be used in the group in sequence).
5. Exit enrollment by turning the ignition off. The alarm confirms enrollment by sending an SMS message to authorized phones TEL1 to TEL4.

## Functions related to GPS

### Location detection using GPS

An example of an instruction sent from an authorized phone: *GPS*  
 An example of response: *Car alarm reports: Location:*

(GMT:3.12.10:35) 50\*43.495N;15\*11.253E;515;50, Time:3.12.05 11:35

(GMT:3.12.10:35) Greenwich Mean Time (mean meridian)  
 50\*43.495N;15\*11.253E latitude and longitude  
 515 altitude (approximated)  
 50 current velocity  
 Time:3.12.05 11:35 current local time

### Time zone setting

To adjust the time information to local time, time zone setting is possible. The car alarm adds/subtracts the time shift, expressed in hours, to the GMT time (for middle Europe: +2 hours in summer time, +1 hour in winter time).

Instruction: *MASTER TIME ±xy*  
 xy is the time shift in hours -3,-2 ... +1,+2 relative to GMT

*MASTER TIME GSM*  
 turns on automatic setting via incoming SMS.

### Integrated Bluetooth module (BT)

When disarmed and with the ignition key on, the car alarm sends GPS coordinates via the BT which can be used for navigation. The car alarm authorization code for device-pairing is 0000. The ignition key must be on during the pairing process.

### Internet remote access

The web site [www.GSMLink.cz](http://www.GSMLink.cz) enables car alarm remote control (to users) and setting (to installers).

To get internet access to an installed and powered car alarm you will first be asked to register your car alarm on the first page. You will find a unique registration code for your car alarm on the warranty card.

### Additional features

#### Pre-paid SIM card balance

It is recommended not to use prepaid cards in the car alarm. If you have no other choice than prepaid cards, you can enable the CREDIT instruction by the following sequence:

#### MASTER CREDIT *uuu..u xx yyy zz*

where: *uuu..u* is the provider's code to obtain the balance  
*xx* is the time period (in days) for regular checking  
*yyy* is the threshold level below which the balance is reported to the user (TEL1)  
*zz* is the position of the first digit of the balance in the reply SMS from the provider

- After this sequence has been sent once, the car alarm will check the balance automatically every xx days and if the balance is lower than yyy the user will be notified (TEL1)
- If the CREDIT instruction is enabled in the above way, the user can also obtain the current balance by the instruction CREDIT
- To disable the automatic balance checking set the time period "xx" to 00.

### Reset GSM

If you need to disconnect and then reconnect the GSM module to the GSM network, then use the command "MASTER RESET GSM".

This does not affect any settings and is typically used for GPRS activation or charging up credit. This command always requires the Master code.

### Service instruction

The DINFO instruction allows you to obtain current settings, information about the quality of the GSM signal, the registration code for GSMLink devices and some other parameters. This command always requires the Master code.

#### Example of instruction: *MASTER DINFO*

Example of response: *Car alarm reports: CA-1803A, SN:123456, SV:01, LV:03, RK:ABCDE-12345-FG67, R:01, GSM:25,GPS:5, Time:3.2.06 11:35*

<i>CA-1803A</i>	<i>car alarm version</i>
<i>SN:123456</i>	<i>identification number of the product</i>
<i>SV:01</i>	<i>software version</i>
<i>LV:03</i>	<i>language version</i>
<i>RK: ABCDE-12345-FG67</i>	<i>registration code for GSMLink</i>
<i>R:01</i>	<i>current Reset mode of the device</i>
<i>GSM:25</i>	<i>instant quality of GSM signal (ranging from 0 to 32 (best))</i>
<i>GPS:5</i>	<i>number of visible satellites (0-16)</i>


### Specification

Power supply	12/24V DC (8-32V)
Stand-by consumption	max. 20 mA
Immobilization	8A permanently, 12A intermittently
Complies with	ECE Regulation No. 97.00
<i>Can be operated according to ERC/DEC98(20,21), ERC REC 70-03</i>	
Safety	EN 60950-1
EMC	EN 55022, EN 50130-4
Radio interference	ETSI EN 301 419-1, EN 301 511, ETSI EN 300 220 ETSI EN 300 328

**E<sub>8</sub>** 97RAI-01 4532

**CE** JABLOTRON ALARMS a.s. hereby declares that the CA-1803BT is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and 1995/56/EC The original of the conformity assessment can be found at [www.jablotron.com](http://www.jablotron.com), Technical Support section

**Note:** Although this product does not contain any harmful materials we suggest you return the product to the dealer or directly to the producer after use.

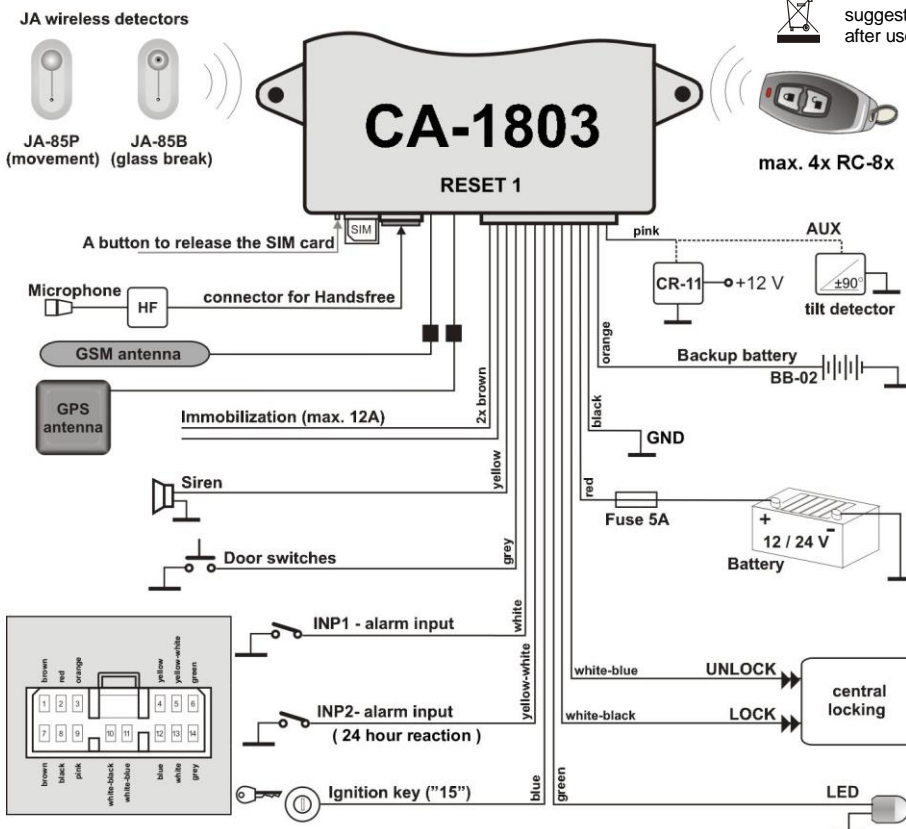

**JABLOTRON**  
CREATING ALARMS

JABLOTRON ALARMS a.s.  
 Pod Skalkou 4567/33  
 46601 Jablonec nad Nisou  
 Czech Republic  
 Tel.: +420 483 559 911  
 Fax: +420 483 559 993  
 Internet: [www.jablotron.com](http://www.jablotron.com)