



LONGTENG  
COSMIC SHUTTLE LASER LIGHT

**USER MANUAL**

Please read over this manual before operation the light 

## Open box to check

Product should be placed with great care upon arrival; check if any damage occurs due to transportation. The accessory should have: 8-m shield line, one console and one cord.

1 User manual

## Installation


- Please confirm whether the voltage you have is same as signed on the light before install.
- Installed by technician. It must be placed safety and best light angle.
- Must keep space between light equipments and combustibles more than half a meter. Keep space between light equipments and wall more than 0.15 meter.
- The fans and vent-pipes should not be jammed by other equipment and decorate materials.
- The light must be fixture installed.
- In safety view please put ground wire into the ground.

## Attention

- Please do not open the bottom cover yourself without permission. Operate it accord the user manual. Please call the technician in case the machine broken down.
- Do not use it under the damp and rain.
- Pay attention to prevent the light from strong bump.
- Prevent the dust into the product
- Keep the vent-pipe well while working.
- Keep the plug insert well before put into power.
- Don't look the light directly to prevent make some destroy with eyes.
- Don't light or extinguish frequently, otherwise the life span of the light tube will be shortened.
- In view of the special characters, after operated the light an hour the product shall be paused about 15 minutes before be used next time.
- Don't touch the product and draw the power line if you hand wet.
- Keep the space between light equipments and the lighted things more than one meter.
- Device not open before it is cool off.
- Apertures to the ventilation during device is working not uncover.
- During device is working unconditional avoid that the cable can to touch the case.
- Don't open the cover for there have no parts the user can repair.
- Don't operate the light without lamps.
- If the semiconductor laser doesn't as light as before or there have some destroy with lens or other parts, please contact the distributor in time.
- When you want to retransfer the products, you'd better use the original package to shockproof.

## Instruction & Function

- **POWER:** Power input;
- **FUSE:** Fuse Socket.
- **MIN MAX:** Sound operation sensitivity.
- **MIC:** Sound receive.

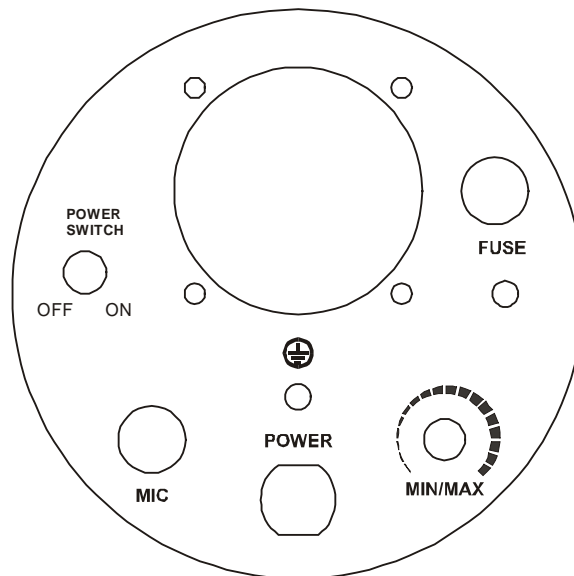

## Function

- Sound operation change the direction of the laser beam.
- Sound operation grating scanning out the fan laser beam.

## Maintain

- Maintenance should be performed every 15-day period, by using a sponge which is dipped with alcohol, rather than wet cloth or other chemical liquid, to clean the mirror.
- Warning: Power must be disconnected before maintenance or repair. Do not look at the light source directly.

**ATTENTION: DISCONNECT INPUT POWER BEFORE MAINTAIN.**

**DON'T LOOK STRAIGHTLY AT THE LIGHT SOURCES.**

**NOTE: Don't separate laser machine from laser power and repair them by yourself otherwise no good repair service will be supplied.**

## Specification

- Voltage: AC220V~240V,50/60Hz
- Rated power: 30W
- Net weight: 2.9Kg
- Size: 360 × 140 × 100mm
- Light source: Laser class 3B, 532nm/20mW
- Fuse: 250V 1A, 5 × 20mm

## Announcement

- When we delivery the goods out of factory, it's function is good and package is well. All users must obey all noted attentions and operate rules. We won't serve free of charge repair if the destroy be caused by your own wrong operate. All the problems which be caused by not operate accord the user manual also not the duty of distributor.
- We won't inform again if there have any more changes of user manual.