


SP2401 USER GUIDE

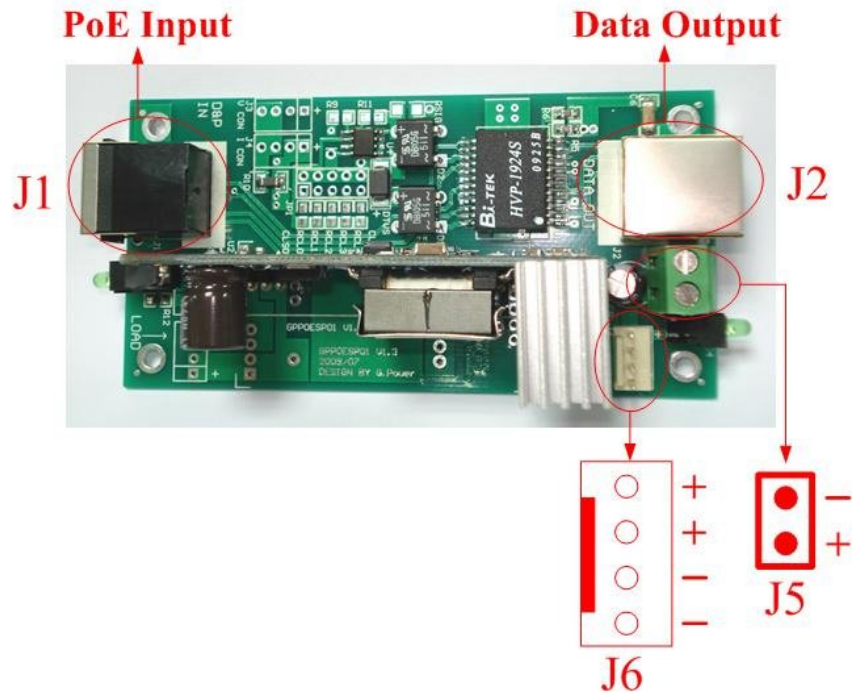

J1: PoE input from PSE.

J2: data output to equipment.

J5: terminal block for power output.

J6: connector for power output.