



CodeMaker_v2.13

User Guide


Sitronix

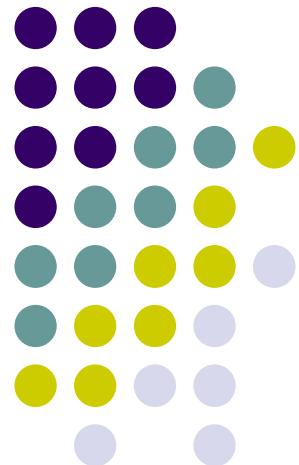

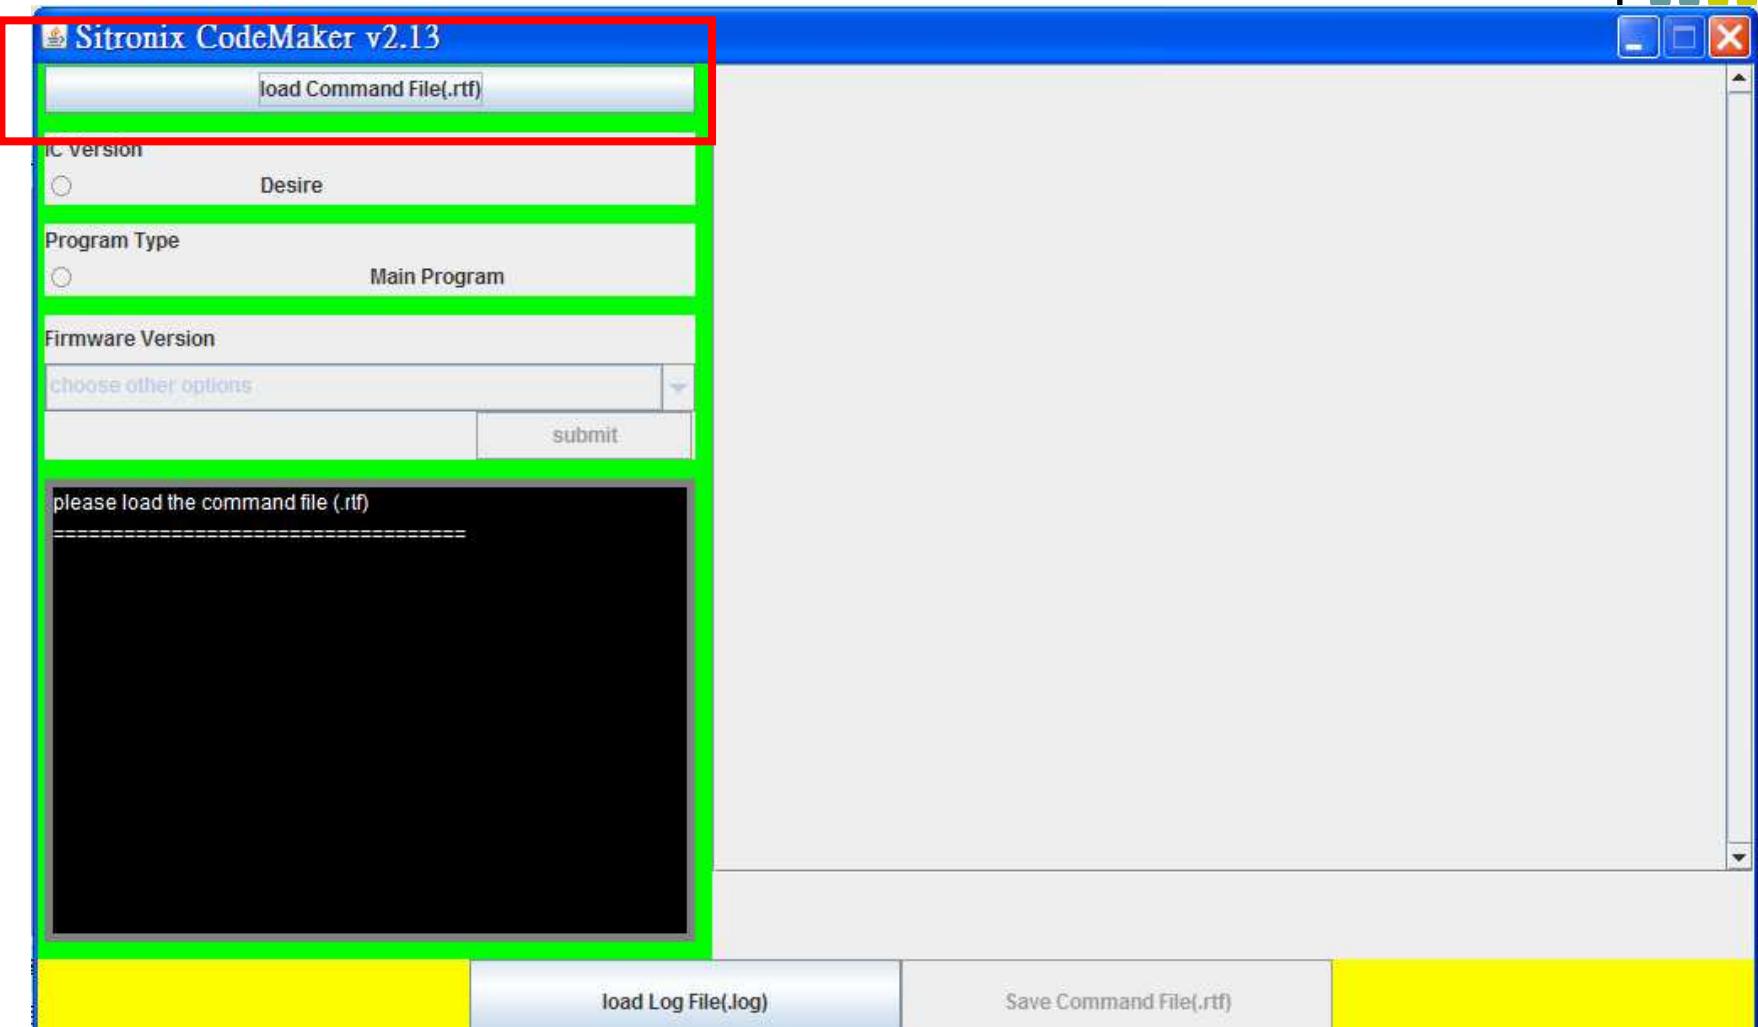


Load command file (.rtf)

Ps: The RTF file must produced by iMuxTPchk1.8 or later version

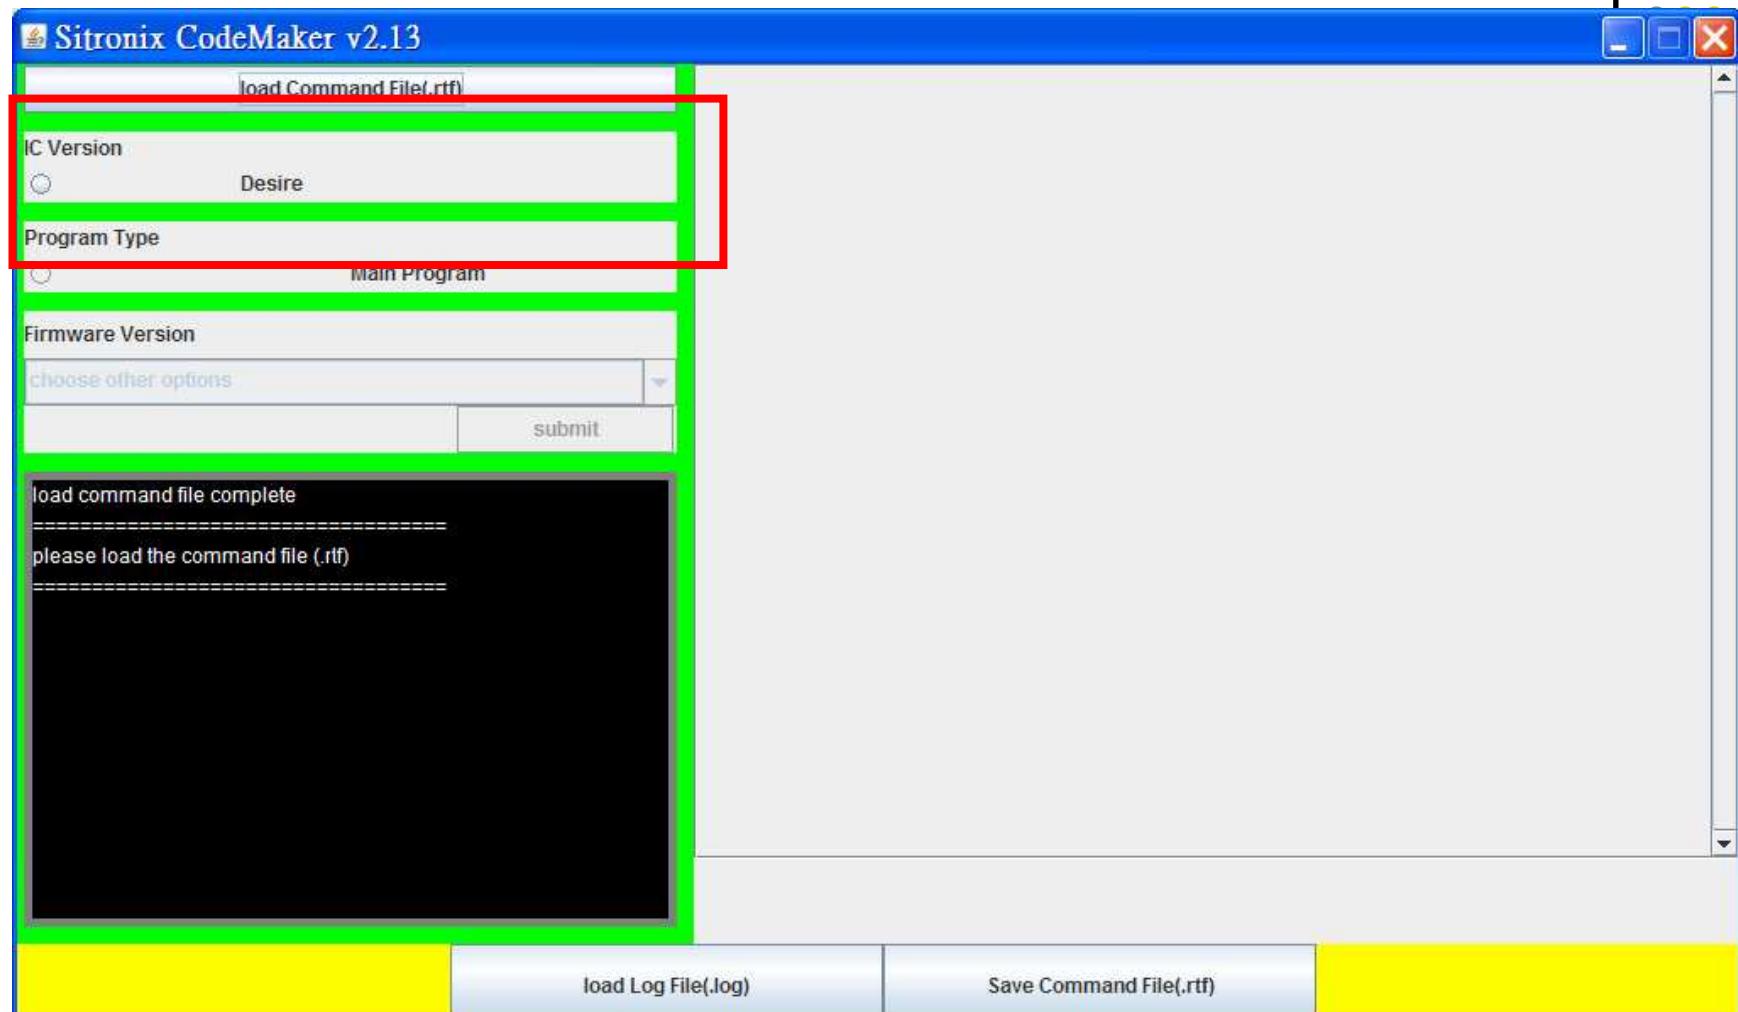

Choose IC Version

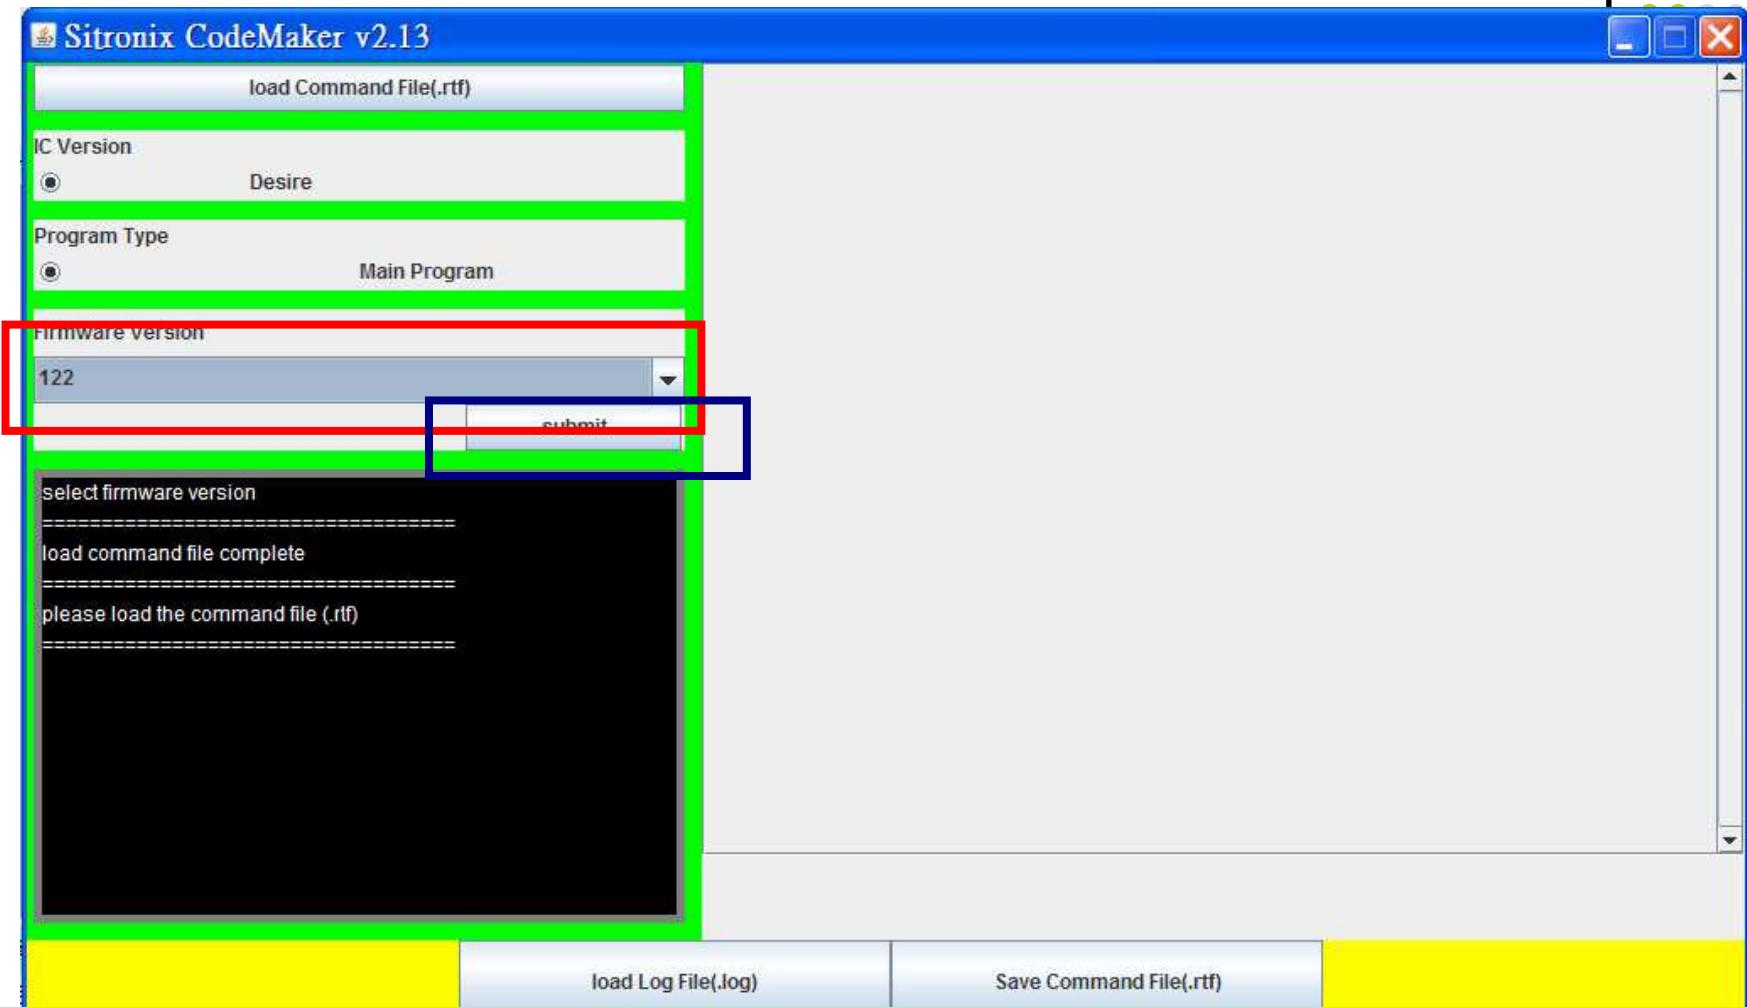

Select the firmware version

Click the 「submit」 button

Sitronix



Sitronix CodeMaker v2.13

load Command File(.rtf)

IC Version
 Desire

Program Type
 Main Program

Firmware Version
122

submit

select firmware version

load command file complete

please load the command file (.rtf)

IC_TYPE:
 COF (IC face up)
 COG (IC face down)

USB_VID: 1403 (Hex)

USB_PID: 5001 (Hex)


I2C_SLAVE_ADDRESS: 48 (Hex)

SCAN_ORIENTATION_INPUT: 0.;LeftTop(0.0);RightTop(X.0);LeftBottom(0.Y);RightBottom(X.Y)

MAX_PIXEL_NUM_INPUT: 10 (Dec range:1~10)

Export Sitronix hex File

load Log File(.log) Save Command File(.rtf)

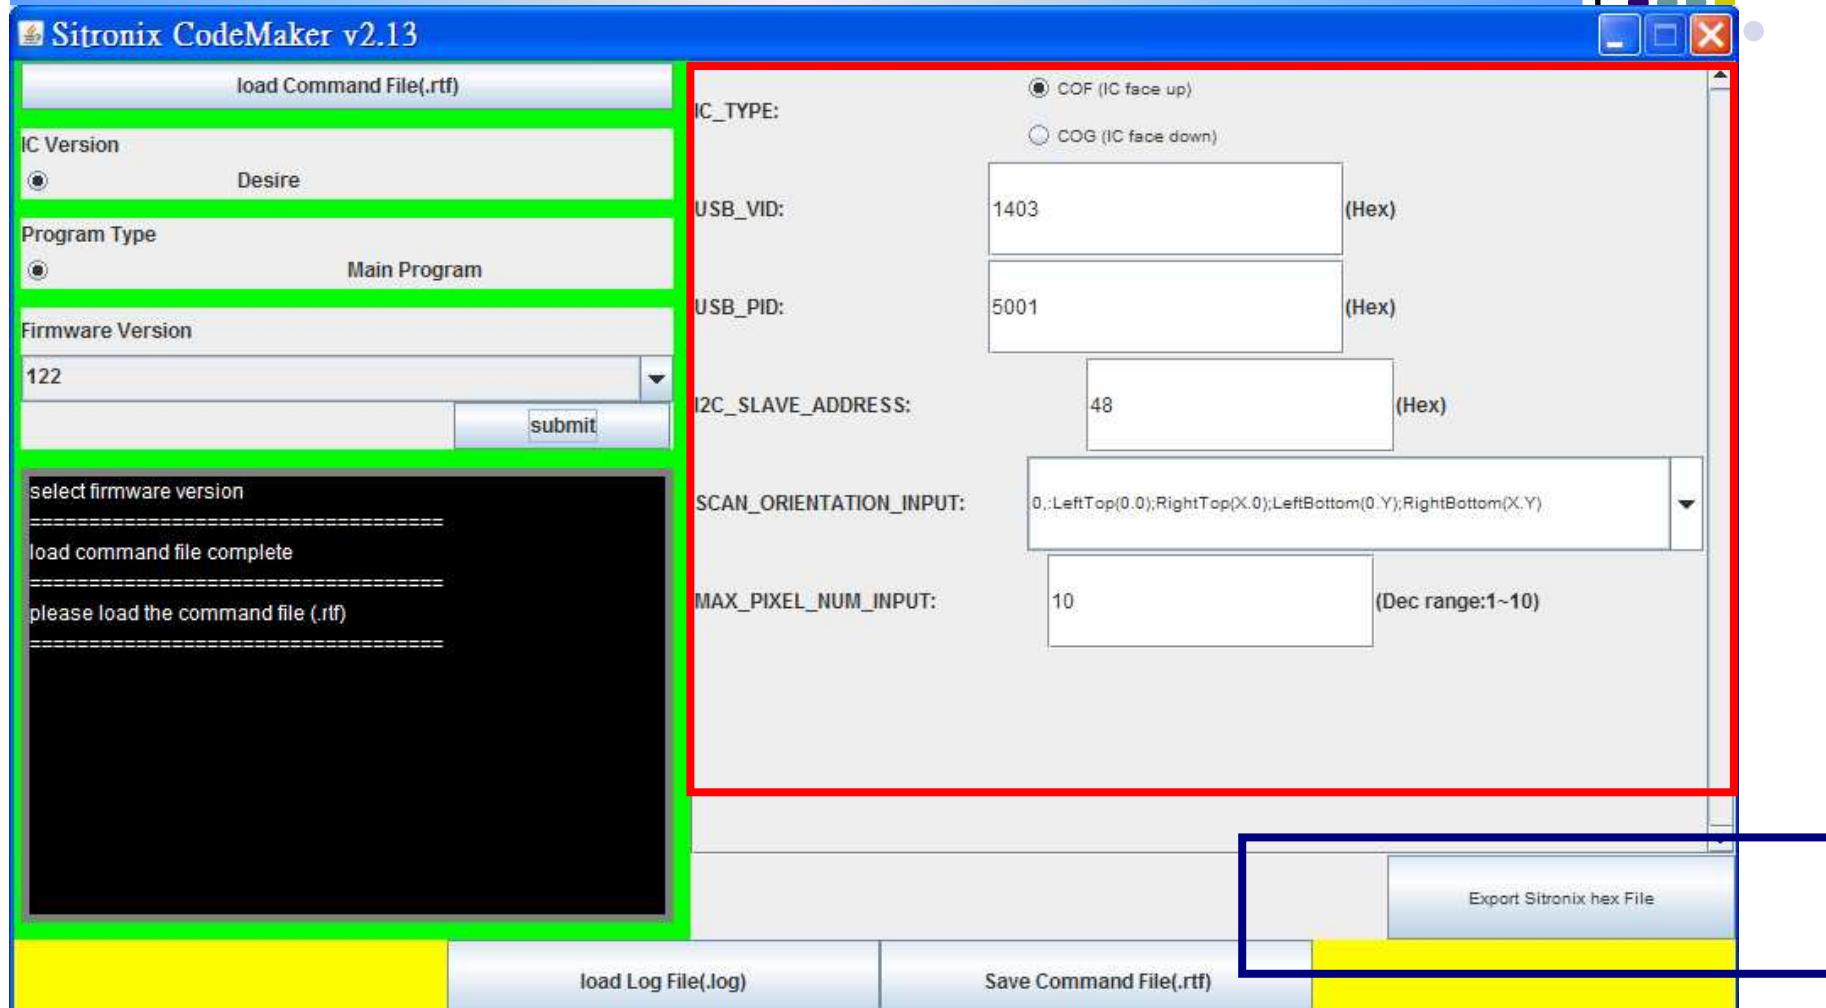

Input or select some values by request – (description in next page)

Click the 「Export Sitronix hex File」 button




Request Description -1


- IC_Type
 - COF (IC face UP) / COG (IC face Down)
- USB_VID: Use default value.
- USB_PID: Use default value.
- I2C_SLAVE_ADDRESS : Use default value.



Request Description -2

- SCREEN_ORIENTATION_INPUT :
 - The default value is
LeftTop(0.0);RightTop(X.0);LeftBottom(0.Y);RightBottom(X.Y)
- MAX_PIXEL_NUM_INPUT
 - The max touch point count
 - Value range:1~10

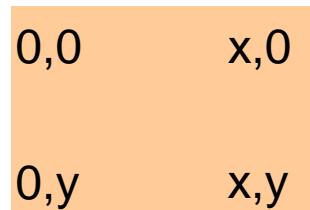

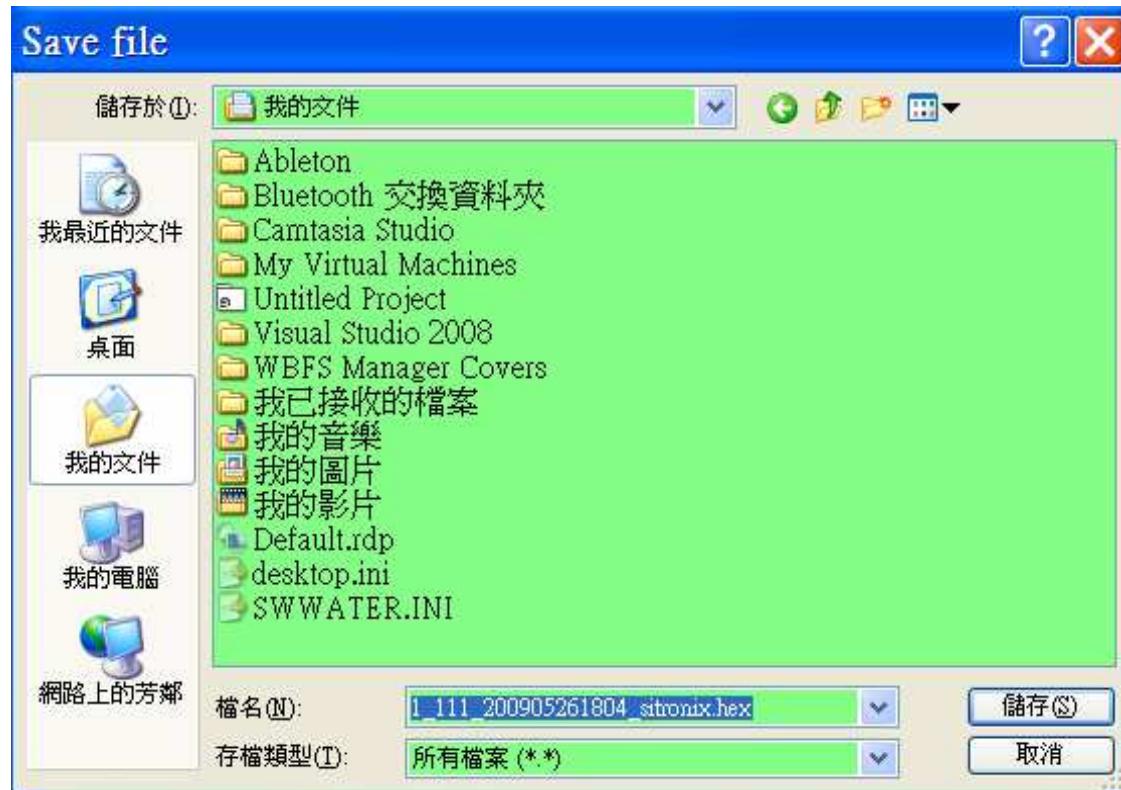

Choose the hex file name and path

Use the download program(Download.exe) to download the hex file and burn it.