



巨輪興有限公司

高雄市岡山區岡山北路199號

**CHU LUN SING CO.,LTD**

No.199,Gangshan N. Rd., Gangshan Township, Kaohsiung County 820, Taiwan

<http://www.sunrun.com.tw>

E-mail:sun.run@msa.hinet.net

TEL:886-7-6210505

FAX:886-7-6217575

# OPERATING INSTRUCTIONS

## Tire separation tools

### 315-A



---

English : E1

## 1. SAFETY PRECAUTIONS



Fail to comply with the following cautions and warnings could cause equipment damage and personal injury.



**IMPORTANT** :Minimum age of the operator must be 18 years The operator must have read and understood all instructions, safety issues, cautions and warnings before starting to operate the SUN RUN equipment. The operator is responsible for this activity towards other persons.



**WARNING:** Always wear safety glasses. The operator must take precaution against injury due to failure the tool or workpiece.



**WARNING:** Immediately replace worn or damaged parts with genuine SUN RUN parts. SUN RUN parts are designed to fit properly and withstand rated loads.



**IMPORTANT:** Hydraulic equipment must only be serviced by a qualified hydraulic technician. For repair service, contact the SUN RUN Service Center in your area. To protect your warranty, use only SUN RUN oil.



**Avoid** situations where loads are not directly centered on the cylinder plunger. Off-center loads produce considerable strain on cylinder and plungers. In addition, the load may slip or fall, causing potentially dangerous results.

## 2.SPECIFICATION

Model Number 型號	Product Name 名稱	Description 適用功能	Weight 總重 (kg)	Remark 備註
315-A	315拆胎器 315 / Tire separation tools	使無內胎輪胎與鋼圈脫離用工具，輕巧省力 To disassemble tubeless tire and rim	6.3	大卡車用 For truck 適用範圍： 295/R22.2、315/R22.5

## 3.OPERATE



- 1.Release truck tire bead and rim by TO-A ,TO-B or other auxiliary tools.
- 2.Smear some lubricant over tire bead and insert 315-A into tire as above then reverse it and move till separate completely.