



## GLOCHARGER OPERATING INSTRUCTIONS

1. Connect the GloCharger's alligator clips to a 12V DC power source (red to positive [+], black to negative [-]). The yellow "POWER" LED will light when a good power connection has been made. CAUTION: When using an automotive battery as a power source, do NOT run the engine as this may permanently damage your GloCharger or glow starter.
2. Lock your glow starter onto the charge jack inside the faceplate of the GloCharger. The GloCharger will be in trickle mode after connection to a glow starter.
3. Press the button marked "PUSH". The red "ON" LED will light, indicating fast charge has begun
4. Fast charge will stop automatically in 15-20 minutes. The red "ON" LED will go out and trickle charge will resume until your glow- starter or DC power is removed,
5. The GloCharger is not designed to full charge your glow starter in a single charge period. To fully charge your glow starter, use the overnight charger supplied with your glow starter or leave it connected to the GloCharger in trickle mode overnight