

Installation Manual of the electric motor for HD582Z4

Step01




Step01. Follow the directions of counter-clockwise, turn the electric motor out from the original lamp-set.

Step02



Step02. Take the screws out of the acquired product, following the directions shown in the above picture.

Step03-1

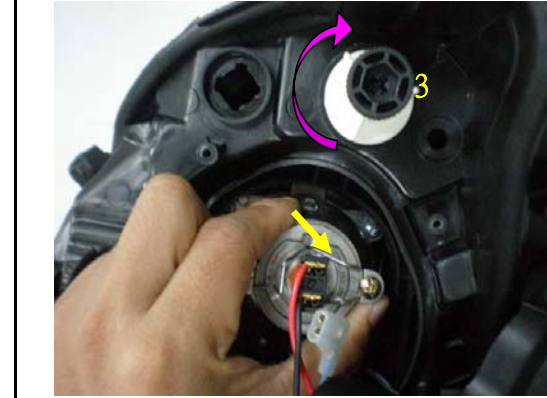


Step03-1 Follow the direction of clockwise to loose the faked bottom of motor-set on the acquired product, and pull backwards a bit of lens-set to let out of faked bottom, as indicated in the above picture.

Step03-2




Step03-2 Put the original motor-set into the hole to match the latch inside, shown as above picture

Step04

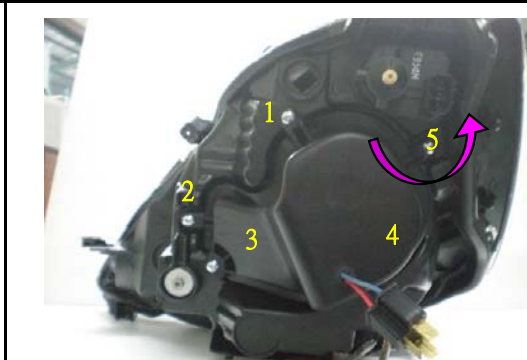

Step04-1 Tighten the motor clockwise to a fixed position.
Step04-2 Fit in the screws counter-clockwise on the back cover of acquired product, following the order shown in the above picture.

Step05. Functional Details:

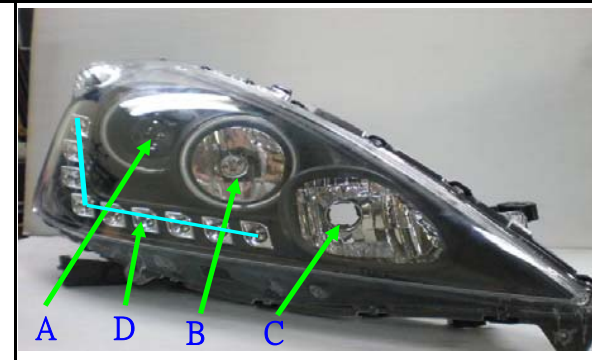


Step05
A. Low beam (bulb version)
B. High beam (bulb version)
C. Indicator (bulb version)
D. Parking lights (LED version)

HD582Z4 電動馬達拆裝說明書


步驟 1：拆下原車燈組

步驟 2-5：拆、組購置件


步驟 3-1：

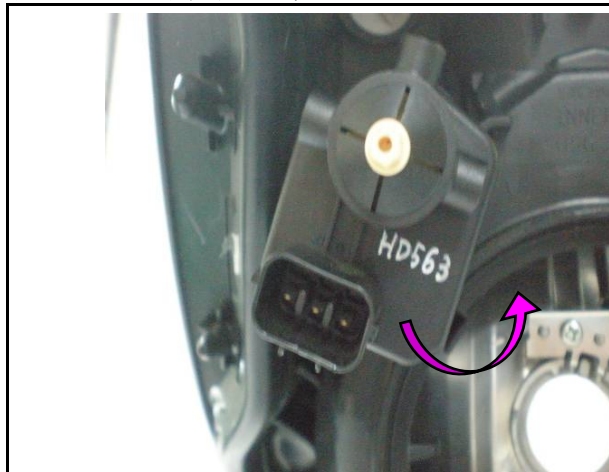

1；逆時針方向，轉開原車燈組電動馬達並取出

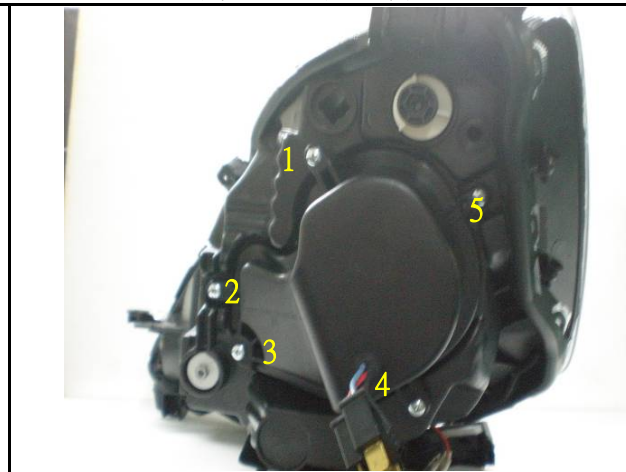

2；卸下標示1~5後蓋螺絲

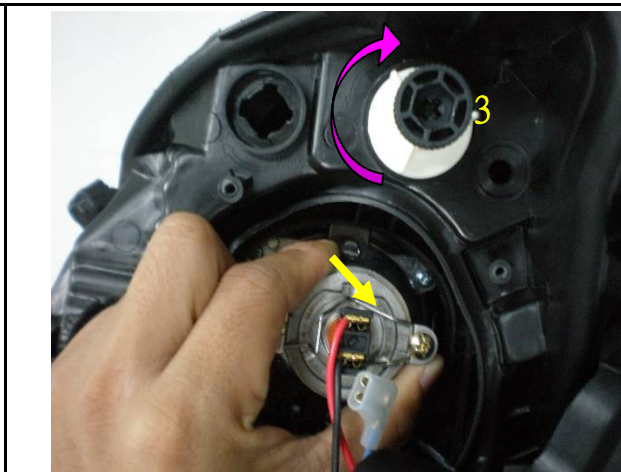


3-1；順時針方向旋鬆假馬達座，再將透鏡組往後拉，取出假馬達座


步驟 3-2：

步驟 4：


步驟 5；功能測試

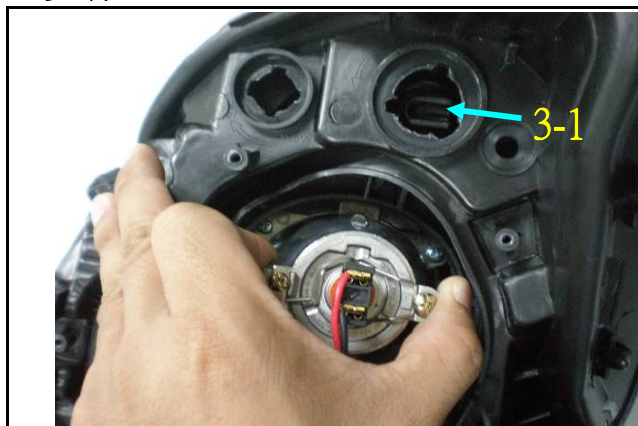

3-2；步驟3延續不動
將拆下之原廠電動馬達，依循方向置入內部固定粒，使二者結合

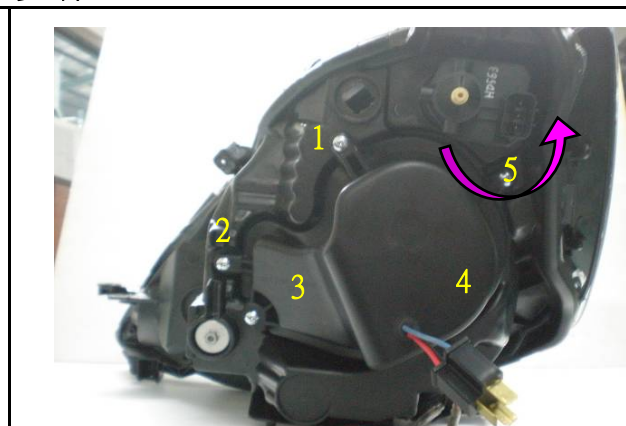

4-1；將電動馬達裝入逆時針方向轉至定位。
4-2；鎖覆標示1~5後蓋螺絲

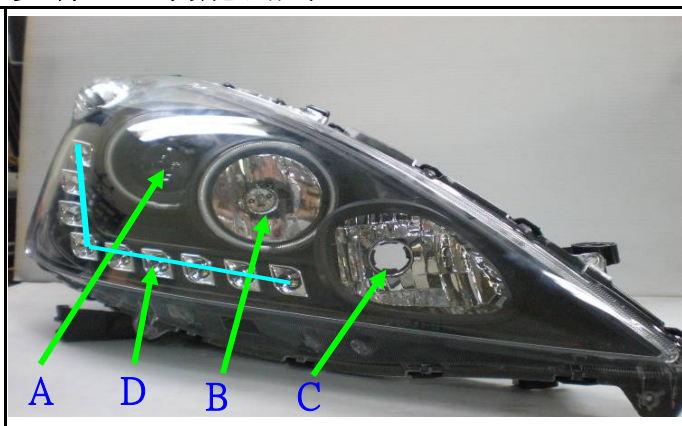

A；近燈（燈炮）
B；遠燈（燈炮）
C；方向（燈炮）
D；駐車（LED）