



Vibrator Massage & Heat Installation Manual [8 FUNCTION & 6 Motors]

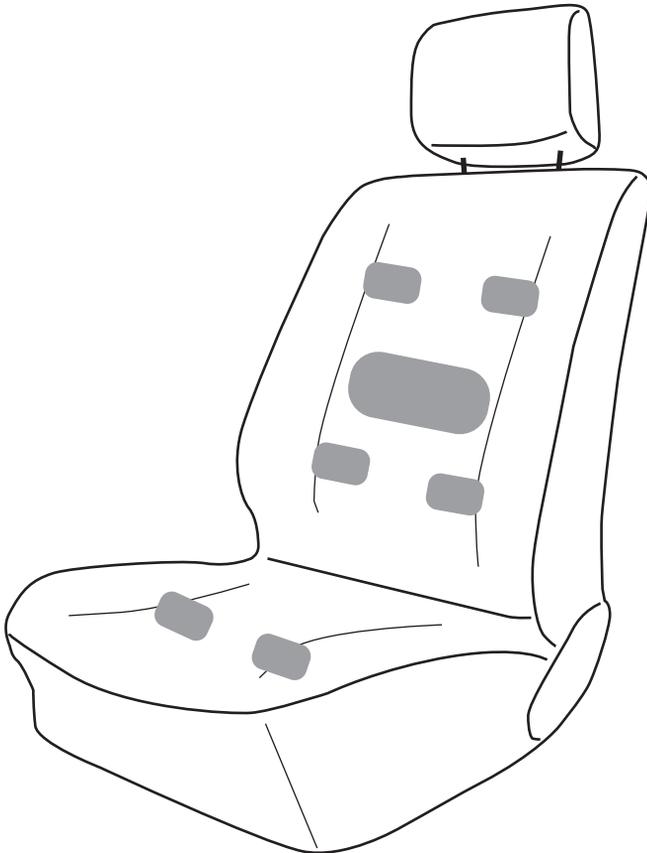


Agent

Motor Placement-Chair

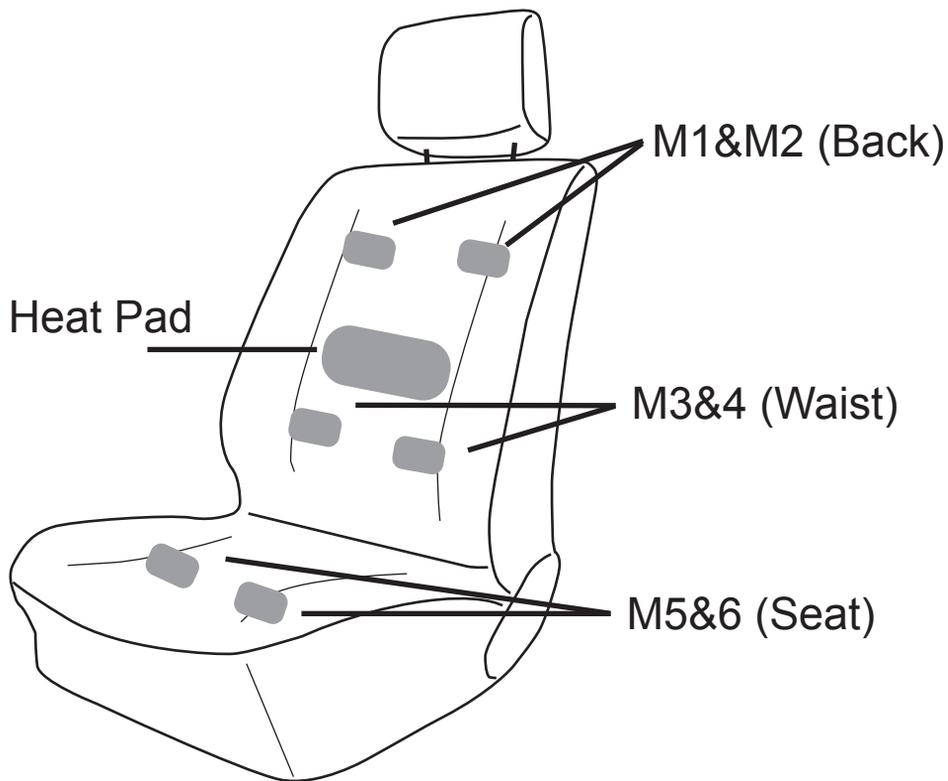


[註:馬達裝配位置可依個人需求自行調整]

Motor Cavity Cutout Template

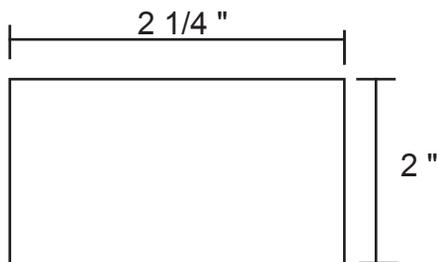

Massage System Parts List

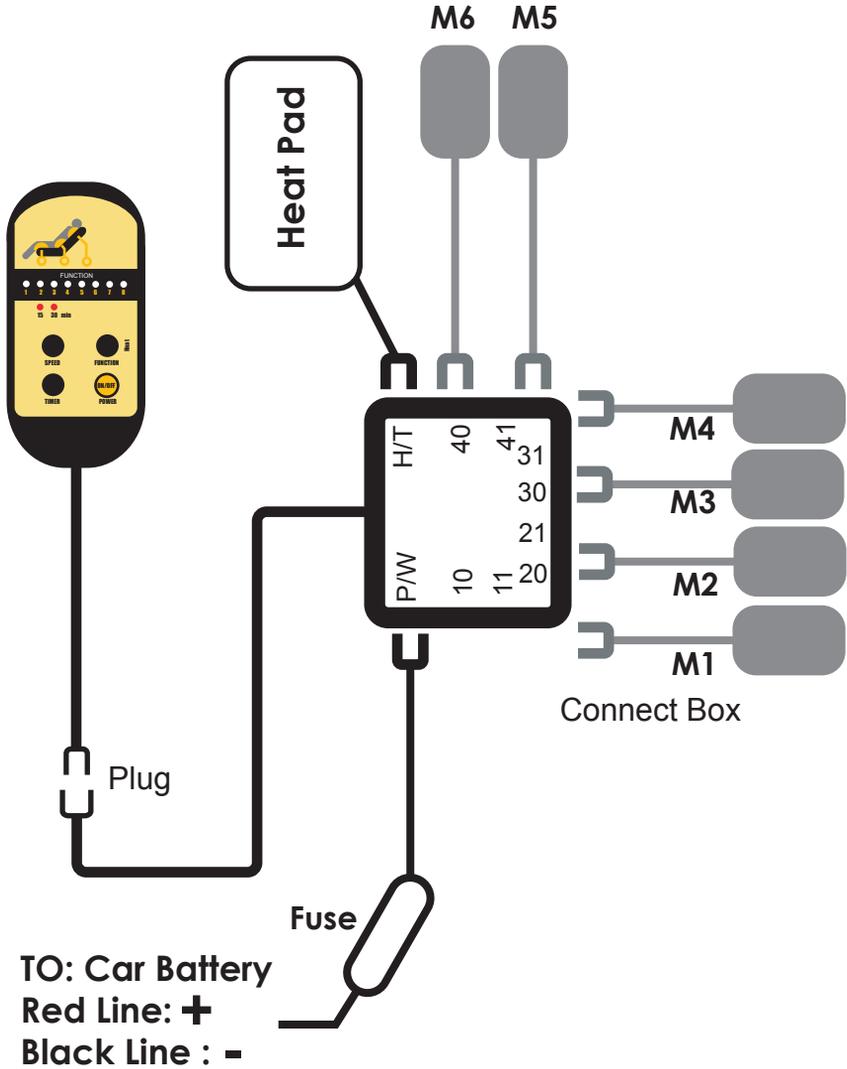


Parts List

- | | | | |
|---------------|-------|----------------|-------|
| 1. Motor set | 6 pcs | 4. Connect box | 1 pcs |
| 2. Controller | 1 pcs | 5. Heat pad | 1 pcs |
| 3. Power wire | 1 pcs | | |

How To Operator The Massage Controller

- 1.LED Time Indicator-Shows the time 15/30
- 2.Power Button-Turns the power on and off.
- 3.Time setting Button-Press this button to select the action period of 15/30 Minutes.
- 4.Function Button-Selects any of the nine (8) programs manually.
- 5.function Indicator-Indicates whether using the automatic or the manual mode of selection.
- 6.Speed Button-Controls the intensity of the massage action in all modes. There are Five (5) speeds that can be selected .The chair always begin at the middle intensity When the power is turned on.
- 7.Heat switch-turns the heater on and off.

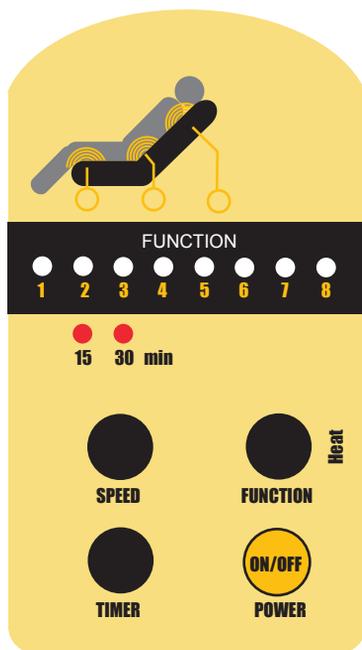

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this appliance.

DANGER - To reduce the risk of electric shock:


1. Always unplug this appliance from electrical outlet immediately after using and before cleaning.
2. Do not reach for an appliance that has fallen into water. Unplug immediately.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.

WARNING - To reduce the risk, burns fire electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in, unplug from outlet when not in use. And before putting on or taking off parts.
2. Do not operate under blanket or pillow, excessive heating can occur cause fire, electric shock, or injury to persons.
3. Use this appliance only for this intended use as described in this in this manual.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped in to water.
5. Do not carry this appliance by supply cord or use cord as a handle.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any into this product.
8. Do not use outdoors.
9. To disconnect, turn all controls to the OFF position, then remove plug from outlet.

Wiring Placement


Route the wires down the seat back and pass them to the rear of the bottom seat cover. Cut an entry hole at the rear of the bottom seat cover and pass the wire harness through or tuck the harness around the rear of the seat cushion. Attach the controller box to the seat frame components with tie wraps and connect all wiring and the controller wand. Bundle up and organize the loose wiring with tie wraps as shown below.

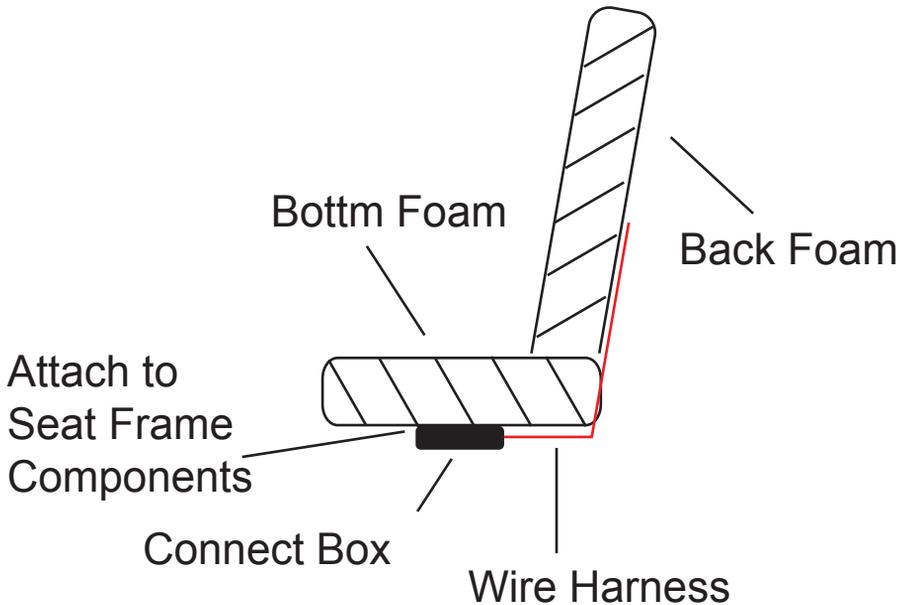

System Power Connection

Power Connection To Vehicle

- 1.Run the power harness under the carpet and along the scuff plate toward the fuse box.
- 2.Install the negative wire to the OEM ground screw and secure in place.
- 3.Connect the red wire(positive)to the power seat mechanism power wire.

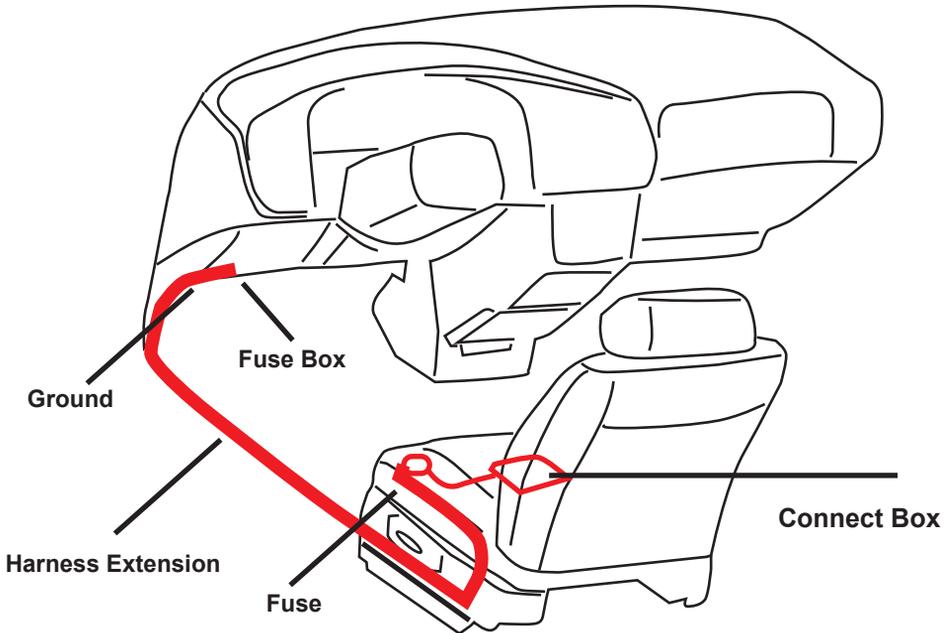


Fuse Box Wiring

Motor Installation Foam

(A.) Foam Cutout:


Cut out the foam to receive the shape of the motor housing by pulling back the long cut of the foam and placing the blade on an angle and cut towards the center. Repeat this on the other side and remove the foam cutout .

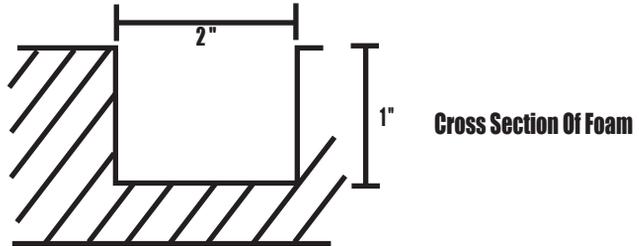

(B.) Verify that all motors are operational before Gluing:

Gluing Motors:

Using spray gluc, apply into the foam cavity and then place motor into foam cavity and gently pull the motor wires to insure a light fit, Apply pressure to the top of motors and hold against the foam for 15 seconds.

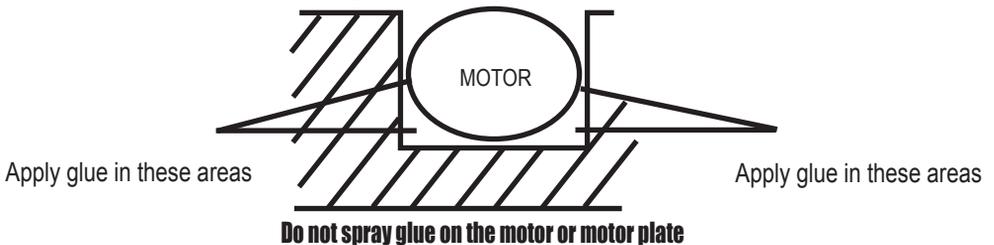

(C.) Needle Punch Application

The Photo below shows the final installation of the needle punch on the set bottom

