

Smart Flash Drive SecurePRO User Manual

Version_010

Index

System Requiremets	3
Getting to know Smart Flash Drive SecurePRO	4
Use of Smart Flash Drive SecurePRO	5
Master Mode	5
Slave Mode	5
Connecting to PC/NB	6
Disconnecting from Computer Safely	6
Disconnecting from Mobile Phone Safely	7
Install the Smart Flash Drive SecurePRO App	8
Start Using Smart Flash Drive SecurePRO	9
Main Screen	10
About & Help	11
File Encryption/Decryption	13
Encryption	13
Decryption	14
File Management	15
Single File Operation	15
Multiple File Operation (Local Storage)	17
Multiple File Operation (External Storage)	21
Limit on its uses	24
Troubleshooting	25

System Requiremets

Operating system requirements for transferring files from a computer to the Smart Flash Drive SecurePRO:

- Microsoft Windows XP
- · Microsoft Windows Vista
- Microsoft Windows 7
- Microsoft Windows 8
- Mac OSX 10.x

For Android devices

Android 4.0 or higher, and compliant with Android Open Accessory Protocol.

Getting to know Smart Flash Drive

<u>SecurePRO</u>



1	Standard USB	Connect to a PC/NB like a normal USB drive for file transfer
		Supports a Micro SD card with capacity up to 32GB
2	Micro USB	Connect to an Android phone for file transmission
3	LED indicator	Blue LED: Master Mode operation status
		Red LED: Slave Mode operation status

Use of Smart Flash Drive SecurePRO

Master Mode

Please connect your Smart Flash Drive SecurePRO with a USB Male to USB Female or Micro USB Male to Micro USB Female cable at its standard USB port to any PC/NB, USB charger, power bank USB port and any 5V output USB port. Note: When you use PC/NB's power, you have to plug Smart Flash Drive SecurePRO in

PC/NB first, and then plug cable to Android phone in 3 seconds.



Slave Mode

Connect the Smart Flash Drive SecurePRO to the Android phone directly. You can start to use file manager App to transfer the data after the Smart Flash Drive SecurePRO is recognized.

- Note: 1. You need to download the file manager App first if there is no file manager App in the phone.
 - 2. When you would like to switch to Master mode, please remove your Smart Flash Drive SecurePRO from phone first, and then plug in phone by connecting external power supply.



Connecting to PC/NB

You can use any Micro SD card inserted in the Smart Flash Drive SecurePRO as a normal USB drive.

Disconnecting from Computer Safely

Disconnecting AFDiksPRO-BR in Windows 8 / 7 / Vista / XP Click the USB icon in lower right corner of the desktop and click the Safely Remove Hardware prompt. Remove your Smart Flash Drive SecurePRO from the PC when the "Safe To Remove Hardware" message is prompted.

Disconnecting from Mobile Phone Safely

To remove your Smart Flash Drive SecurePRO from a mobile phone safely, tap the Return key in the Local Storage main screen (Figure 1) or the External Storage main screen (Figure 2) to confirm ejecting the device before removing your Smart Flash Drive SecurePRO.



Figure 1

Figure 2

Install the Smart Flash Drive SecurePRO App

The AFDiskPRO App is exclusively designed for your Smart Flash Drive SecurePRO. Your Smart Flash Drive SecurePRO may guide you to the Play Store to download and install the APP. (Please ensure that your mobile phone is connected to a WiFi hot point or 3G network.)

1. Insert your Smart Flash Drive SecurePRO and connect by external power supply. Tap on "View" after being prompted by the system.



2. Select "Play Store" and the Smart Flash Drive SecurePRO APP screen displays.



3. Download and install the APP as prompted by the Play Store. The APP icon displays on desktop screen once the installation is completed.

You may search for "afdiskpro" directly from the Play Store for the APP download and installation.



Start Using Smart Flash Drive SecurePRO

Note:

- 1. Please insert the micro SD card before using it.
- 2. If Smart Flash Drive SecurePRO cannot be identified or work normally, please restart your phone to find the situation.
- 1. Insert your Smart Flash Drive SecurePRO then connect by external power supply. Tap on "OK" as prompted by the system.



2. The APP's main screen (Figure 2) displays after the power on screen (Figure 1) is shown.



Figure 1

Figure 2

3. You may select to enter the Local Storage or External Storage menu to manage your files.

<u>Smart Flash Drive SecurePRO main screen</u> <u>description</u>

Main Screen

The APP's main screen displays the default folder of the "Local Storage" (Figure 1) which contains all the folders in your mobile phone's internal memory and the micro SD card (Figure 2).

in t	💵 🛜 🔐 📧 11:07 am	(And	M ×	💵 😭 🖃 💷 11:08 am
C		(1	FDisk Pro	
Local storage	External storage	L.o	cal storage	External storage
sdcard	2013-07-24			
		Local/sd	card Alarms	Loso of oc
		F	Android	1980-01-06
		i	DCIM	2013-07-24
			Download	2013-07-24
		Terre L	OST.DIR	1980-01-06
			Movies	1980-01-06
			Music	1980-01-06
		-	Intification	C,

Figure 1

Figure 2

Tap on the "Local Storage" icon in the tool bar to switch to the Smart Flash Drive SecurePRO's storage area.

Note: The Smart Flash Drive SecurePRO's External Storage icon does not appear if no micro SD card is inserted.



About & Help

Press your phone's function key to display the "About and Help" menu.



About: APP Version
Android OS Version
Phone Model and Firmware Version displays.



- **Help**: Visit our online service website for operation instructions, FAQs and a list of compatible mobile phones.
- Note: Please ensure that your mobile phone is connected to a WiFi hot point or 3G network.

	(dea)	∎× ≌≩ "d 💷 11:0	8 am
	2	www.aflashdrive.com/afdi	Ĩ
		FDOSK	
		繁體中文	
		簡體中文	
		English	
		日本語	
About			
Help —			

File Encryption/Decryption

Your Smart Flash Drive SecurePRO can encrypt and decrypt any folders/files contained in the Local Storage when connected to your mobile phone. Otherwise, it is unavailable as it does not appear in the APP list.

Tap on the file/folder icon to select the desired option (Figure 1). The circle of the file/folder is then checked and the "Encrypt" and "Decrypt" function icons display in the tool bar (Figure 2).





Figure 2

Encryption

Encrypt

Select the files to be encrypted, tap on **Encrypt** in the tool bar, type the password

(composed of **5-32 case sensitive** alphanumeric characters) twice (Figure 1) to encrypt the selected files into another file with the Smart Flash Drive SecurePRO

specific icon and ".secpro" file (Figure 2). The source file is removed while the new file is denied to any APP (Figure 3).

Note: Please remember your password as there is no way to decrypt your file without it!



Figure 1

Figure 2



Decryption



Select the files to be decrypted, tap on **Decrypt** in the tool bar, type the original set of

password (Please note that the password is **case sensitive**) to decrypt the selected files. The encrypted files will restore to original files after the files are decrypted.

Note: The decryption function has to be complied the following conditions,

otherwise it is impossible to decrypt the file.

- 1. Use the Smart Flash Drive SecurePRO APP to find out the encrypted file.
- 2. Insert Smart Flash Drive SecurePRO to your phone.
- 3. Type the original set of password

File Management

Single File Operation

The list of files in the storage is displayed once you enter the Local Storage/External Storage menu. Tap on and hold each file to open the function menu for $\[\] Open \]$, $\[\] Rename \]$, $\[\] Delete \]$, and $\[\] Send via mail \]$ or tap on $\[\] Cancel \]$ to exit to the file list screen.

Open

Option	
Open —	Complete action using
Rename	
Delete	ES Media Player
Send via email	Music
Cancel	Use by default for this action.

Rename



Tap on $\[\]$ Rename $\]$ to change file name.

Delete

Tap on $\ ^{\lceil}$ Delete $_{\bot}$ to remove selected file after taping on $\ ^{\lceil}$ OK $_{\bot}$.

Option			
Open			
Rename	A + + +		
Delete	Attention		
Send via email	Are you sure you want to delete?		
Cancel	Cancel OK		

Send via mail

Tap on $\ ^{\lceil}$ Send via mail $_{\rfloor}$, then select the desired email app and send the file with the email.



Multiple File Operation (Local Storage)

The list of files in the internal storage is displayed once you enter the Local Storage menu while the $\[\]$ Return to root $\]$, $\[\]$ Return on top $\]$, $\[\]$ Create new directory $\]$, and $\[\]$ Select all $\]$ function icons are displayed in tool bar.



Return to root



Tap on Return to to return to the default directory (APP main screen) of your "Local

Storage".

Return on top



to return to the last directory.

Create new directory



Tap on Create new directory to create a new folder in the current directory.



Select all



Tap on Select all files and folders in the current directory.

Tap on the file/folder icon to select the desired option (Figure 1). The circle of the file/folder is then checked (Figure 2) and the \lceil Remove all \rfloor , \lceil Cut \rfloor , \lceil Copy \rfloor , \lceil Delete \rfloor and \lceil Send via email \rfloor function icons display in the tool bar (Figure 3).







Remove all



Tap on Remove all to deselect the files and folders that have been selected.

Cut



Tap on to move the selected file/folder to another directory (Figure 1). The directory position and grid lines turn yellow for the selected files (Figure 2) and you can move them to the desired destination. You may choose to move files to any destination in the Local Storage or External Storage or any newly created folder. Tap



Copy to here and the selected files start moving.



Figure 1

Figure 2

Easy Copy



Tap on **Easy copy** to copy selected files/folders to "AFDisk" folders auto created in the "External Storage (Smart Flash Drive SecurePRO device)".

Сору



Tap on to copy the selected file/folder to another directory. The directory

position and grid lines turn yellow for the selected files and you can move them to the desired destination. You may choose to move files to any destination in the Local

Storage or External Storage or any newly created folder. Tap on Paste and the selected files start copying.

Delete



Tap on \square to remove selected file after taping on \neg OK $_$.

Send via mail



Tap on Send via email, then select the desired email app and send the file with the

email.

Multiple File Operation (External Storage)

The list of files in the internal storage is displayed once you enter the External Storage (Smart Flash Drive SecurePRO) menu while the $\[\]$ Create new directory $\]$, $\[\]$ Auto create directories $\]$, $\[\]$ Select all $\]$, and $\[\]$ Format $\]$ function icons are displayed in tool bar.



Create new directory



Tap on Create new directory to create a new folder in the current directory.

	AFDisk P	≇ × I Pro		ল (মা)	1:13	3 am
Er	nter new folder	folde	r nar	ne		ANN -
Cr EXR	Cancel			ок		ele
	AFDisk Audio					07-02
,	-/@	ab	c	def	-	?
•	ghi	jkl		mno		!
仓	pqrs	tu	v	wxy	z	×
12&	•	<u> </u>				Done

Auto create directories



To manage files, tap on Auto create directories to create the 「Audio」, 「Document」,

 $^{\mbox{{\sc l}}}$ Image $_{\mbox{{\sc l}}}$ and $^{\mbox{{\sc l}}}$ Video $_{\mbox{{\sc l}}}$ folders automatically.

ân	t ×	· 🕆 🔐	11:13 am
P	AFDisk Pro		
	Local storage	External	elocige
ory	Auto create directories	Select all	Format
ExRo	ot		
Sector 1	AFDisk		
100			2013-07-02
	Audio		
_			2013-07-24
	DEMO		
1			2013-07-02
	Document		
			2013-07-24
	Image		
	-		2013-07-24
	Video		
			2013-07-24
9	BaoHe.mkv	2013-07-02	2 446.90 MB

Select all



Tap on Select all, and select all files and folders of the directory.

Format



Tap on **Format** to format the External Storage (Smart Flash Drive SecurePRO) and remove any files/folders contained in it.

Icons of advanced functions displayed in the tool bar after selecting any file/folder, including $\[\] Remove all \]$, $\[\] Cut \]$, $\[\] Copy \]$, $\[\] Delete \]$, and $\[\] Send via Mail \]$ can be used the same was as those found in the Local Storage menu.

<u>Limit on its uses</u>

Limits on Smart Flash Drive SecurePRO device

Please insert the micro SD card into your Smart Flash Drive SecurePRO before using it.

Limits on External Storage

Do not remove the Smart Flash Drive SecurePRO device when a mobile phone is connecting Smart Flash Drive SecurePRO to run the Open, Copy, Cut, Delete, Send via mail functions in the External storage as this may cause damage or loss of files!

Limits on Remove Smart Flash Drive SecurePRO Safely

To remove your Smart Flash Drive SecurePRO from a mobile phone safely, tap the Return key in the Local Storage main screen (Figure 1) or the External Storage main screen (Figure 2) to confirm ejecting the device before removing your Smart Flash Drive SecurePRO.



Figure 1

Figure 2

Troubleshooting

Do self checks as below in case of Smart Flash Drive SecurePRO operation failure:

- 1. Is the micro SD / micro SDHC card inserted correctly?
- 2. In case you cannot connect to a mobile phone or play a video or file, please remove your Smart Flash Drive SecurePRO and plug in again for smooth operation.