

Preface

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

Version 1.0

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark Recognition

Microsoft, MS-DOS and Windows are registered trademarks of Microsoft Corp.

AMD, Phenom, Athlon, Sempron, Turion, and Duron are registered trademarks of AMD Corporation.

Other product names used in this manual are the properties of their respective owners and are acknowledged.

Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment onto an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Shielded interconnect cables and a shielded AC power cable must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This device is in conformity with the following EC/EMC directives:

- ☐ **EN 55022** Limits and methods of measurement of radio disturbance characteristics of information technology equipment
- ☐ **EN 61000-3-2** Disturbances in supply systems caused
- ☐ **EN 61000-3-3** Disturbances in supply systems caused by household appliances and similar electrical equipment “ Voltage fluctuations”
- ☐ **EN 55024** Information technology equipment-Immunity characteristics-Limits and methods of measurement
- ☐ **EN 60950** Safety for information technology equipment including electrical business equipment
- ☐ **CE marking**



Canadian Department of Communications

This class B digital apparatus meets all requirements of the Canadian Interference-causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

About the Manual

The manual consists of the following:

- | | |
|---|---|
| Chapter 1
Introducing the Motherboard | Describes features of the motherboard. ➡ page 1 |
| Chapter 2
Installing the Motherboard | Describes installation of motherboard components. ➡ page 7 |
| Chapter 3
Using BIOS | Provides information on using the BIOS Setup Utility. ➡ page 23 |
| Chapter 4
Using the Motherboard Software | Describes the motherboard software. ➡ page 47 |
| Chapter 5
Trouble Shooting | Provides basic trouble shooting tips. ➡ page 51 |

TABLE OF CONTENTS

Preface	i
Chapter 1	1
Introducing the Motherboard	1
Introduction.....	1
Package Contents.....	1
Specifications.....	2
Motherboard Components.....	4
I/O Ports.....	6
Chapter 2	7
Installing the Motherboard	7
Safety Precautions.....	7
Installing the Motherboard in a Chassis.....	7
Checking Jumper Settings.....	8
Installing Hardware.....	9
<i>Installing Memory Modules.....</i>	<i>9</i>
<i>Installing Add-on Cards.....</i>	<i>10</i>
<i>Connecting Optional Devices.....</i>	<i>13</i>
<i>Installing a SATA Hard Drive.....</i>	<i>19</i>
Connecting Case Components.....	20
<i>Front Panel Header.....</i>	<i>22</i>
Chapter 3	23
Using BIOS	23
About the Setup Utility.....	23
<i>The Standard Configuration.....</i>	<i>23</i>
<i>Entering the Setup Utility.....</i>	<i>23</i>
<i>Resetting the Default CMOS Values.....</i>	<i>24</i>
Using BIOS.....	24
<i>BIOS Navigation Keys.....</i>	<i>25</i>
<i>Main Menu.....</i>	<i>26</i>
<i>Advanced Menu.....</i>	<i>27</i>
<i>Chipset Menu.....</i>	<i>40</i>
<i>M.I.B III(MB Intelligent Bios III) Menu.....</i>	<i>42</i>
<i>Boot Menu.....</i>	<i>43</i>
<i>Security Menu.....</i>	<i>44</i>
<i>Exit Menu.....</i>	<i>45</i>
<i>Updating the BIOS.....</i>	<i>46</i>

Chapter 4	47
Using the Motherboard Software	47
Auto-installing under Windows XP/7/8.....	47
<i>Running Setup</i>	47
Manual Installation.....	49
ECS Utility Software (Intelligent EZ Utility).....	49
Chapter 5	51
Trouble Shooting	51
Start up problems during assembly.....	51
Start up problems after prolong use.....	52
Maintenance and care tips.....	52
Basic Troubleshooting Flowchart.....	53

Chapter 1

Introducing the Motherboard

Introduction

Thank you for choosing the KBN-I motherboard of high performance, enhanced function. This motherboard has onboard FT3 CPU (KBN-I/5200, KBN-I/2100, KBN-I/5000, KBN-I/3000, KBN-I/2500) with an ITX form factor of 170 x 170 mm.

The motherboard incorporates the AMD Kabini (SoC) chipset. It supports one PCIEX16^{*1} slot, intended for Graphics Interface. And two Mini PCIE^{*2} slots are also supported, which are for extending usage. This motherboard supports up to 32 GB of system memory with single channel DDR3 1600/1333 MHz.

It integrates USB 2.0 and USB 3.0 interface, supporting up to six USB 2.0 ports (four USB 2.0 ports at rear panel and one USB 2.0 header supports additional two USB 2.0 ports) and two USB 3.0 ports at the rear panel.

The motherboard is equipped with advanced full set of I/O ports in the rear panel, including PS/2 Combo & USB connectors, one HDMI port, one VGA port, one COM1 port, four USB 2.0 ports, two USB 3.0 ports, one LAN port, and audio jacks for microphone, line-in and line-out.



^{*1} PCIEX16 slot runs at X4 mode.

^{*2} The Mini PCIE slots do not support mSATA.

Package Contents

Your motherboard package ships with the following items:

- ☐ KBN-I Motherboard
- ☐ Quick Installation Guide
- ☐ User Manual
- ☐ DVD
- ☐ I/O Shield
- ☐ 2 SATA Cables



The package contents above are for reference only, please take the actual package items as standard.


Specifications

CPU	• AMD Socket FT3 processors • Supports FT3 CPU (KBN-I/5200, KBN-I/2100, KBN-I/5000, KBN-I/3000, KBN-I/2500) <i>Note: Please go to ECS website for the latest CPU support list.</i>
Chipset	• AMD Kabini (SoC)
Memory	• Single-channel DDR3 memory architecture • 2 x 240-pin DDR3 DIMM sockets support up to 32 GB • Supports DDR3 1600/1333 MHz DDR3 SDRAM <i>Note: Please go to ECS website for the latest Memory support list.</i>
Expansion Slots	• 1 x PCI Express x16 Gen2 slot (runs at X4 mode) • 2 x Mini PCI Express x1 slots
Storage	• Supported by AMD KABINI • 2 x Serial ATA 6.0 Gb/s Host Controllers
Audio	• VT1705CF 6-ch High Definition audio CODEC • Compliant with HD audio specification
LAN	• Realtek RTL8111E Gigabit LAN
Rear Panel I/O	• 1 x PS/2 Combo & USB connectors • 1 x D-Sub port (VGA) • 1 x COM1 port • 1 x HDMI port • 4 x USB 2.0 ports & 2 x USB 3.0 ports • 1 x RJ45 LAN connector • 1 x Audio port (Line in, Line out, Mic_in Rear)
Internal I/O Connectors & Headers	• 1 x 24-pin ATX Power Supply connector • 1 x 3-pin CPU_FAN header • 1 x 4-pin SYS_FAN header • 1 x USB 2.0 header supports additional two USB 2.0 ports • 2 x SATA 6Gb/s connectors • 2 x COM (1 header & 1 connector) • 1 x Case open header • 1 x Front Panel audio header • 1 x Front Panel switch/LED header • 1 x Parallel port header(LPT) • 1 x CLR_CMOS header • 1 x SPDIF out header • 1 x TPM header • 1 x LPT header • 1 x BZ header


System BIOS	• AMI BIOS with 32Mb SPI Flash ROM • Supports Plug and Play • Supports ACPI & DMI • Supports STR (S3) / STD (S4) • Supports Hardware monitor • Audio, LAN, can be disabled in BIOS • F7 hot key for boot up devices option • Supports Pcup clear CMOS Hotkey (Has PS2 KB Model only) • Supports Dual Display • Support Multi-language • Supports AC'97/HD Audio auto detect (default)
Form Factor	• ITX Size, 170mm x 170mm

Motherboard Components

* KBN-I/5200 MB image

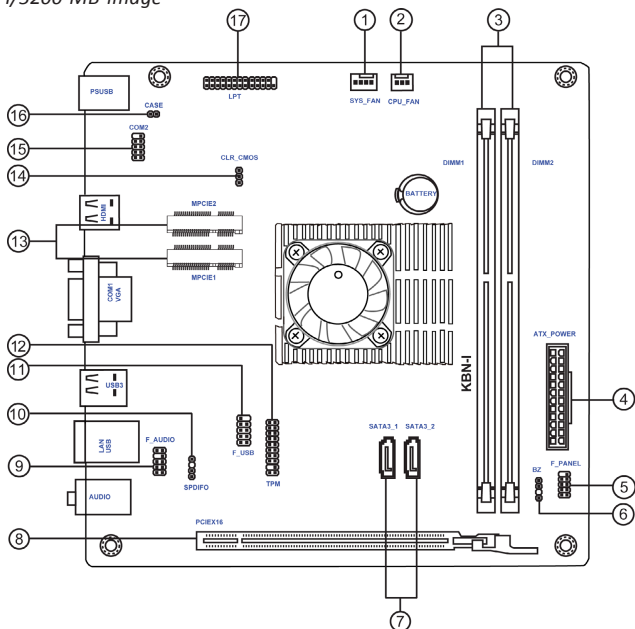

* KBN-I/2100 MB image

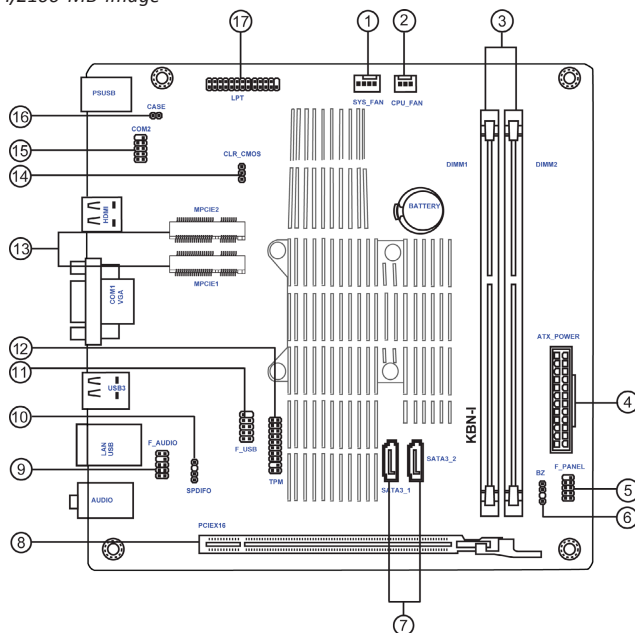




* The MB images are for reference only, please take the actual motherboard as standard, and the other CPUs' Cooler/Heat Sink may be different.

Table of Motherboard Components

LABEL	COMPONENTS
1. SYS_FAN	System cooling fan connector
2. CPU_FAN	CPU cooling fan connector
3. DIMM_1~2	240-pin DDR3 SDRAM slots
4. ATX_POWER	Standard 24-pin ATX power connector
5. F_PANEL	Front panel switch/LED header
6. BZ	Buzzer
7. SATA3_1~2	Serial ATA 6.0 Gb/s connectors
8. PCIEX16	PCI Express slot for graphics interface
9. F_AUDIO	Front panel audio header
10. SPDIFO	SPDIF out header
11. F_USB	Front panel USB 2.0 header
12. TPM	Trusted Platform Module header
13. MPCIE1/2	Mini PCI-Ex1 slots
14. CLR_CMOS	Clear CMOS jumper
15. COM2	Onboard serial port header
16. CASE	Case open header
17. LPT	Onboard parallel port header

I/O Ports

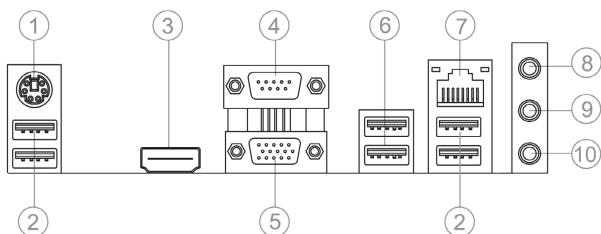

1. PS/2 Combo port

Use the PS/2 combo port to connect the PS/2 Keyboard or PS/2 Mouse.

2. USB 2.0 Ports

Use the USB 2.0 ports to connect USB 2.0 devices.

3. HDMI Port

You can connect the display device to the HDMI port.

4. COM1 Port

You can connect the COM1 port to serial devices such as mice or fax/modems.

5. VGA Port

You can connect the display device to the VGA port.


6. USB 3.0 Ports

Use the USB 3.0 ports to connect USB 3.0 devices.

7. LAN Port

Connect an RJ-45 jack to the LAN port to connect your computer to the Network.

LAN LED	Status	Description
Activity LED	OFF	No data
	Orange blinking	Active
Link LED	OFF	No link
	Green	Link

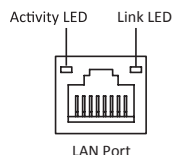

8. Line-in(blue)

It can be connected to an external CD/DVD player, Tape player or other audio devices for audio input.

9. Line-out(lime)

It is used to connect to speakers or headphones.

10. Microphone(pink)

It is used to connect to a microphone.

Chapter 2

Installing the Motherboard


2-1. Safety Precautions

Follow these safety precautions when installing the motherboard:

- Wear a grounding strap attached to a grounded device to avoid damage from static electricity.
- Discharge static electricity by touching the metal case of a safely grounded object before working on the motherboard.
- Leave components in the static-proof bags.
- Always remove the AC power by unplugging the power cord from the power outlet before installing or removing the motherboard or other hardware components.

2-2. Installing the motherboard in a Chassis


This motherboard carries an ITX form factor of 170 x 170 mm. Choose a chassis that accommodates this form factor. Make sure that the I/O template in the chassis matches the I/O ports installed on the rear edge of the motherboard. Most system chassis have mounting brackets installed in the chassis, which corresponds to the holes in the motherboard. Place the motherboard over the mounting brackets and secure the motherboard onto the mounting brackets with screws.

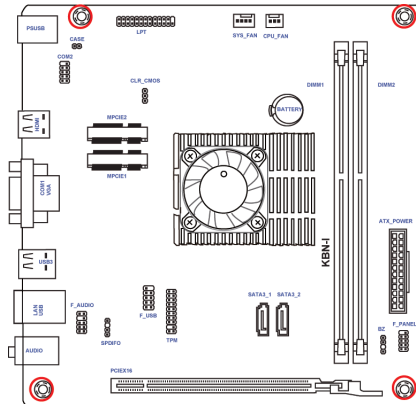

Do not over-tighten the screws as this can stress the motherboard.

2-3. Checking Jumper Settings

The following illustration shows the location of the motherboard jumpers. Pin 1 is labeled.

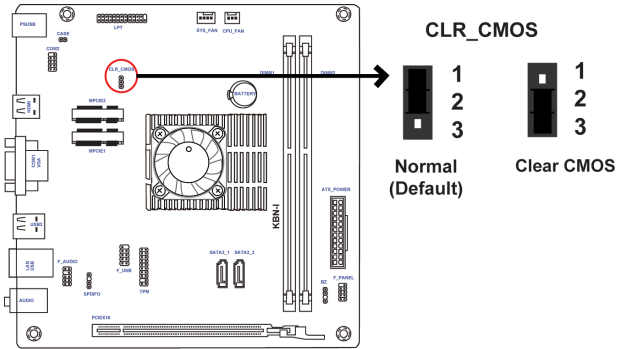


To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to “Load Default Settings” and then “Save and Exit Setup”.

2-4. Installing Hardware


2-4-1. Installing Memory Modules

- This motherboard accommodates two memory modules. It can support two 240-pin DDR3 1600/1333.
- Do not remove any memory module from its antistatic packaging until you are ready to install it on the motherboard. Handle the modules only by their edges. Do not touch the components or metal parts. Always wear a grounding strap when you handle the modules.
- Refer to the following to install the memory modules.


A. Push the latches on each side of the DIMM slot down.

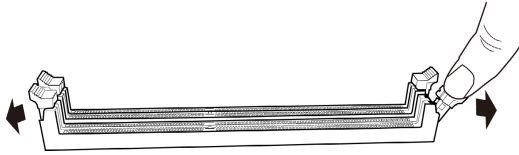

B. Install the DIMM module into the slot and press it firmly down until it seats correctly. Check that the cutouts on the DIMM module edge connector match the notches in the DIMM slot.

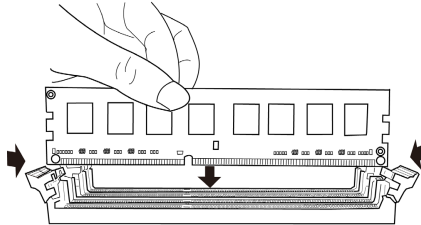

 C. The slot latches are levered upwards and latch on to the edges of the DIMM.




Recommend memory configuration

Model	Sockets	
	DDR3_1	DDR3_2
1 DIMM	~	Populated
2 DIMMs	Populated (Second)	Populated (First)

2-4-2. Installing Add-on Cards

The slots on this motherboard are designed to hold expansion cards and connect them to the system bus. Expansion slots are a means of adding or enhancing the motherboard's features and capabilities. With these efficient facilities, you can increase the motherboard's capabilities by adding hardware that performs tasks that are not part of the basic system.

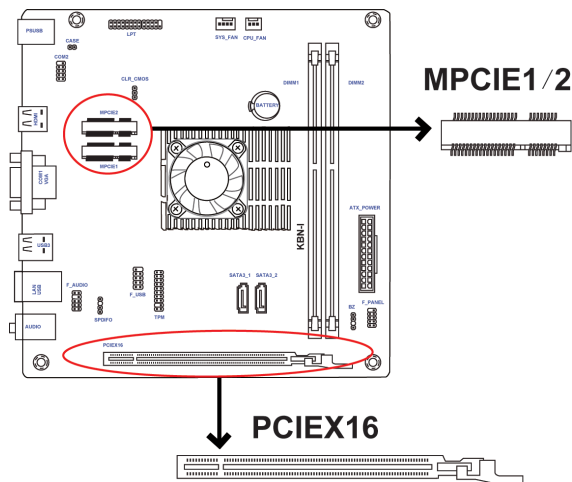

PCIEX16 Slot

The PCI Express x16 slot is used to install an external PCI Express graphics card that is fully compliant to the PCI Express Base Specification revision 2.0.

MPCIE 1/2 Slots

The mini PCI Express x1 slots are for extending usage.



Before installing an add-on card, check the documentation for the card carefully. If the card is not Plug and Play, you may have to manually configure the card before installation.

Follow these instructions to install an add-on card:


- 1 Remove a blanking plate from the system case corresponding to the slot you are going to use.
- 2 Install the edge connector of the add-on card into the expansion slot. Ensure that the edge connector is correctly seated in the slot.
- 3 Secure the metal bracket of the card to the system case with a screw.



1. For some add-on cards, for example graphics adapters and network adapters, you have to install drivers and software before you can begin using the add-on card.

2. The onboard PCI interface does not support 64-bit SCSI cards.


Please refer the following illustrations to install the add-on card:

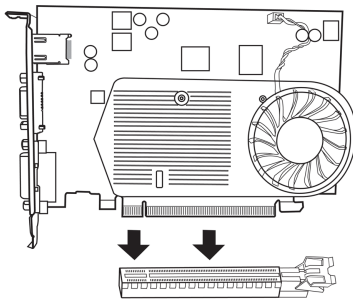


Install the VGA Card in the PCIE X16 slot

Follow these instructions to install a wireless card:


- 1 Remove a blanking plate from the system case, and insert the wireless card into the MINIPCI slot rightwards, then tighten the two screws (Please refer to Picture 1).
- 2 Press the metal connector of the cable into the connector on the wireless card. Ensure that the metal connector is correctly seated (Please refer to Picture 2).
- 3 Make the other end of the cable (with a gold screw) through the upper hole of the bracket, and tighten the antenna on to the gold screw after installing a metal gasket on the screw (Please refer to Picture 3).

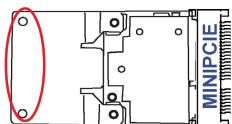

Picture 1

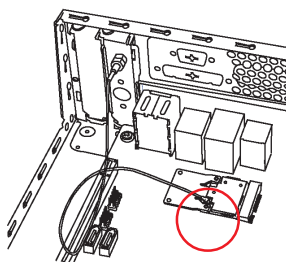


Picture 2

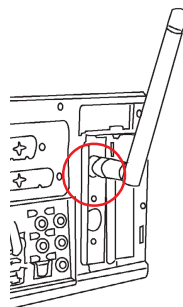

Picture 3


2-4-3. Connecting Optional Devices

Refer to the following for information on connecting the motherboard's optional devices:

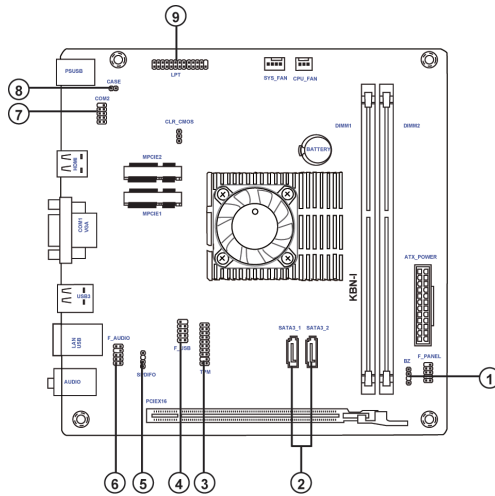


No.	Components	No.	Components
1	BZ	6	F_AUDIO
2	SATA3_1~2	7	COM2
3	TPM	8	CASE
4	F_USB	9	LPT
5	SPDIFO		

1. BZ: Buzzer header

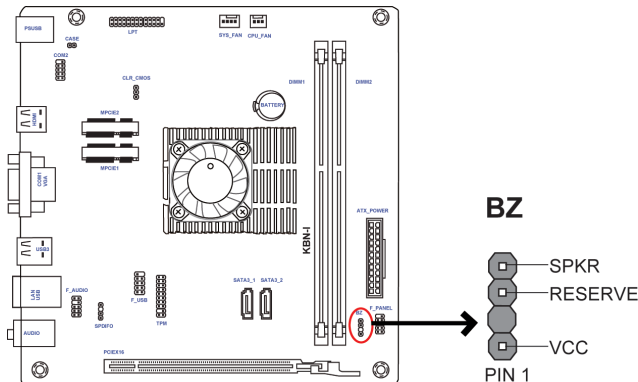


2. SATA3_1/2: Serial ATA connectors

SATA3_1/2 connectors are used to support the Serial ATA 6.0Gb/s device, simpler disk drive cabling and easier PC assembly. It eliminates limitations of the current Parallel ATA interface. But maintains register compatibility and software compatibility with Parallel ATA.

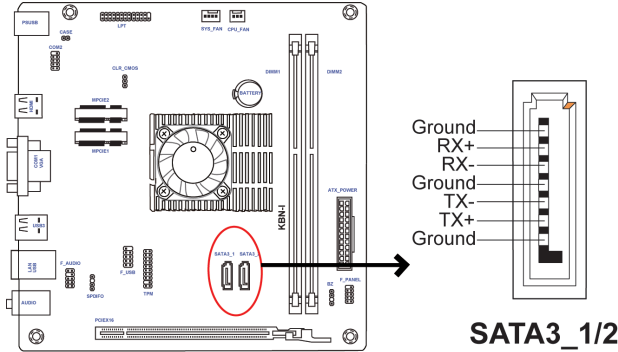


3. TPM: Trusted Platform Module header

Trusted platform module (TPM) is a published specification detailing a micro controller that can store secured information, and implementations of that specification.

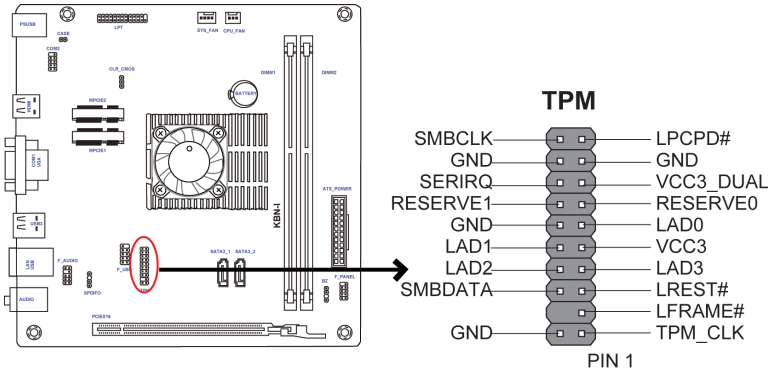

4. F_USB: Front Panel USB 2.0 header


The motherboard has one USB 2.0 header supporting two USB 2.0 ports. Additionally, some computer cases have USB ports at the front of the case. If you have this kind of case, use auxiliary USB connector to connect the front-mounted ports to the motherboard.

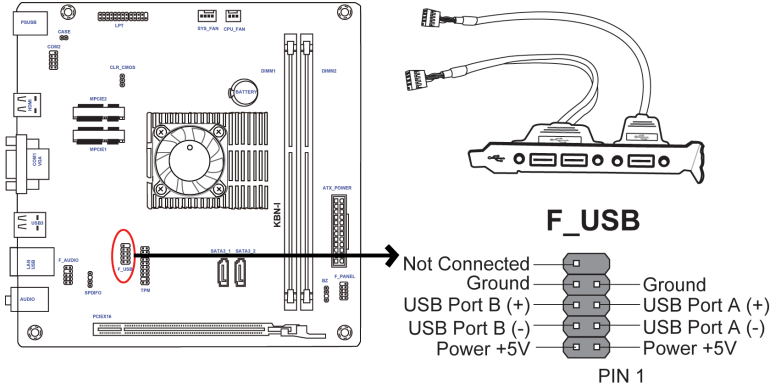

Please make sure that the USB cable has the same pin assignment as indicated above. A different pin assignment may cause damage or system hang-up.


5. SPDIFO: SPDIF out header

This is an optional header that provides an SPDIFO (Sony/Philips Digital Interface) output to digital multimedia device through optical fiber or coaxial connector.

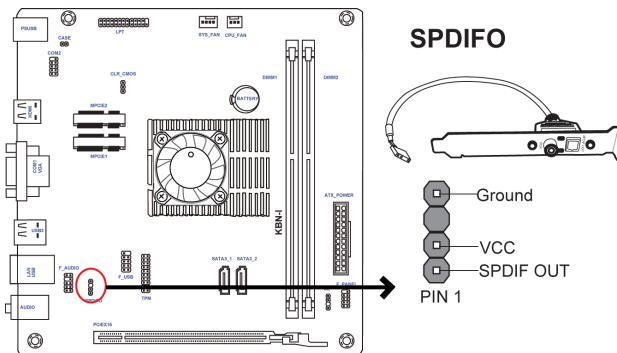


6. F_AUDIO: Front Panel Audio Header

The front panel audio header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access. This header supports HD audio by default. If you want connect an AC' 97 front panel audio to HD onboard headers, please set as below picture.

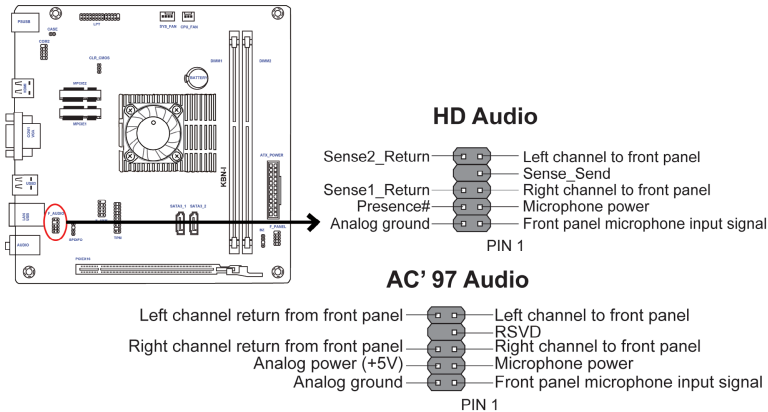

AC' 97 Audio Configuration: To enable the front panel audio connector to support AC97 Audio mode.

If you use AC' 97 Front Panel, please tick off the option of "Disabled Front Panel Detect". If you use HD Audio Front Panel, please don't tick off "Disabled Front Panel Detect".

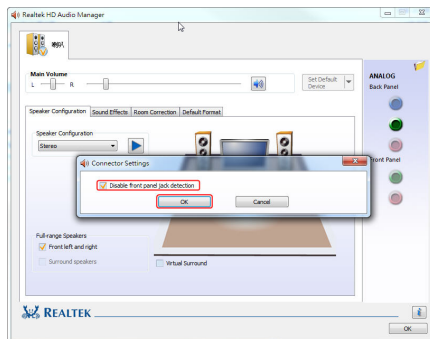

* For reference only


If you use AC' 97 Front Panel, please don't tick off "Using Front Jack Detect ". If you use HD Audio Front Panel, please tick off the option of "Using Front Jack Detect ".



* For reference only


7. COM2: Onboard serial port header

Connect a serial port extension bracket to this header to add a serial port to your system.

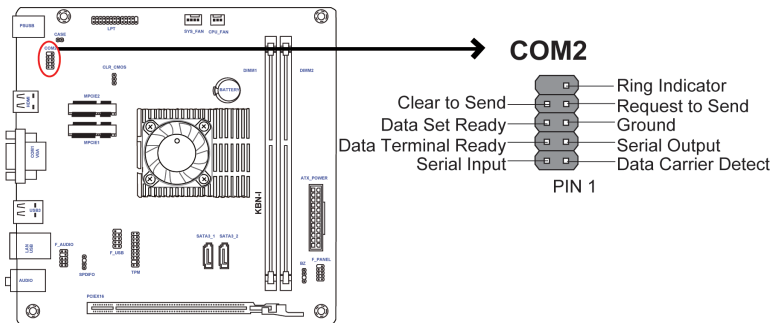


8. CASE: Chassis Intrusion Detect Header

This detects if the chassis cover has been removed. This function needs a chassis equipped with intrusion detection switch and needs to be enabled in BIOS.

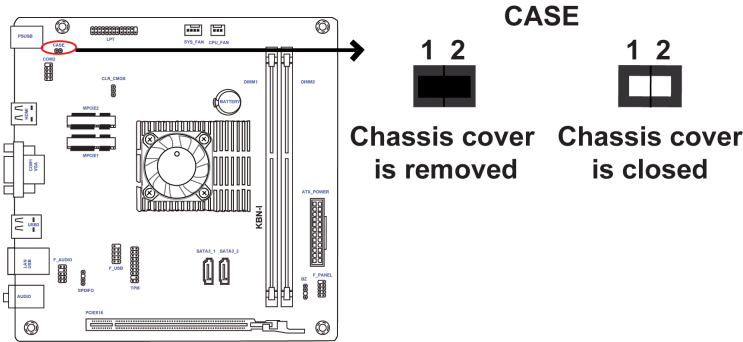

9. LPT: Onboard parallel port Header

This is a header that can be used to connect to the printer, scanner or other devices.

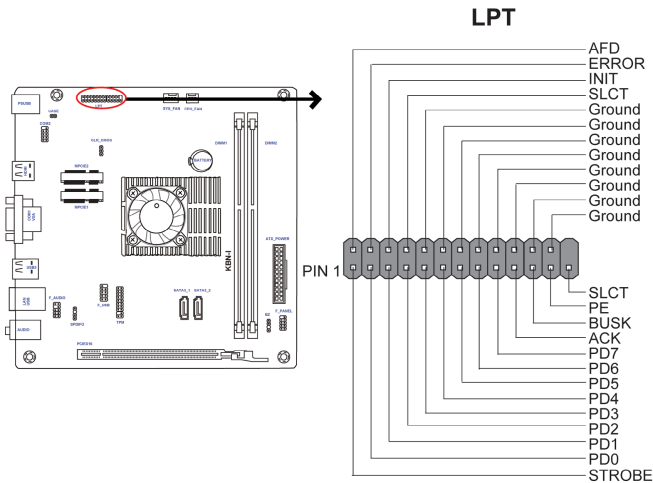

2-4-4. Installing a SATA Hard Drive

This section describes how to install a SATA hard drive.

About SATA Connectors


Your motherboard features two SATA connectors supporting a total of two drives. SATA refers to Serial ATA (Advanced Technology Attachment) is the standard interface for the IDE hard drives which are currently used in most PCs. These connectors are well designed and will only fit in one orientation. Locate the SATA connectors on the motherboard and follow the illustration below to install the SATA hard drives.

Installing Serial ATA Hard Drives

To install the Serial ATA (SATA) hard drives, use the SATA cable that supports the Serial ATA protocol. This SATA cable comes with a SATA power cable. You can connect either end of the SATA cable to the SATA hard drive or the connector on the motherboard.

Refer to the illustration below for proper installation:


- 1 Attach either cable end to the connector on the motherboard.
- 2 Attach the other cable end to the SATA hard drive.
- 3 Attach the SATA power cable to the SATA hard drive and connect the other end to the power supply.

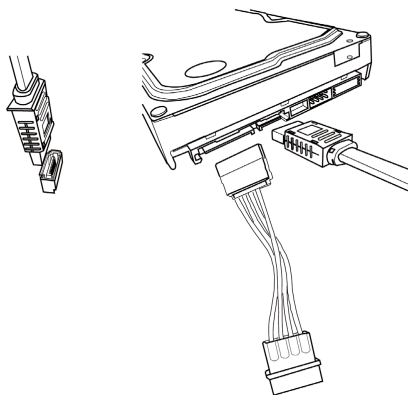

** For reference only*

2-4-5. Connecting Case Components


After you have installed the motherboard into a case, you can begin connecting the motherboard components. Refer to the following:

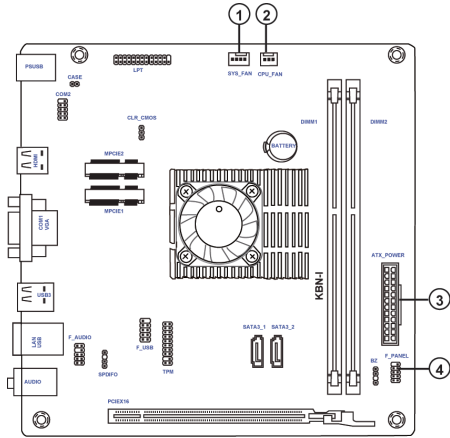

No.	Components	No.	Components
1	SYS_FAN	3	ATX_POWER
2	CPU_FAN	4	F_PANEL


1. SYS_FAN (System Cooling FAN Power Connector) & 2. CPU_FAN (CPU cooling FAN Power Connector)

Connect the system cooling fan connector to **SYS_FAN**.
Connect the CPU cooling fan cable to **CPU_FAN**.

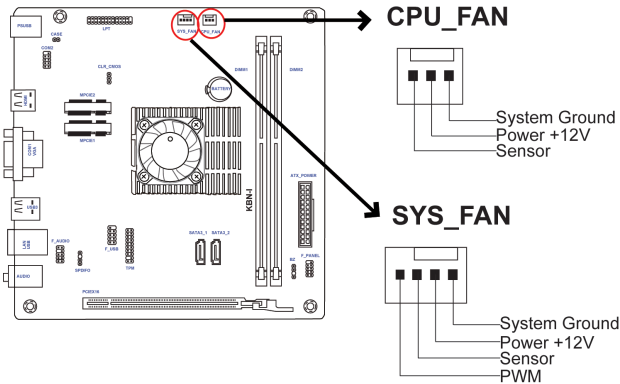


3. ATX_POWER (ATX 24-pin Power Connector)

Connect the standard power supply connector to **ATX_POWER**.

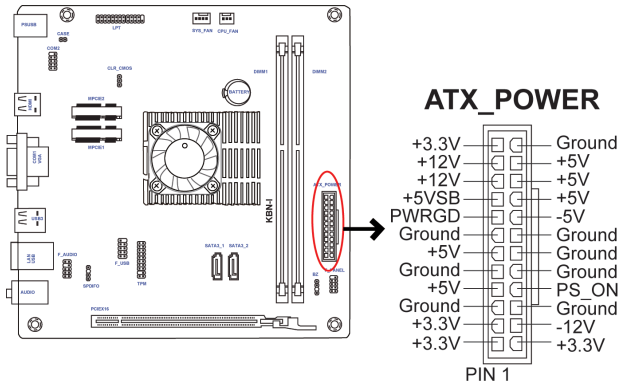

Connecting 24-pin power cable

The ATX 24-pin connector allows you to connect to ATX v2.x power supply.

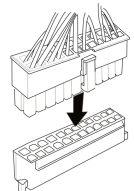


24-pin power cable

With ATX v2.x power supply, users please note that when installing 24-pin power cable, the latches of power cable and the ATX match perfectly.

4. Front Panel Header

The front panel header (F_PANEL) provides a standard set of switch and LED headers commonly found on ATX or Micro ATX cases. Refer to the table below for information:

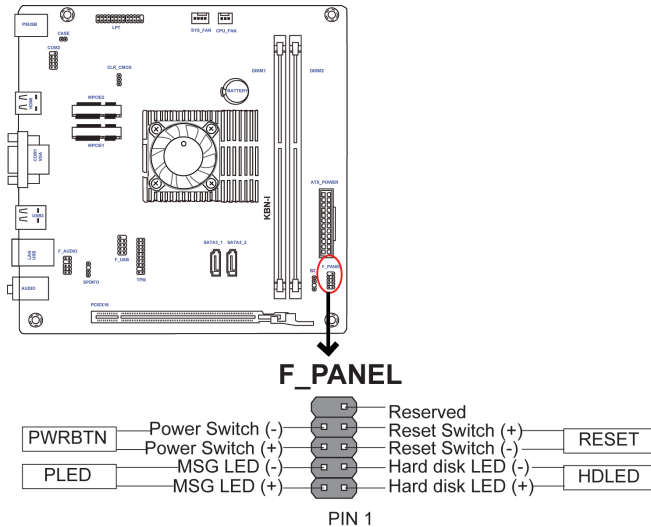

Hard Drive Activity LED

Connecting pins 1 and 3 to a front panel mounted LED provides visual indication that data is being read from or written to the hard drive. For the LED to function properly, an IDE drive should be connected to the onboard IDE interface. The LED will also show activity for devices connected to the SCSI (hard drive activity LED) connector.

Power/Sleep/Message waiting LED

Connecting pins 2 and 4 to a single or dual-color, front panel mounted LED provides power on/off, sleep, and message waiting indication.

Reset Switch

Supporting the reset function requires connecting pin 5 and 7 to a momentary-contact switch that is normally open. When the switch is closed, the board resets and runs POST.

Power Switch

Supporting the power on/off function requires connecting pins 6 and 8 to a momentary-contact switch that is normally open. The switch should maintain contact for at least 50 ms to signal the power supply to switch on or off. The time requirement is due to internal de-bounce circuitry. After receiving a power on/off signal, at least two seconds elapses before the power supply recognizes another on/off signal.

This concludes Chapter 2. The next chapter covers the BIOS.

Chapter 3

Using BIOS

About the Setup Utility

The computer uses the latest “American Megatrends Inc.” BIOS with support for Windows Plug and Play. The CMOS chip on the motherboard contains the ROM setup instructions for configuring the motherboard BIOS.

The BIOS (Basic Input and Output System) Setup Utility displays the system’s configuration status and provides you with options to set system parameters. The parameters are stored in battery-backed-up CMOS RAM that saves this information when the power is turned off. When the system is turned back on, the system is configured with the values you stored in CMOS.

The BIOS Setup Utility enables you to configure:

- Hard drives, diskette drives and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power Management features

The settings made in the Setup Utility affect how the computer performs. Before using the Setup Utility, ensure that you understand the Setup Utility options.

This chapter provides explanations for Setup Utility options.

The Standard Configuration

A standard configuration has already been set in the Setup Utility. However, we recommend that you read this chapter in case you need to make any changes in the future.

This Setup Utility should be used:


- when changing the system configuration
- when a configuration error is detected and you are prompted to make changes to the Setup Utility
- when trying to resolve IRQ conflicts
- when making changes to the Power Management configuration
- when changing the password or making other changes to the Security Setup

Entering the Setup Utility

When you power on the system, BIOS enters the Power-On Self Test (POST) routines. POST is a series of built-in diagnostics performed by the BIOS. After the POST routines are completed, the following message appears:

Press DEL to enter SETUP

Press the delete key to access BIOS Setup Utility.

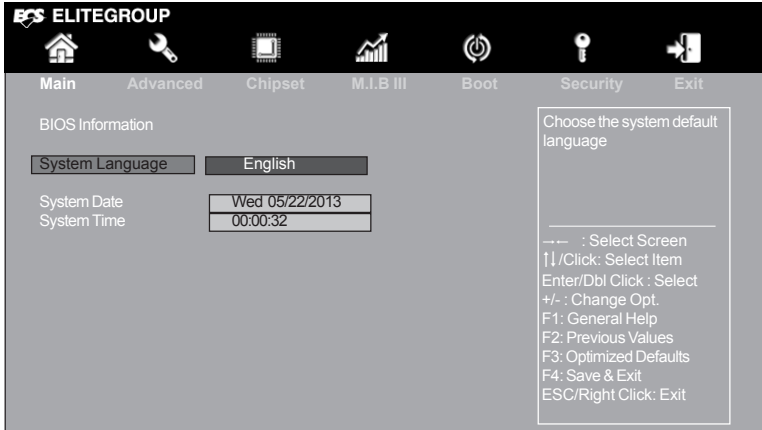

Resetting the Default CMOS Values

When powering on for the first time, the POST screen may show a “CMOS Settings Wrong” message. This standard message will appear following a clear CMOS data at factory by the manufacturer. You simply need to Load Default Settings to reset the default CMOS values.

Note: Changes to system hardware such as different CPU, memories, etc. may also trigger this message.



Using BIOS

When you start the Setup Utility, the main menu appears. The main menu of the Setup Utility displays a list of the options that are available. A highlight indicates which option is currently selected. Use the cursor arrow keys to move the highlight to other options. When an option is highlighted, execute the option by pressing <Enter>.

Some options lead to pop-up dialog boxes that prompt you to verify that you wish to execute that option. Other options lead to dialog boxes that prompt you for information.

Some options (marked with an icon ») lead to submenus that enable you to change the values for the option. Use the cursor arrow keys to scroll through the items in the submenu.

In this manual, default values are enclosed in parenthesis. Submenu items are denoted by an icon ».



The default BIOS setting for this motherboard apply for most conditions with optimum performance. We do not suggest users change the default values in the BIOS setup and take no responsibility to any damage caused by changing the BIOS settings.

BIOS Navigation Keys

The BIOS navigation keys are listed below:

KEY	FUNCTION
ESC	Exits the current menu
↑↓→←	Scrolls through the items on a menu
+/-	Change Opt.
Enter	Select
F1	General Help
F2	Previous Value
F3	Optimized Defaults
F4	Save & Exit




1. For the purpose of better product maintenance, the manufacture reserves the right to change the BIOS items presented in this manual. The BIOS setup screens shown in this chapter are for reference only and may differ from the actual BIOS. Please visit the manufacture's website for updated manual.

2. In this Gui BIOS, you can operate by mouse or keyboard. Click : select item; Double click: enter; Right click: exit.

Main Menu

When you enter the BIOS Setup program, the main menu appears, giving you an overview of the basic system information. Select an item and press <Enter> to display the submenu.

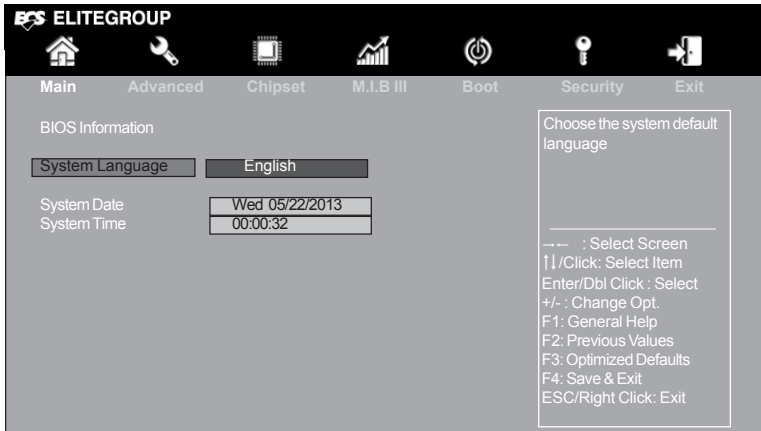

System Language (English)


This item is used to set system language.

System Date & Time

The Date and Time items show the current date and time on the computer. If you are running a Windows OS, these items are automatically updated whenever you make changes to the Windows Date and Time Properties utility.


Advanced Menu

The Advanced menu items allow you to change the settings for the CPU and other system.

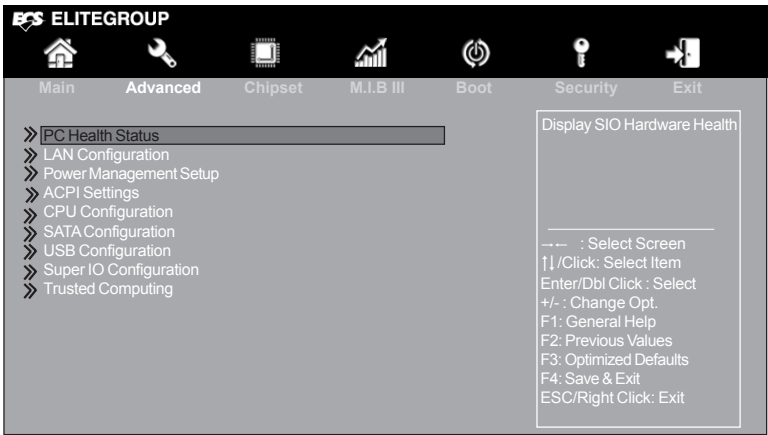


» PC Health Status

On motherboards support hardware monitoring, this item lets you monitor the parameters for critical voltages, temperatures and fan speeds.

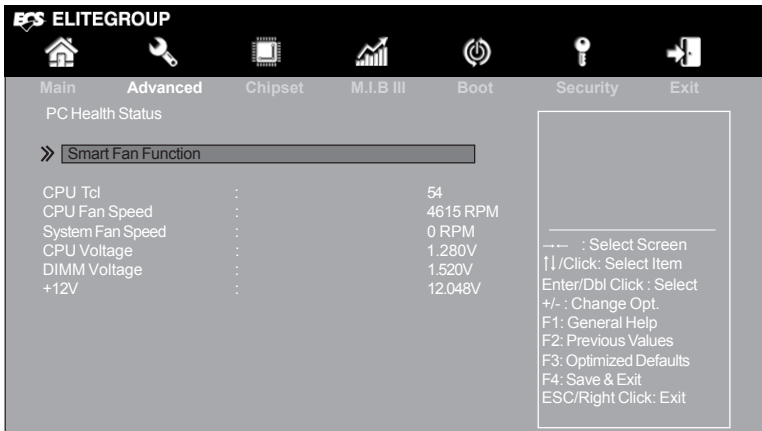

» Smart Fan Function

Scroll to this item and press <Enter> to view the following screen:

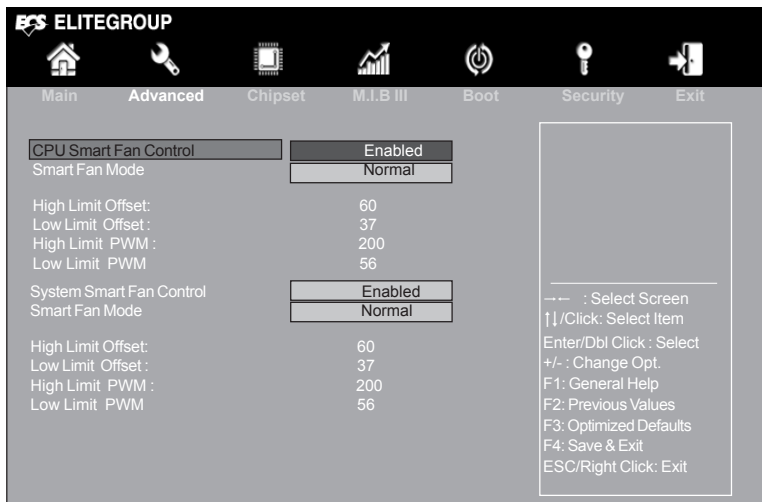

CPU/System Smart Fan Control (Enabled)

This item allows you to enable/disable the control of the CPU/System fan speed by changing the fan voltage.

Smart Fan Mode (Normal)

This item allows you to select the fan mode (Normal, Quiet, Silent, or Manual) for a better operation environment. If you choose Normal mode, the fan speed will be auto adjusted depending on the CPU temperature. If you choose Quiet mode, the fan speed will be auto minimized for quiet environment. If you choose Silent mode, the fan speed will be auto restricted to make system more quietly. If you choose Manual mode, the fan speed will be adjusted depending on users' parameters.

Press <Esc> to return to the PC Health Status page.

System Component Characteristics


These items display the monitoring of the overall inboard hardware health events, such as CPU fan speed, CPU & DIMM voltage...etc.

- CPU TcI
- CPU Fan Speed
- System Fan Speed
- CPU Voltage
- DIMM Voltage
- +12V

Press <Esc> to return to the Advanced Menu page.

» LAN Configuration

The item in the menu shows the LAN-related information that the BIOS automatically detects.

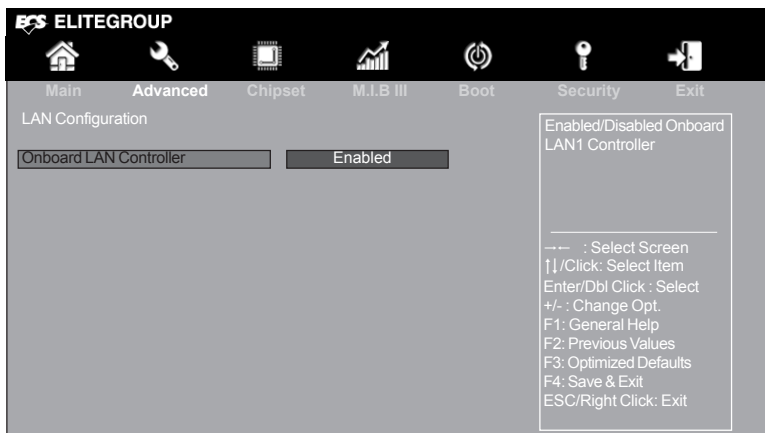


Onboard LAN Controller (Enabled)

Use this item to enable or disable Onboard LAN 1 controller.

Press <Esc> to return to the Advanced Menu page.

» Power Management Setup

This page sets up some parameters for system power management operation.

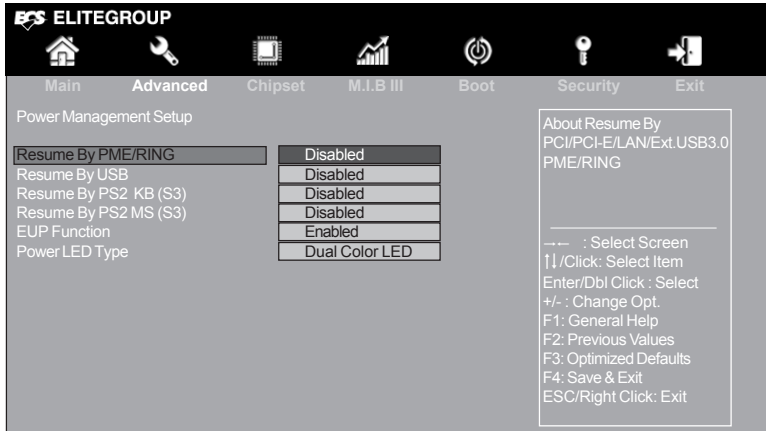

Resume By PME/RING (Disabled)

The system can be turned off with a software command. If you enable this item, the system can automatically resume if there is an incoming call on the PCI Modem or PCI LAN card. You must use an ATX power supply in order to use this feature. Use this item to do wake-up action if inserting the PCI card.

Resume By USB (Disabled)

This item allows you to enable/disable the USB device wakeup function from S3 mode.

Resume By PS2 KB (S3) (Disabled)

This item enables or disables you to allow keyboard activity to awaken the system from power saving mode.

Resume By PS2 MS (S3) (Disabled)

This item enables or disables you to allow mouse activity to awaken the system from power saving mode.

EUP Function (Enabled)

This item allows user to enable or disable EUP function.


Power LED Type (Dual Color LED)

This item shows the type of the power LED.

Press <Esc> to return to the Advanced Menu page.

» ACPI Setting

The item in the menu shows the highest ACPI sleep state when the system enters suspend.

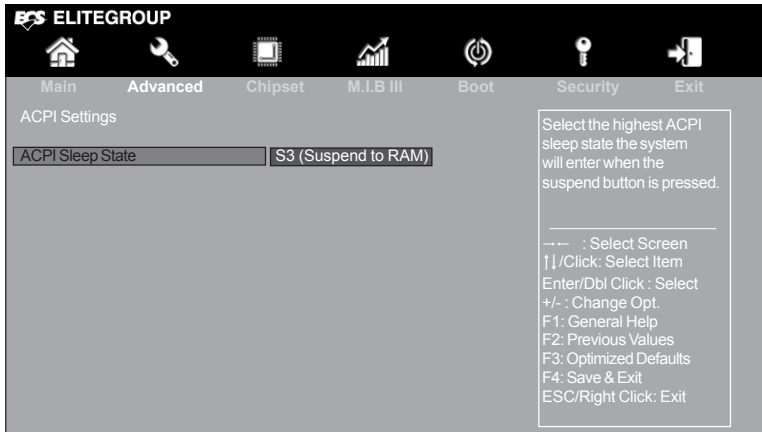


ACPI Sleep State (S3(Suspend to RAM))

This item allows user to enter the ACPI S3 (Suspend to RAM) Sleep State (default).

Press <Esc> to return to the Advanced Menu page.

» CPU Configuration

Scroll to this item and press <Enter> to view the following screen:

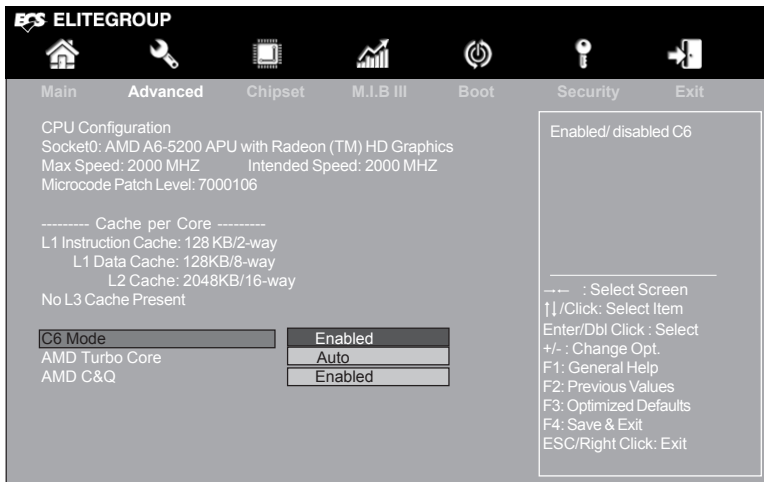

Max Speed (2000 MHz) Intended Speed (2000 MHz)

This item shows the maximum & intended speed of the CPU.

Microcode Patch Level (7000106)

This item shows the Microcode revision.

L1 Instruction Cache (128 KB/2-way)

This item shows CPU L1 Cache.

L1 Data Cache (128KB/8-way)

This item shows CPU L1 Cache.

L2 Cache (2048KB/16-way)

This item shows CPU L2 Cache.

No L3 Cache Present

This item shows CPU L3 Cache.

C6 Mode (Enabled)

This item enables or disables the C6 mode.

AMD Turbo Core (Auto)

This item is used to set the AMD Turbo Core.


AMD C&Q (Enabled)

This item enables or disables the CPU C&Q Function.

Press <Esc> to return to the Advanced Menu page.

» SATA Configuration

Use this item to show the mode of serial SATA configuration options.

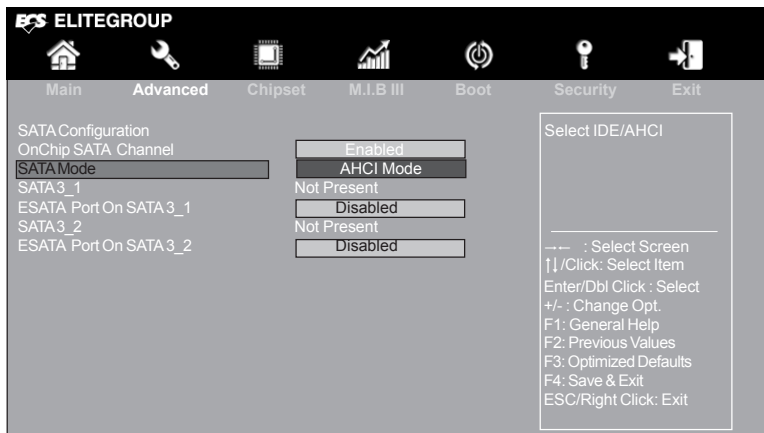

OnChip SATA Channel (Enabled)

Use this item to enable or disable OnChip SATA Channel.

SATA Mode (AHCI Mode)

Use this item to select SATA mode.

SATA3_1/2 (Not Present)

This motherboard supports two SATA channel and each channel allows one SATA device to be installed. Use these items to configure each device on the SATA channel.


ESATA Port On SATA 3_1/SATA 3_2 (Disabled)

Use this item to enable or disable ESATA Port On SATA 3_1/SATA 3_2.

Press <Esc> to return to the Advanced Menu page.

» USB Configuration

Scroll to this item and press <Enter> to view the following screen:

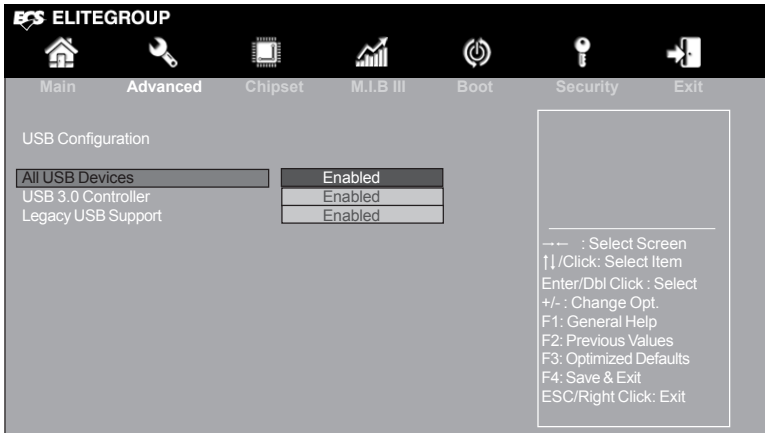

All USB Devices (Enabled)

Use this item to enable or disable all USB devices.

USB 3.0 Controller (Enabled)

Use this item to enable or disable USB 3.0 controller.


Legacy USB Support (Enabled)

Use this item to enable or disable support for legacy USB devices. Setting to Audio allows the system to detect the presence of the USB device at startup. If detected, the USB controller legacy mode is enabled. If no USB device is detected, the legacy USB support is disabled.

Press <Esc> to return to the Advanced Menu page.

» Super IO Configuration

Use this item to show the information of the Super IO Configuration.

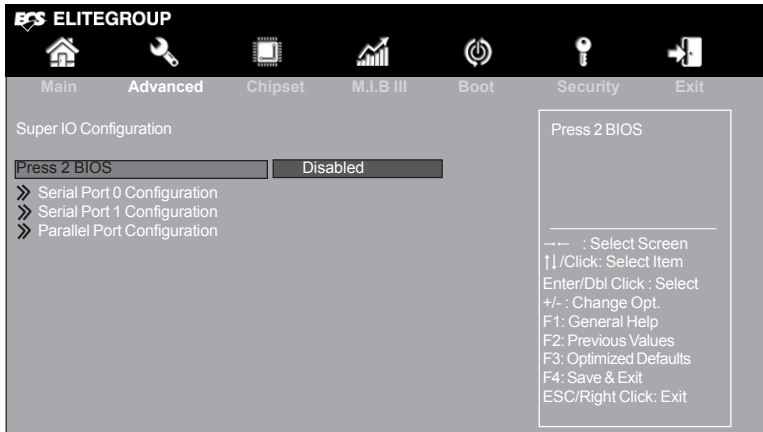


Press 2 BIOS (Disabled)

This item allows you to enable or disable Press 2 BIOS.

» Serial Port 0 Configuration

Scroll to this item and press <Enter> to view the following screen:

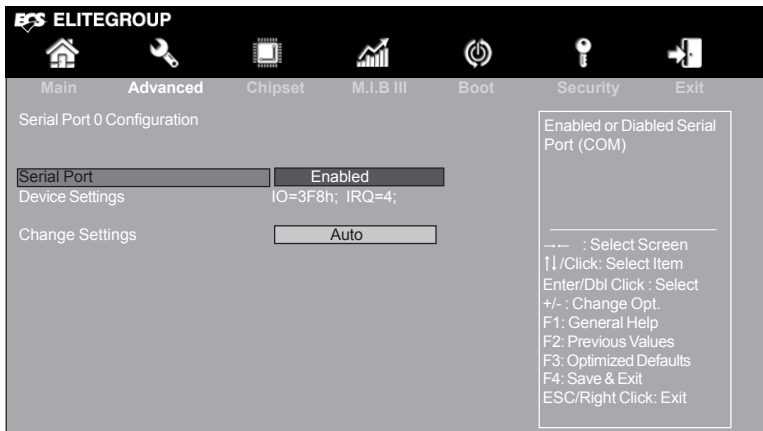

Serial Port (Enabled)

This item allows you to enable or disable serial port.

Device Settings (IO=3F8h; IRQ=4)

This item shows the information of the device settings.


Change Settings (Auto)

Use this item to change device settings.

Press <Esc> to return to the Super IO Configuration page.

» Serial Port 1 Configuration

Scroll to this item and press <Enter> to view the following screen:

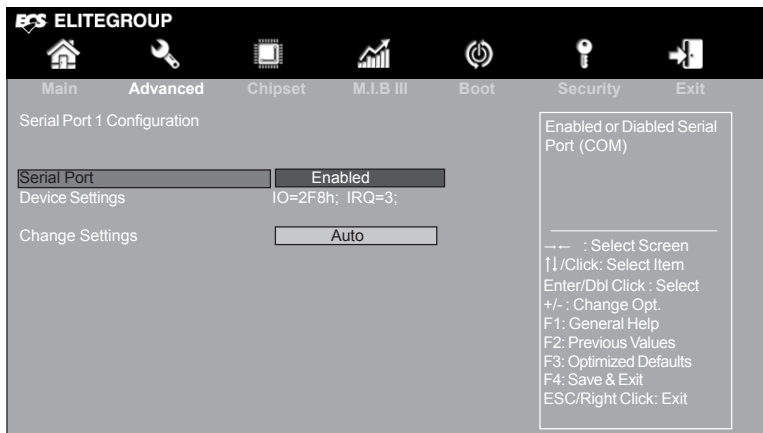

Serial Port (Enabled)

This item allows you to enable or disable serial port.

Device Settings (IO=2F8h; IRQ=3)

This item shows the information of the device settings.


Change Settings (Auto)

Use this item to change device settings.

Press <Esc> to return to the Super IO Configuration page.

» Parallel Port Configuration

Scroll to this item and press <Enter> to view the following screen:

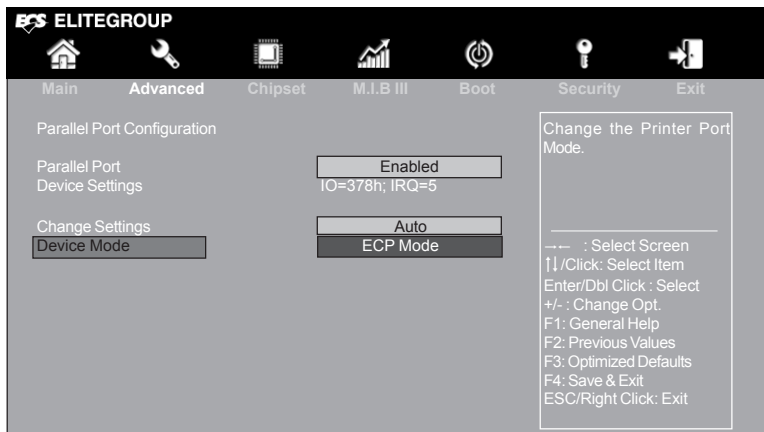

Parallel Port (Enabled)

This item allows you to enable or disable parallel port.

Device Settings (IO=378h; IRQ=5)

This item shows the information of the device settings.

Change Settings (Auto)

Use this item to change device settings.

Device Mode (ECP Mode)


This item shows the information of the device mode.

Press <Esc> to return to the Super IO Configuration page.

Press <Esc> to return to the Advanced Menu page.

» Trusted Computing

Scroll to this item and press <Enter> to view the following screen.

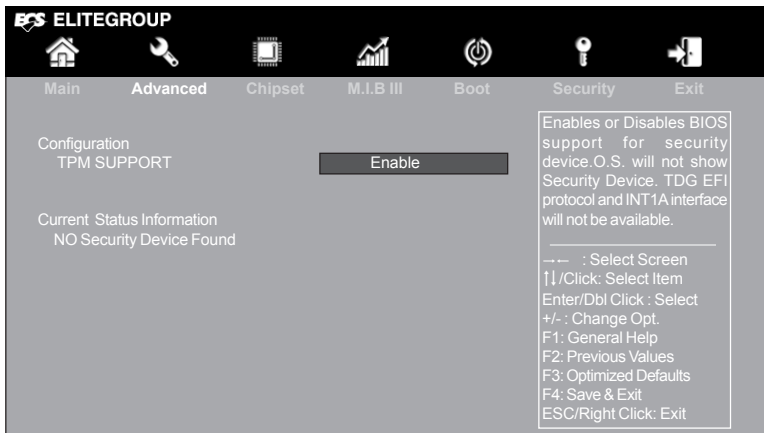

TPM SUPPORT (Enable)

This item enables or disables TPM support.

Current Status Information


This item shows the information of current status.

NO Security Device Found

This item shows no security device.


Chipset Menu

The chipset menu items allow you to change the settings for the North Bridge chipset, South Bridge chipset and other system.

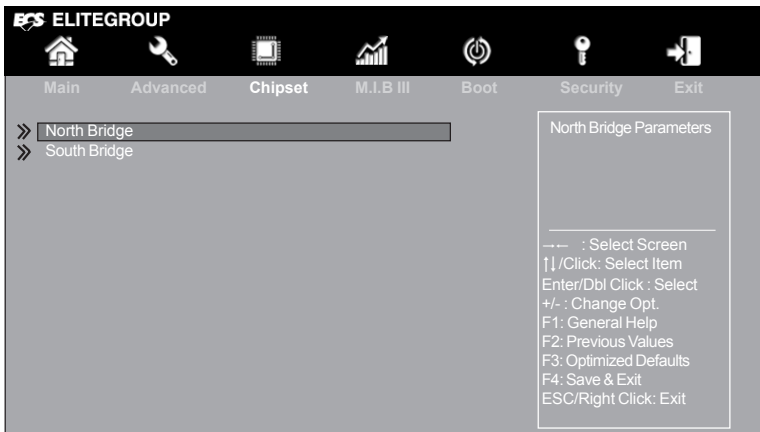

» North Bridge

Scroll to this item and press <Enter> to view the following screen:

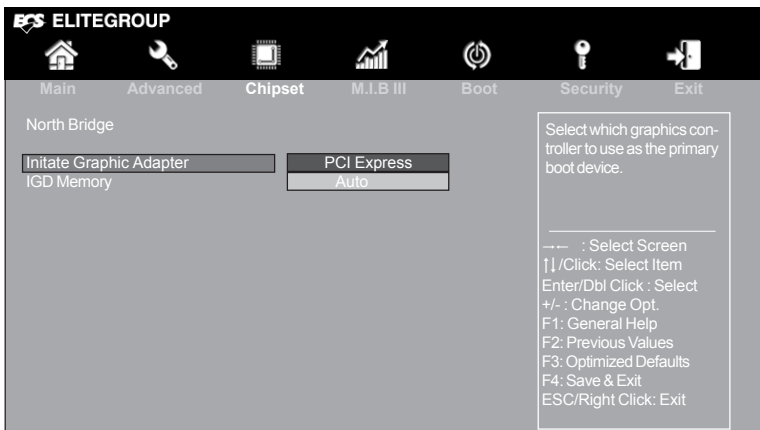

Initiate Graphic Adapter (PCI Express)

This item allows you to select graphics controller to use as the primary boot device.


IGD Memory (Auto)

This item shows the information of the IGD(Internal Graphics device) memory.

Press <Esc> to return to the Chipset Menu page.

» South Bridge

Scroll to this item and press <Enter> to view the following screen:

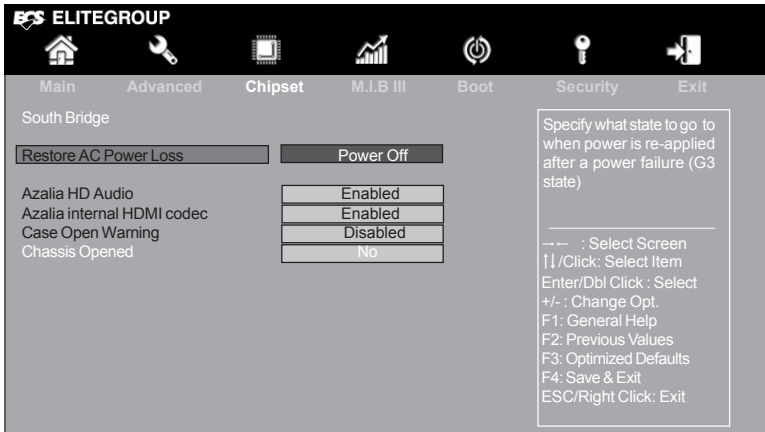

Restore AC Power Loss (Power Off)

This item enables your computer to automatically restart or return to its operating status.

Azalia HD Audio (Enabled)

This item enables or disables Azalia HD audio.

Azalia internal HDMI codec (Enabled)

This item enables or disables Azalia internal HDMI codec.

Case Open Warning (Disabled)

This item enables or disables the warning if the case is opened up, and the item below indicates the current status of the case.


Chassis Opened (No)

This item indicates whether the case has been opened.

Press <Esc> to return to the Chipset Menu page.

M.I.B III (MB Intelligent BIOS III) Menu

This page enables you to set the clock speed and system bus for your system. The clock speed and system bus are determined by the kind of processor you have installed in your system.

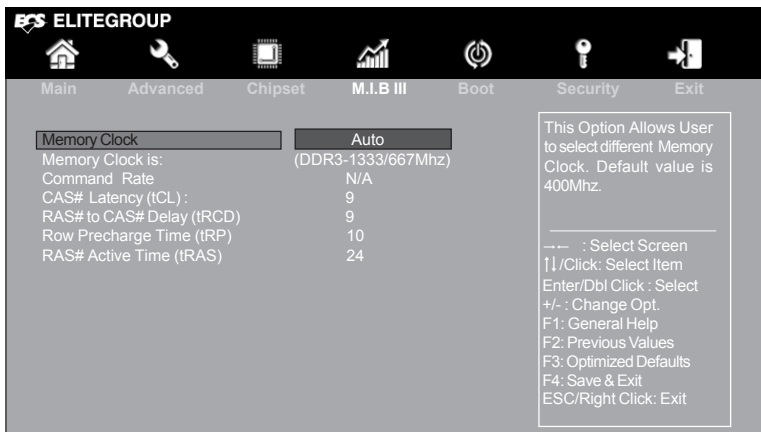

Memory Clock (Auto)

This item is used to set memory clock.

Memory Clock is (DDR3-1333/667Mhz)

This item shows the information of Memory Clock.

CAS Latency (tCL) (9)

This item determines the operation of DDR SDRAM memory CAS (column address strobe). It is recommended that you leave this item at the default value. The 2T setting requires faster memory that specifically supports this mode.

RAS# to CAS# Delay (tRCD) (9)

This item specifies the RAS# to CAS# delay to Rd/Wr command to the same bank.

Row Precharge Time (tRP) (10)


This item specifies Row precharge to Active or Auto-Refresh of the same bank.

RAS# Active Time (tRAS) (24)

This item specifies the RAS# active time.

Boot Menu

This page enables you to set the keyboard NumLock state.

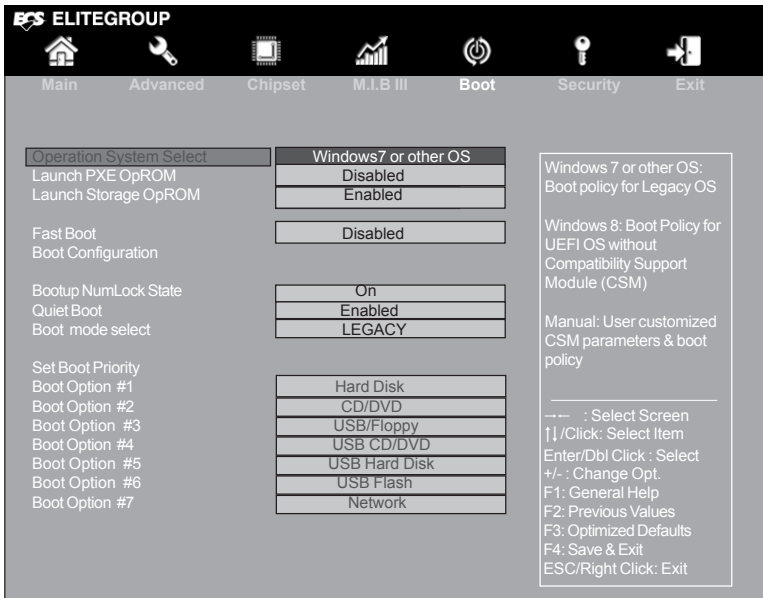

Operation System Select (Windows7 or other OS)

This item is used to select the operation system.

Launch PXE OpROM (Disabled)

The item enables or disables launch PXE Option ROM.

Launch Storage OpROM (Enabled)

The item enables or disables launch Storage Option ROM.

Fast Boot (Disabled)

This item enables or disables fast boot.

Boot Configuration

This item shows the information of the Boot Configuration.

Bootup NumLock State (On)

This item enables you to select NumLock state.

Quiet Boot (Enabled)

This item enables or disables quiet boot.

Boot mode select (LEGACY)

Use this item to select boot mode.

Set Boot Priority


This item enables you to set boot priority for all boot devices.

Boot Option #1/2/3/4/5/6/7

These items show the boot priorities.

Security Menu

This page enables you to set setup administrator password and user password.

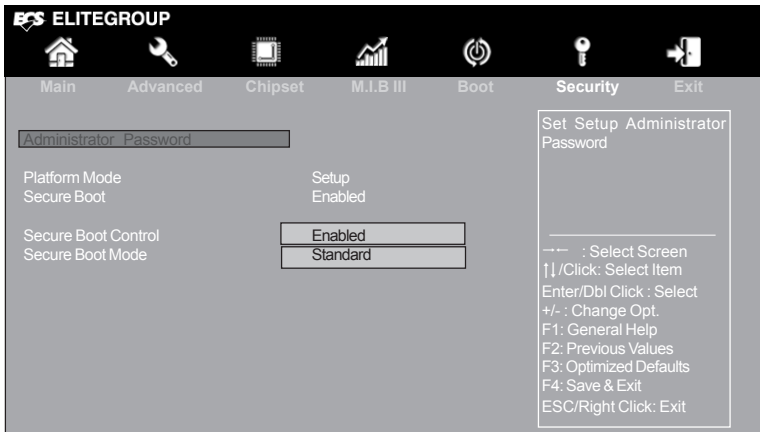

Platform Mode (Setup)

This item shows platform mode setup or not.

Secure Boot (Enabled)

This item allows you to enable or disable the secure boot state.

Secure Boot Control (Enabled)

This item is used to control the secure boot flow, it is possible only if system runs in User Mode.

Secure Boot Mode (Standard)

This item is used to select secure boot mode, when you select standard mode, secure boot policy is fixed; when you select custom mode, the image execution policy and secure boot key databases are changeable.

Exit Menu

This page enables you to exit system setup after saving or without saving the changes.



Back to EZ Mode

This item enables you to back to EZ mode.

Save Changes and Exit

This item enables you to exit system setup after saving the changes.

Discard Changes and Exit

This item enables you to exit system setup without saving any changes.

Save Changes and Reset

This item enables you to reset the system setup after saving the changes.

Discard Changes and Reset

This item enables you to reset system setup without saving any changes.

Save Options

This item enables you to save the options that you have made.

Save Changes

This item enables you to save the changes that you have made.

Discard Changes

This item enables you to discard any changes that you have made.

Restore Defaults

This item enables you to restore the system defaults.

Boot Override

Use this item to select the boot device.

Updating the BIOS

You can download and install updated BIOS for this motherboard from the manufacturer's Web site. New BIOS provides support for new peripherals, improvements in performance, or fixes for known bugs. Install new BIOS as follows:

- 1 If your motherboard has a BIOS protection jumper, change the setting to allow BIOS flashing.
- 2 If your motherboard has an item called Firmware Write Protect in Advanced BIOS features, disable it. (Firmware Write Protect prevents BIOS from being overwritten.)
- 3 Prepare a bootable device or create a bootable system disk. (Refer to Windows online help for information on creating a bootable system disk.)
- 4 Download the Flash Utility and new BIOS file from the manufacturer's Web site. Copy these files to the bootable device.
- 5 Turn off your computer and insert the bootable device in your computer. (You might need to run the Setup Utility and change the boot priority items on the Advanced BIOS Features Setup page, to force your computer to boot from the bootable device first.)
- 6 At the C:\ or A:\ prompt, type the Flash Utility program name and the file name of the new BIOS and then press <Enter>. Example: AFUDOS.EXE 040706.ROM
- 7 When the installation is complete, remove the bootable device from the computer and restart your computer. If your motherboard has a Flash BIOS jumper, reset the jumper to protect the newly installed BIOS from being overwritten. The computer will restart automatically.

This concludes Chapter 3. Refer to the next chapter for information on the software supplied with the motherboard.

Chapter 4

Using the Motherboard Software

Auto-installing under Windows XP/7/8

The auto-install DVD-ROM makes it easy for you to install the drivers and software. The support software DVD-ROM disc loads automatically under Windows XP/7/8. When you insert the DVD-ROM disc in the DVD-ROM drive, the auto-run feature will automatically bring up the installation screen. The screen has four buttons on it: **Setup**, **Utilities**, **Browse CD** and **Exit**.



Information:

Displays the path for all software and drivers available on the disk.

Click “**Exit**” button to close the Auto-Setup window.

Browse CD:

Open Windows Explorer and show the contents of the support disk.


Click the “**Setup**” button to select and run the software installation program.

Click the “**Utilities**” button to select and install ECS Intelligent Utility.

Running Setup

Follow these instructions to install device drivers and software for the motherboard:


1. Click **Setup**. The installation program begins:

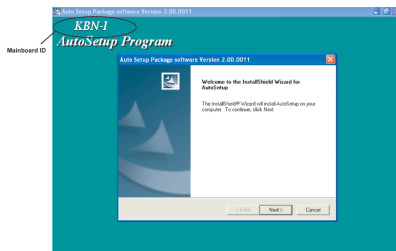


The following screens are examples only. The screens and driver lists will be different according to the motherboard you are installing.

The motherboard identification is located in the upper left-hand corner.

2. Click **Next**. The following screen appears:

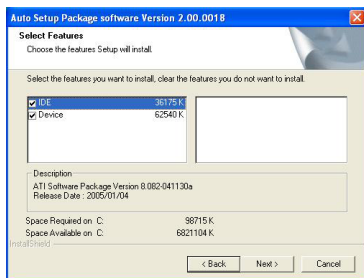

3. Check the box next to the items you want to install. The default options are recommended.
4. Click **Next** to run the Installation Wizard. An item installation screen appears:

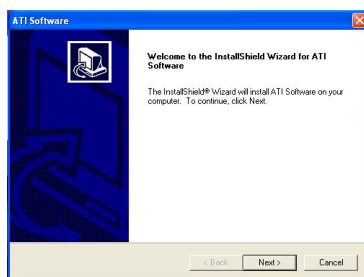

5. Follow the instructions on the screen to install the items.




Drivers and software are automatically installed in sequence. Follow the onscreen instructions, confirm commands and allow the computer to re-start a few times to complete the installation.

Windows 8 will show the following screen after system restart, you must select "Desktop" in the bottom left to install the next driver.



Windows 7/8 will appear below UAC (User Account Control) message after the system restart. You must select “Yes” to install the next driver. Continue this process to complete the drivers installation.

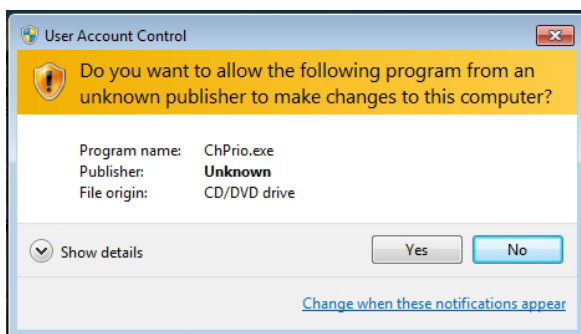

Manual Installation

If the auto-install DVD-ROM does not work on your system, you can still install drivers through the file manager for your OS (for example, Windows Explorer). Look for the chipset and motherboard model, and then browse to the directory and path to begin installing the drivers. Most drivers have a setup program (SETUP.EXE) that automatically detects your operating system before installation. Other drivers have the setup program located in the operating system subfolder.

If the driver you want to install does not have a setup program, browse to the operating system subfolder and locate the readme text file (README.TXT or README.DOC) for information on installing the driver or software for your operating system.

ECS Utility Software (Intelligent EZ Utility)

ECS Intelligent EZ Utility provides friendly interfaces under Windows O.S, which makes your computing more easily and conveniently.




These software(s) are subject to change at anytime without prior notice. Please refer to the support disk for available software.

eSF

eSF(Smart Fan) utility provides easy and safe way to adjust fan speed in accordance with your PC's system loading and temperature.


It has five modes to adjust fan speed in a safe range without entering the BIOS to optimize your system cooling environment.

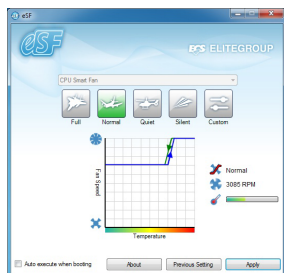

Microsoft .NET Framework 3.5 is required.


eDLU

ECS eDLU utility makes updating drivers fast and easy. eDLU saves time and hassle by listing all the latest drivers online. Just select the one you prefer and start to download and install the drivers.

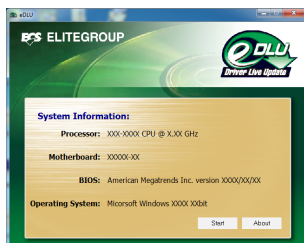

eBLU

ECS eBLU utility makes BIOS update faster and easier. eBLU will list the latest BIOS with a default check-mark. Click "install" button to install.

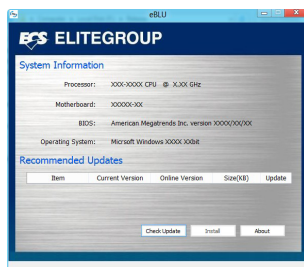

Microsoft .NET Framework 3.5 is required.

Chapter 5

Trouble Shooting

Start up problems during assembly

After assembling the PC for the first time you may experience some start up problems. Before calling for technical support or returning for warranty, this chapter may help to address some of the common questions using some basic troubleshooting tips. You may also log onto our ECS website for more information: http://www.ecs.com.tw/ECSWebSite/Support/Support_FAQ.aspx?MenuID=49&childid=M_49&LanID=0

a) System does not power up and the fans are not running.

1. Disassemble the PC to remove the VGA adaptor card, DDR memory, LAN, USB and other peripherals including keyboard and mouse. Leave only the motherboard, CPU with CPU cooler and power supply connected. Make sure the power cord is plugged into the wall socket & the switch on the Power Supply Unit (PSU) is turned " on " as well. Turn on again to see if the CPU and power supply fans are running.
2. Make sure to remove any unused screws or other metal objects such as screwdrivers from the inside PC case. This is to prevent damage from short circuit.
3. Check the CPU FAN connector is connected to the motherboard.
4. Check the 12V power connector is connected to the motherboard.
5. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.

b) Power is on, fans are running but there is no display

1. Make sure the monitor is turned on and the monitor cable is properly connected to the PC.
2. Check the VGA adapter card (if applicable) is inserted properly.
3. Listen for beep sounds. If you are using internal PC speaker make sure it is connected.
 - a. continuous 3 short beeps: memory not detected
 - b. 1 long beep and 8 short beeps: VGA not detected

c) The PC suddenly shuts down while booting up.

1. The CPU may experience overheating so it will shutdown to protect itself. Apply the thermal grease onto the CPU heatsink & ensure the CPU fan is well-connected with the CPU heatsink. Check if the CPU fan is working properly while the system is running.

2. From the BIOS setting, try to disable the Smartfan function to let the fan run at default speed. Doing a Load Optimised Default will also disable the Smartfan.

Start up problems after prolong use

After a prolong period of use your PC may experience start up problems again. This may be caused by breakdown of devices connected to the motherboard such as HDD, CPU fan, etc. The following tips may help to revive the PC or identify the cause of failure.

1. Clear the CMOS values using the CLR_CMOS jumper. Refer to CLR_CMOS jumper in Chapter 2 for Checking Jumper Settings in this user manual. When completed, follow up with a Load Optimised Default in the BIOS setup.
2. Check the CPU cooler fan for dust. Long term accumulation of dust will reduce its effectiveness to cool the processor. Clean the cooler or replace a new one if necessary.
3. Check that the 12V power & ATX connectors are fully inserted into the motherboard connectors. Make sure the latches of the cable and connector are locked into place.
4. Remove the hard drive, optical drive or DDR memory to determine which of these components may be at fault.
5. Check whether there is any bulked up electrolytic capacitor or abnormal component.


Please logo onto our ECS website: http://www.ecs.com.tw/ECSWebSite/Support/Technical_Support_List.aspx?MenuID=50&LanID=0 for more information.

Maintenance and care tips

Your computer, like any electrical appliance, requires proper care and maintenance. Here are some basic PC care tips to help prolong the life of the motherboard and keep it running as best as it can.

1. Keep your computer in a well ventilated area. Leave some space between the PC and the wall for sufficient airflow.
2. Keep your computer in a cool dry place. Avoid dusty areas, direct sunlight and areas of high moisture content.
3. Routinely clean the CPU cooler fan to remove dust and hair.
4. In places of hot and humid weather you should turn on your computer once every other week to circulate the air and prevent damage from humidity.
5. Add more memory to your computer if possible. This not only speeds up the system but also reduces the loading of your hard drive to prolong its life span.
6. If possible, ensure the power cord has an earth ground pin directly from the wall outlet. This will reduce voltage fluctuation that may damage sensitive devices.

Basic Troubleshooting Flowchart

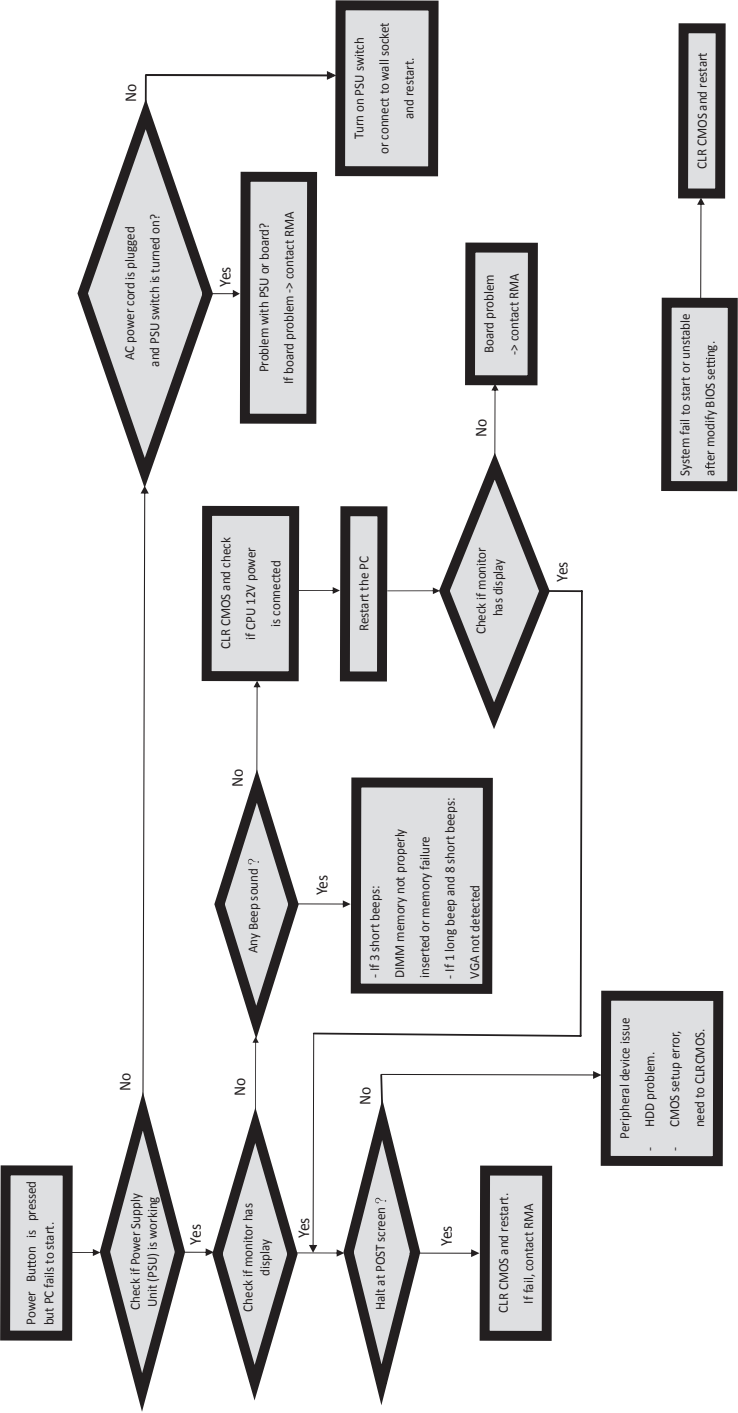

Memo