

## DC166 Firmware Upgrade Instruction

### 1. Save firmware file to SD-Card or internal memory. (Please select one.)

#### 1.1 Upgrade firmware from SD-Card.

Save firmware file (\*.bin ) to SD-Card, then insert SD-Card into card-socket.

#### 1.2 Upgrade firmware from internal memory.

Save firmware file (\*.bin ) to internal memory via USB cable.


### 2. Go to service menu to upgrade firmware.

Power on your unit. Press “FREEZE”, “DELETE” then “SOURCE” in sequence on the keypad (Pic 1).

You will see Service menu shown on the screen. Then select ISP - Firmware Upgrade mode.(Pic 2)



Pic 1

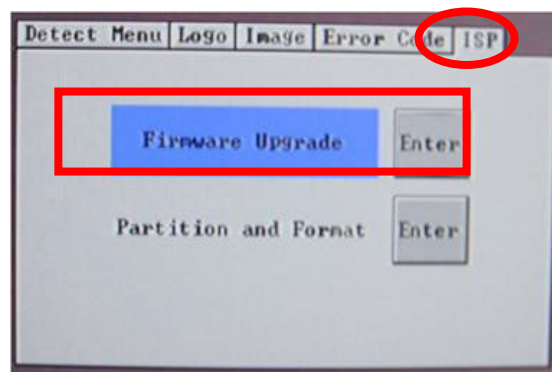

Pic 2

### 3. Choose Firmware version

If you save the firmware file properly, the unit will detect new firmware version automatically. Then select “Yes” button to upgrade firmware. (Pic 3)


Notes : If two more firmware files coexist in the SD card / internal memory, the unit always detects the latest version.



Pic 3


#### 4. Restart unit when firmware upgrade finished

After firmware upgrade is success, your will see below window and please restart your unit. (Pic 4)

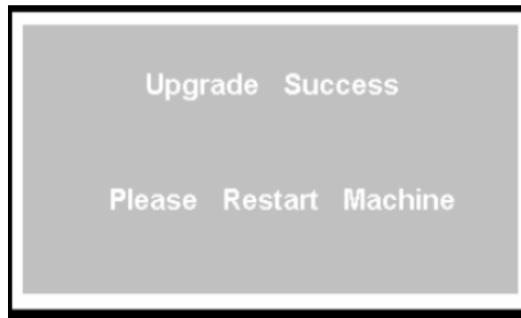

#### 5. Check firmware version

Go to OSD menu to check the firmware version. (Pic 5)

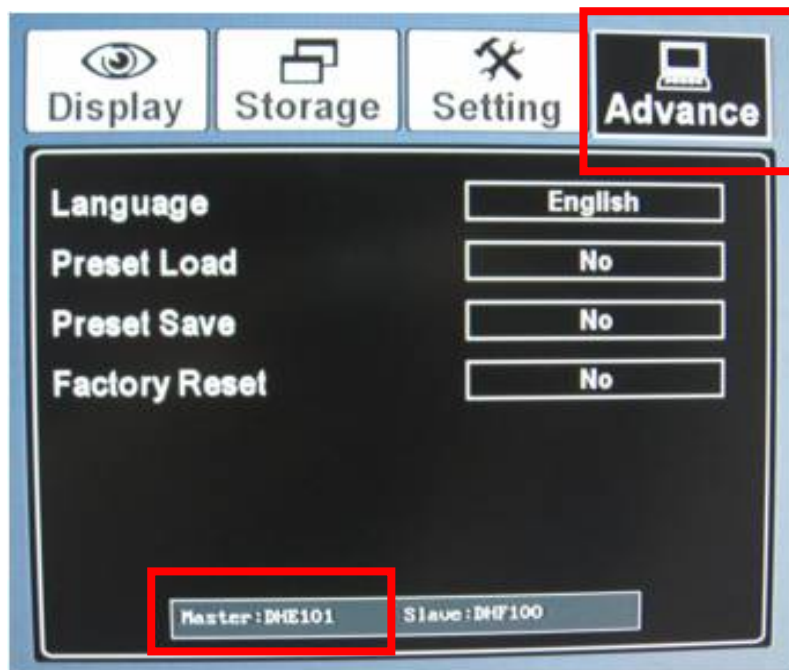

Pic 5