DC260 Firmware Upgrade Instruction

1. Save firmware file to <u>SD-Card</u> or <u>DC260 internal memory.</u> (Please select one.)

1.1 If want to upgrade firmware from SD-Card.

Save firmware file (*.bin) to SD-Card, then insert SD-Card into card-socket of DC260.

1.2 If want to upgrade firmware from DC260 built-in memory.

Save firmware file (*.bin) to DC260 internal memory via USB cable.

2. Go to service menu to upgrade firmware.

Power on your DC260. Press "**DELETE**" then "**ZOOM**+" in sequence on the keypad (Pic 1). You will see Service menu shown on the screen. Then select ISP - Firmware Upgrade mode.(Pic 2)



Logo Error Cade ISP	_	
Firnware Upgrade	Enter	
Partation and Formate	Enter	
		Pic

3. Choose Firmware version

If you save the firmware file properly, DC260 will detect new firmware version automatically. Then select "Yes" button to upgrade firmware. (Pic 3)

Notes : If two more firmware files coexist in the SD card / internal memory, DC260 always detect the latest version.



4. Restart unit when firmware upgrade finished

After firmware upgrade is success, your will see below window and please restart your DC260. (Pic 4)

Upgrade Success	
Please Restart Machine	
	Pic 4

5. Check firmware version

Go to OSD menu to check the firmware version. (Pic 5)

Display St	orage	s	Setting	Advance	
Language			Eng	glish	
Output Mode	€		X	GA	
Lock Down			()ff	
Auto Erase			C)ff	
Preset Load			1	10	
Preset Save	•		1	10	
Factory Res	et			10	
Master:DT	A129	2	Slave:DTI	8110	Pic