Firmware Upgrade Instruction

1. Save firmware file to <u>SD-Card</u> or <u>internal memory.</u> (Please select one.)

1.1 If want to upgrade firmware from SD-Card.

Save firmware file (*.bin) to **<u>SD-Card</u>**, then insert SD-Card into card-socket.

1.2 If want to upgrade firmware from built-in memory.

Save firmware file (*.bin) to internal memory via USB cable.

2. Go to service menu to upgrade firmware.

Power on your unit. Press **"DELETE**" then **"ZOOM**+" in sequence on the keypad (Pic 1). You will see Service menu shown on the screen. Then select ISP - Firmware Upgrade mode.(Pic 2)



Logo Error Cede ISP	
Firmware Upgrade	Enter
Partation and Formate	Enter

Pic 2

3. Choose Firmware version

If you save the firmware file properly, the unit will detect new firmware version automatically. Then select "Yes" button to upgrade firmware. (Pic 3 taking DC260 as example)

Notes : If two more firmware files coexist in the SD card / internal memory, the unit always detects the latest version.



4. Restart unit when firmware upgrade finished

After firmware upgrade is success, your will see below window and please restart your unit. (Pic 4)

Upgrade Success	
Please Restart Machine	Pic 4
	PIC 4

1.5 Check firmware version

Go to OSD menu to check the firmware version. (Pic 5)

Display	Storage	s	Setting	Advance	l
Languag	e		Eng	glish	J
Output Mode			XGA		
Lock Do	wn)ff	
Auto Era	ise		(Off	
Preset Load			No		
Preset S	Save		1	lo	
Factory	Reset		1	10	
Maste	er:DTA129		Slave:DTI	B110	Pi