



OPERATORS MANUAL

&

WARRANTY FORM

Gavhall Pty Ltd, trading as KANGA FARM EQUIPMENT, would like to thank you for choosing one of our implements. Kanga Farm Equipment has manufactured three point linkage implements to handle the harsh Australian Conditions, since 1982.

All new Kanga Farm Equipment Implements are backed with a 12 month comprehensive warranty, against faulty workmanship and/or materials, under normal working conditions and service, as outline in this manual. Your warranty maybe considered void if any damaged to the implement is caused by operator abuse, neglect, or if any unauthorized modifications have been made.

Kanga Farm Equipment and its Distributors/Dealers are not responsible for any transportation cost incurred in the repair or replacement of parts in either a successful or non-successful warranty claim. All implements must be returned to the manufacture for warranty assessment.

This warranty does not exclude any conditions implied by the Trade Practices Act 1974, or any other relevant legislation.

*The information contained in this manual was current at the time of printing and has been compiled especially to assist you with the Implement that you have purchased. It is of the utmost importance that you read this manual, understand the context and **carry out a risk assessment** before operating the implement.*

Please be aware that in an effort to bring you better products we are always implementing continuous improvements that may change the designs and specifications of the Implement. In doing this, Kanga Farm Equipment together with its Dealers and Distributors are under no obligation to implement these changes, free of charge, on any previously delivered Implement

TO THE DEALER

Assembly and proper installation of this product is the responsibility of the KANGA FARM EQUIPMENT dealer. The dealer must complete all items on the Warranty Registration & Installation Form included in this manual before releasing the implement to the new owner.

Both dealer and customer must sign the registration, which certifies that all Dealer Checklist items have been completed. The dealer must return a copy of the Warranty Registration & Installation Form to Kanga Farm Equipment. Reminders about Warranty Registration that have not been returned will be sent out to demonstrate that reasonable attempts have been made to ensure dealers complete risk assessment and pre-delivery obligations.

TO THE OWNER

Read this manual before operating your KANGA FARM EQUIPMENT implement. The information presented will prepare you to do a much better and safer job. Keep this manual handy as a reference. Ensure you carry out and keep up to date a Risk Assessment and that all operators read the manual carefully and become acquainted with the adjustments and operating procedures before attempting to operate. Keep a record of the risk assessment and that the operator has read and understands the correct operating procedures as outlined in this manual.

The implement you have purchased has been carefully engineered and manufactured to provide dependable and satisfactory use. Like all mechanical products, it will require routine cleaning, upkeep and maintenance. Lubricate the implement as specified. Observe all safety information in this manual and safety decals on the implement.

Throughout this manual the term **IMPORTANT** is used to indicate that a failure to observe can cause damage to the equipment. The terms **CAUTION**, **WARNING** and **DANGER** are used in conjunction with the Safety-Alert Symbol (triangle with an exclamation mark) to indicate the degree of risk to your personal safety.



This Safety-Alert Symbol indicates a hazard and means ATTENTION! BE CAREFUL! YOUR SAFETY IS INVOLVED!



DANGER indicates an imminently hazardous situation, which if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

GENERAL INFORMATION

The purpose of this manual is to assist you in operating and maintaining your KANGA implement. Read it carefully. It provides information and instructions that will help you achieve years of dependable performance. These instructions have been compiled from extensive field experience and engineering data. Some information may be general in nature due to the unknown and varying operating conditions. However, through experience and these instructions, you should be able to develop procedures suitable to your particular situation.

The illustrations and data used in this manual were current at the time of printing, but in an effort to bring you better products we are always implementing continuous improvements that may vary your implement slightly in detail. We reserve the right to redesign and change the machine as may be necessary without notice.



Some illustrations in this manual show the Digger with Safety Shields removed to provide a better view. The Slasher should never be operated with any safety shielding removed.

Throughout this manual, references are made to right and left direction. These are determined by standing behind the equipment facing the direction of forward travel. Blade rotation is as if viewed from the top.

TABLE OF CONTENTS

Introduction	Front & 2
General Information	2
Post Hole Diggers	5
Specifications	6 - 7
Safety Rules	8 - 9
Safety Decals	10
Operation	11 - 14
Operating Technique	12 - 14
Daily Operators Checklist	15
Owner Servicing	15 - 17
Replacing Teeth & Pilot	17
Trouble Shooting	17 - 18
Assembly Instructions	18 - 20
Power Take Off Shaft (PTO)	21 - 23
Clutch	24
Gearbox Information	25 - 26
OH & S Compliance Certification	27
Box Scrapers	28
Specifications	29
Safety Rules	30 - 31
Safety Decals	31
Operation	32 - 33
Daily Operators Checklist	34
Maintenance	34
Assembly Instructions	35
OH & S Compliance Certification	36
Carryalls, Jib Crane and Bale Handling Equipment	37
Specifications	38 - 39
Safety Decals	39
Safety Rules	40 - 41
Operation	42 - 44
Maintenance	44
Assembly Instructions	45
Daily Operators Checklist	45
OH & S Compliance Certification	46
Cultivators (Eurotiller / "S" Tine / Chisel Plough)	47
Specifications	48
Safety Rules	49 - 50
Safety Decals	51
Operation	52 - 53
Daily Operators Checklist	53
Maintenance	54
Assembly Instructions	54
OH & S Compliance Certification	55

Pallet Forks	56
Specifications	57
Safety Rules	58 - 59
Safety Decals	60
Operation	60 - 62
Daily Operators Checklist	62
Maintenance	63
Assembly Instructions	63
OH & S Compliance Certification	64
Rippers	65
Specifications	66 - 67
Safety Rules	68 - 69
Safety Decals	70
Operation	71 - 72
Daily Operators Checklist	72
Maintenance	73
Assembly Instructions	74
OH & S Compliance Certification	75
Stick Rakes	76
Specifications	77
Safety Decals	77
Safety Rules	78 - 79
Operation	80 - 81
Daily Operators Checklist	81
Maintenance	82
Assembly Instructions	82
OH & S Compliance Certification	83
Harrows	84
Specifications	85
Safety Decals	85
Safety Rules	86 - 87
Operation	88 - 89
Daily Operators Checklist	90
Maintenance	90
Assembly Instructions	90
OH & S Compliance Certification	91
Dealer' Pre-Delivery Checklist	92
Warranty Registration and Installation Form	93




PALLET FORKS

500kg
1000kg

SPECIFICATIONS


500kg Pallet Fork

3 – Point Linkage	Category 1
3 – Point Linkage Type	Double Clevis
Frame Reinforcing	RHS/Channel
Fork Width	1020mm
Fork Material	100 x 50 RHS
Max Capacity	500 kg
Load Rating	5 times max capacity
Approximate Weight	80 kg

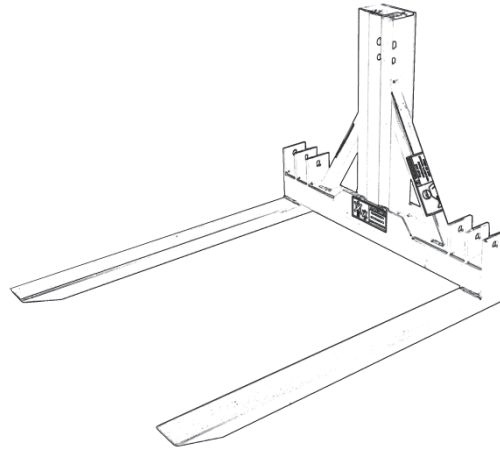

1000kg Pallet Fork

3 – Point Linkage	Category 1 & 2
3 – Point Linkage Type	Double Clevis
Frame Reinforcing	RHS/Flat
Fork Width	990mm
Fork Material	100 x 50 RHS
Max Capacity	1000 kg
Load Rating	5 times max capacity
Approximate Weight	100 kg

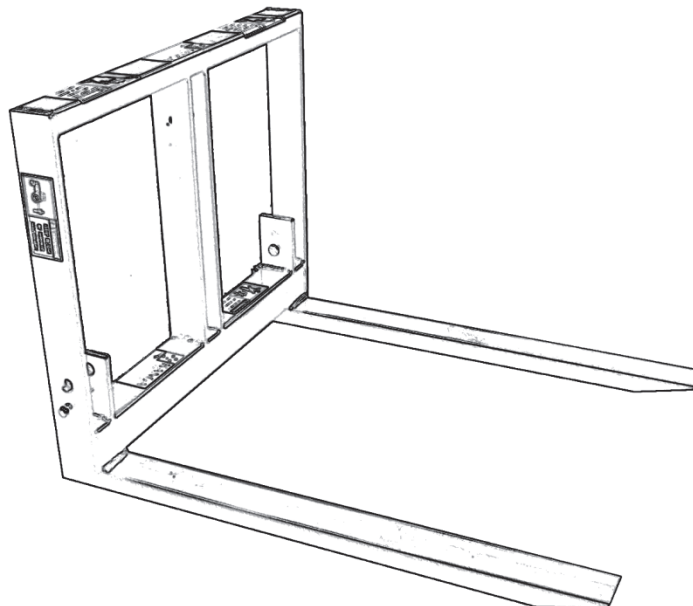

SAFETY RULES & ACCIDENT PREVENTION



ATTENTION! BE CAREFUL! YOUR SAFETY IS INVOLVED!



Safety is a primary concern in the design and manufacture of our products. Unfortunately, our efforts to provide safe equipment can be wiped out by a single careless act of an operator.

In addition to the design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of equipment.

It has been said, *“The best safety device is an informed careful operator.”* We ask you to be that kind of operator.

- Customers **MUST** carry their own Risk Assessment and/or “HazCheck” on every implement on their property.
- Safety instructions are important! Read all attachments and unit manuals; follow all safety rules and safety decal information. Failure to follow instructions can result in serious injury or death.
- If you do not understand any part of this manual and need assistance the Department of Agriculture, Occupational Health & Safety Offices, any Agricultural School or college and your local dealer should be able to direct you on where you can receive appropriate training. No operator however experienced in farm machinery operation they maybe, should attempt to use any piece of machinery that they have not been competently trained to use.
- Never lift a load greater than the rated capacity of the implement.
- Never walk or work under a raised implement, loaded or unloaded.
- Keep hands and body away from pressurized lines. Use paper or cardboard, not hands or other body parts to check for leaks. Wear safety goggles. Hydraulic fluid (oil) under pressure can easily penetrate the skin and will cause serious injury or death.
- Make sure that all operating and service personnel know that if hydraulic fluid (oil) penetrates the skin, it must be surgically removed as soon as possible by a doctor familiar with this form of injury or gangrene, serious injury or death will result. **CONTACT A PHYSICIAN IMMEDIATELY IF FLUID ENTERS SKIN OR EYES. DO NOT DELAY.**
- Know your controls and how to stop quickly in an emergency.
- Operators must be instructed in and be capable of the safe operation of the equipment and all controls. Do not allow anyone to operate this equipment without proper instruction.
- Do not allow children or untrained persons to operate equipment.
- Check that all hardware is tight and properly installed.
- Always wear relatively tight fitted clothing to avoid entanglement in moving parts. Wear heavy-duty, rough-soled boots and protective equipment for eyes, hair, hands, hearing and head.
- Ensure implement is properly attached, adjusted and in a good condition so that it can be operated safely.
- Tractors **MUST** be fitted with Roll Over Protection Structure (ROBS) or ROBS Cap. It is also advisable that your tractor be fitted with a seatbelt, where fitted it must be worn at all times. Falling from your tractor can result in death from being run over or crushed. If your tractor is fitted with a folding ROBS, keep it in the “locked up” position at all times.
- Inspect chains, shackles, deflectors and any wear parts for damage. Replace if damaged.
- Remove any debris that has accumulated on the implement, tractor or engine to avoid fire hazard.
- Ensure all safety decals are installed. Replace if damaged.
- A minimum 20% of tractor and equipment weight must be on the tractor’s front wheels with implement in the transport position. Without this weight, tractor could tip over causing personal injury or death. The weight maybe attained with a loader, front wheel weights, and ballast in the tires or front tractor weights. When attaining the minimum 20% weight on the front wheels, you must not exceed the ROPS max ballasted mass certificate. Weight the tractor and implement. Do not estimate.
- Watch for hidden hazards on the terrain during operation and avoid any hazards or object that could cause injury or damage.

- Inspect operating area, remove where possible any stones, branches or foreign objects that may cause injury or damage. It is very important to always watch for foreign objects in the area you are operating and avoid any that could cause injury or damage.
- When working in populated areas always place signs in the area to alert people or vehicles that may pass. Operation must be stopped when anyone comes within 50 meters.
- Keep all people and animals away from the implement during start up, operating and when stopping.
- Do not operate the implement or tractor while under the influence of drugs or alcohol.
- Operate only in daylight or good artificial light.
- Keep hands, feet, hair, and clothing away from moving parts while engine is running.
- Do not carry persons and make sure all loads are secured to the Implement during work or while in transit.
- For transportation on public roads the operator must ensure that the tractor and implement complies with current State and Federal laws and must strictly adhere to all road traffic regulations in force in his/her particular state.
- Always operate equipment from the seat of the tractor with the seat belt securely fastened especially when operating controls or starting engine. Place transmission in neutral, engage break and ensure all other controls are disengaged before starting tractor engine.
- Look down and to the rear and make sure area is clear and safe before operating in reverse.
- Do not operate on steep slopes. If in doubt set rear axles wider for moderate slopes.
- Do not stop, start or change directions suddenly on slopes', working up and down is preferred.
- Use extreme care and reduce ground speed on slopes and rough terrain.
- Stop implement, then tractor, immediately upon striking an obstruction. Turn off engine, remove key, inspect and repair any damage before resuming operations. Always block implement when inspecting.
- Before commencing any adjustment, maintenance, or cleaning. Always switch off the tractor engine, remove key and wait until all moving parts have come to a complete stop, then ensure the machine is on the ground or on a robust secure support.
- Before dismounting tractor or performing any service or maintenance lower the 3-point linkage and any other raised components (i.e. loader bucket) to the ground. Operate valve levers to release any hydraulic pressure, stop engine, set parking brake, remove key and unfasten seat belt.
- Never place any part of the body underneath the implement or between moveable parts even when engine has been turned off. Hydraulic systems can "creep" (i.e. slowly lower). They may fail or movement of the control levers can cause the implement to drop or rotate unexpectedly causing severe injury or death. Follow Operator's Manual instructions for working on your implement or have servicing carried out by a qualified dealer.
- During routine checks and/or repairs ensure that no one can switch on the tractor or Implement accidentally. Keep the key to the tractor in your pocket.
- For your own safety and that of others and to avoid forfeiting your warranty, use only original spare parts.
- Do not modify/alter or permit anyone else to modify/alter the implement or any of its components.
- Ensure implement is properly attached, adjusted and in good operating condition.
- Always use genuine Kanga replacement parts.
- Firmly tighten all nuts, bolts, screws and shackles before operating. If worn or damaged then replace immediately.
- Block implements securely for storage.
- Keep children and bystanders away from storage area.
- Kanga Farm Equipment accepts no responsibility or liability for any losses, injuries or damages that may result from failing to observe these safety rules and the safety decals on the implement.


SAFETY RULES & ACCIDENT PREVENTION



ATTENTION! BE CAREFUL! YOUR SAFETY IS INVOLVED!



Replace Immediately if Damaged

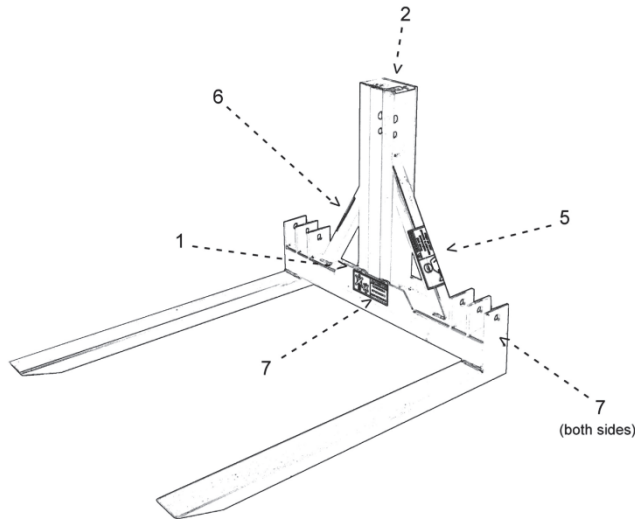

1 – Serial Number Plate

2 – Kanga Logo




5 – Safety Decal K0002



6 – Safety Decal K0003



7 – Safety Decal K0004

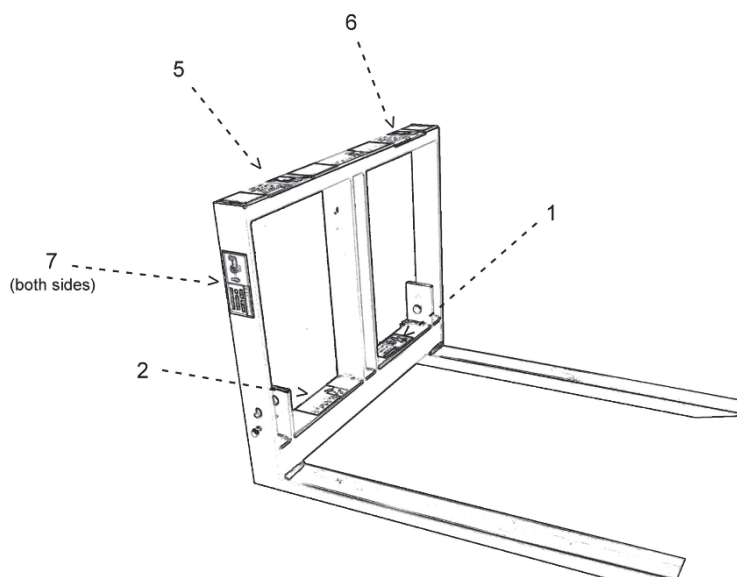

OPERATION

Safety is a primary concern in the design and manufacture of our products. Unfortunately, our efforts to provide safe equipment can be wiped out by a single careless act of an operator.

In addition to the design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of equipment.

It has been said, *“The best safety device is an informed careful operator.”* We ask you to be that kind of operator.

The operator is responsible for the safe operation of this implement. The Operator must be properly trained. Operators should be familiar with the implement and tractor and all safety practices before starting operation. Read the safety rules and safety decal information on pages 58, 59 & 60.

WARNING

- **Keep all people and animals away from the implement during start up, operating and when stopping.**
- **Keep all persons away from the operator control area when performing adjustments, service or maintenance.**
- **Never place any part of the body underneath the implement or between moveable parts even when engine has been turned off. Hydraulic systems can “creep” (i.e. slowly lower). They can fail or movement of the control levers can cause the implement to drop or rotate unexpectedly causing severe injury or death. Follow Operator’s Manual instructions for working on your implement or have servicing carried out by a qualified dealer.**
- **Keep all persons away from operators control area while performing adjustments, service or maintenance.**
- **Service work does not require going underneath this implement. Read Operators Manual for service instructions or have work carried out by a qualified dealer.**
- **No passengers on this equipment.**

DANGER

- **When operating along roads, pathways or highly populated areas always place signs in the area to alert people or vehicles that may be passing. Operation must be stopped when anyone comes within 50 meters.**

CAUTION

- **Stop implement, then tractor, immediately upon striking an obstruction. Turn off engine, remove key, inspect and repair any damage before resuming operations.**
- **Always wear relatively tight fitted clothing to avoid entanglement in moving parts. Wear heavy-duty, rough-soled boots and protective equipment for eyes, hair, hands, hearing and head.**
- **A minimum 20% of tractor and equipment weight must be on the tractor’s front wheels with implement in transport position. Without this weight, tractor could tip over causing personal injury or death. The weight maybe attained with a loader, front wheel weights, and ballast in the tires or front tractor weights. When attaining the minimum 20% weight on the front wheels, you must not exceed the ROPS max ballasted mass certificate. Weight the tractor and implement. Do not estimate.**

Use the pallet fork to move pallets, bulk bins, crates and boxes. Do not use for shifting loads such as poles or large logs or branches and do not use for digging rocks or lifting concrete slabs.

Never handle large, heavy objects due to the dangers of rolling or up ending the tractor.

Always move slowly and carefully and avoid rough unstable terrain. Raise and lower the pallet fork slowly and carefully and never lift the implement higher than necessary to clear the ground.

ATTACHING TO THE IMPLEMENT

WARNING

- When connecting the tractor to the implement never stand in between the tractor and the implement and always find somewhere level or flat.
- Always adjust the tractor lower linkage arms anti-sway devices to prevent implement from swing from side to side during transport and operation. Failure to do so may result in serious injury or damage. Damage like bent and twisted implement towers are **NOT** covered by warranty.
- Before dismounting tractor or performing any service or maintenance lower the 3-point linkage and any other raised components (i.e. loader bucket) to the ground. Operate valve levers to release any hydraulic pressure, stop engine, set parking brake, remove key and unfasten seat belt.
- During routine checks and/or repairs ensure that no one can switch on the tractor or Implement accidentally. Keep the key to the tractor in your pocket.

Remove tractor draw bar to eliminate interference with the implement. Attach the implement with the hitch pins supplied to the lower link arms of the tractor and secure with lynch pins. Attach tractor top link to implement top clevis with top hitch pin and secure with lynch pin. Top Link Pin not supplied.

GENERAL OPERATING

WARNING

- Do not operate on steep slopes. If in doubt set rear axles wider for moderate slopes.
- Do not stop, start or change directions suddenly on slopes, working up and down is preferred.
- Use extreme care and reduce ground speed on slopes and rough terrain.
- Watch for hidden hazards on the terrain during operation and avoid any hazards or object that could cause injury or damage.
- Pass diagonally through sharp dips and avoid sharp drops.

REMOVING IMPLEMENT FROM TRACTOR

Use the tractors lower linkage arm control to lower the implement all the way to the ground. Turn of tractor ignition and remove key. Firmly apply park break, remove seatbelt and dismount the tractor. Block implement securely for storage with robust secure support, remove lower linkage pins. Slowly move tractor away from implement checking that implement will not fall from blocking.

DAILY PRE-OPERATION CHECKLIST

(Operators Responsibility)

- Operators MUST carry out a Risk Assessment and/or “HazCheck” for the implement and ensure it is correct for the conditions the implement will be operating.
- Review and follow safety rules outlined in this manual
- Check that implement is properly and securely attached to the tractor
- Check all hardware (i.e. bolts, nuts, wood flooring, etc) are properly installed, secured and in good condition.
- Ensure tractor transmission is in neutral before starting engine.
- Inspect area that you will be operating in and remove any object that may cause injury or damage.

MAINTENANCE

⚠ WARNING

- Before dismantling tractor or performing any service or maintenance lower the 3-point linkage and any other raised components (i.e. loader bucket) to the ground. Operate valve levers to release any hydraulic pressure, stop engine, set parking brake, remove key and unfasten seat belt.
- Never place any part of the body underneath the implement or between moveable parts even when engine has been turned off. Hydraulic systems can “creep” (i.e. slowly lower). They can fail or movement of the control levers can cause the implement to drop or rotate unexpectedly causing severe injury or death. Follow Operator’s Manual instructions for working on your implement or have work carried out by a qualified dealer.
- During routine checks and/or repairs ensure that no one can switch on the tractor or Implement accidentally. Keep the key to the tractor in your pocket.
- Service work does not require going underneath this implement. Read Operators Manual for service instructions or have servicing carried out by a qualified dealer.

⚠ CAUTION

- Always wear relatively tight fitted clothing to avoid entanglement in moving parts. Wear heavy-duty, rough-soled boots and protective equipment for eyes, hair, hands, hearing and head.

Inspect implement for stress cracks caused from over loading. Repair before continuing operations.

BLOCKING METHOD

⚠ WARNING

- Never place any part of the body underneath the implement or between moveable parts. Hydraulic systems can “creep” (i.e. slowly lower). They can fail or movement of the control levers can cause the implement to drop or rotate unexpectedly causing severe injury or death. Follow Operator’s Manual instructions.
- During routine checks and/or repairs ensure that no one can switch on the tractor or Implement.
- Service work does not require going underneath this implement. Read Operators Manual for instructions.

There are no reasons why you should be underneath this implement. Should you find an area that is in need of repair that would involve someone going under the implement, then detach implement from the tractor and perform service work.

ASSEMBLY INSTRUCTIONS

⚠ WARNING

- Before dismantling tractor or performing any service or maintenance lower the 3-point linkage and any other raised components (i.e. loader bucket) to the ground. Operate valve levers to release any hydraulic pressure, stop engine, set parking brake, remove key and unfasten seat belt (if fitted).
- Never place any part of the body underneath the implement or between moveable parts. Hydraulic systems can “creep” ice slowly lower. They can fail or movement of the control levers can cause the implement to drop or rotate unexpectedly causing severe injury or death. Follow Operator’s Manual instructions for working on your implement or have work carried out by a qualified dealer.
- During routine checks and/or repairs ensure that no one can switch on the tractor or Implement.
- Service work does not require going underneath this implement. Read Operators Manual for instructions.
- Always wear relatively tight fitted clothing to avoid entanglement in moving parts. Wear heavy-duty, rough-soled boots and protective equipment for eyes, hair, hands, hearing and head.

⚠ CAUTION

The Kanga Pallet Forks do not require assembly but the dealer should ensure the customer knows how to correctly secure the implement to their tractor.

Complete dealer checklist when assembly is complete.

Agricultural Machinery Product OHS Compliance Form

We, Gavhall Pty Ltd t/as Kanga Farm Equipment
 Of, 16 Cahill Street
 Dandenong, Victoria, Australia, 3175
 Telephone: 03-9706-5166
 Fax: 03-9706-5050

Confirm that the following machine(s)

Kanga 500kg Pallet Fork
 Kanga 1000kg Pallet Fork

have had a hazard identification, risk assessment and risk control procedure carried out on a representative model of the aforementioned product(s) in accordance with the Occupational Health and Safety requirements of all states and territories of Australia and where found necessary the appropriate risk control measures have been incorporated in the product specifications.

The Operators Manual contains the necessary Health and Safety information and safety warnings decals are applied to the product where necessary.

Product Description: Pallet Fork
 Model Number(s): 500kg – Product Code(s) 97000
 1000kg – Product Code(s) 97500



Signature
 Bruce J Alcott
 Managing Director

Name:
 Position

Date: 01 / 10 / 2006

Details of the unit assessed for the purpose of compliance

Model #	Serial #	Date of Inspection	Location
500kg	1200906	23 / 09 / 2006	16 Cahill Street
1000kg	1210906	23 / 09 / 2006	16 Cahill Street

PRE-DELIVERY CHECKLIST (Dealers Responsibility)

Inspect implement thoroughly after assembly to be certain it is set up properly before delivering it to the customer. The following checklist is a reminder of points to inspect. Check off each item as it is found satisfactory either before or after corrections or services performed.

- Check all bolts and ensure that they are tight.
- Check all cotter pins and linkage pins and ensure they are properly installed and can be secured.
- Refer to lubrication instructions and lubricate implement.
- Explain the importance of lubrication to the customer and point out all the lubrication points on the implement.
- Check that any “wear points” (i.e. points, blades, edges, tines) have been properly installed.
- Show customer how to make adjustments. Describe the options available for the implement and explain their purpose and how they work.
- Ensure the stability of the tractor has not been compromised with the implement the customer has purchased. Remember a minimum 20% of tractor and equipment gross weight must be on the tractor’s front wheels with implement in the transport position. If you are adding weight to the tractor to attain the 20%, you must not exceed the ROPS max ballasted mass certificate. Weight the tractor and implement. Do not estimate.
- Give Operators Manual to the customer and recommend that customer become familiar with all sections, especially the safety and safe operating procedures.
- Explain to the customer that when transporting the implement on roads or highways, day or night, safety devices should be used to provide adequate warning to operators of other vehicles. Also explain the operator must ensure that the tractor and implement complies with current State and Federal laws and must strictly adhere to all road traffic regulations in force in his/her particular state.
- Check PTO series is correct and that the PTO is the correct length (**post hole diggers only**)
- Check gearbox is properly serviced and seals are in good condition and not leaking. (**post hole diggers only**)

▲ IMPORTANT

Gearbox was not filled with oil at the factory. It must be serviced before implement is operated. Failure to service will result in damage to the gearbox. You will find a level plug on the side of your gearbox or a guide to the amount of oil required can be found on the same page as the gearbox parts guide.

- Instruct the customer that they **MUST** carry out a Risk Assessment and/or HazCheck for the implement and the operating conditions.
- Ensure the customer has signed the **WARRANTY REGISTRATION & INSTALLATION FORM** and a copy has been returned to Kanga Farm Equipment, 16 Cahill Street, Dandenong, Victoria, 3175.

Name of person who carried out Pre-delivery: _____ Signature: _____

Dealership Name: _____ Location carried out: _____

Date: ___/___/_____

Top copy (manufacture’)

Middle Copy (dealer’)

Last page (purchaser’)

