


KARDEX VCA

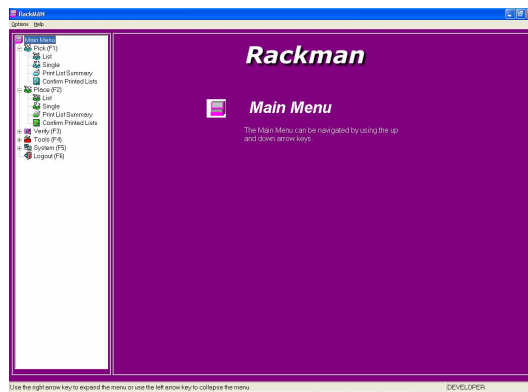

RackMAN™

OPERATORS MANUAL

Issue Date: May 2009



TABLE OF CONTENTS

1	Introduction.....	1
2	Setting Up your Racking.....	4
2.1	EXAMPLE SYSTEM CONFIGURATION.....	6
2.1.1	ZONE 1.....	6
2.1.2	ZONE 2.....	7
2.1.3	ZONE 3.....	7
3	Getting Started.....	8
3.1	LOGGING IN TO RACKMAN™.....	8
3.2	GETTING AROUND THE MAIN MENU.....	9
3.3	LOGOUT AND CLOSE RACKMAN.....	10
4	Pick Introduction.....	11
4.1	PICK METHODS.....	13
4.1.1	PICK \ LIST.....	13
4.1.2	PICK \ SINGLE.....	13
	STEP 1 Enter Part Number.....	13
	STEP 2 Enter Quantity.....	14
	STEP 3 Count and Pick Parts.....	15
	STEP 4 Confirm Quantity.....	16
	STEP 5 Is Location Empty?.....	16
	STEP 5A Is Location Empty? - Yes.....	16
	STEP 5B Is Location Empty? - No.....	17
	STEP 6 Insufficient Stock.....	18
	STEP 6A Confirm Quantity No – Change Pick Quantity.....	18
	STEP 6B Confirm Quantity No - Insufficient Stock.....	19
4.1.3	PICK \ PRINT LIST SUMMARY & CONFIRM PRINTED LISTS.....	20
4.1.4	ADJUST QUANTITY.....	24
4.1.5	CONFIRM ALL.....	26
4.2	PICK METHOD – WITH LOT NUMBER.....	27
4.2.1	PICK \ LIST.....	27
4.2.2	PICK \ SINGLE.....	27
4.2.3	PICK \ PRINT LIST SUMMARY & CONFIRM PRINTED LISTS.....	29
5	Place Introduction.....	30
5.1	PLACE METHODS.....	32
5.1.1	PLACE \ LIST.....	32
5.1.2	PLACE \ SINGLE.....	32



STEP 1	Enter Part Number.....	32
STEP 2	Enter Quantity.....	33
STEP 3	Choose Location.....	34
STEP 3A	Choose Face.....	34
STEP 3B	Choose Bay.....	34
STEP 3C	Choose Shelf.....	34
STEP 3D	Choose Location.....	35
STEP 3E	Place to Existing Location	35
STEP 4	Count and Place Parts.....	35
STEP 5	Confirm Quantity.....	36
STEP 5A	Confirm Quantity - Yes	36
STEP 5B	Confirm Quantity - No.....	37
STEP 6	Is Location Large Enough? - No [Fixed Single]	38
	If the location is not large enough, you will be required to pick all the stock from the location and place to a new location:	38
STEP 6A	Confirm Pick Quantity.....	38
STEP 6B	Confirm Empty Location	39
STEP 6C	Place to new Location	39
STEP 6D	Confirm Total Quantity.....	39
5.1.3	PLACE \ PRINT LIST SUMMARY & CONFIRM PRINTED LISTS.....	40
5.2	CONFIRM PRINTED LISTS	42
5.2.1	ADJUST LOCATION QUANTITY	43
5.2.2	SET AS NOT PLACED.....	43
5.2.3	SET LOCATION	43
5.2.4	CHECK ALL	43
5.2.5	SELECT NEW LOCATION	44
5.3	RETURN TO STOCK.....	46
5.4	PLACING WITH LOT NUMBER	47
6	Verify Operation.....	48
6.1	VERIFY \ LIST	50
	STEP 1 Select List(s).....	50
6.2	VERIFY \ SINGLE.....	50
	STEP 1 Enter Part Number.....	50
	STEP 2 Count Stock.....	50
	STEP 3 Enter Quantity.....	50
	STEP 4 Confirm Quantity.....	51
6.3	VERIFY \ PRINT LIST SUMMARY	51
6.4	CONFIRM PRINTED LISTS	52
6.4.1	ADJUST LOCATION QUANTITY	52
6.5	VERIFY \ LOCATION.....	53
	STEP 1 Select Location	53
6.6	VERIFY BY RANGE	53



	STEP 1	Select Starting Shelf	53
	STEP 2	Select End Shelf	53
6.7	VERIFY PROCESS		54
	STEP 1	Count Stock	54
	STEP 2	Enter Quantity	54
	STEP 3	Confirm Quantity	54
7	Creating Local Lists		55
7.1	SELECT LIST TYPE		55
7.2	ADDING A LIST		55
8	Selecting Lists		57
	STEP 1	Select List(s)	57
	STEP 2	Continue	58
	STEP 3	Return to Process	58
9	Show Inventory Information		59
	STEP A	Enter Part Number	59
	STEP B	Use Info Button	59
	STEP C	Close Screen	59
10	Find Part Number		60
	STEP A	Use Find Button	60
	STEP B	Enter Text in Part No. Box	60
	STEP C	Enter Text in Description Box	60
	STEP D	Enter Text in Part No. and Description Box	60
	STEP E	Choose Part Number	61
11	Location Manager		62
11.1	DELETE A LOCATION		62
	STEP 1	Enter Part Number	62
	STEP 2	Select Location	62
12	Shortcut Keys		63
13	Troubleshooting		64

Valid for RackMAN Release 1.3.04.yyyymmdd

IMPORTANT NOTICE

This software is made available for use under the terms of your 'Software Licence Agreement'.

For new equipment installations Kardex VCA Vertical Storage System software is configured by our staff and operation of the equipment (Carousel / Shuttle® / SortBench) and utility software is confirmed as part of the commissioning process.

The software warranty will be void if the Customer or their representative changes, modifies or makes any additions to the hardware and/or software of the Vertical Storage System without the written permission of Kardex VCA Pty Ltd. Kardex VCA will not withhold that permission if the changes will have no material affect on the system operation or performance.

The **Customer** is responsible for the maintenance of all **system** and **data files** including backup and restoration procedures.


1 Introduction

Kardex VCA has designed RackMAN™ as an inexpensive PC based inventory application for use in small to medium sized warehouses. RackMAN facilitates the simple management of inventory stored in STATIC RACKING or SHELVING.

RackMAN operates under all Windows™ operating systems i.e. WIN95, WIN98, WINNT, WIN2000 and WINXP and uses an ODBC compliant SQL database.

RackMAN™ functionality is based on our proven Carousel inventory management product wCARMAN™, and has all the basic features necessary to account for inventory movements in your warehouse. If you are an existing Carousel user, RackMAN™ will be a transparent introduction into your warehouse and you will benefit from being able to manage all your warehouse orders through the common interface associated with Kardex VCA's Inventory Handling System.


RackMAN™ is part of Kardex VCA's complete SME Inventory Handling System (IHS) which extends to Management browsers, utility file and data handling, full warehouse order printing, zone distribution, and seamless integration with Kardex VCA's Carousel and SortBench™ for high throughput order picking across the warehouse.

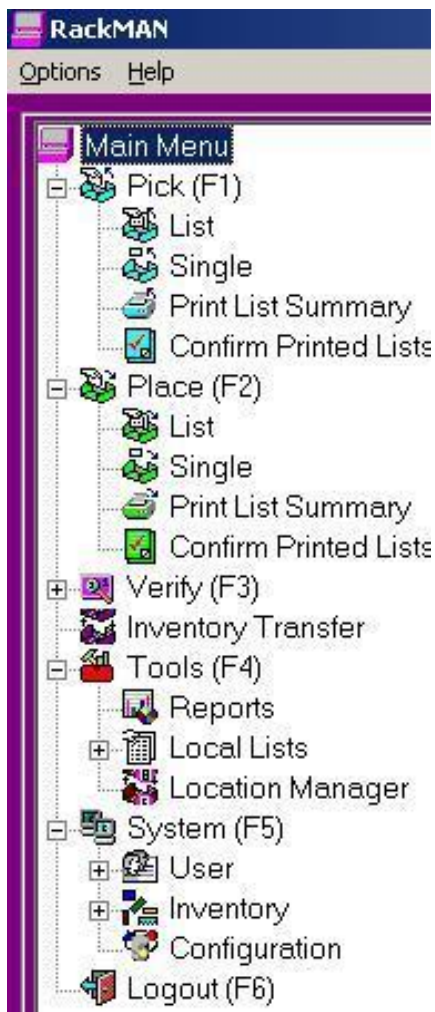

The following functionality is available in the standard RackMAN™ product:

- Range of Storage (Place) Modes including Fixed, Fixed Multi and Dynamic -allowing transparent changeover from one mode to the other
- Range of Retrieval (Pick) Modes including FIFO, Closest etc.
- Barcode Product Identification
- Integrated Lot Number Support
- Comprehensive text file based interface for data exchange and Pick Slip processing.
- Support for peripheral equipment such as Barcode Scanners, Thermal Label Printers, Integrated Weigh Scales
- Practical Global and Cyclic Stocktake (Verify) functionality
- Support for printing of multiple Pick & Place lists for multi order picking
- Range of System Reports including Stock Report, Location Report, Aged Inventory Report & Audit Report
- Customised User Profiles for operator access
- Sorting of locations throughout the warehouse for the most efficient picking path
- Support for customised functionality using system Plug-ins, such as block stock transfer
- Dial-up diagnostic support
- Can share the Carousel system wCARMAN Database for system simplification and database maintenance.

All forms are colour coded for ease of identification and all quantity and location information is presented using high contrast colours for easy visibility at a distance.

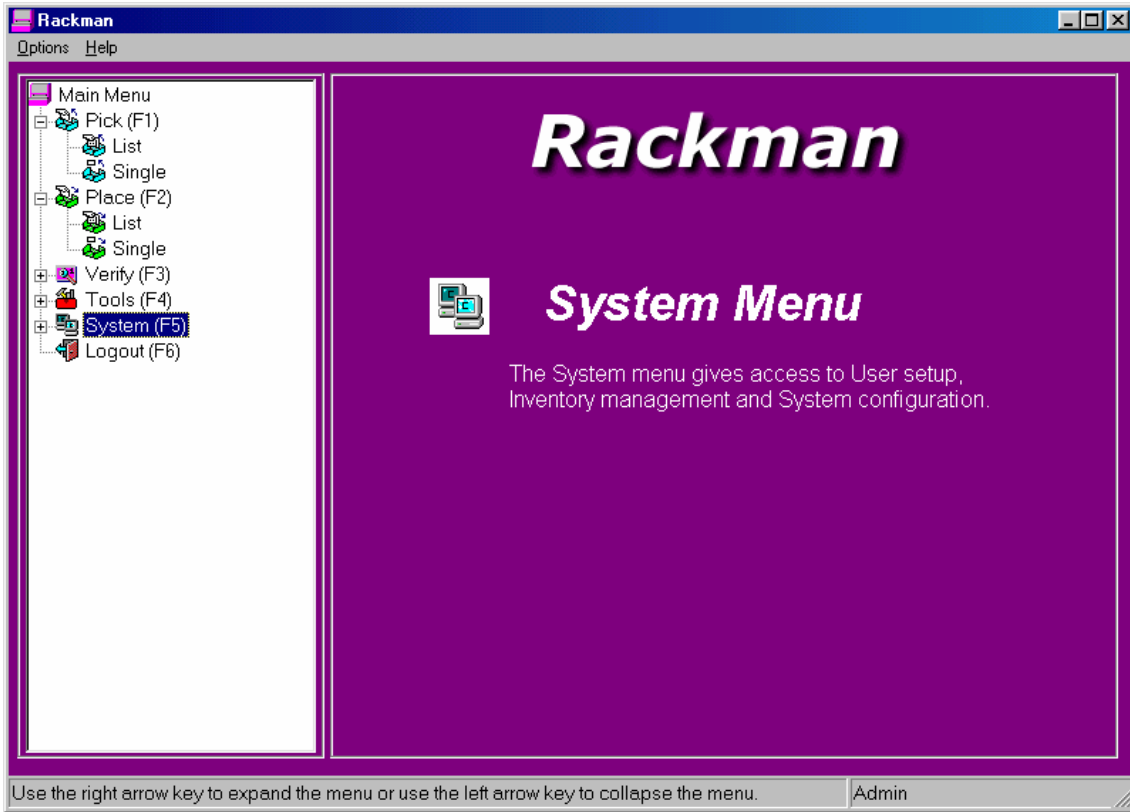

RackMAN can be conveniently used *without* a mouse. All menus and forms have been designed with this consideration and all functions can be accessed and used with basic keystrokes such as the **Enter**, **Tab** and the arrow keys (← → – ↓).

The main operations that RackMAN offers are:

- *Place*
For storage of items into the static racking
- *Pick*
For retrieval of items from the static racking
- *Verify*
For confirmation that location quantities are correct

Each of these processes is explained in this manual.



The other operations that RackMAN offers are described in the Technical Manual and can be accessed in RackMAN via the Tools and System Menus. These are:

- *Reports [Tools Menu]*
To generate standard reports
- *Local Lists [Tools Menu]*
To create Pick, Place or Verify lists
- *Users [System Menu]*
To Add, Change or Delete users
- *Inventory [System Menu]*
To Add, Change or Delete inventory items
- *Configuration [System Menu]*
To customise RackMAN for your site

2 Setting Up your Racking


RackMAN may be used as a standalone solution for handling of inventory in static racking and shelving or in combination with Kardex VCA Vertical Storage equipment such as Carousels and Shuttles as part of a complete warehouse inventory control solution.

Introducing RackMAN in to your existing Carousel or Shuttle system will require the support of Kardex VCA utility applications such as 'File Handler' and 'General Order Handler'. If you have a multi-machine configuration, you will most likely be using these utilities already.

Standalone System (Racking) - One or more

You will need to set up your shelving configuration to cover all pick faces in your warehouse. Physically distinct areas within the warehouse are treated as Zones. Each Zone will require its own RackMAN console.

An example of warehouse racking is shown below in plan view:

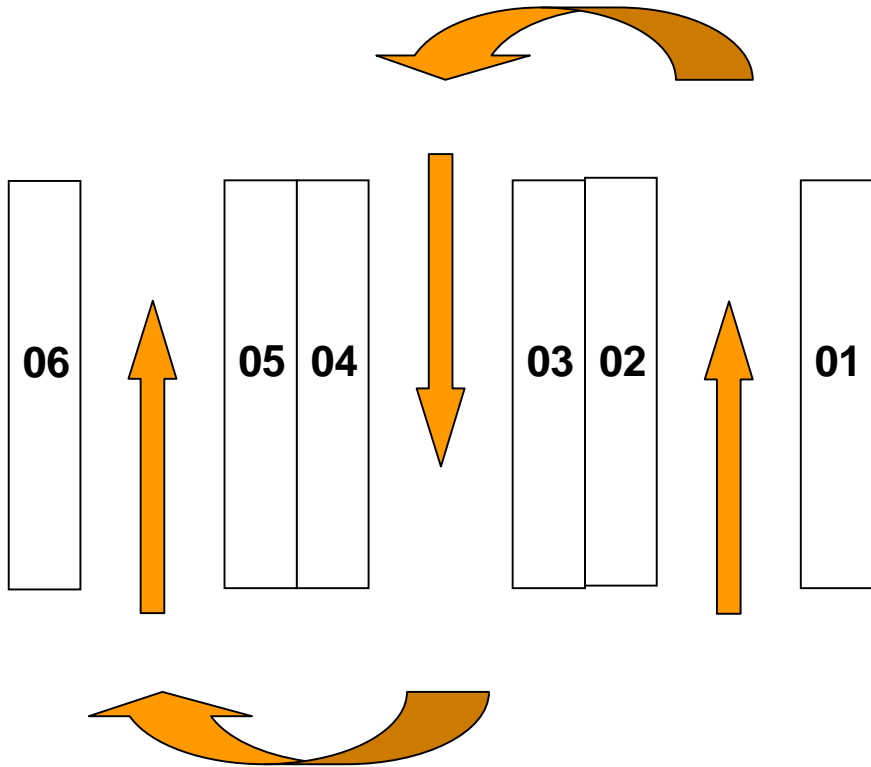

Our naming convention for each location in the racking is:


<Pick Face><Shelf><Bay><Location>

Where:

- Pick Face is a numeric in the range 01 .. nn
- Shelf is the vertical shelf on the Pick Face in the range A .. Z
- Bay is the horizontal position along the Pick Face in the range 01 .. nn
- Location is the horizontal position within the Bay in the range 01 .. nn

For example, Pick Face 5, Shelf B, Bay 2 and Location 1 would be identified as "05B0201".

RackMAN will generate PICK slips and PLACE slips in location order; as determined by the RackMAN shelving configuration.

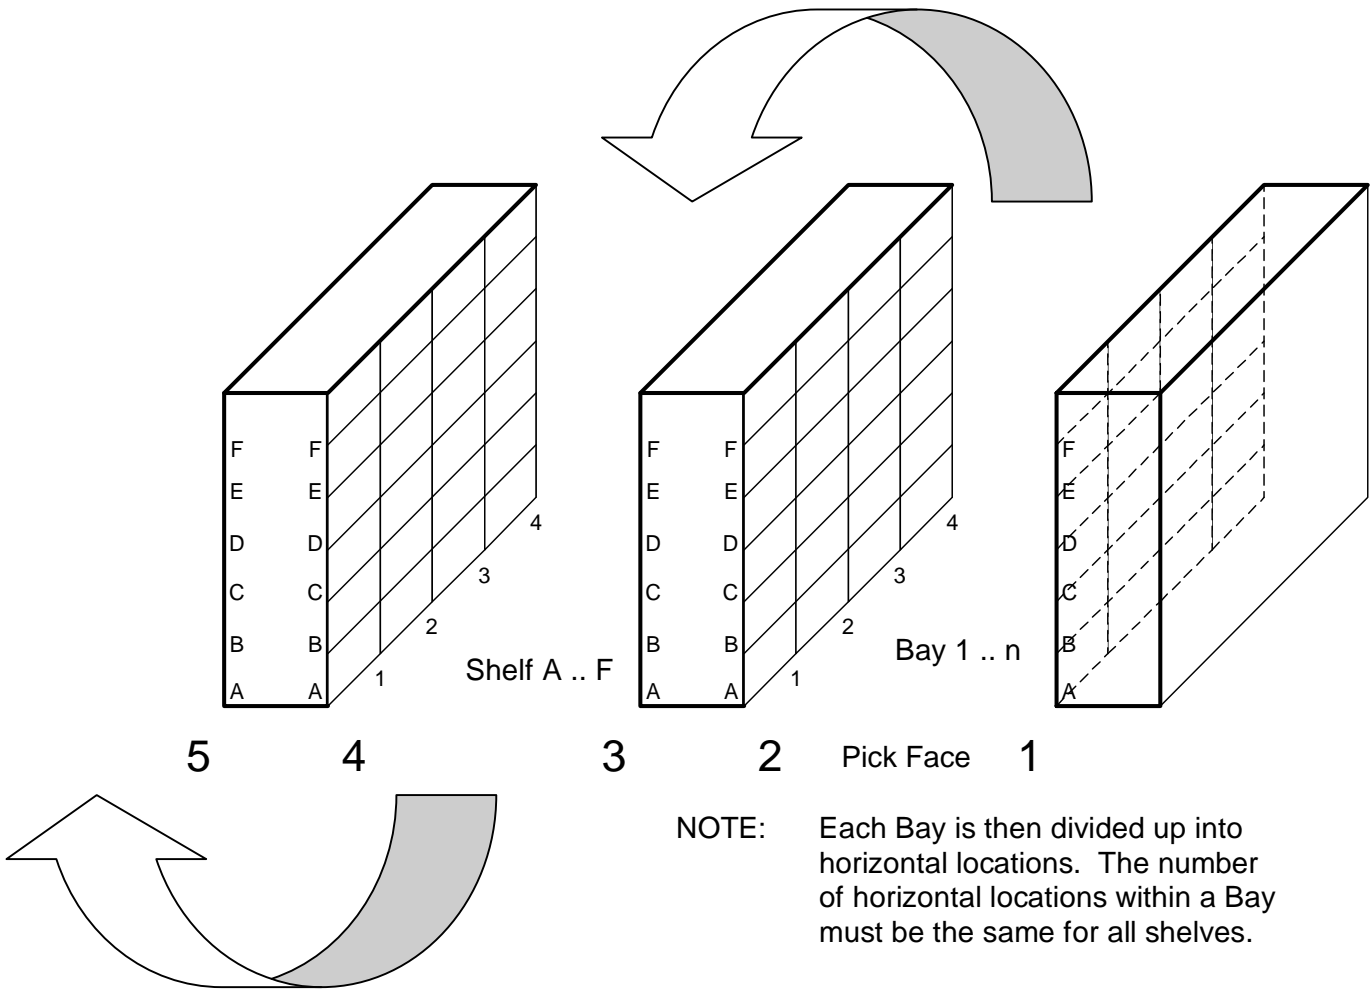


Because Zones are treated as physically separate from each other; the Pick Face count will be restarted. So, Pick Face 1, Shelf A, Bay 1, Location 1 (01A0101) will exist in all Zones.

Integrated System (Racking, Carousels / Shuttles)

Integrated systems feature both automated vertical storage systems and racking. The automated vertical storage system (VSS) could be Vertical Carousels, Shuttles or a combination of both. The VSS would typically be designated Zone 1.

The wCARMAN application would be used to manage inventory within the VSS. Both wCARMAN and RackMAN will use the same database to enable efficient picking/placing within the warehouse.

2.1 Example System Configuration

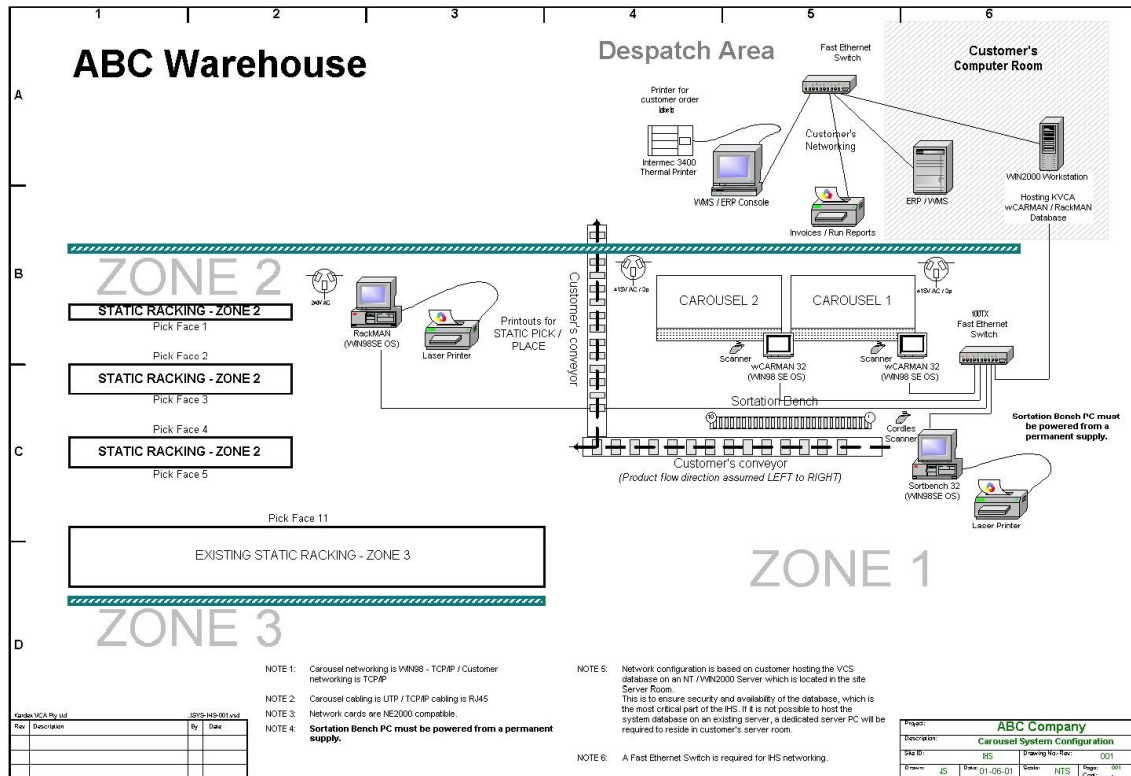

This example system implementation comprises the following PC based equipment:

- o Zone 1 Carousel Console (VC1)
- o Zone 1 Carousel Console (VC2)
- o Zone 1 SortBench Console (SB1)
- o Zone 2 RackMAN Console (RM1)
- o Database Server PC to host system database and for creation of PLACE / PICK list files.

All zone equipment is to be connected to a fast Ethernet switch using shielded CAT5 cable. The Server PC is also to be connected to the fast Ethernet switch using shielded CAT5 cable.

The Database Server PC should be installed in a site computer room. This equipment needs to be in a clean and secure environment.

2.1.1 Zone 1

Zone 1 consists of two vertical carousels with a shared SortBench. Zone 1 will also require a laser printer to print Pick Slips for Zone 1 or Zones 1, 2, and 3. The laser printer will be connected to the parallel port on the SortBench PC.

The carousels will have a standard keyboard wedge barcode scanner to assist with the storage of items into the carousel, using PLACE by LIST. The SortBench should



have a cordless keyboard wedge barcode scanner for the induction of orders on to the SortBench. The cordless scanner should have a range of 3m.

2.1.2 Zone 2

A dedicated PC is required to run the RackMAN application. A laser printer will be connected to the RackMAN console for the generation of Zone 2 PLACE reports and Zone 2 / 3 Pick Slips. The RackMAN console is also fitted with a barcode scanner for the scanning of Pick Slips, Pick Slip summary and Place summary reports.

RackMAN is able to accommodate irregular racking configurations. The location order can be set within RackMAN and is completely configurable by the user.

2.1.3 Zone 3

Zone 3 can be dealt with as an extension of Zone 2. Zone 3 may be racking that is physically separate from Zone 2.


It would be possible to set up Zone 3 as an extension of Zone 2, with orders to be managed at a common RackMAN console or Zone 3 could be set up as a separate instance of RackMAN on a dedicated console.

3 Getting Started

RackMAN™ automatically runs when Windows is started, however, it can be run from the following shortcuts:

- C:\Windows\Desktop\ - For Easy Desktop Access
- C:\Windows\Start Menu\ - For Easy Start Menu Access


The Welcome screen is the first window seen in RackMAN™. It has two functions; one is to LOGIN to RackMAN™ and the other is to CLOSE RackMAN™.

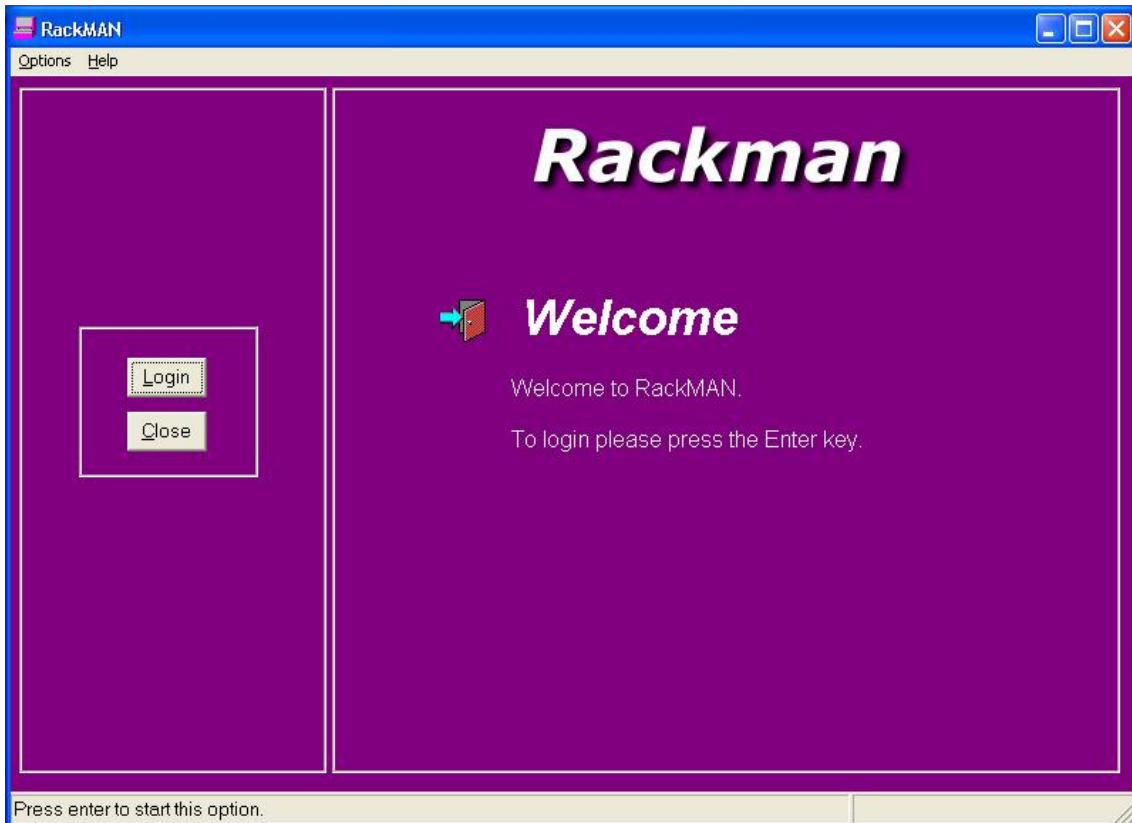

3.1 Logging in to RackMAN™

When RackMAN™ is first started, the Login button is highlighted, press **Enter** on the keyboard to Login or alternatively press **Alt & L**. The default user is Admin with no password.

Type your user name in the Name box then **Tab** to the Password box and type your password then press **Enter**. The password and user names are not case sensitive.

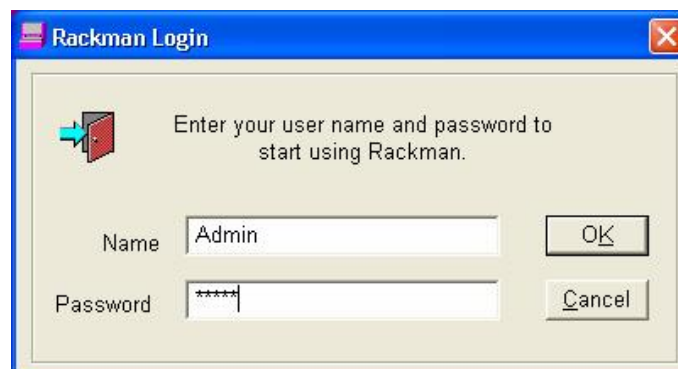

If you type the incorrect user name or the incorrect password, the following error will appear.




To clear this error, press **Enter** and you will return to the Login screen. Try to Login again. If you are not successful, contact your supervisor for assistance.

3.2 Getting around the Main Menu

The Main Menu is used to select the functions you wish to use in RackMAN™. The Status Bar at the bottom of the form provides information about how each function can be initiated and also shows the current user name.


To navigate the Main Menu use the **up(↑) and down(↓) arrow keys** to highlight a function then press the **Enter** key. To expand a menu, press the **right(→) arrow key** and to collapse a menu press the **left(←) arrow key**.

The function keys (**F1 – F6**) can be used to move quickly from one main heading to another. It is also possible to select a function by pressing the alpha key (that is the first letter of the word.)

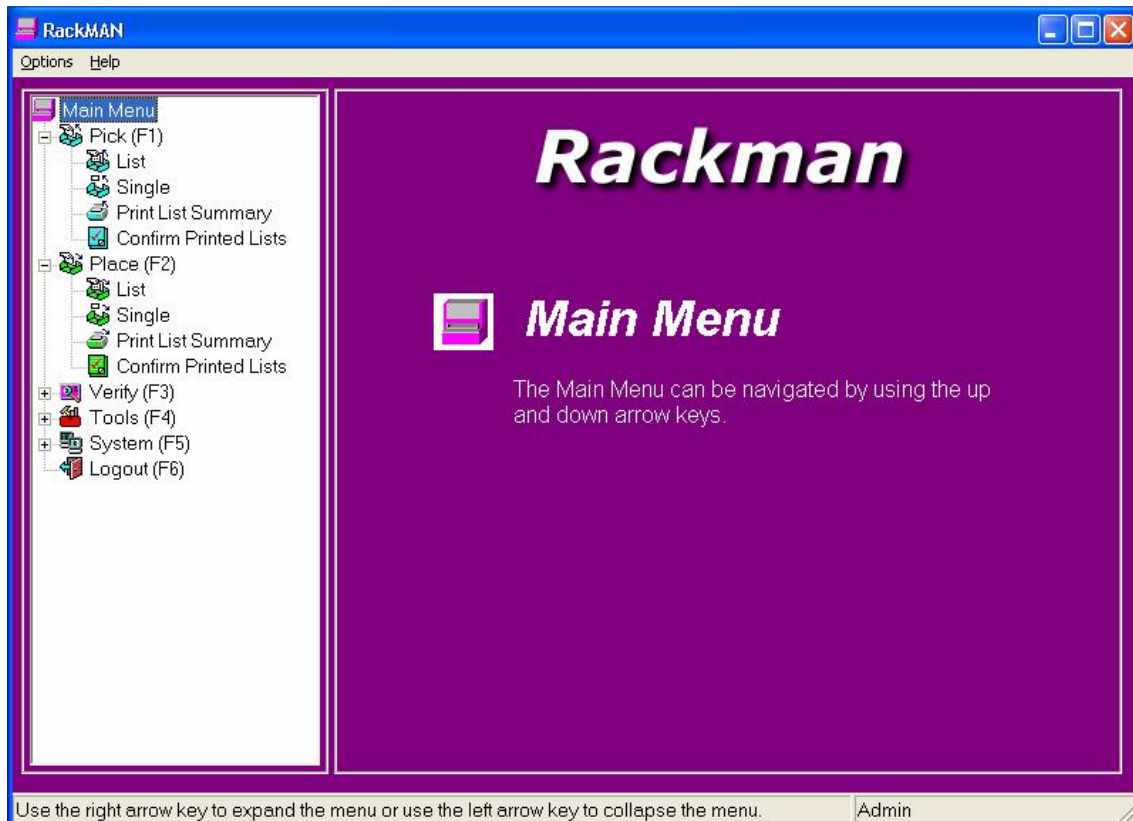


3.3 Logout and Close RackMAN

Select Logout (**F6**) from the Main Menu and then press **Enter**.

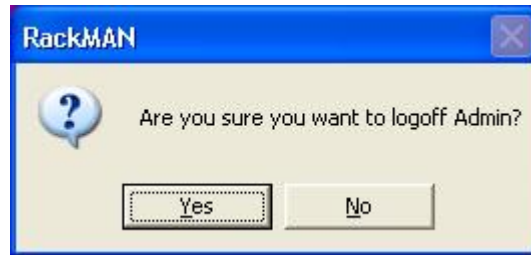

At the confirm message press **Enter**.

At the Welcome screen, press **Alt & C** for Close, or **Tab** to Close button and press **Enter**.

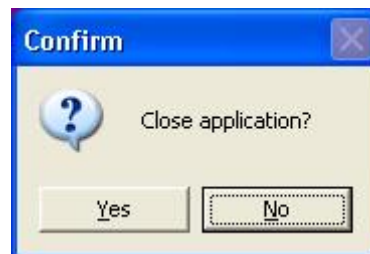

Press **Alt & Y** for Yes to confirm. Or **Tab** to the Yes button then press **Enter** to confirm.

NOTE: It is important to shut down the PC in an orderly fashion. An orderly shut down is done by following the Windows shutdown procedure noted below:

After you have shut down RackMAN™, press **Ctrl & Esc** to open the Windows Start Menu, then press **u**.



Make sure Shut down is selected and then press **Enter** to shut down Windows and the PC.

4 Pick Introduction

RackMAN™ offers a variety of Bin Selection Modes (BSM) for retrieving parts from static racking. RackMAN™ also offers a variety of Bin Allocation Modes (BAM) for storage of parts, which will be explained in the PLACE Section of this manual. The available modes for storage and retrieval are briefly explained below:

Bin Allocation Modes (BAM)

When picking parts from static racking, RackMAN may respond differently i.e. present different information or questions, depending on the type of BAM selected. Each BAM is described briefly below:

- **Fixed Single**
Each part number is Placed into a single location in static racking. When a part location becomes empty, the location is retained for that part.
- **Dynamic**
Each part number is Placed into a new location in static racking. When a part location becomes empty, the location is freed for storage of another part.
- **Fixed Multi**
RackMAN™ offers the operator a choice either to Place a part in to a new location or to an existing location for that part number. RackMAN™ offers a choice when a part location becomes empty to either free the location or retain the location for that part.

Bin Selection Modes (BSM)


Your system has been configured for picking of parts in one of the following ways:

- **FIFO (First In First Out)**
RackMAN™ will pick items from the oldest location. This mode is not valid for Fixed Single BAM.
- **User**
RackMAN™ will pick items from the location selected by the user. This mode is not valid for Fixed Single BAM.
- **Closest Location**
RackMAN™ will pick items from the location closest to the first shelf position for items placed over multiple locations
- **Fullest Location**
RackMAN™ will pick items from the location with the highest quantity for items placed over multiple locations
- **Satisfy Quantity**
RackMAN™ will pick items from the first location that will satisfy the pick quantity for items placed over multiple locations
- **Lowest Location**
RackMAN™ will pick items from the location closest to A level (closest to the floor) for items placed over multiple locations
- **Expiry Date**
RackMAN™ will pick items with the date that will expire first. Which is the date closest to the current date.

NOTE: *If you are unsure of your RackMAN setup, please ask your supervisor.*



The 'Pick' Screen – at a glance

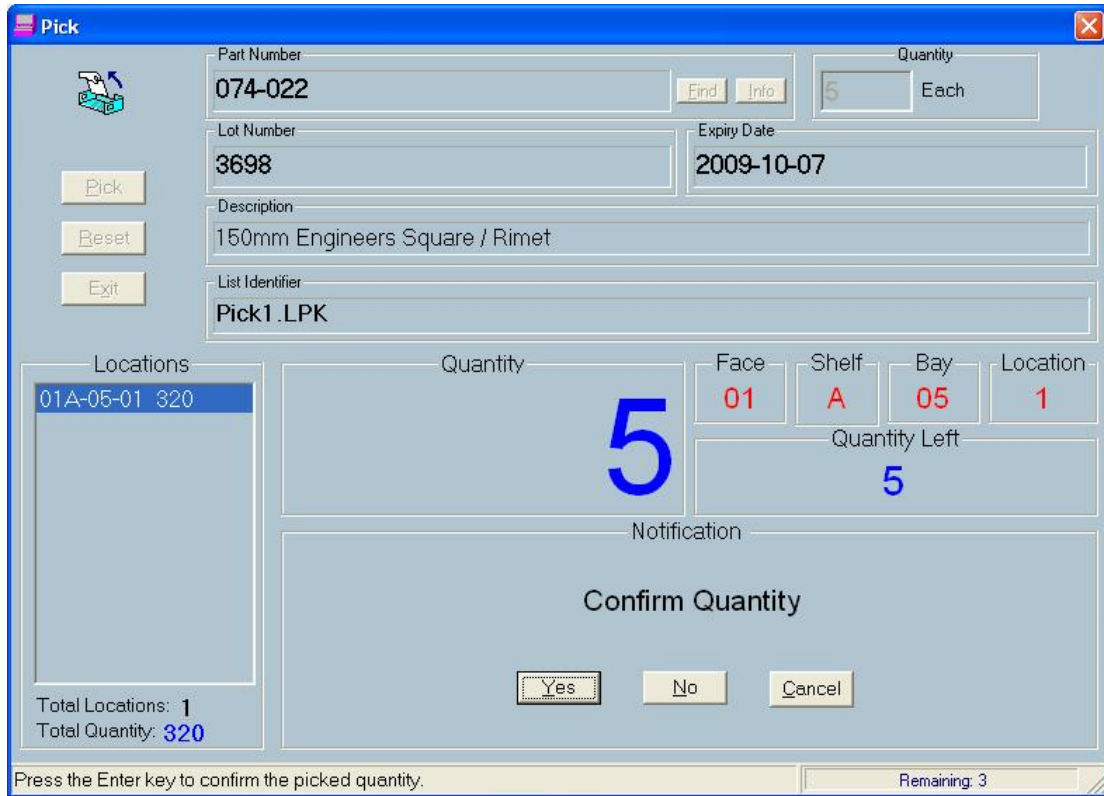


Item	Description
1 Part Number Box	Displays the current found part number, Find button and Info button
2 Lot Number Box *	Displays the Lot Number. *This will only be displayed if it is selected in the Placing Configuration form.
3 Expiry Date Box *	Displays the Expiry Date. *This will only be displayed if it is selected in the Placing Configuration form.
4 Description Box	Displays the current parts description
5 Small Quantity Box	Displays the total quantity to Pick
6 Large Quantity Box	Shows the current quantity to Pick
7 Quantity Left	Displays the remaining quantity to Pick
8 List Identifier Box	Displays the List this Pick operation comes from
9 Locations Box	Displays the current part location(s) and quantities Displays total of locations and total of quantities
10 Bay Box	Displays current bay
11 Bin Box	Displays current bin
12 Location Box	Displays current location
13 Notification Box	Displays current message
14 Reset Box	Will clear the form
15 Exit Box	Will close the window
16 Colour	Blue



4.1 Pick Methods

The Pick form is available from the Main Menu. Use the **↑** and **↓** arrows or the mouse to move to the required menu item and press **Enter**:

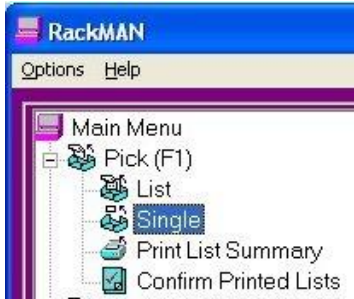

Pick menu items have the following functionality:

- **List**
Use this method to pick a range of items based on list files created locally (at the RackMAN console) or by the host system. Pick \ List requires data entry at the RackMAN console for each pick location.
- **Single**
Use this method to pick / confirm small numbers of items directly at the RackMAN console.
- **Print List Summary & Confirm Printed Lists**
Use this method to pick a range of items based on list files created by the host system. This method is used to print consolidated pick slips and undertake group confirmation of orders.

4.1.1 Pick \ List

Refer to Section 7 for details of how to select Pick lists. Once the list has been selected, refer to Section 4.1.2 for the typical Pick dialogue.

4.1.2 Pick \ Single

STEP 1 Enter Part Number

Type in, or Find the part number of the item you are going to Pick then press **Enter**.

 A screenshot of the 'Pick' dialog box. The title bar says 'Pick'. On the left is a printer icon. The main area has a 'Part Number' field containing '066-002', with 'Find' and 'Info' buttons to its right. A 'Quantity' field is empty. Below these are 'Pick', 'Reset', and 'Exit' buttons. At the bottom are 'Description' and 'List Identifier' fields.

STEP 2 Enter Quantity

Type in the quantity that you want to Pick then press **Enter**.

RackMAN™ will then locate the part as determined by the Bin Selection Mode (BSM).

Fixed Single

If you are using the 'Fixed Single' storage mode, the part will be located in only one location. The lower part of the Pick form will have the following appearance:

Dynamic

If you are using the 'Dynamic' storage mode, the part may be located in multiple locations. RackMAN will select the pick location based on the configuration of the 'Bin Selection Mode'. The normal mode for Dynamic storage is to pick using 'FIFO' i.e. First In First Out. This method will ensure stock rotation by picking from the oldest location first.


It is also possible to use other **Pick** modes such as:

- User
- Closest Location
- Fullest Location
- Satisfy Quantity
- Lowest Location
- Expiry Date

Refer to Section < > of the RackMAN Technical Manual for 'Pick' configuration details.



The lower part of the Pick form may have the following appearance:

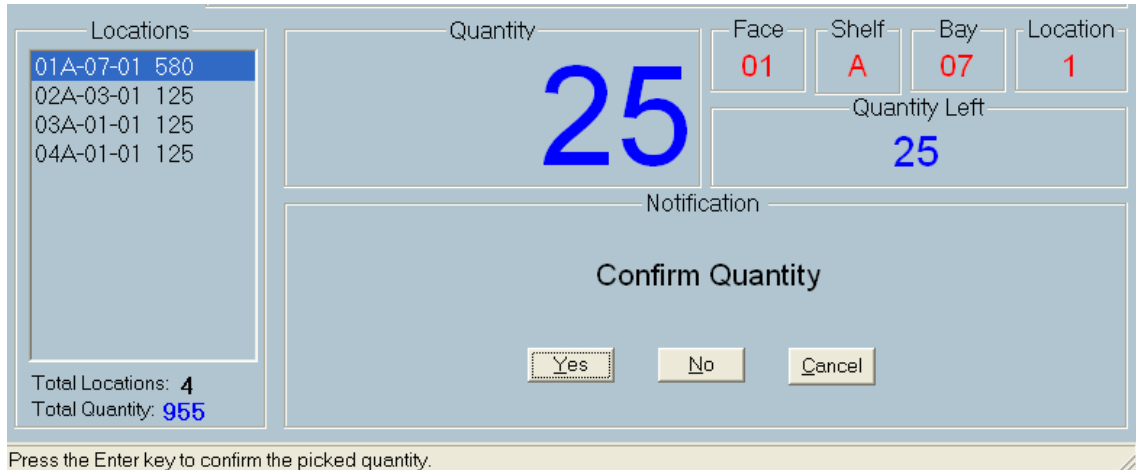

The 'Locations' will be sorted based on the Bin Selection Mode i.e. oldest location first for FIFO picking.

Fixed Multi


If you are using the 'Fixed Multi' storage mode, the part may be located in multiple locations. RackMAN will select the pick location based on the configuration of the 'Bin Selection Mode'. 'Fixed Multi' provides the following selection methods:

- FIFO
- User
- Closest Location
- Fullest Location
- Satisfy Quantity
- Lowest Location
- Expiry Date

The locations will be listed in the 'Location' window based on the above selection.

STEP 3 Count and Pick Parts

Go to the shelf location shown in large red text on the screen and count the parts as you Pick them from the bin.

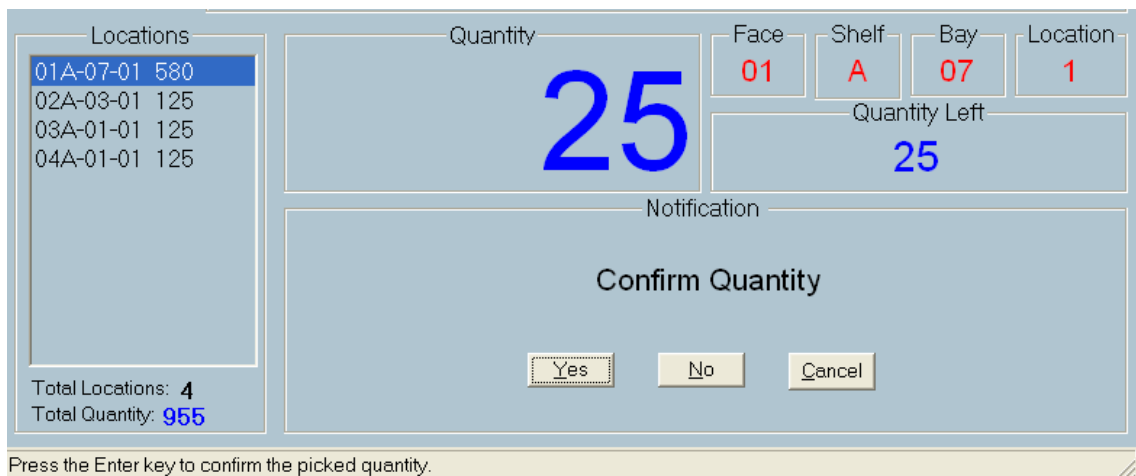

STEP 4 Confirm Quantity

Return to the console and confirm the Pick quantity by pressing **Enter** or use the mouse to click **Yes**. The quantity to confirm is shown in large blue text on the screen.

The Pick process is now complete.


- If the pick quantity reduces the RackMAN location quantity to zero, proceed to **STEP 5**.
- If there was insufficient stock for you to Pick, proceed to **STEP 6**.

NOTE: The range of questions presented in the 'Notification' area on the Pick form will vary depending on the system configuration parameters. The following examples are based on no 'Auto Answer' responses in the RackMAN configuration.

Refer to the RackMAN Technical Manual for details regarding system 'Auto Answer' settings.

STEP 5 Is Location Empty?

RackMAN will present the question 'Is Location Empty?'.

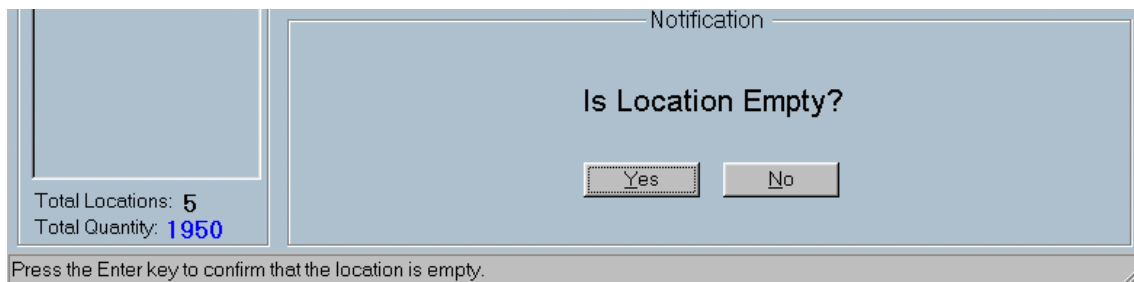

STEP 5A Is Location Empty? - Yes

If the location is empty, confirm this by pressing **Enter** or click **Yes** with the mouse. RackMAN will then do the following:

Fixed Single


The location quantity will be set to zero and the location will be held for use by the same part next time it is placed in to the shelving.

Dynamic

The location will be freed for use by any other part during the Place process.

Fixed Multi

The operator will be asked if the location should be kept for the current part or freed for use by another part.

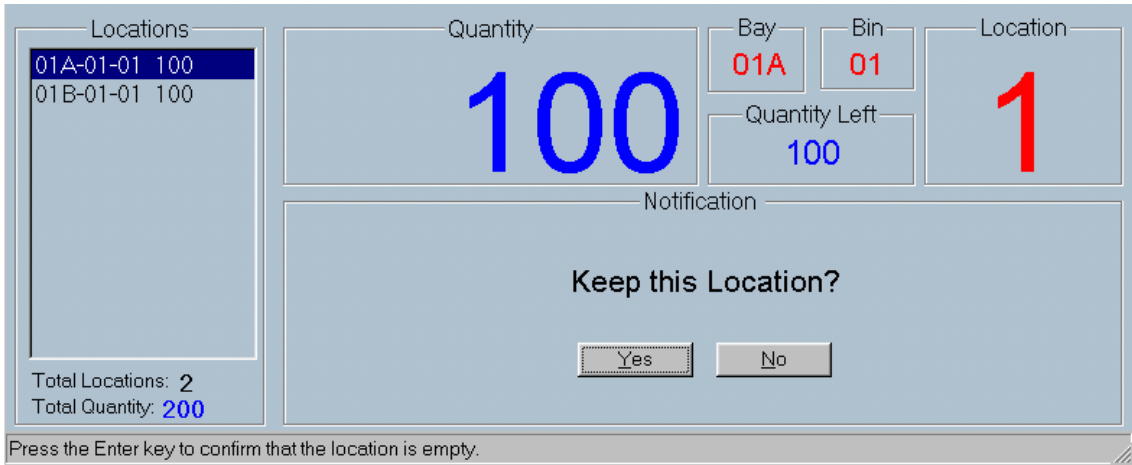


If Yes The cursor defaults to the Yes button so press **Enter**. The location will remain allocated to that Part Number.

If No **Tab** to the No button, then press **Enter**. The location will be freed up.

STEP 5B Is Location Empty? - No

If the location is not empty, **Tab** to the No button and press **Enter**. The following 'Quantity' form will be displayed:

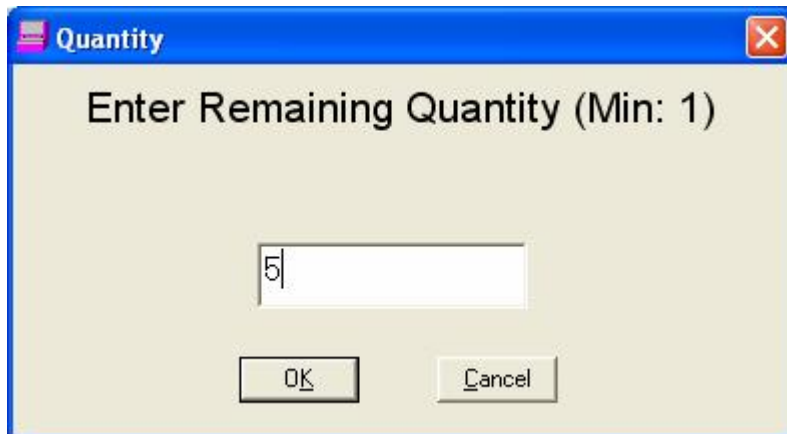

Type in the quantity that is left in the bin and press **Enter**.

RackMAN will update the location with the quantity entered, correcting the stock error. These items will be picked next time the part is required.

The Pick operation is now complete. Return to **STEP 1** to pick the next item using Pick \ Single or Pick \ List.




STEP 6 Insufficient Stock

There are two reasons why the quantity should be confirmed as 'No'; either there is insufficient stock in the location or the pick quantity needed to be changed.




Tab to the No key then press **Enter**. RackMAN will present the following question:

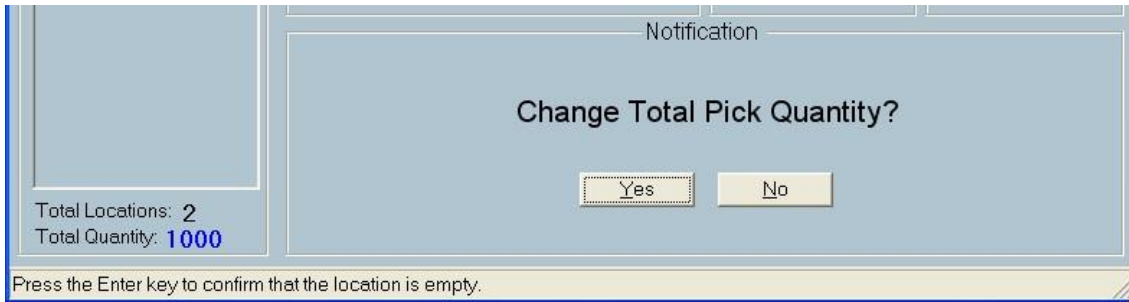

STEP 6A Confirm Quantity No – Change Pick Quantity


To change the required pick quantity, press **Enter** or use the mouse to click Yes. The following form will be displayed:

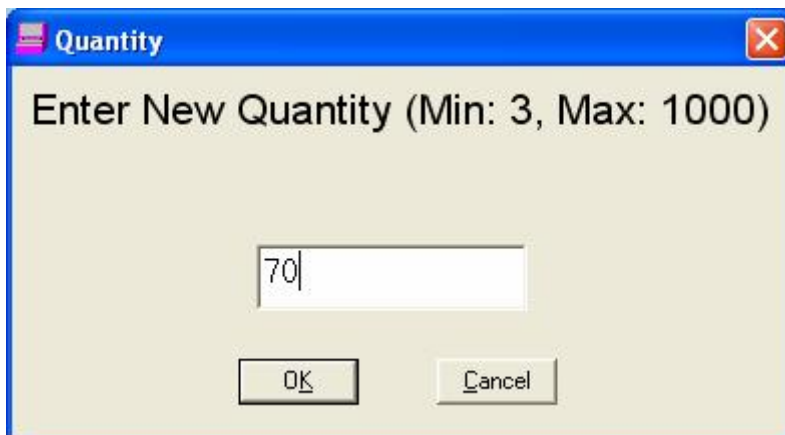

Enter the new quantity (which must be in the range presented by RackMAN) and press **Enter**. Return to **STEP 3** and confirm the quantity as normal.


STEP 6B Confirm Quantity No - Insufficient Stock

If there was insufficient stock in the location presented by RackMAN, you must correct the location quantity:

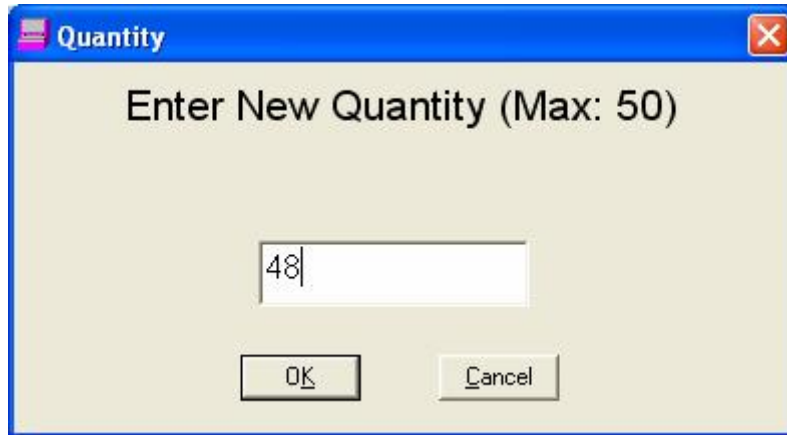

Enter the actual available quantity (which must be less than or equal to the original quantity) and press **Enter**.

RackMAN will update the location quantity with the enter quantity and then present the question:

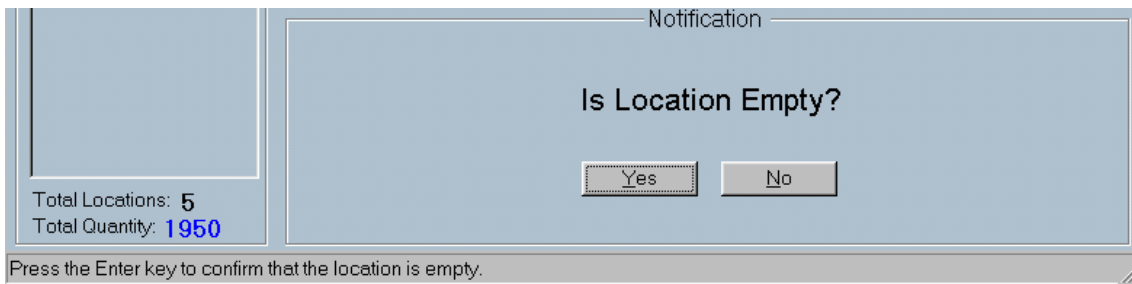

Return to **STEP 5** to complete the operation.


4.1.3 Pick \ Print List Summary & Confirm Printed Lists

The purpose of this method is to allow the operator to collect a number of Pick Lists, print a consolidated pick summary (sorted in location order), physically collect the required quantities and then return to the RackMAN console to confirm the correct pick information. The pick confirmation is also handled in a consolidated manner.

In the main menu use the ↑ and ↓ arrow keys to select Print List Summary and press **Enter**.



Select the required lists from the 'Lists Available' window (refer to Section 6 for a description of how to select lists) and press **Alt C** or click Continue:

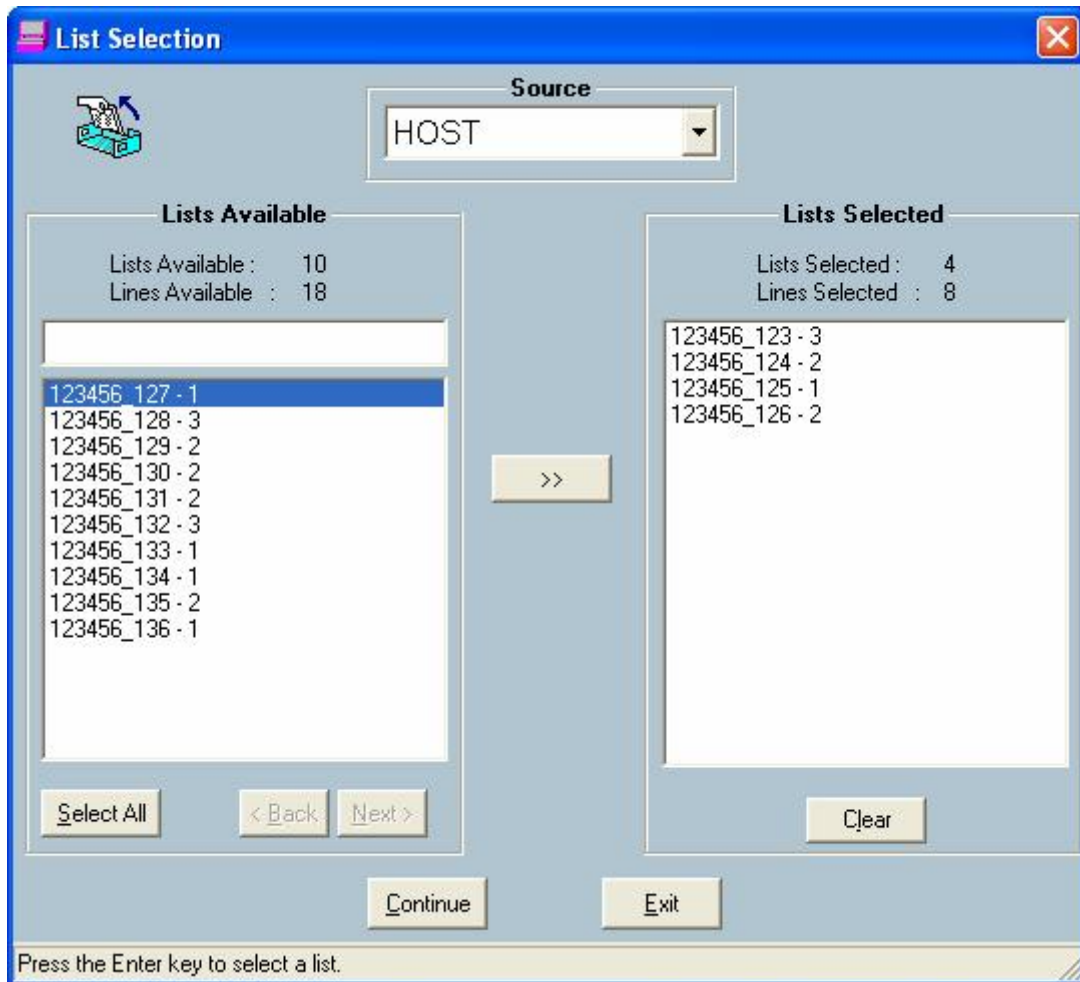



A consolidated RackMAN Pick Summary will be printed. The print summary should have the following appearance (image is cropped):

RackMAN Pick Summary

<p>① Printed Date 28-05-2009 11:02:18</p>	<p>② Batch No 0528110217</p>																															
<p>③ Tote Bin No. Order No.</p>																																
1	123456_123																															
2	123456_124																															
3	123456_125																															
<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 20%; text-align: center;">④ Location</th> <th style="width: 40%; text-align: center;">⑤ Part Number</th> <th style="width: 10%; text-align: center;">⑥ Quantity</th> <th style="width: 10%; text-align: center;">⑦ Picked</th> <th style="width: 10%; text-align: center;">⑧ Tote Bin</th> </tr> </thead> <tbody> <tr> <td>003A-02-01 120</td> <td>074-022 765896 (exp. 2009-10-06) <i>150mm Engineers Square / Rimet</i></td> <td style="text-align: center;">5 5</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">1</td> </tr> <tr> <td>002A-04-01 100</td> <td>080-514 1369 (exp. 2010-03-04) <i>24mm ID Labels Pink</i></td> <td style="text-align: center;">19 19</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">2</td> </tr> <tr> <td>002A-04-01 100</td> <td>080-514 1369 (exp. 2010-03-04) <i>24mm ID Labels Pink</i></td> <td style="text-align: center;">9 9</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">3</td> </tr> <tr> <td>002A-05-01 60</td> <td>066-002 5648 (exp. 2011-03-10) <i>4mm Aluminium h Holder (3000mmL)</i></td> <td style="text-align: center;">15 15</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">1</td> </tr> <tr> <td>002A-05-01 60</td> <td>066-002 5648 (exp. 2011-03-10) <i>4mm Aluminium h Holder (3000mmL)</i></td> <td style="text-align: center;">12 12</td> <td style="text-align: center;">_____</td> <td style="text-align: center;">1</td> </tr> </tbody> </table>			④ Location	⑤ Part Number	⑥ Quantity	⑦ Picked	⑧ Tote Bin	003A-02-01 120	074-022 765896 (exp. 2009-10-06) <i>150mm Engineers Square / Rimet</i>	5 5	_____	1	002A-04-01 100	080-514 1369 (exp. 2010-03-04) <i>24mm ID Labels Pink</i>	19 19	_____	2	002A-04-01 100	080-514 1369 (exp. 2010-03-04) <i>24mm ID Labels Pink</i>	9 9	_____	3	002A-05-01 60	066-002 5648 (exp. 2011-03-10) <i>4mm Aluminium h Holder (3000mmL)</i>	15 15	_____	1	002A-05-01 60	066-002 5648 (exp. 2011-03-10) <i>4mm Aluminium h Holder (3000mmL)</i>	12 12	_____	1
④ Location	⑤ Part Number	⑥ Quantity	⑦ Picked	⑧ Tote Bin																												
003A-02-01 120	074-022 765896 (exp. 2009-10-06) <i>150mm Engineers Square / Rimet</i>	5 5	_____	1																												
002A-04-01 100	080-514 1369 (exp. 2010-03-04) <i>24mm ID Labels Pink</i>	19 19	_____	2																												
002A-04-01 100	080-514 1369 (exp. 2010-03-04) <i>24mm ID Labels Pink</i>	9 9	_____	3																												
002A-05-01 60	066-002 5648 (exp. 2011-03-10) <i>4mm Aluminium h Holder (3000mmL)</i>	15 15	_____	1																												
002A-05-01 60	066-002 5648 (exp. 2011-03-10) <i>4mm Aluminium h Holder (3000mmL)</i>	12 12	_____	1																												

The Pick Summary displays the following information:

	Item	Description
1	Printed data and time	Time stamp when summary was printed
2	Batch Number	The batch number is allocated by RackMAN and is used to associate all the lists in the batch
3	Tote Bin No / Order No	Each order is allocated to a Tote bin No. This is intended to assist the operator to located the order quickly when picking by location. This number matches the number 'Tote Bon' number at item 8
4	Location Loc Qty (Reserved Qty)	Displays the location that the item is located in. Location selection is based on the BSM. Underneath the location, the summary indicates the expected location quantity. This can be used as a spot check for the stock integrity in the location.
5	Part Number Lot Number Expiry Date Description	Displays the Part Number. The Lot Number (if used) and Expiry Date (if used), also Description are displayed under the Part Number.
6	Quantity (Available) Quantity (List Quantity)	The top figure is the quantity available to be picked from the location. The bottom figure is the total quantity required in the list file.
7	Picked	Use this field to write the actual quantity picked if this differs from the required quantity, otherwise just tick the field
8	Tote Bin	This field indicates which order the item is for.




The operator should take the pick summary and record the actual quantities picked on the summary prior to returning to the RackMAN™ console.

After printing the pick summary, the lists will be available for confirmation using 'Confirm Printed Lists':

In the main menu use the ↑ and ↓ keys to select Confirm Printed Lists and press **Enter**.



The following form will be displayed:

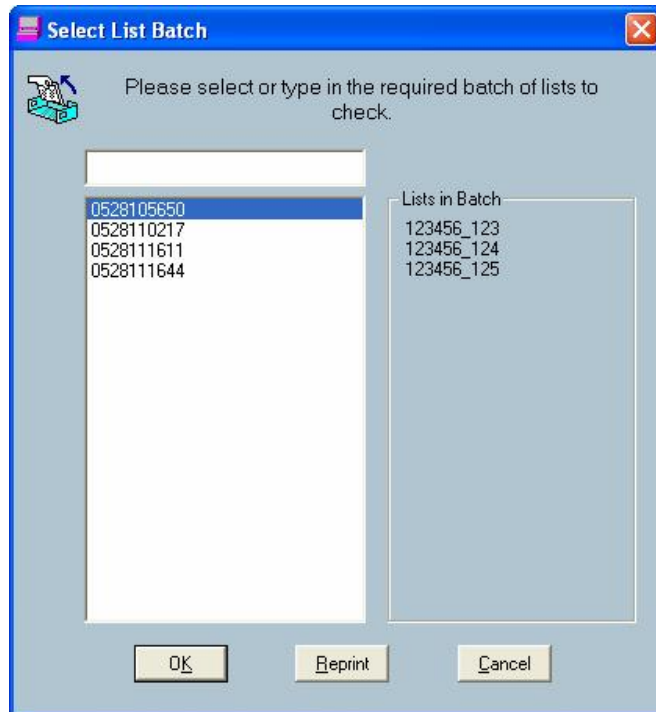

You need to select the batch that you have just picked. The batch number is noted on the top right hand corner of the Pick Summary as shown below.

When you click on the relevant batch, each of the lists in the batch will be displayed. Use this information to ensure you have selected the correct batch.

RackMAN Pick Summary

Printed Date
28-05-2009 11:02:18

Batch No
0528110217



Tote Bin No.	Order No.
1	123456_123
2	123456_124
3	123456_125



It is possible to reprint the Pick Summary from this form prior to processing the completed batch.

Click OK to select the batch for confirmation.

The following form will be displayed.

Pick List Check Items

Batch: 0528110217

Part No.	Lot (Expiry)	Location	Quantity	Remain
<input checked="" type="checkbox"/> 074-022	765896 (exp. 2009-10-...)	003A-02-01	6 (5)	115
<input type="checkbox"/> 080-514	1369 (exp. 2010-03-04)	002A-04-01	19	81
<input type="checkbox"/> 080-514	1369 (exp. 2010-03-04)	002A-04-01	9	91
<input checked="" type="checkbox"/> 066-002	5648 (exp. 2011-03-10)	002A-05-01	15 (do...)	45
<input type="checkbox"/> 066-002	5648 (exp. 2011-03-10)	002A-05-01	12	48
<input type="checkbox"/> 066-002	5648 (exp. 2011-03-10)	002A-05-01	8	52

Quantity: 12 Confirm Confirm All Close

The form will list all items in location order as shown on the Pick Summary. Items that were listed as unavailable will be indicated with a red cross at the bottom of the list.

The form shows the following information / functionality:

Item	Description
1 Batch Number	Pick Summary Batch Number
2 Part Number	Item Part Number
3 Lot Number and Expiry Date	Displays the part Lot and Expiry Number. Only if it is applicable to your company.
4 Location	Location Item was picked from
5 Quantity	Quantity to be picked from Location
6 Remain	Quantity remaining in Location after the pick is completed
7 Quantity / Confirm	Shows the quantity required for the item. Change the value and click <u>C</u> onfirm if this quantity needs to be changed. The relevant Pick dialogue will be presented (refer Pick \ Single)
8 Confirm <u>A</u> ll	If all item quantities have been picked as indicated, click this button to confirm all items in one action.
9 <u>C</u> lose	Close the form after you have completed the item confirmation.



If you have successfully picked all items in the list, click '**Confirm All**' or use **Alt A** to confirm all items. Each item will be marked with a green tick. Close the form.


The indicator has the following meaning:

Indicator	Description
<input type="checkbox"/>	Empty Item has not been confirmed
<input checked="" type="checkbox"/>	Green tick Item has been confirmed by operator. No changes have been made.
	Blue side arrow Item quantity has been modified.
	Red Cross Item is unavailable due to zero stock

4.1.4 Adjust Quantity


If you picked more or less than the quantity shown in the quantity field you can adjust this to match what you actually picked. The relevant Pick \ Single dialogue will be presented.

Use the mouse or **Tab** to the Line Items window and using the **↑↓** keys, highlight the part number you would like to modify.

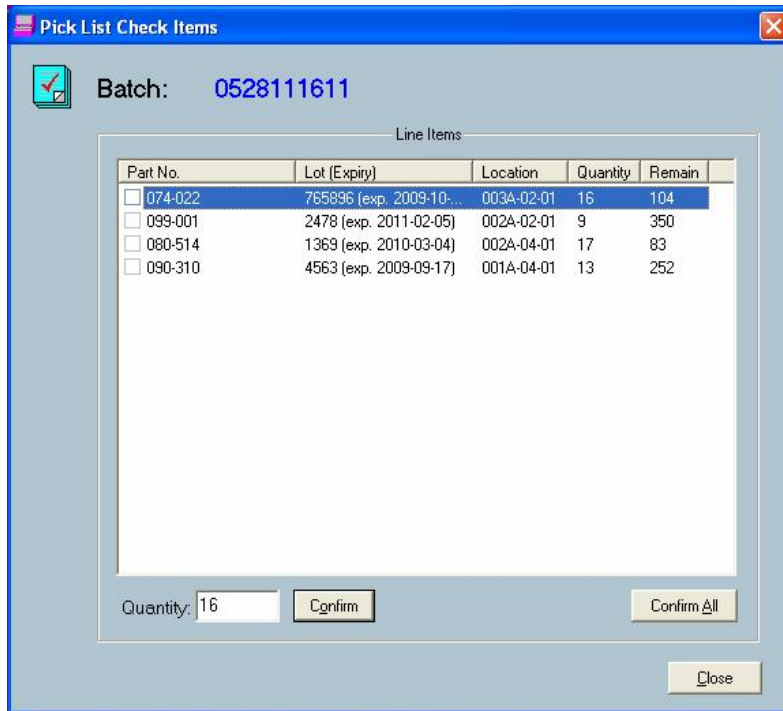




Once your choice is highlighted **Tab** to the Quantity field and type in the new quantity, then **Tab** to the **C**onfirm button and press **Enter**, or press **Alt & O**.

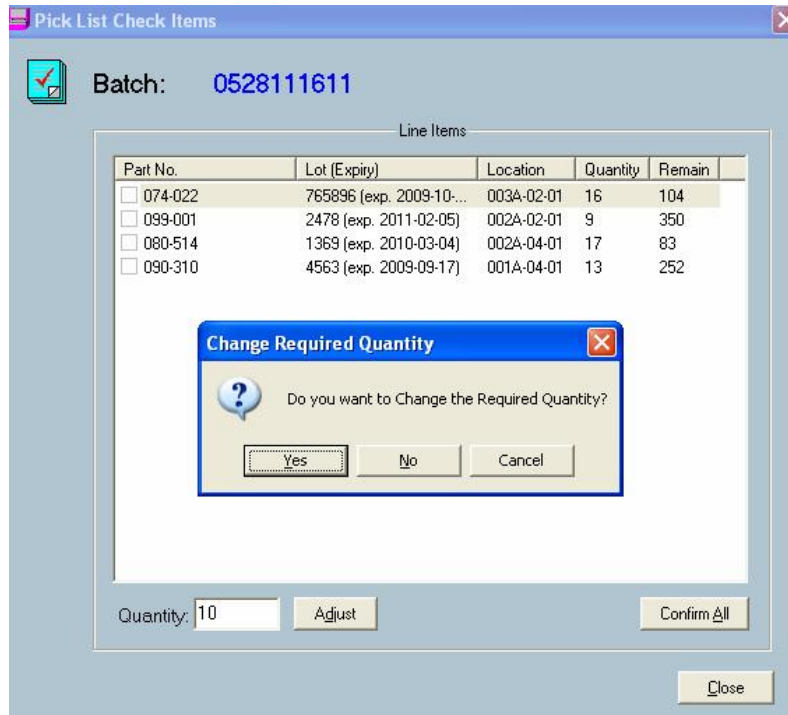

The 'Change Required Quantity' dialogue will be presented. Press the **Enter** key to confirm the change in quantity.

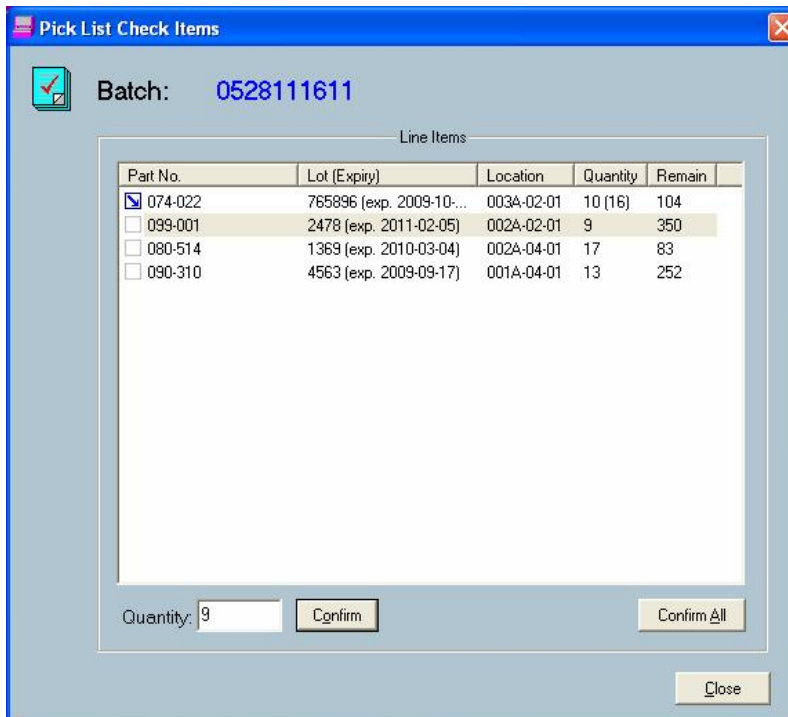


The item will be marked with a blue arrow indicating that the quantity has changed. The actual picked quantity will be shown in brackets in the quantity field as shown above.

Confirm any other items as normal and then close the form to complete the operation.




4.1.5 Confirm All

If no changes are required for item quantities, **Tab** to the Confirm All button and press **Enter**, or press **Alt & A**.

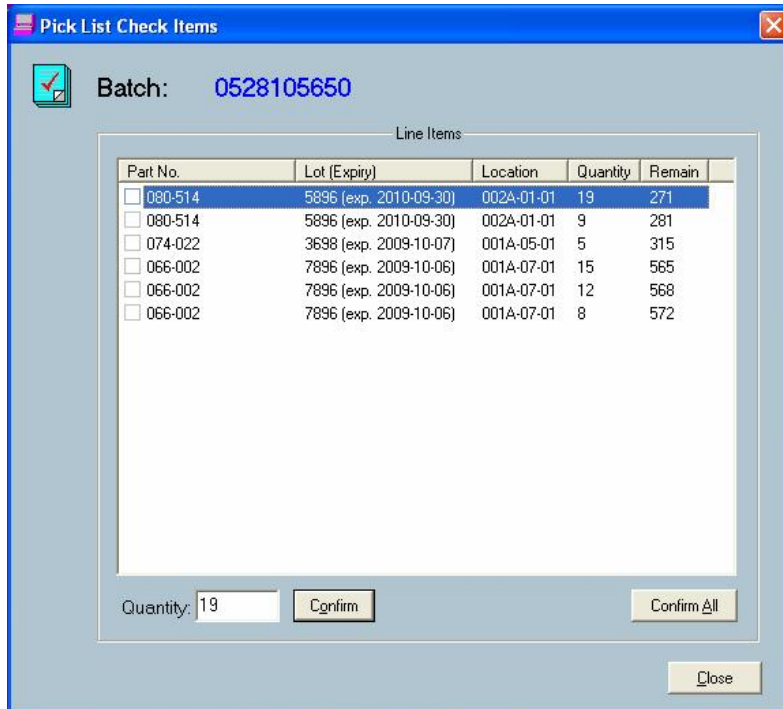

Each item indicator will be marked with a green tick to show that all items have been confirmed.

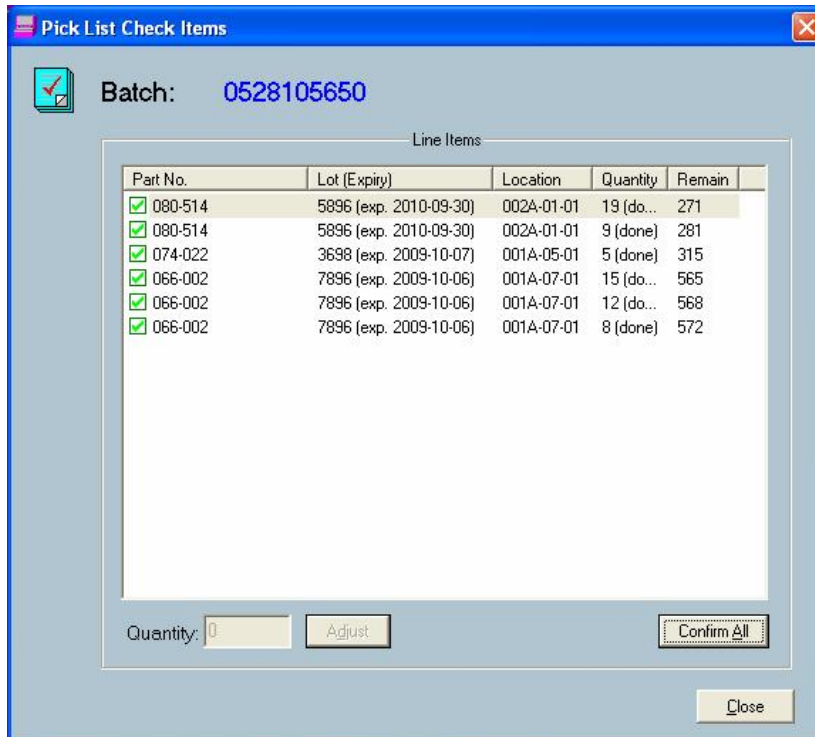

Close the form to complete the operation.

4.2 Pick Method – With Lot Number

Lot Number handling is used to uniquely identify items in the storage system. The Lot Number can be alphanumeric and generally signifies a manufacturing batch, date or expiry date.

4.2.1 Pick \ List

When using Lot Numbers in lists, the Lot Number is generally sent down to the system in the host Pick file. RackMAN will select a location for picking based on the Part Number / Lot Number combination sent down in the file.

If the Lot Number is left blank, RackMAN will pick based on its normal location selection rules.

4.2.2 Pick \ Single

At **STEP 1** in your Pick process (enter a Part Number), press the **Enter** key once to move the cursor to the Lot Number field:

Locations	Quantity	Face	Shelf	Bay	Location
01A-07-01	545				
02A-03-01	125				
03A-01-01	125				
04A-01-01	125				
02A-05-01	45				
02A-06-01	115				
03A-03-01	250				

Total Locations: 7
Total Quantity: 1330

The Pick form will show all locations where the Part Number has been placed. The locations will be listed in the order determined by the 'Bin Selection Mode' rules (refer to Technical Manual for details).



To pick a particular Lot Number, enter the Lot Number into the field and press **Enter**:

The form will now show the locations where the Part / Lot Number combination is placed.

NOTE: If 'Unique Lot Number Support' is active, it is possible to pick by Lot Number alone.

If the Lot Number does not exist, the following message will be displayed:





4.2.3 Pick \ Print List Summary & Confirm Printed Lists

When using the List Summary, the Lot Number will be printed underneath the Part Number as shown in the example below:

RackMAN Pick Summary

Printed Date
28-05-2009 11:02:18


Batch No
0528110217



Tote Bin No.	Order No.
1	123456_123
2	123456_124
3	123456_125

Location	Part Number	Quantity	Picked	Tote Bin
003A-02-01 120	074-022 765896 <i>150mm Engineers Square / Rimet</i>	5 5	_____	1
002A-04-01 100	080-514 1369 <i>24mm ID Labels Pink</i>	19 19	_____	2

 Lot Number

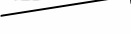

The Lot Number will also be displayed in the Check Items form. This example shows 2 items that are available to be picked and 3 items that were unavailable.

Pick List Check Items

Batch: 0528133722

Part No.	Lot No.	Location	Quantity	Remain
<input type="checkbox"/> 173-151	D2465	004A-02-01	15	10
<input type="checkbox"/> 025-029	0256	002A-07-01	5	140
<input checked="" type="checkbox"/> 057-022		No location		
<input checked="" type="checkbox"/> 090-1304		No location		
<input checked="" type="checkbox"/> 090-314		No location		

Quantity: 15 Confirm Confirm All Close

Confirm the items and close the form as normal.

5 Place Introduction

RackMAN™ offers a variety of Bin Allocation Methods (BAM) for storage of parts into your static racking. Your system has been configured in one of the ways described below. Please refer to the section that relates to your system type for detailed instructions on the standard placing process.

NOTE: If you are unsure of your system type, please ask your supervisor


Section	Type	Description
5.1.2 Step 2	Fixed Single	<ul style="list-style-type: none"> Each item is Placed by Part Number into a single location in the static racking. When a part location becomes empty, the location is retained for that part.
5.1.2 Step 2	Dynamic	<ul style="list-style-type: none"> Each item is placed by Part Number into a new location in the static racking. When a part location becomes empty, the location is freed for storage of another part.
5.1.2 Step 2	Fixed Multi	<ul style="list-style-type: none"> RackMAN™ offers the operator a choice either to Place a part in to a new location or to an existing location for that part number. RackMAN™ offers a choice when a part location becomes empty to either free the location or retain the location for that part.

The sections above describe standard Place operations. For alternatives when Placing, refer to the following sections:

5.1.2 Step 5B	Change Place Quantity	<ul style="list-style-type: none"> When placing parts you may have a quantity discrepancy, RackMAN™ easily allows you to change the quantity you are placing.
5.1.2 Step 5B	Split Placing	<ul style="list-style-type: none"> When placing parts to a bin that already has stock, you may not be able to fit all the stock in the bin. You can easily Split the Place over multiple locations. <i>THIS OPTION IS NOT AVAILABLE WHEN USING FIXED SINGLE.</i>
5.1.2 Step 3	Select Location Manually	This section provides detailed instruction on selecting a location manually. In the examples that follow, the location selection is set to automatic
5.3	Return to Stock	The Return to Stock option is used if you received parts back into the static racking for credit. When parts are Placed using Return to Stock, the location is given a time stamp which marks the location as the oldest for that part. <i>NOTE: THIS OPTION IS NOT AVAILABLE WHEN USING FIXED SINGLE.</i>
5.4	Place with Lot Number	Placing by Part Number / Lot Number allows the same part to be placed discretely for each instance of a new Lot number.
5.1.3	Place by List	Refer to this section for details on selecting Place Lists.



The 'Place' Screen – at a glance

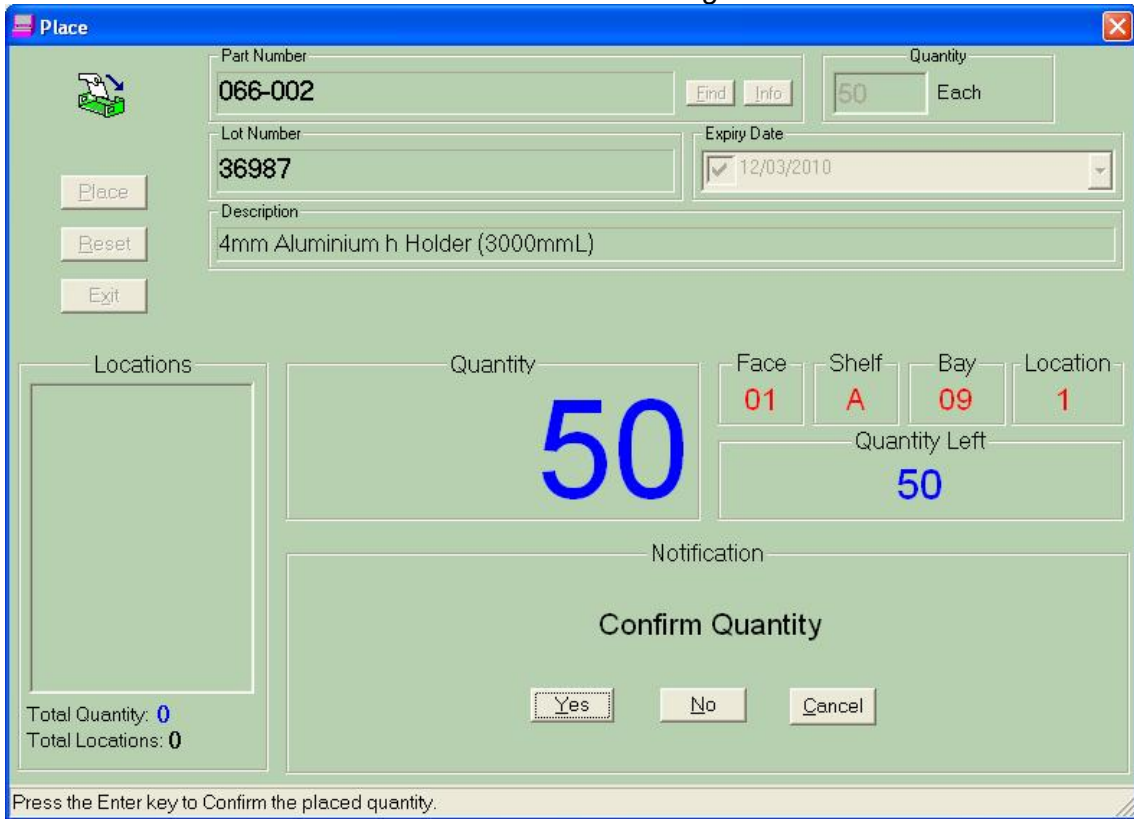


Item	Description
1 Part Number Box	Displays the current found part number, <u>F</u> ind button and <u>I</u> nfo button
2 Lot Number Box *	Displays the Lot Number. *This will only be displayed if it is selected in the Placing Configuration Form.
3 Expiry Date Box *	Displays the Expiry Date. *This will only be displayed if it is selected in the Placing Configuration form.
4 Description Box	Displays the current parts description
5 Small Quantity Box	Displays the total quantity to Place
6 Large Quantity Box	Shows the current quantity to Place
7 Quantity Left	Displays the remaining quantity to Place
8 List Identifier Box	Displays the List this Place operation comes from
9 Locations Box	Displays the current part location(s) and their quantities Displays total of locations and total of quantities
10 Face Box	Displays current face
11 Shelf Box	Displays current shelf
12 Bay Box	Displays current bay
13 Location Box	Displays current location
14 Notification Box	Displays current message
15 Reset Box	Will clear the form
16 Exit Box	Will close the window
17 Colour	Green



5.1 Place Methods

The Place form is available from the Main Menu. Use the **↑** and **↓** arrows or the mouse to move to the required menu item and press **Enter**:

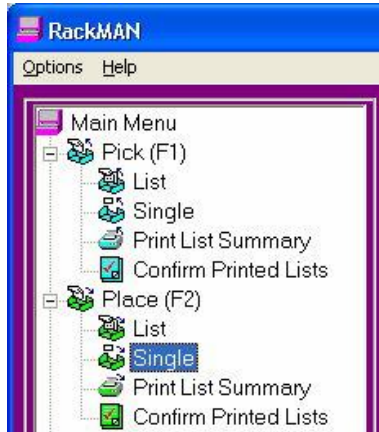

Place menu items have the following functionality:

- **List**
Use this method to place a range of items based on list files created locally (at the RackMAN console) or by the host system. Place \ List requires data entry at the RackMAN console for each place location.
- **Single**
Use this method to place / confirm small numbers of items directly at the RackMAN console.
- **Place List Summary & Confirm Printed Lists**
Use this method to place a range of items based on list files created by the host system. This method is used to print consolidated place slips and undertake group confirmation of placed items.

5.1.1 Place \ List

Refer to Section 7 for details of how to select Place lists. Once the list has been selected, refer to Section 5.1.2 for the typical Place dialogue.

5.1.2 Place \ Single

This section describes all dialogues for the Place Bin Allocation Modes (BAM). Please contact your Supervisor to understand the type of BAM in use.

STEP 1 Enter Part Number

Type in, or **F**ind the part number of the item you are going to Place then press **Enter**.



STEP 2 Enter Quantity

Type in the quantity that you want to Place then press Enter.

The screenshot shows a software window titled "Place" with a green background. At the top left is a small icon of a hand placing a box. The main area contains a "Part Number" field with the value "090-314" and two buttons, "Find" and "Info", to its right. To the right of the Part Number field is a "Quantity" field with the value "100" and the word "Each" below it. Below the Part Number field is a "Description" field containing the text "10A BELLING LEE Two Stage Filter with earth line choke (SF4)". On the left side of the window, there are three buttons: "Place", "Reset", and "Exit".

RackMAN™ will select a storage location based on the selected Bin Allocation Mode (BAM).

Fixed Single

If you are using the 'Fixed Single' storage mode, the part will be located in only one location. Proceed to STEP 3 if the part has no location. Proceed to STEP 3E if the part has a location.

Dynamic

If you are using the 'Dynamic' storage mode, the part may be located in multiple locations and will be located to a new location each time it is placed. Proceed to STEP 3.

Fixed Multi

If you are using the 'Fixed Multi' storage mode, the part can be located in a new location or to an existing location, depending on the place option chosen. Proceed to STEP 3 if the part does not have a location and STEP 3E to place it to an existing location.

The Place Options available in Fixed Multi mode are:


- User
Use the ↑ and ↓ arrows to select the required location from the 'Locations' window.
- Emptiest Location
RackMAN will select the location which has the lowest stock holding.
- Closest Location
RackMAN will select the location 'Closest' to the 01A position.



STEP 3 Choose Location


STEP 3A Choose Face

The available faces will then be displayed. Choose the face you wish to Place to by using the **up(-)** and **down(↓)** arrow keys to highlight the face you want and then press **Enter**.

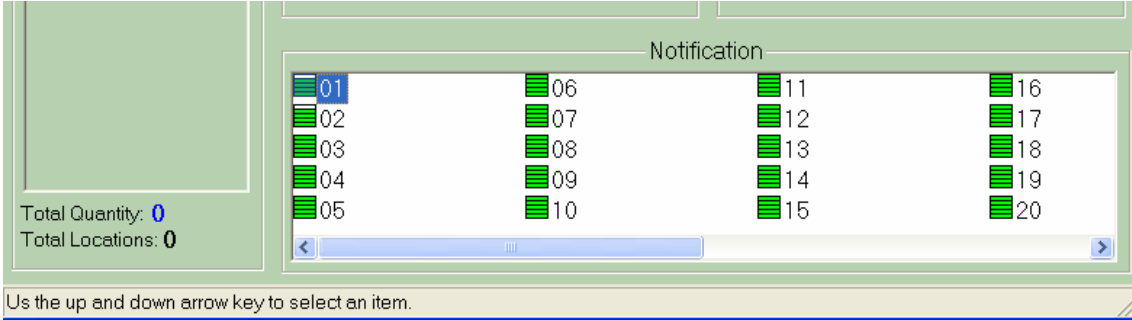


STEP 3B Choose Bay

The available bays will then be displayed. Choose the bay you wish to Place to by using the **up(-)** and **down(↓)** arrow keys to highlight the bay you want and then press **Enter**.

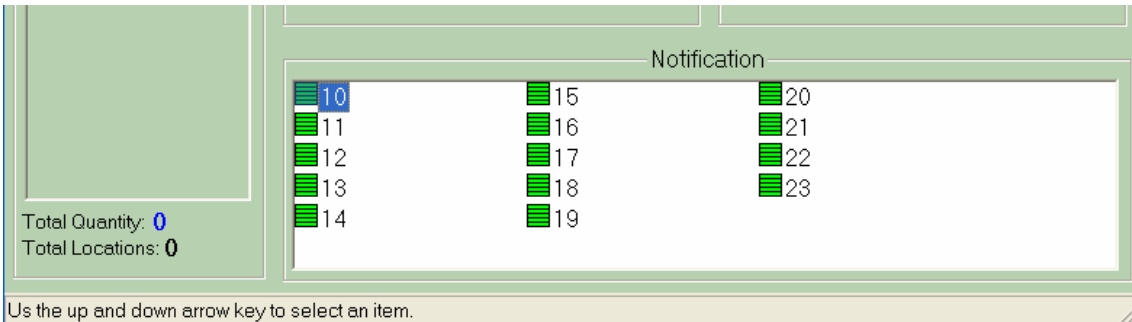

STEP 3C Choose Shelf


The available Shelves will then be displayed. Choose the Shelf you wish to Place to by using the **up(-)** and **down(↓)** arrow keys to highlight the shelf you want and then press **Enter**.

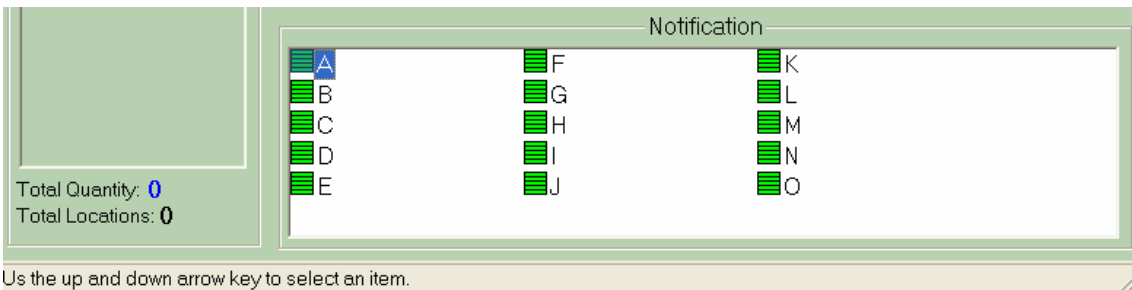




STEP 3D Choose Location

The available Locations will then be displayed. Choose the Location you wish to *Place* to by using the **up(-) and down(↓) arrow keys** to highlight the shelf you want and then press **Enter**.

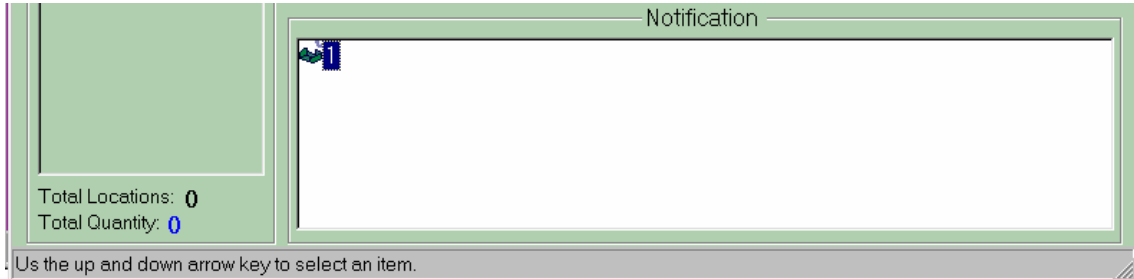

RackMAN™ will then place the item in the location you have chosen.

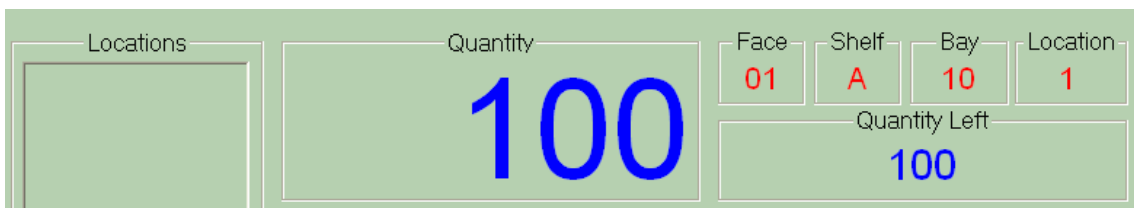

Proceed to STEP 4.

STEP 3E Place to Existing Location

If a location already exists for the item, it will be highlighted in the Locations window:



STEP 4 Count and Place Parts

The required location is shown in red text on the screen. Count the parts as you *Place* the parts away into the location.




STEP 5 Confirm Quantity

The RackMAN dialogue will vary depending on the storage mode in use.

Fixed Single

- You will be asked 'Is Location Large Enough?'. If the location is large enough, proceed to STEP 5A. If the location is not large enough to Place the required quantity, **Tab** to the **No** button and then press **Enter**. RackMAN will require you to pick all stock from the location and place to a new location. Proceed to **STEP 8**.

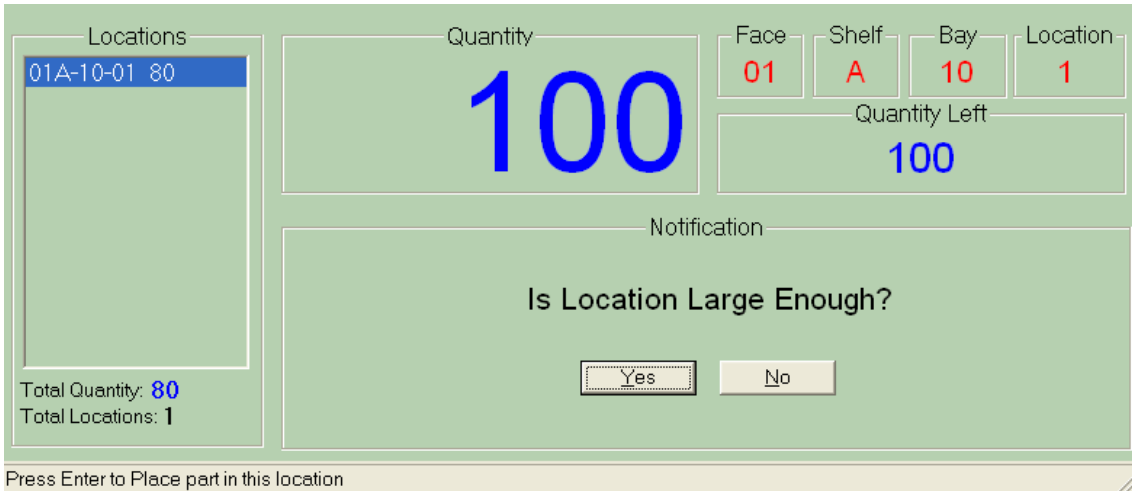

Dynamic


- Standard 'Confirm Quantity' dialogue is presented.

Fixed Multi

- Standard 'Confirm Quantity' dialogue is presented.

STEP 5A Confirm Quantity - Yes

The quantity to confirm is shown in large blue text on the screen.

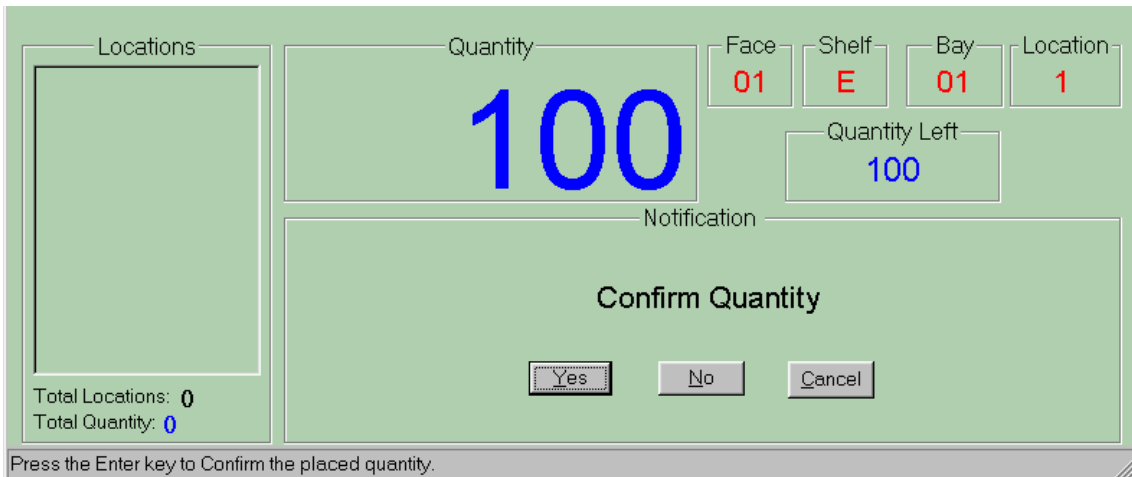

After a part is placed, RackMAN™ will record the location and quantity details for the item.

The Place process is now complete. Return to STEP 3.

STEP 5B Confirm Quantity - No

The RackMAN dialogue will vary depending on the storage mode in use. The following example shows an original place quantity of 100 which is then reduced to 80.

Fixed Single

- RackMAN will accept the new quantity without any additional questions.


Dynamic

- RackMAN will request the new quantity and then ask if the stock should be Split over two or more locations i.e. Split Place?.


Fixed Multi

- RackMAN will request the new quantity and then ask if the stock should be Split over two or more locations i.e. Split Place?.

Tab to the No button and then press **Enter**.

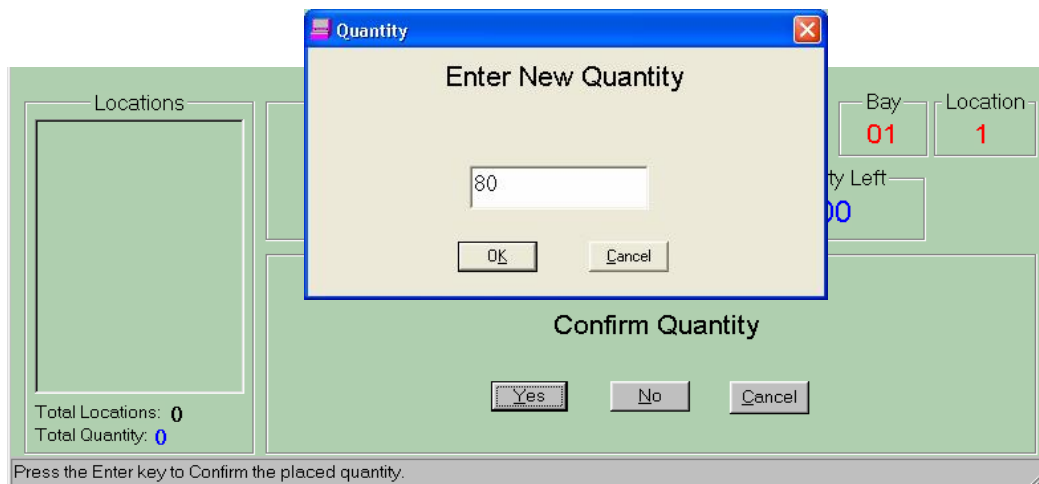

The 'Quantity' form will be displayed. Enter the new quantity and click OK. The Split Place? question will be presented:

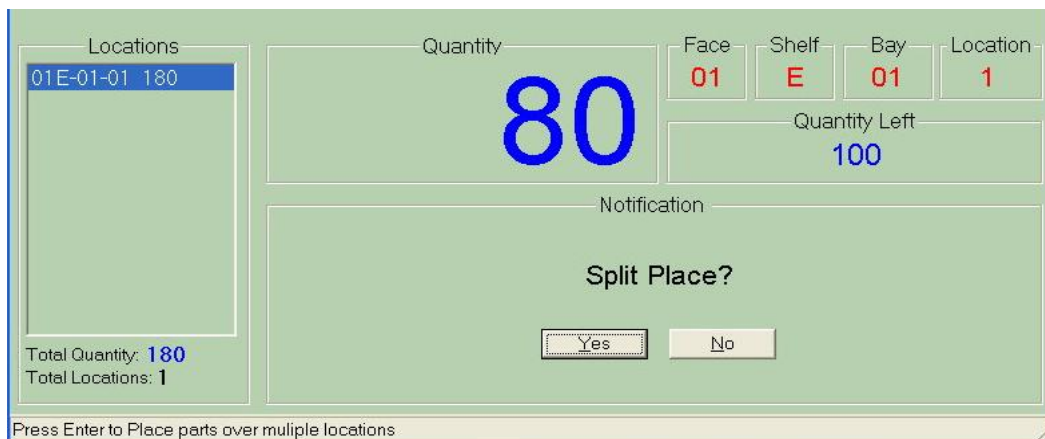

If the quantity is genuinely reduced to 80, click No and RackMAN will increase the location quantity by 80.

Alternatively, if you want to split the quantity over two or more locations, click Yes. You will be required to confirm the first quantity of 80 (refer STEP 5A) and then place the balance (20) to a new location (refer STEP 3).




STEP 6 Is Location Large Enough? - No [Fixed Single]

If the location is not large enough, you will be required to pick all the stock from the location and place to a new location:



STEP 6A Confirm Pick Quantity

Pick all the stock out of the location and confirm the Picked quantity by pressing **Enter**. The quantity to confirm is shown in large blue text on the screen. Confirm the Pick quantity even if the actual quantity does not match the displayed quantity. Proceed to **STEP 6C**.

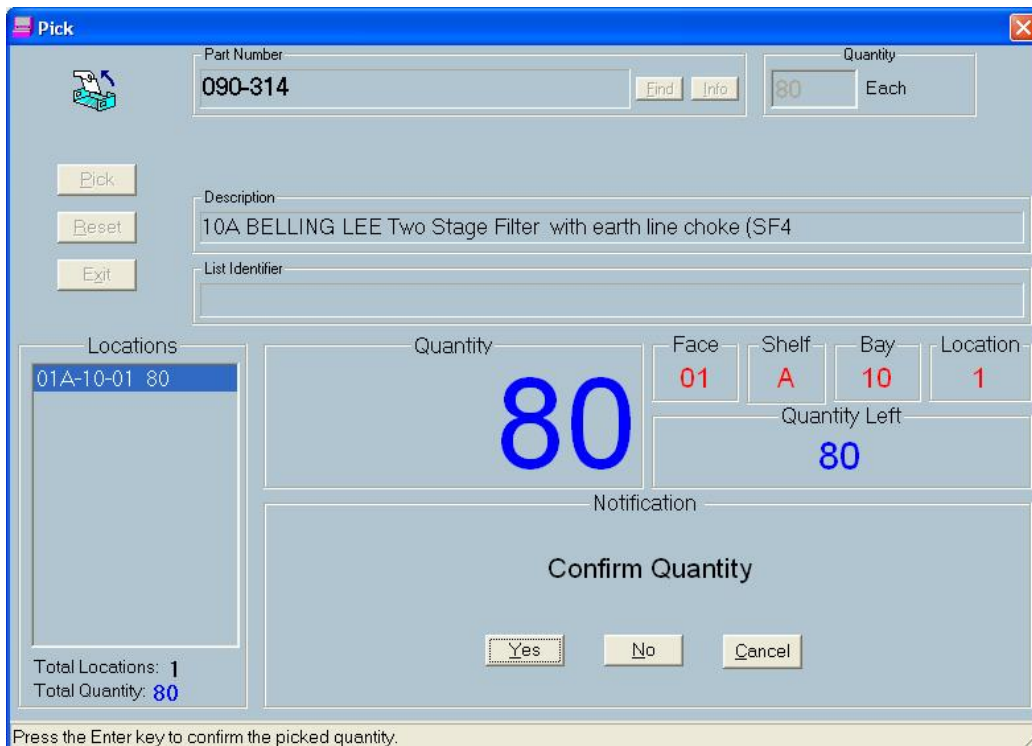

STEP 6B Confirm Empty Location

Confirm the location is empty by pressing **Enter**.

STEP 6C Place to new Location

You will be returned to the Place dialogue (refer to **STEP 3**) and will need to select a new location.

Locations

Quantity

180

Face 01 Shelf A Bay 11 Location 1

Quantity Left

180

Notification

Confirm Quantity

Yes No Cancel

Total Quantity: 0
Total Locations: 0

Press the Enter key to Confirm the placed quantity.

STEP 6D Confirm Total Quantity

Confirm the new quantity by pressing **Enter**. The quantity to confirm is shown in large blue text on the screen.


RackMAN will present the quantity picked out of the previous location plus the quantity you have to place. If the actual stock quantity differs, update the quantity here.

The form will also display the new location:

Press **Enter** to confirm the total quantity into the new location


5.1.3 Place \ Print List Summary & Confirm Printed Lists

In the main menu use the ↑ and ↓ keys to select Print List Summary. And press **Enter**.

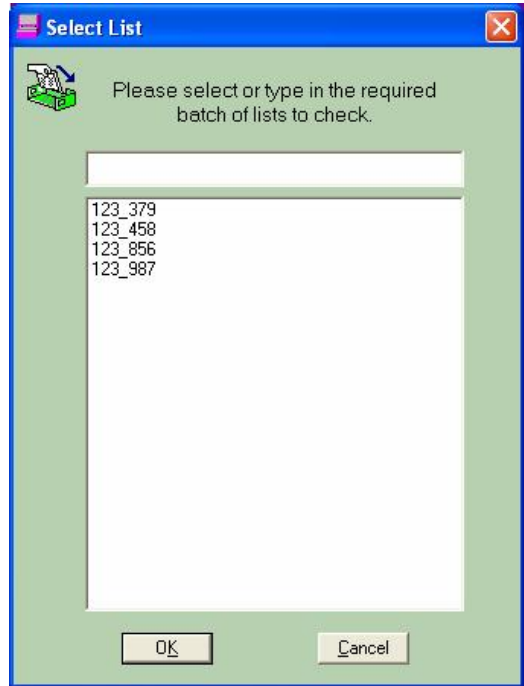

To Print a Place List Summary select a list file from the available list. **Tab** into this field and use the ↑ and ↓ keys to select your desired list, once highlighted **Tab** to the **OK** button and press **Enter** or **Alt & K**. Or you can either type in number or use the barcode scanner to select your desired list.

Once the **OK** button has been pressed the 'Place List Print' form will then be displayed:

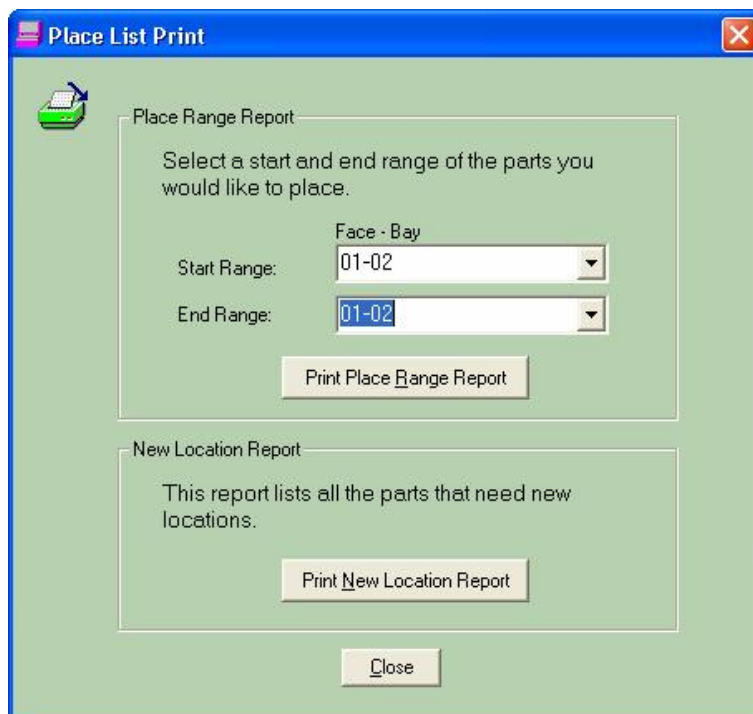



5.1.3.1 Place Range Report

Fixed Single and Fixed Multi BSM

To print a report on all the parts that have been placed in the system **Tab** to the Start Range drop down list and press **F4**, this will drop down a list of all available locations.

Use the \uparrow and \downarrow keys to select the Start Range. Once highlighted **Tab** to the End Range drop down list and press **F4**, this will drop down a list of all available locations.

Click on or **Tab** to the Print Place Range Report button and the list of existing locations will be printed. The report will have the following appearance:

RackMAN Place Summary

Printed Date 16-04-2009 16:56:05 List Name PLACE001



Location	Part Number	Quantity	Placed
01A-02-01	090-001	30	_____
<i>XT-AT Adaptor 9 pin socket / 25 pin plug</i>			

Dynamic BSM

This report will not be available when this storage mode is used as each item is placed to a new (empty) location.

5.1.3.2 New Location Report

All storage modes

To print a report listing all the items that have NOT been placed in the system **Tab** to the Print New Location Report button and press **Enter** or press **Alt & N**. The report will have the following appearance:

RackMAN Place Summary

Printed Date 16-04-2009 17:02:00 List Name PLACE001




Part Number	Quantity	Location
090-005 <i>2m Parallel Extension Cable. (D25M-D25F)</i>	30	_____
090-012 <i>LC6030 Shielded Extension Lead D15HD M/F-FILTER 2mtr</i>	30	_____
090-013 <i>Extension Lead / Keyboard / PS2 / LC6037</i>	20	_____

After the report has been printed **Tab** to the Close button and press **Enter** or press **Alt & C**.


5.2 Confirm Printed Lists

In the main menu use the \uparrow and \downarrow keys to select Confirm Printed Lists. And press **Enter**.

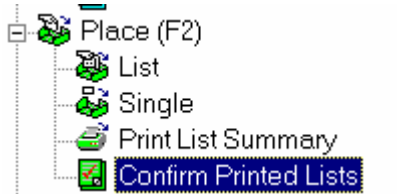

Once you have finished pacing items on your Place Summary, the lists will be available for confirmation under the 'Confirm Printed Lists' menu item.

Use the mouse or **Tab** into the main window to select the required list. Once your selection is highlighted press **Enter** or **Alt & K**. It is also possible to scan the barcode at the top of the summary to select the required list.

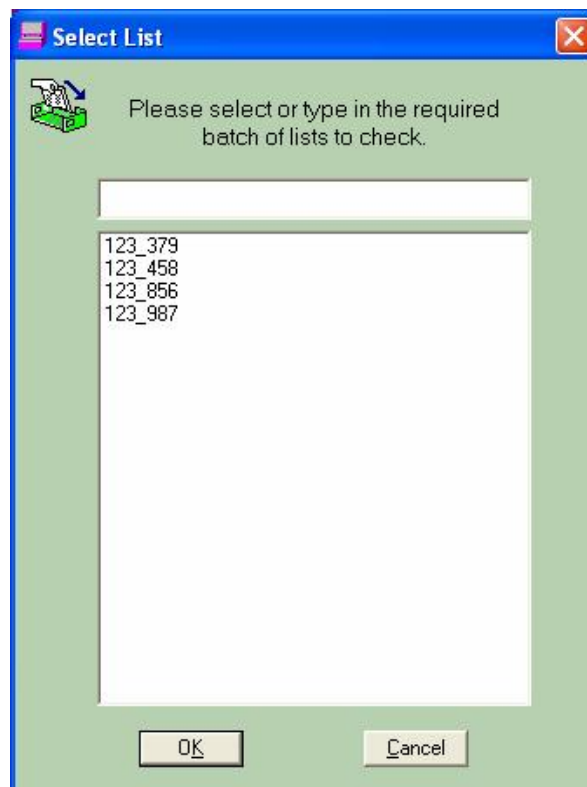

After selecting your list, the following form will be displayed, showing each of the items in the list:

Part No.	Location	Quantity
<input checked="" type="checkbox"/> 456	02A-03-01	100
<input type="checkbox"/> 147	No Location	100
<input type="checkbox"/> 369	No Location	100
<input checked="" type="checkbox"/> 789	Not Placed	100
<input type="checkbox"/> 258	No Location	100
<input type="checkbox"/> 1234	01I-01-01	100
<input type="checkbox"/> 123456	01T-01-06	100
<input type="checkbox"/> 123	01T-01-07	100
<input type="checkbox"/> 12345	01T-01-08	100

Quantity:

The information recorded for each item can be accepted or modified from this form. Each function is described below:

5.2.1 Adjust Location Quantity

If you placed away more or less than the quantity shown you can adjust this to match what you actually placed away.

Use the mouse or **Tab** to the Line Items window and using the **↑** and **↓** keys, highlight the part number you would like to modify, once your choice is highlighted **Tab** to the Quantity field and type in the new quantity, then **Tab** to the **A**djust button and press **Enter**, or press **Alt & D**.

5.2.2 Set As Not Placed

If it was not possible to place a specific part to a location you can mark the item as not placed. Use the mouse or relevant keys to select the item and then activate the **S**et **A**s **N**ot **P**laced button. This entry will be recorded in the Audit Log.

5.2.3 Set Location

For items that do not have a location, select the item and then activate the **S**et **L**ocation button. Go to Section 5.2.5 for an explanation of how to select a new location.

5.2.4 Check All

If the information against each item is correct when the form is opened, it is possible to activate the **C**heck **A**ll button to confirm all information in one go. Once this has been done, close the form.

5.2.5 Select New Location

To allocate a new location to an item you will need to allocate the FACE, BAY, SHELF and then LOCATION:


a) Select New Face

Select a Face by using the **↑** and **↓** keys and press **Enter**. You can return to the previous level by pressing the **ESC** key




b) Select New Bay

Select a Bay by using the **↑** and **↓** keys, when you have decided press **Enter**.

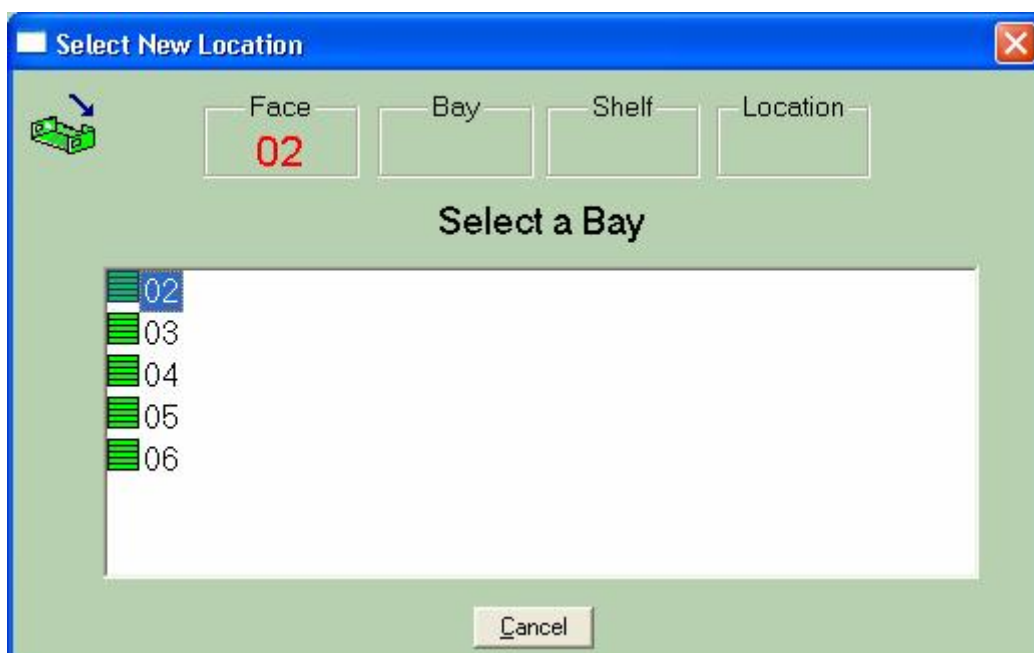

c) Select New Shelf


Select a Shelf by using the **↑** and **↓** keys, when you have decided press **Enter**.



The screenshot shows a dialog box titled "Select New Location" with a close button (X) in the top right corner. At the top left is a small icon of a green rack component with a blue arrow pointing down. Below this are four input fields: "Face" containing "02", "Bay" containing "03", "Shelf" which is empty, and "Location" which is empty. The text "Select a Shelf" is centered below the input fields. A large white rectangular area below the text contains a small icon of a green rack component with a blue arrow pointing down and a blue letter "A" in a white box. At the bottom center is a "Cancel" button.

d) Select New Location

Select a Location by using the **↑****↓** keys, when you have decided press **Enter**.

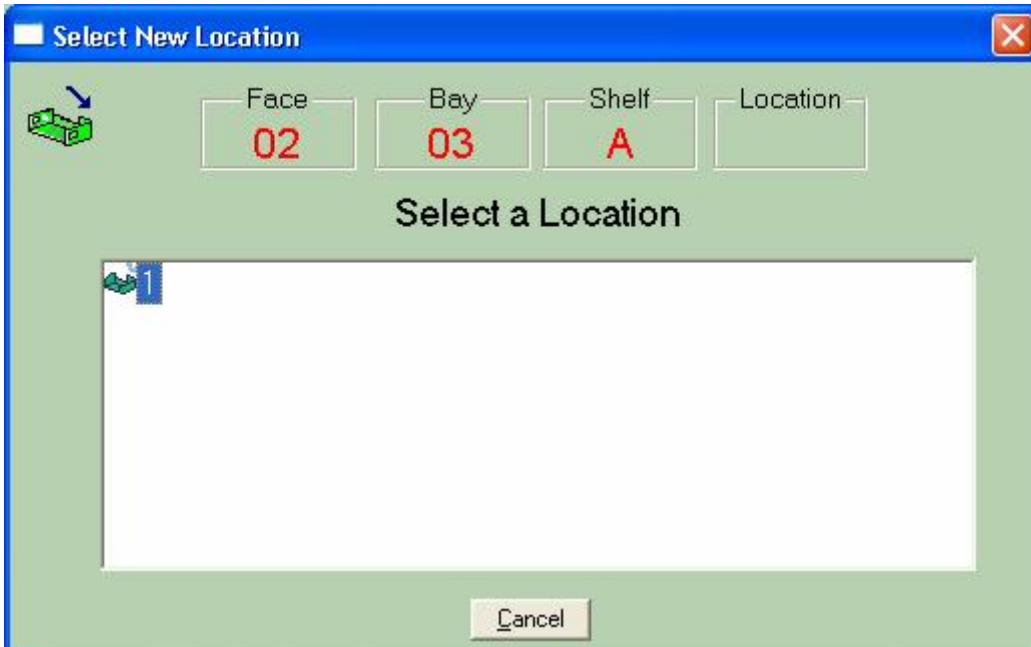

The screenshot shows the same "Select New Location" dialog box. The "Face" field contains "02", the "Bay" field contains "03", and the "Shelf" field now contains "A". The text "Select a Location" is centered below the input fields. The large white rectangular area below the text contains a small icon of a green rack component with a blue arrow pointing down and a blue number "1" in a white box. At the bottom center is a "Cancel" button.

Once all location has been fully defined, RackMAN will return to the 'Place List Confirm Quantity' form.

This process should be repeated for each item placed that does not have a location.

5.3 Return To Stock

Note: This option is NOT available when using FIXED SINGLE.

'Return to Stock' is used to adjust location dates. If this option is active, it is possible to mark a location date to the oldest location date for that particular item. This will ensure that the item is picked next if FIFO picking is used.

If your system is configured for the Return to Stock option, then just after **STEP 4** (count and place stock) in your Place process the 'Return to Stock' question will be presented:

The screenshot shows the 'Place' window with the following details:

- Part Number:** 066-002
- Quantity:** 50 Each
- Description:** 4mm Aluminium h Holder (3000mmL)
- Locations List:**

Location	Quantity
01A-07-01	545
02A-03-01	125
03A-01-01	125
04A-01-01	125
02A-05-01	45
02A-06-01	115
03A-03-01	250
01A-09-01	225
- Total Quantity:** 1555
- Total Locations:** 8
- Quantity:** 50
- Face:** 02
- Shelf:** A
- Bay:** 05
- Location:** 1
- Quantity Left:** 50
- Notification:** Return to Stock?
- Buttons:** Yes, No

Press the Enter key to select a location.

If No The cursor defaults to No so press **Enter**. The picking order is unchanged for the part.


If Yes **T**ab to the Yes button then press **Enter**. The location you Place to will become the oldest location and therefore be the first location to be picked from when using FIFO picking.

5.4 Placing with Lot Number

After you complete **STEP 1** (enter part number) press the **Enter** key once. This will move the cursor to the Lot Number field.

Type in a Lot Number and press **Enter**. (This number must be unique. It can be used multiple times with the same Part Number, as RackMAN™ will always recognise the Part Number it was originally allocated to).

Return to **STEP 2** in your PLACE process.

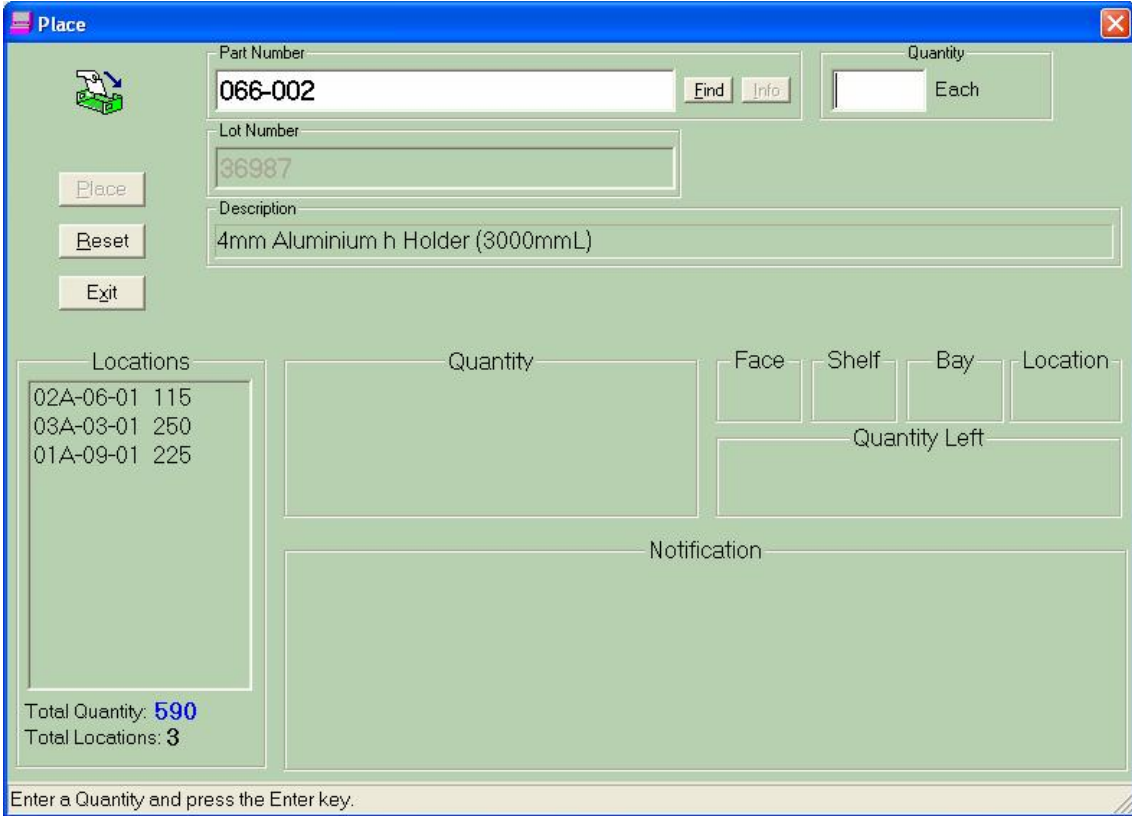

If the Lot Number has already been used with another Part Number then the following message will be displayed:



6 Verify Operation

Verify is Kardex VCA's terminology for the stocktake process. In addition to the mechanisms in place to maximise your stock accuracy, such as pick to zero confirmation, RackMAN™ provides five (5) methods to verify that the location quantities stored in the system database are accurate. Each method is described below:



Verify Methods

- **List**
Verify \ List is used to check the location quantities of a range of items at the RackMAN console. The details of the each Verify operation are reported in the list confirmation file. If the list is retained after use, it can be used in an on-going manner. Verify By List can be used for perpetual stocktaking activities for locations with fast moving items or for a complete shelving location Verify.
- **Single**
Verify \ Single is used to check the location quantity of a single item at the RackMAN console. The item may exist in one or more locations. RackMAN will present the locations sequentially and require the count for each location to be entered. The location quantity will be updated in the system database.
- **Print List Summary & Confirm Printed Lists**
Verify \ Print List Summary is used to print out the 'RackMAN Verify List Summary'. This printout lists the part and location information that relates to Verify Lists which have been created for the system. The Verify Lists can be created locally or by the host system. The printout is then used to record each location quantity prior to returning to the console to confirm the counts using Verify \ Confirm Printed Lists
- **Location [Refer to Section 6.5]**
This method is used to Verify the quantity of a single location. When the operator confirms the stock quantity for the location, the RackMAN™ database will be updated immediately. This method may be used for random checks on location quantities.
- **Range [Refer to Section 6.6]**
This method is used to Verify a range of locations within the shelving. The smallest range is one shelf i.e. the same shelf could be entered as the starting location and the end location. This method is used to facilitate perpetual stocktake of static racking locations. It is then possible to stocktake a shelf or group of shelves periodically removing the need to undertake an annual global stocktake of the shelving range.
- **Global**
This method is used to Verify the full range of shelving locations starting at the first location. This routine can be used as a perpetual stock take and can be interrupted numerous times over the course of the activity. The Global Verify may be executed over a number of months.

Kardex VCA recommends that the configuration parameters are set to ensure the database quantities are updated as the Global Verify is executed.



The Verify Screen - At a Glance

NOTE: Refer to Section 7 for information regarding list selection method.

The Verify \ List screen shows the following information:



Item	Description
1 Part Number Box	Displays the current found part number, Find button and Info button
2 Lot Number Box *	Displays the current parts Lot Number. *Will only be displayed if chosen in configuration.
3 Expiry Date Box *	Displays the Expiry Date. *This will only be displayed if it is selected in the Placing Configuration form.
4 Description Box	Displays the current parts description
5 Large Quantity Box	Shows the current quantity to confirm
6 Locations Left	Displays the remaining locations to verify
7 List Identifier Box	Displays the List this Verify operation comes from
8 Locations Box	Displays the current part location(s), displays total locations
9 Bay Box	Displays current bay
10 Bin Box	Displays current bin
11 Location Box	Displays current location
12 Notification Box	Displays current message
13 Reset Box	Will clear the form
14 Exit Box	Will close the window
15 Colour	Pink



6.1 Verify \ List

STEP 1 Select List(s)

Select the List or Lists you wish to use for the Verify operation. Refer to Section 7, Selecting Lists.

The first location part number will be presented on the Verify form.

Proceed as for STEP 2 or Verify \ Single

6.2 Verify \ Single

From the Main Menu, use the **↑** and **↓** keys to select Verify \ Single and press **Enter**.

STEP 1 Enter Part Number

Type in, or Find the part number that you wish to Verify then press **Enter**. Proceed to Section 6.6.

STEP 2 Count Stock

Count the quantity in the location and press **Enter**.

STEP 3 Enter Quantity

Type the quantity that you counted then press **Enter**.

STEP 4 Confirm Quantity

Press **Enter** to confirm the counted quantity.


The Verify Process is now complete for the location. If there are more locations to count, RackMAN will progress to the next location and repeat the process from **STEP 2**.

6.3 Verify \ Print List Summary

In the main menu use the **↑↓** keys to select Print List Summary. And press **Enter**.



To Print a Print List Summary select a list file from the available list field. **Tab** into this field and use the **↑↓** keys to select your desired list, once highlighted **Tab** to the **OK** button and press **Enter** or **Alt & K**. Or you can either type in number or use the barcode scanner to select your desired list.

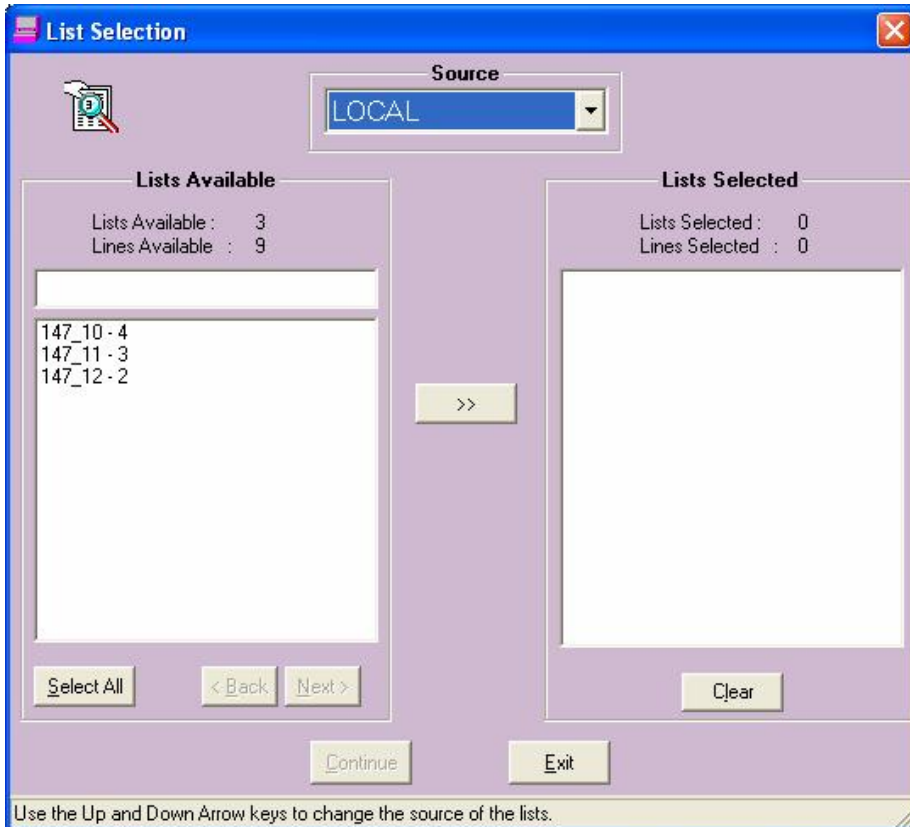


After you have chosen your list it will then be printed off, and if Show Quantity When Printing was selected in your configuration (see RackMAN Technical Manual) then all quantities for each location will be shown on your printout, if this option wasn't chosen in your configuration setup then you will have to enter in the locations yourself when you Confirm Printed Lists.

6.4 Confirm Printed Lists

In the main menu use the **↑↓** keys to select Confirm Printed Lists. And press **Enter**.



Once your Print List Summary has finished the batch number will then appear in this form. To select a batch number, use the **↑↓** keys to highlight your choice. Once your selection is highlighted press **Enter** or **Alt & K**.

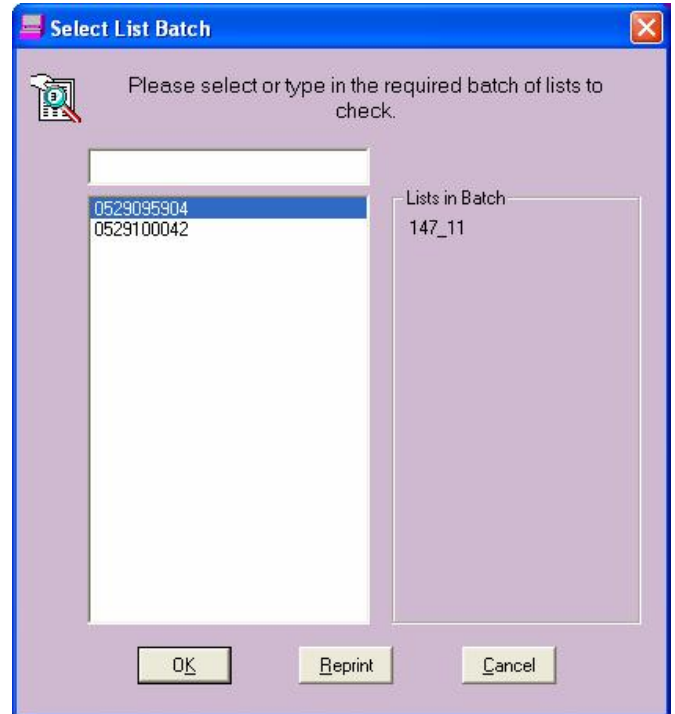


The following screen will then be displayed:

6.4.1 Adjust Location Quantity

If the quantity you verified was more or less than the quantity shown you can adjust this to match what you actually verified. **Tab** to the Line Items window and using the **↑↓** keys, highlight the part number you would like to modify, once your choice is highlighted **Tab** to the Quantity field and type in the new quantity, then **Tab** to the **Adjust** button and press **Enter**, or press **Alt & D**.


If the quantity is incorrect only on one part number you still have to **Tab** to the **Adjust** button and press **Enter** so that a tick appears in ALL boxes next to the part number. Once you have checked that everything is correct **Tab** to the **OK** button and press **Enter** or press **Alt & K**.

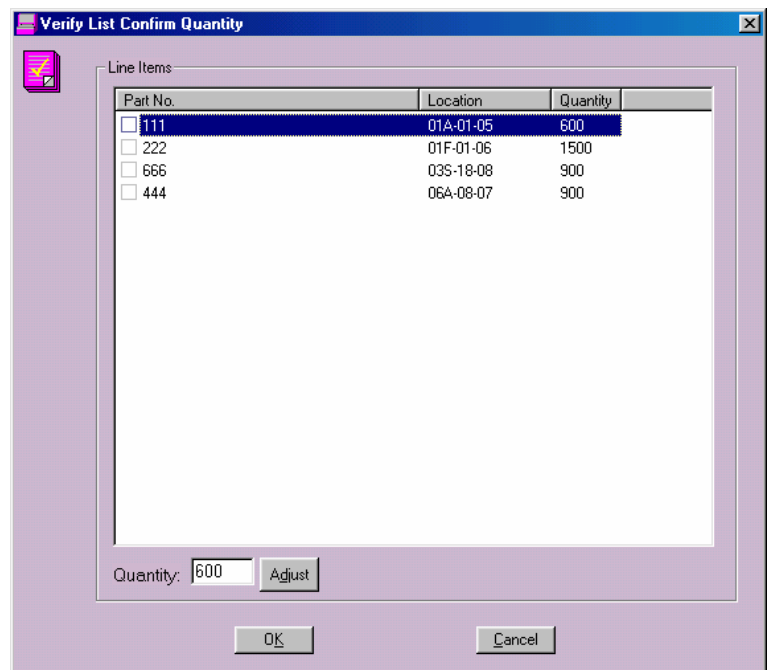

6.5 Verify \ Location

STEP 1 Select Location

Enter a used location by typing in a shelf, bin and location number. Or, alternatively you can use the **up(↑)** and **down(↓)** arrow keys to highlight the chosen shelf then press **Enter** or **Tab** to **OK**.

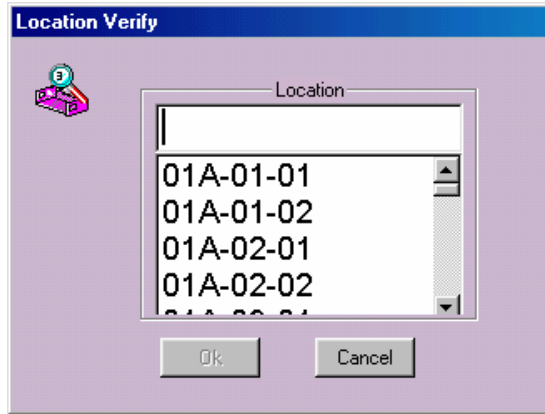

Proceed to Section 6.7

6.6 Verify by Range


STEP 1 Select Starting Shelf

Type in a Start Shelf and then press **Enter**. Or, alternatively you can select a Shelf from the pull down menu then press **Enter**.

STEP 2 Select End Shelf

Tab to the End location box, then type in an End Shelf and then press **Enter**. Or, alternatively you can select a Shelf from the pull down menu then press **Enter**.

To access the pull down menu and see all the used shelves press **F4**. Use the **up(↑)** and **down(↓)** arrow keys to highlight the chosen shelf then press **Enter**.

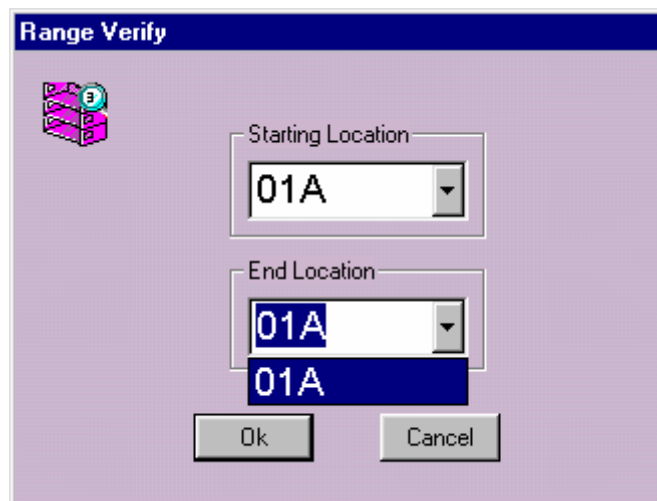


Proceed to Section 5.7


6.7 Verify Process

STEP 1 Count Stock

Count the quantity in the location and press **Enter**.

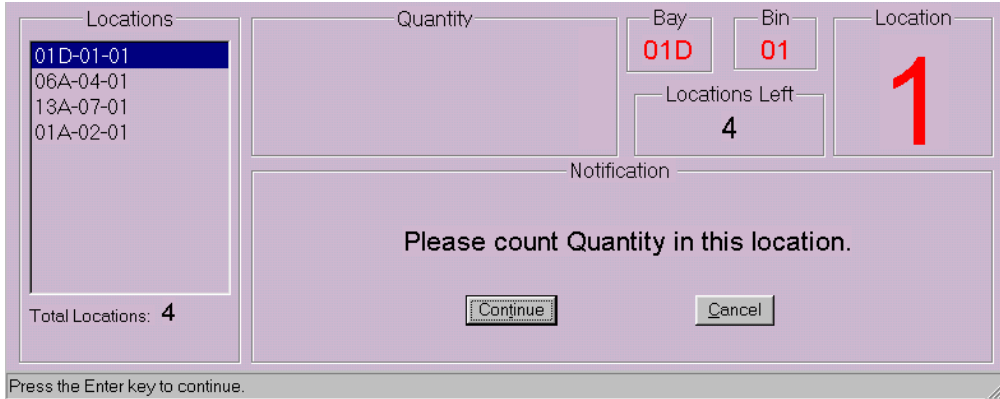

STEP 2 Enter Quantity

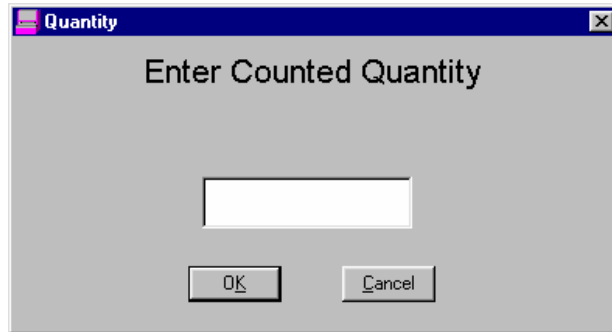


Type the quantity that you counted then press **Enter**.

STEP 3 Confirm Quantity

Press **Enter** to confirm the counted quantity.


The Verify Process is now complete.

If there are more locations to count, RackMAN™ will locate the next location and repeat the process from **STEP 1**.

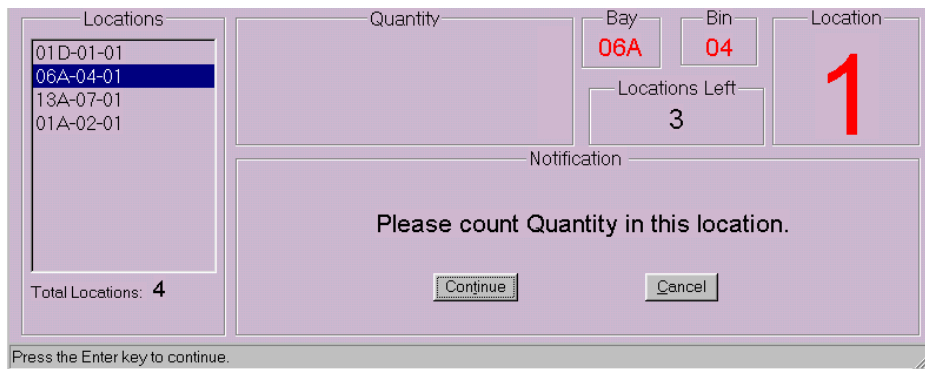


7 Creating Local Lists

To create a PLACE, PICK or VERIFY Local List, go to the Main Menu and select Tools, then Local Lists, then Add. As shown below:

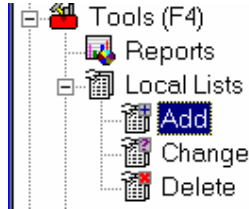

The following screen will then be displayed:


7.1 Select List Type

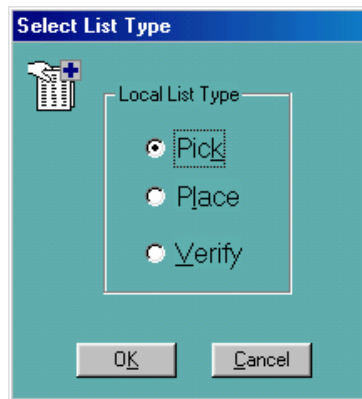

Choose the List Type you would like to create. Press Tab to move the cursor into the Local List Type area, then use the up(↑) and down(↓) arrow keys to highlight the List Type you require, then Tab to the OK button and press Enter.

The following screen will then be displayed:


7.2 Adding a List

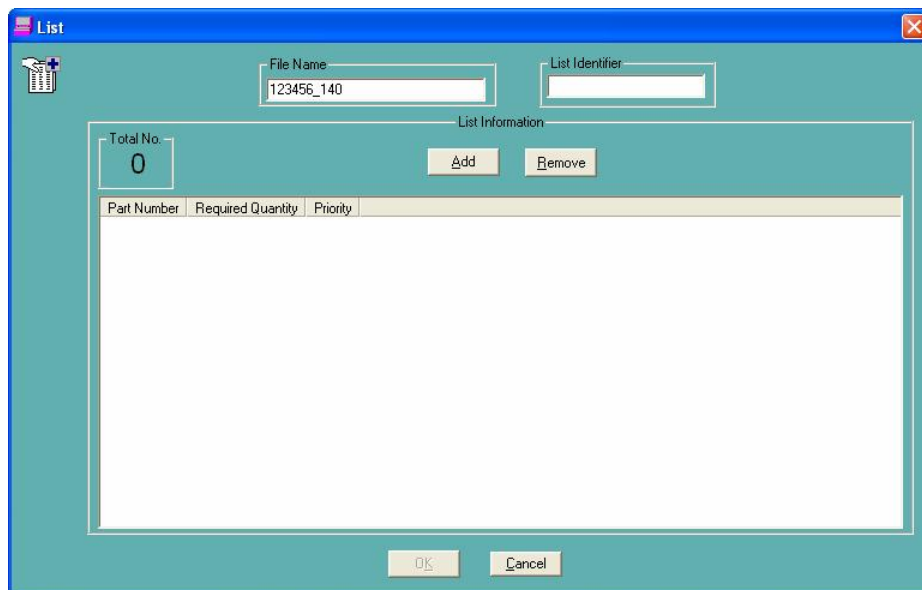



Type in a File Name, and a List Identifier (this is not compulsory) then **Tab** to the Add button and press **Enter**.

The following screen will then be displayed:

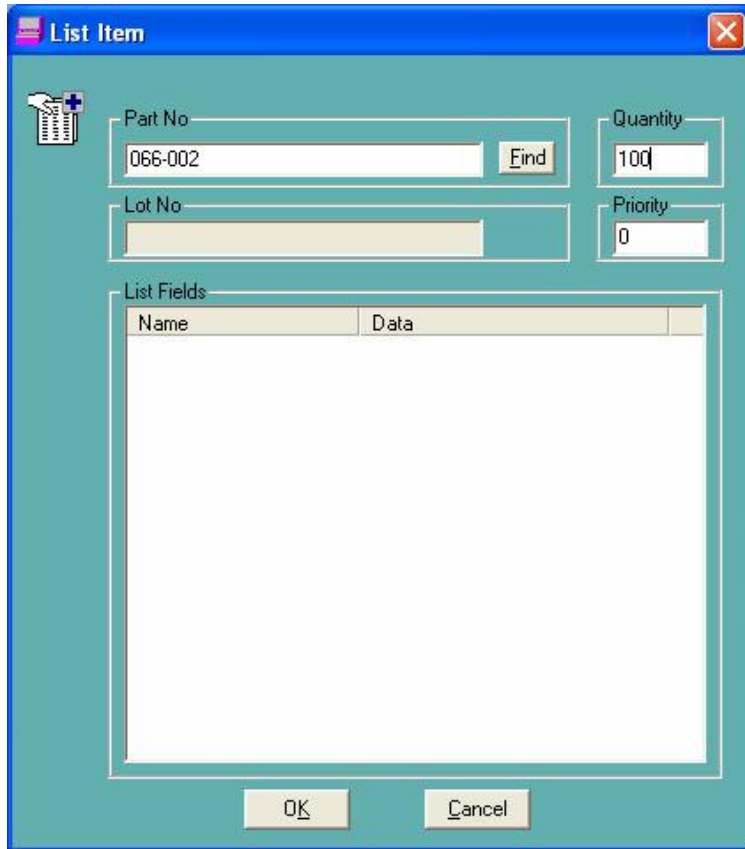


Type in your Part Number and then press **Enter**, type in a quantity and press **Enter**, this will take you to the OK button and then press **Enter** again, this will take you back to Adding a List screen, repeat the above process until complete. Once you have completed adding your parts **Tab** to the OK button on the Adding a List screen and press **Enter**.

RackMAN will return to the Main Menu. Refer to Section 7, Selecting Lists, to see how to select the List you just created.

8 Selecting Lists

The method to select lists is the same for each of the Pick / Place / Verify operation. Highlight the list operation you require by using the mouse or arrow keys.

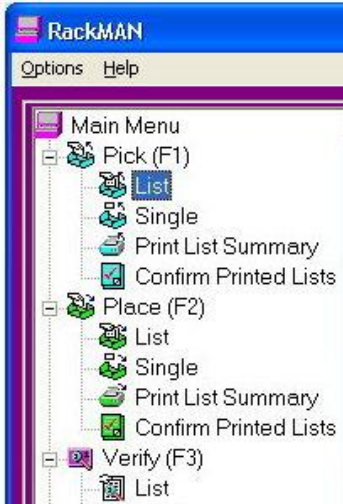


Once selected, press **Enter** to open the List Selection form (selection of a Pick list is used in the following example):

STEP 1 Select List(s)

Press **Tab** to move the cursor into the Lists Available box, then use the **up(-)** and **down(↓)** arrow keys to highlight the List you require and press **Enter**.

The List you have selected will move into the Lists Selected box. Repeat this process until you have selected all the Lists you are going to process.

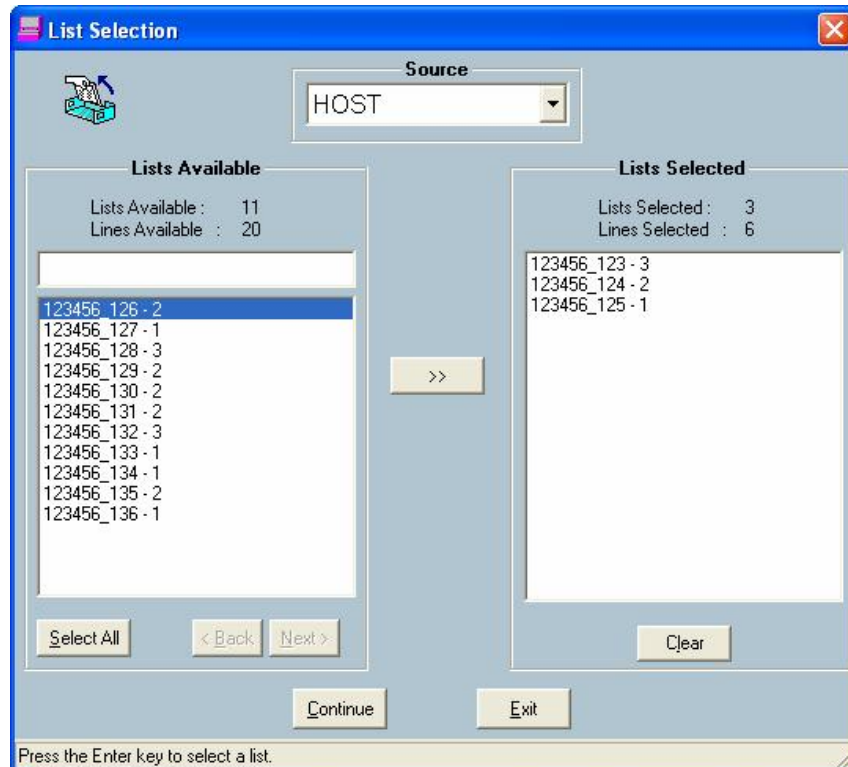

- Remove a List:** To remove a List from the List Selected box, **Tab** to the List Selected box and use the **up(↑) and down(↓) arrow keys** to highlight the List you want to remove then press **Enter**.
- 'Select All'** To select all available Lists press **Alt & S** or **Tab** to the Select All button and press **Enter**.
- 'Remove All'** To remove all selected Lists press **Alt & L** or **Tab** to the Clear button and press **Enter**.

The List Selection screen above shows available HOST Lists. To view LOCAL Lists or INTERRUPTED Lists, **Tab** to the Source box highlighting HOST and press the **down(↓) arrow key** to highlight LOCAL or INTERRUPTED then press **Enter**.

STEP 2 Continue

Once you have selected the Lists you are going to process press **Alt & C** to Continue or press **Tab** and move the cursor to the Continue button and then press **Enter**.


STEP 3 Return to Process

For Pick, Place or Verify by List operations, return to **STEP 3** in the relevant process you are using, as listed below.

Process	Section
Pick \ List	4.2
Place \ List	5.2
Verify \ List	6.1

The (Pick / Place / Verify) List form has an additional 'List Identifier' field as shown in the image below. This field is used to present information that is relevant to list the operation such as order number or specific item information.

Once you have finished processing the List(s), the following message will appear. Press **Enter** to Clear the Message.

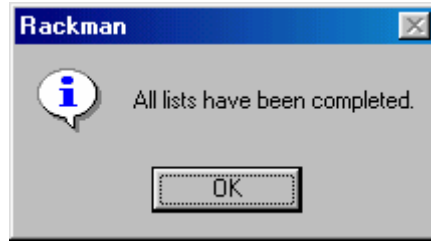

9 Show Inventory Information

From the Pick, Place or Verify screen RackMAN™ offers the ability to view all details of an inventory item.


STEP A Enter Part Number

From the Pick, Place or Verify screen type in a part number, then press **Enter**.

STEP B Use Info Button

Then use the Info button by pressing **Alt & I**. You can also access the button by pressing **Shift & Tab** at the same time to move the cursor back to the Info button and then press **Enter**.

The 'Show Inventory' screen will then appear:

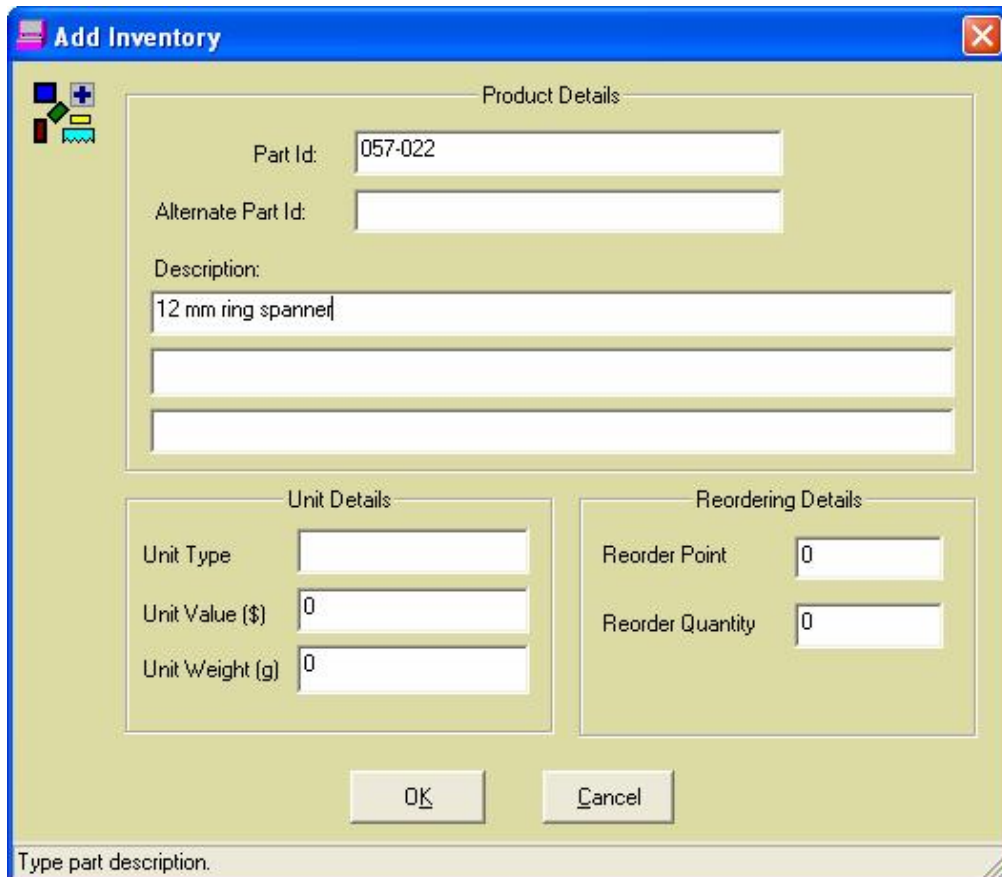


STEP C Close Screen

Press **Enter** to close the Show Inventory screen and RackMAN™ will return you to the Pick, Place or Verify screen that you started from.

10 Find Part Number

The Find button is available from the Pick, Place or Verify Screens. If you are unsure of a part number you can search for it using the Find button. The following image shows the Pick screen:

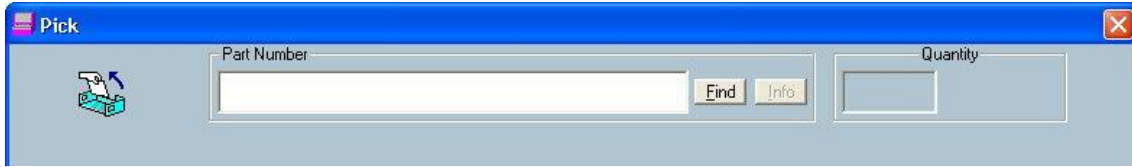


STEP A Use Find Button

Use the Find button by pressing **Alt & F**. You can also access the button by pressing **Tab** to move the cursor forward to the Find button and then press **Enter**.

You can search by Part number (refer to **STEP B**) or by Description (refer to **STEP C**) or by both (refer to **STEP D**).


STEP B Enter Text in Part No. Box

Type in one or more characters in the Part No box and then press **Enter** twice. Proceed to **STEP E**.

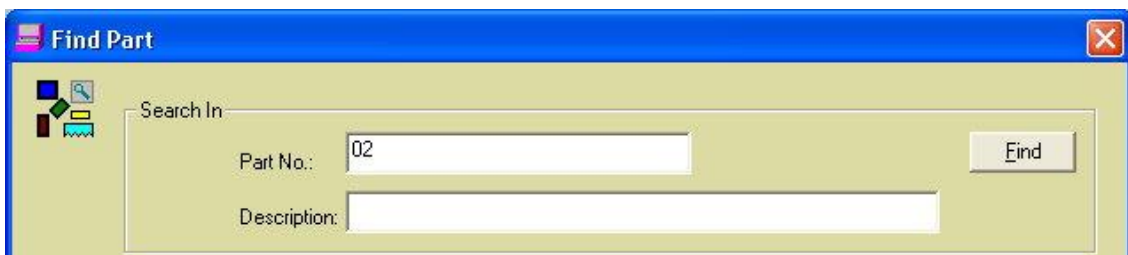


STEP C Enter Text in Description Box

Tab to the description box and type in one or more characters then press **Enter**. Proceed to **STEP E**.

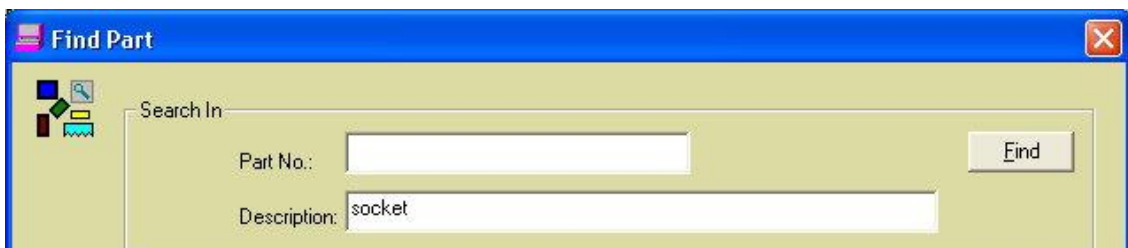

STEP D Enter Text in Part No. and Description Box

Type in one or more characters in the Part No box, then **Tab** to the Description box. Type in one or more characters then press **Enter**. Proceed to **STEP E**.

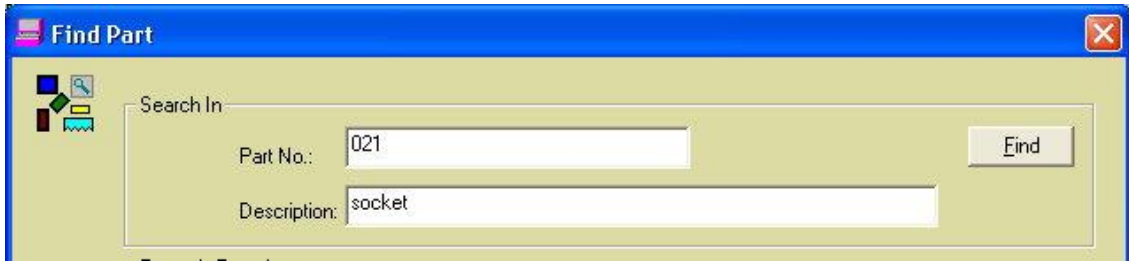


All the part numbers with those character (or characters) will be displayed

STEP E Choose Part Number

Choose the required part number, from the records found, with the **up(↑) and down(↓) arrow keys** and then press **Enter**.

The Pick, Place or Verify screen will then automatically be updated with the part number that you have chosen.

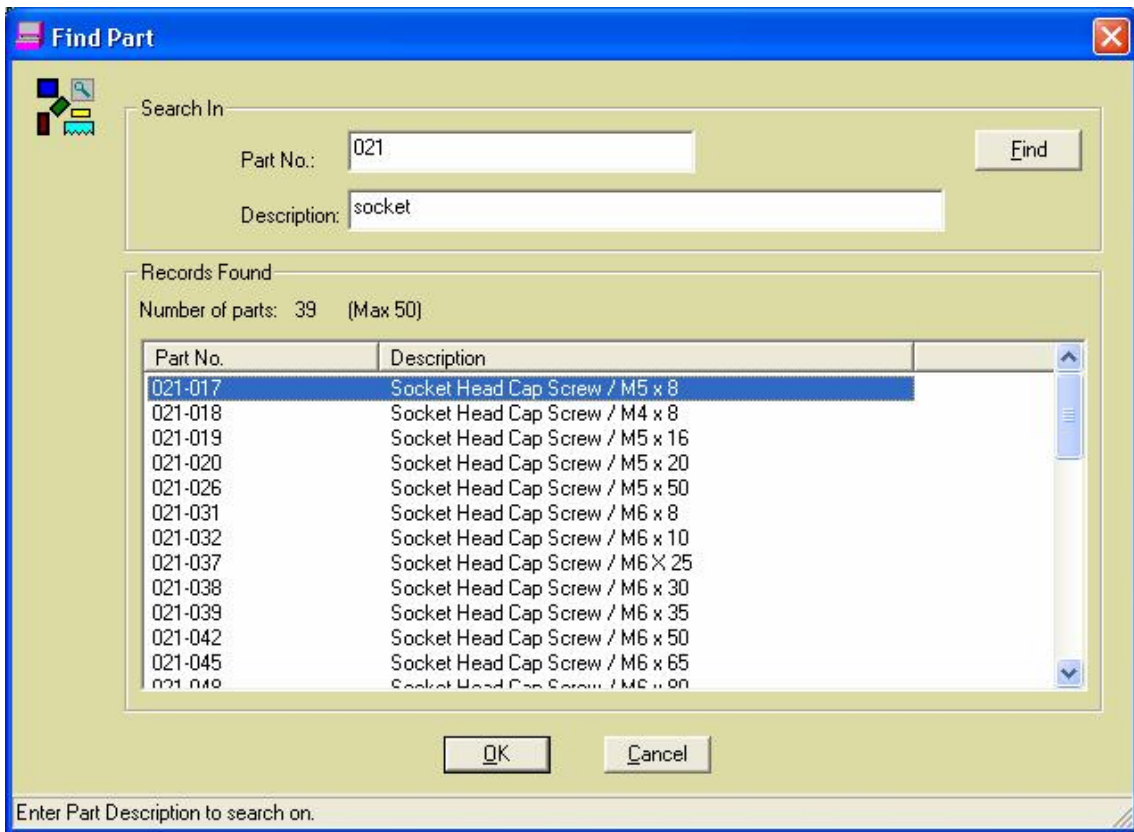

11 Location Manager

The Location Manager is found under the Tools Menu:




The Location Manager is a utility that allows you to investigate locations where a part has been placed. You can view all locations for a part and each of their quantities by typing in a valid part number and pressing **Enter**.

If a location has a quantity of zero you can delete it, to free the location for other use.

11.1 Delete a Location

STEP 1 Enter Part Number

Type in or Find the part number and press **Enter**.

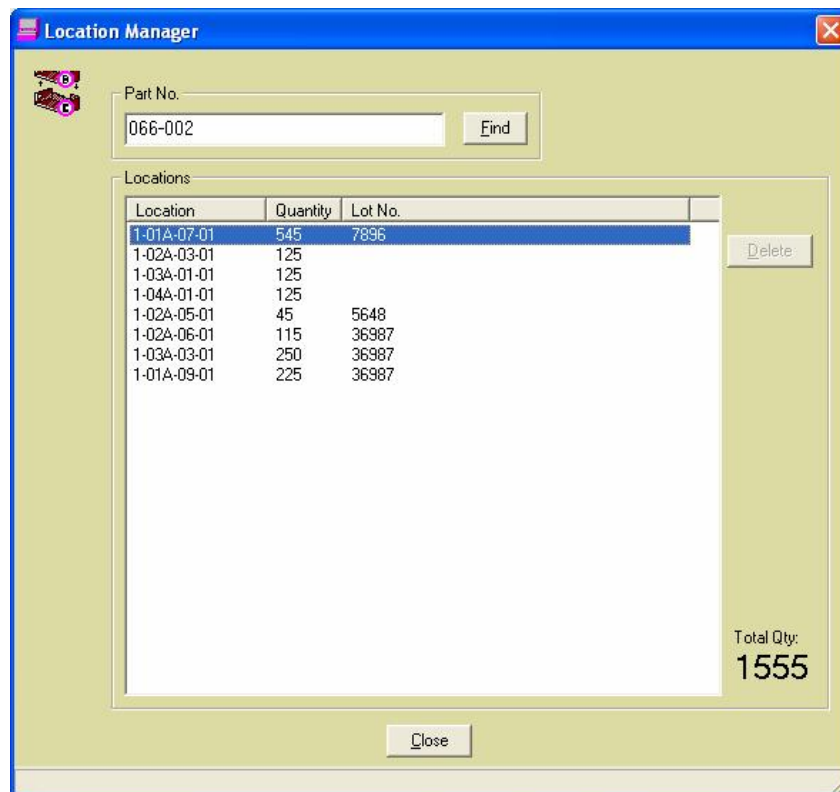

STEP 2 Select Location

Use the **up(↑)** and **down(↓)** arrow keys to choose a location and Press **Enter** to Delete.

NOTE: YOU CAN NOT DELETE A LOCATION THAT HAS A QUANTITY GREATER THAN ZERO.

To Close the Location Manager Press **Alt & C** or press **Enter** on the Close button.

12 Shortcut Keys

F4	View pull down menu
Alt & C	<u>C</u> ancel
Alt & I	<u>I</u> no
Alt & F	<u>F</u> ind
Enter	Confirm operation
Esc	Go back a step
Tab	Move forward to command buttons
Shift & Tab	Move backward to command buttons

Main Menu navigation:

up(↑) and down(↓) arrow keys	Navigate Main Menu
right(→) arrow key	Expand a menu
left(←) arrow key	Collapse a menu
Enter	Select item

13 Troubleshooting

If a problem occurs with RackMAN that you are unable to resolve, please contact our site support team:

Kardex VCA Pty Ltd

Customer Service / Site Support

Phone: +61 2 6056 5173

Fax: +61 2 6056 2422

Email: CustomerService@kvca.com.au

Software@kvca.com.au