



PC

# AUDIO VISUAL USER GUIDE FOR AV03 EQUIPMENT

- Connect your PC to VGA/Audio input in the wall
- Press **AVPC** button
- The projector will start after warm up and the image should be visible



LAPTOP

- Connect your laptop to VGA/Audio input in the wall
- Press **LAPTOP** button
- The projector will start after warm up and your image should be visible
- If no image is visible, toggle FN F8, FN F5 or FN F4 on your keyboard to display the image

DVD



- Press **DVD** button
- The projector will start after a short warm up period and the input will be displayed on the screen
- Ensure VCR/DVD combo is on and insert Disc into DVD tray
- Use **PLAY, STOP, PAUSE** buttons on the panel as required
- If you require Chapter selection or other menu items, press **MENU** and use **ENTER** and **ARROW** keys to navigate through the menu


Press **VOLUME UP** or **VOLUME DOWN** to increase or decrease Volume on any input

To move **Screen** up use **↑** To move Screen Down use **↓** While System is off

VCR



- Press **VCR** button
- The projector will start after a short warm up period and the input will be displayed on the screen
- Ensure VCR/DVD combo is on and insert cassette
- Use **PLAY, STOP, PAUSE** buttons on the panel as required

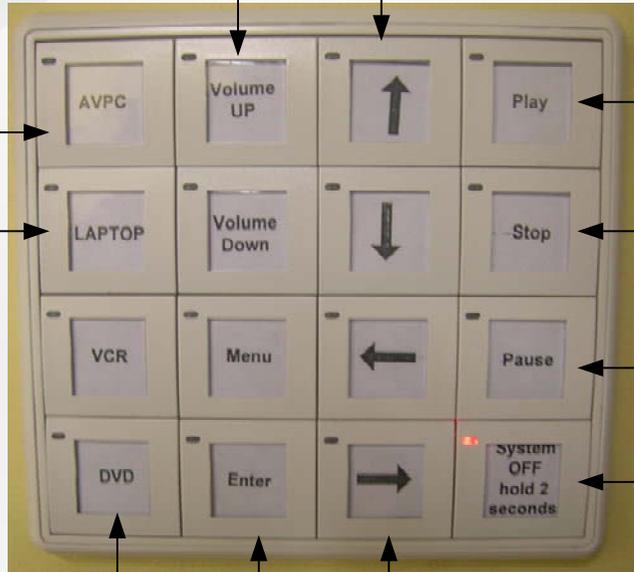

If **No Image is displayed** through the data projector please toggle the below Function keys for your brand of PC

- Function + F2: Leader
- Function + F4: Compaq, HP
- Function + F5: Acer, Toshiba
- Function + F7: Sony, Apple
- Function + F8: Asus, Dell

- To Switch off, press and hold the **SYSTEM OFF** button for 2 secs
- Do not attempt to switch the system back on until the LED has STOPPED FLASHING

PLEASE CALL 88555 FOR ASSISTANCE