

Telstra EasyCall™ GSM Mobile Phone

User Guide

LEGAL INFORMATION

Copyright © 2010 ZTE CORPORATION.

Version 1.0 March 2010 All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

1 Index

1	Index.....	2
2	Introduction	4
2.1	General Precautions	4
2.2	Precautions While Driving	5
2.3	Aircraft Safety	5
2.4	Precautions for Medical Devices and Facilities.....	5
2.5	Precautions for Potentially Explosive Atmospheres	6
2.6	Battery Safety.....	6
2.7	Limitation of Liability.....	7
3	Getting Started	8
3.1	Insert the SIM Card.....	8
3.2	Insert the battery	9
3.3	Charging the battery.....	10
3.4	Battery level indicator	11
3.5	Switch your phone On.....	11
4	Get to know your phone	12
4.1	Your phone.....	12
4.2	Main Display Layout.....	14
4.3	Display Icons.....	14
4.4	Key functions	15
4.5	Menu Map.....	17

5	Step by step guide	18
5.1	Shortcuts	18
5.2	Switch Setting	18
5.3	Make and receive a call	19
5.4	Add a Contact to your Phonebook	20
5.5	Make a call from the Phonebook	21
5.6	Messages	21
5.7	Text Input methods	22
5.8	Phone Book	23
5.9	Speed Dial	24
5.10	Call History	24
5.11	Audio Settings	24
5.12	Phone Settings	25
5.13	Call Settings	26
5.14	Network Selection Settings	27
5.15	Calendar	27
5.16	Calculator	27
5.17	Torch	28
5.18	Keylock Switch	28
5.19	Alarms / Reminders	28
5.20	FM Radio	30
6	Technical Reference	31
6.1	Technical Specifications	31
	Service Information	32
	Warranty Information	32

2 Introduction

This section includes some important information on safety and efficient operation. Please read this section before using the phone.

2.1 General Precautions

- The antenna is located in the top portion of the handset, behind the display. When you are using the handset try to avoid shielding the antenna area with your hand. Hold the handset between your thumb and fingers towards the base of the handset. This will leave the antenna area clear to transmit and receive signals. Touching the antenna area affects call quality and may cause the phone to operate at a higher power level than needed.
- Keep the phone out of the reach of small children. The phone may cause injury if used as a toy.
- Protect the handset from liquids. Only use a soft dry cloth to clean the handset.
- The handset will be damaged by liquid ingress. The handset contains a liquid detection sticker which changes colour when exposed to liquids. Liquid ingress is not covered by warranty under any circumstances.
- Do not expose the handset to solvents, chemicals or abrasive cleaning products.
- Do not expose the handset or battery to prolonged direct sunlight or temperatures exceeding 50° C. This may damage the battery and high temperatures can shorten the life of electronic devices.
- Please use original accessories only. Damage caused by non-genuine accessories may not be covered by your warranty terms and conditions.
- As your mobile phone can produce electromagnetic field, do not place it near

- magnetic items such as computer disks or bank cards.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer may cause interference.
- Do not drop or throw your handset. Rough handling can cause physical damage.
- Do not attempt to disassemble the handset or battery.

2.2 Precautions While Driving

- Obey all safety regulations and do not use your phone while driving.
- Do not place your phone in the area over an airbag or in the airbag deployment area. If a phone is in the airbag deployment area the phone may be propelled with great force and cause injury to occupants of the vehicle.
- Please turn off your mobile phone at service stations as recommended.

2.3 Aircraft Safety

- Please turn off your mobile phone before boarding as instructed by the airline personnel.
- Disable your alarms to make sure that the phone does not turn on during the flight.

2.4 Precautions for Medical Devices and Facilities

- If you use a pacemaker please keep the phone at least twenty centimetres from the pacemaker when the phone is switched on. Do not carry the phone in your breast pocket. Use the ear opposite the pacemaker to minimize the potential for interference. Switch off the phone immediately if necessary.
- Some phones may interfere with hearing aids. In the event of such interference consult your hearing aid manufacturer to discuss alternatives.
- If you use any other personal medical device, please consult the manufacturer of your

- device to determine if it is adequately shielded from RF energy.
- Obey the restrictions on the use of mobile phones at prescribed places such as hospitals, airports, service stations, refineries, chemical works etc. Switch off your phone as required.

2.5 Precautions for Potentially Explosive Atmospheres

- Switch off your phone prior to entering any area with potentially explosive atmospheres, such as fuel or chemical transfer or storage facilities.
- Do not remove, install, or charge batteries in such areas. Spark in a potentially explosive atmosphere can cause explosion or fire.
- To avoid possible interference with blasting operations switch off your phone when you are near electrical blasting caps, in a blasting area, or in areas posted “Turn off electronic devices.” Obey all signs and instructions.
- Do not store the phone with flammable or explosive articles.

2.6 Battery Safety

- Do not short-circuit the battery terminals. Do not carry the battery in your pocket in case of accidental short circuits.
- Do not store battery in hot areas or dispose of the battery in a fire.
- Do not disassemble, pierce or modify the battery in any way.
- Please store the battery in a cool dry place if you are not using it.
- The battery is rechargeable but eventually it will wear out. When the operating time (talk time and standby time) is reduced you should replace your battery.
- Please stop using the charger and battery if they are damaged.
- Return the worn-out battery to your service provider or dispose of it in accordance with environmental regulations. Do not dispose of it in household rubbish.



Warning:

If the battery is damaged do not recharge it. In the unlikely event of battery leakage avoid contact with your skin and wash the affected area thoroughly in water.

2.7 Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. The user should refer to the enclosed warranty card for full warranty and service information.



Notes:


The pictures and icons shown in the manual are for reference and functional demonstration only. The manufacturer reserves the right to update the product at any time.

The handset is locked to the Telstra network. If you wish to use your handset with another carrier you need to contact Telstra to unlock your device. An unlocking fee may apply for this service.

3 Getting Started


3.1 Insert the SIM Card

 Remove the battery cover by pressing down on the back cover and sliding the cover down. Insert the SIM card with the metal contacts facing down and the notch on the top left corner as shown:

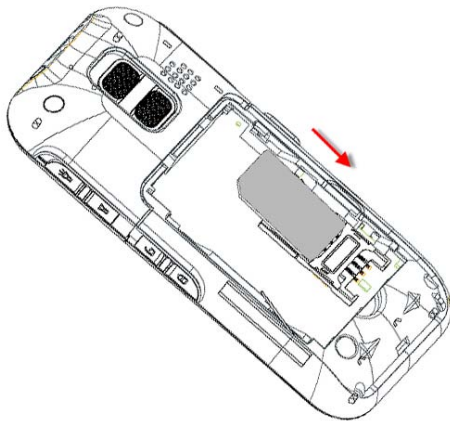

3.2 Insert the battery

 1. Slide the battery cover down to remove it.
2. Insert the battery carefully with the contacts located against the gold springs - the battery will only fit one way.
3. Replace the battery cover. Make sure that the cover closes completely.

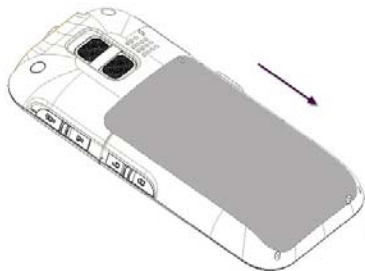

3.3 Charging the battery

The phone can be charged in the On or Off state. Make sure that the battery is inserted before charging.

The charger lead is keyed and will only fit one way. Insert the lead carefully observing the correct alignment of the plug and socket.



3.4 Battery level indicator

Charging	Charged
	

The phone will give an audible alert when battery is low and display a low battery message on screen. Please recharge the battery promptly to maintain service.

3.5 Switch your phone On

Press and hold the **red key** for 2 seconds to switch the phone on. Enter the PIN code supplied with your SIM card. Press the green key (OK) to enter.


Warning: If you enter the wrong code three times your SIM card will be locked. The phone will request you to enter the PUK code. Contact your service provider to obtain the PUK code if required.

If your handset displays:	
PIN:	Enter the PIN supplied with your SIM card.
Limited Service	Check the SIM card is inserted correctly.
Enter PUK code	Contact your Service Provider.


4 Get to know your phone

4.1 Your phone

 
Front view

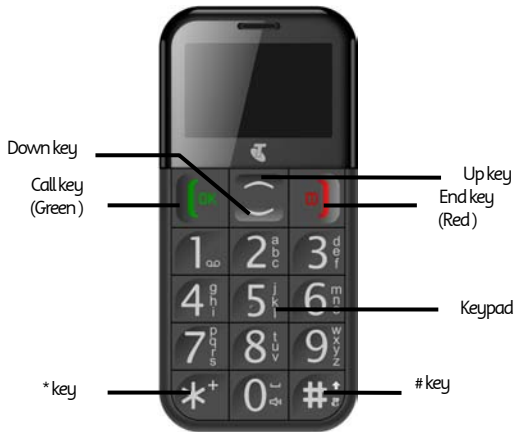


Rear View

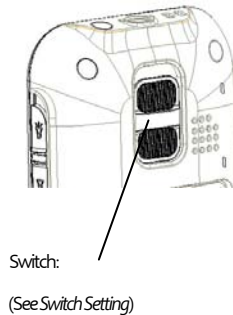 


Left side view

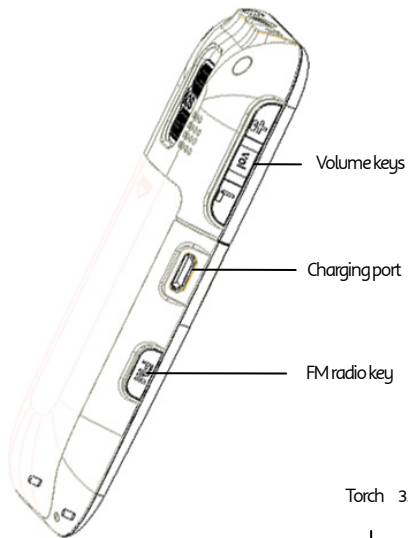 

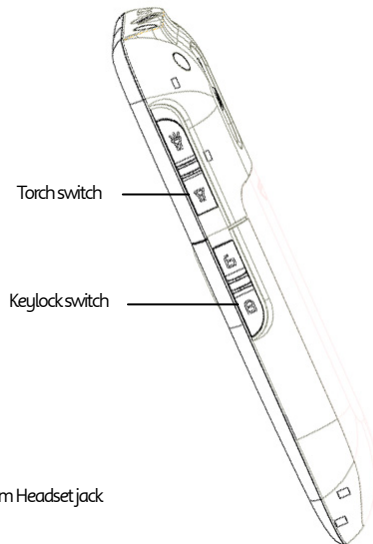 


Right side view



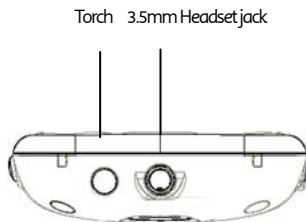 




Top view








4.2 Main Display Layout

 Network signal level	 Status notification area	Battery level 
Service provider eg. Telstra		
Time Display, HH:MM (Day)		
Date Display, DD.MM.YYYY		

4.3 Display Icons

	Battery level
	Network signal level
	New SMS message
 Blinking	SMS memory is full
	Missed call


	Keypad locked
	Headset inserted
	New SMS when keypad is locked
	Missed call when keypad is locked
	New SMS and Missed call when keypad is locked

4.4 Key functions

Function	Description
Call key (Green key)	<ul style="list-style-type: none">• Press to make a call. Press to answer an incoming call.• From the idle screen, press to enter the call history list.• Press to confirm the function you choose.
End key (Red key)	<ul style="list-style-type: none">• Long press to power on or off.• From the idle screen press to quick access your Phonebook.• Press to go back to previous menu, long press to go back to the idle screen.
Up key	<ul style="list-style-type: none">• From the idle screen press to quick access the Alarms, Calendar and Calculator functions.• Press to move cursor up.
Down key	<ul style="list-style-type: none">• From the idle screen, press to enter phonebook.• Press to move cursor down.
# key	<ul style="list-style-type: none">• Press to input '#'. Switch SMS text input mode. Hold down to engage / disengage Silent mode.
* key	<ul style="list-style-type: none">• From the idle screen press to enter '*', '+', 'P', or 'W'• Use + for the international dialling prefix.

Function	Description
	<ul style="list-style-type: none"> • 'P' inserts a 3 second pause into the dialling sequence. • 'W' will wait until the next number is entered into the dialling sequence. • In SMS mode press to access common symbols.
Numeric keys	<ul style="list-style-type: none"> • Enter numbers 0-9 and characters A-Z.
Switch	<ul style="list-style-type: none"> • Activate your Switch Call and SMS (see <i>Switch Setting</i>).
Volume keys	<ul style="list-style-type: none"> • Adjust the volume up and down.
Torch switch	<ul style="list-style-type: none"> • Switch to turn the torch on or off.
FM radio key	<ul style="list-style-type: none"> • Press to turn the FM radio on or off.
Keylock switch	<ul style="list-style-type: none"> • Switch to lock and unlock keypad.

 4.5 Menu Map

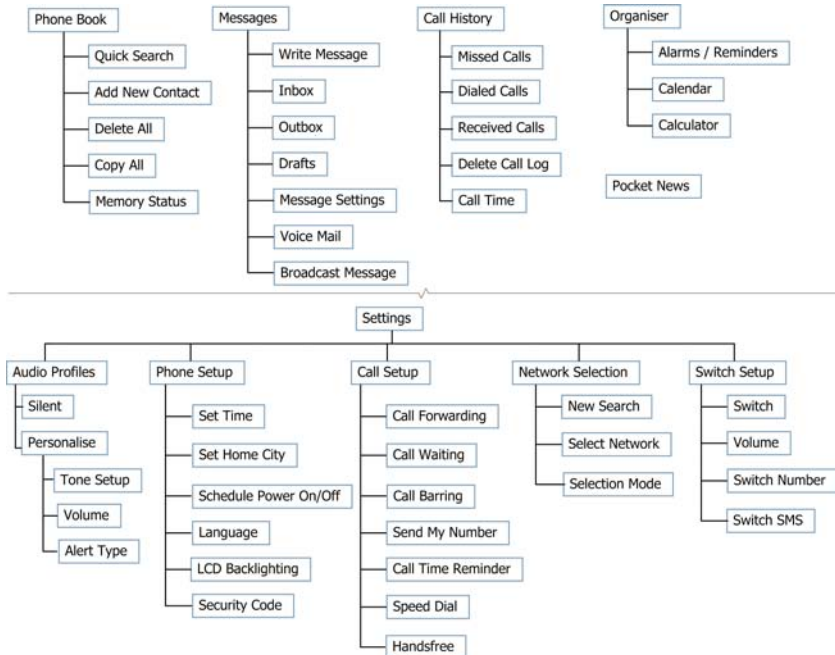

5 Step by step guide

5.1 Shortcuts

Shortcuts open the first item in each respective menu

- Down key, 1 = Phonebook, Quick Search
- Down key, 2 = Messages, Write Message
- Down key, 3 = Call History, Missed Calls
- Down key, 4 = Settings, Audio Profiles
- Down key, 5 = Organiser, Alarms / Reminders
- Down key, 6 = PocketNews
- Press the Up key for the Alarms / Reminders, Calendar, & Calculator functions
- Press the Green key for a shortcut to the All Calls menu
- Press the Green key again for Last Number Redial
- Press and hold the # key to engage or disengage Silent mode
- Press and hold the 0 key during a call to enable the In Call volume preset.

5.2 Switch Setting

The Switch on the back of the handset can be programmed to initiate a call and/or

send an SMS to friends or relatives simultaneously.

- Go to **Settings > Switch Setup > Switch** to enable or disable this feature. This feature is disabled by default.
- Go to **Settings > Switch Setup > Switch Number** to program a phone number and up to four SMS numbers.
 1. The first location will define the voice call number
 2. Locations from 2 to 5 will define the SMS number(s)
- Go to **Settings > Switch Setup > Switch SMS** This field **must** be completed in order to send a text message.
- If you have enabled this function and programmed Switch numbers, by pushing down the Switch Key the phone will initiate a call and send an SMS message(s) to the pre-defined numbers. The Alert tone may continue (depending on the Tone sound level setup) until the Switch key is pushed back to the up position.
- When the call is connected the handset automatically enables Handsfree (speaker-phone) mode.
- The phone will sound an alert tone when enabled
- The alert tone sound level (volume) can be adjusted to Off, Low, Medium or Loud
- In any state, push the Switch key up to return the phone to standby mode.
- If the keypad is locked, the phone will still activate Switch Dialling when you push down the Switch key.

5.3 Make and receive a call

- Enter the phone number using the number keys and press the **Green key** to dial. If you enter a wrong digit use the **Red Key** to delete the mistake. Long press the **Red key** to clear all the characters.

- Press the *** key** twice to enter '+' for international dialling.
- Press the *** key** three times for the Pause symbol 'P' which adds a 3 second delay into the dialled number.
- Press the **Green key** to answer an incoming call, and press the **Red key** to end or reject the call.
- If you have set speed dial numbers long press the numeric keys (3 to 9) to dial the corresponding contact.
- Press the **Volume keys** to adjust volume during the call.
- Press and hold the 0 key to select the **In Call** volume level which you can pre-define. Eg. If your normal ear-piece volume is 3, you can set the **In Call** volume setting to 5 which you can use in noisy environments to give a quick volume boost to the earpiece if required. See *Audio Settings* for more information.

5.4 Add a Contact to your Phonebook

Menu > Phonebook > Add New Contact > To Phone, To SIM > Name > Edit

Type in the Name using the keypad letter keys, (eg press the key once for the first letter, twice for the second letter etc.), press OK when finished.

Press the # key to change text input modes (abc, ABC, 123) if required.

Menu > Phonebook > Add New Contact > To Phone, To SIM > Number > Edit


Enter the number using the number keys, press OK when finished

Press **Done** and then **Yes** to Save when prompted.

5.5 Make a call from the Phonebook

- Press the **Red Key** briefly to bring up the **Phonebook Search** view
- Press the letter keys shown on the keypad to search for the name of your Phonebook contact.
- Eg. Press 5 to search for John. Press 5 twice to search for Karen.
- Use the up and down arrows to scan your Phonebook contacts
- When you have selected the required contact press **Option** > **Dial** to make a call to that contact

5.6 Messages

- The envelope icon  indicates a new message and when blinking indicates the mail box is full.
- Select **Messages** > **Write message** to start a new message. Press the **Green key** to save or send the SMS.
- Press the **# key** to switch text input methods (abc, ABC, 123 etc).
- Press the **Green key** to read the message. Press the **Red key** to exit.

- The **Inbox** shows all your received messages.
- The **Outbox** shows all the sent messages.
- **Drafts** shows all your saved messages which have not been sent.
- You can delete a message by selecting **Option > Delete** when viewing a message.
- **Messages > Broadcast Messages > Receive Mode > On** enables Cell ID information on the main display.

5.7 Text Input methods

1. Change input mode: Press the **# key** to change between 123, Multitap ABC, Multitap abc, and Smart abc.
2. Input Letters: In **Multitap** modes press the letter keys till the correct letter appears.
3. Input Words: In **Smart abc** mode, input each letter with a single key press. The word updates as you enter more letters. Predictive text is based on a built-in dictionary. When you have finished writing the word confirm by pressing the **Green key**. If the word is incorrect, press the **Up/Down key** to view other words in the dictionary or enter using **Multitap abc**.

4. In **123 mode**, press the key to enter a digit. In Multitap modes hold the key until the number appears.
5. Press the * key to open the symbols list. Press the **Up/Down keys** to select a symbol. In **Multitap ABC** and **Multitap abc** mode press the **1 key** until the required symbol (common symbols) appears.
6. Press the **0 key** to input space, (not available in 123 mode).
7. Press the **Red key** to clear a character. Hold the **Red key** to delete all characters and clear the display.
8. Press the **Up/Down keys** to move the cursor to left or right.

5.8 Phone Book

You can save names and numbers to the phone memory and the SIM card.

- Select **Phone Book > Add New Entry** to add a new contact. Save to SIM or phone.
- Select **Phone Book > Quick Search** to view the phone book. Input the first letters of the name, the phone will list the corresponding records.
- Select **Phone Book > Delete All** to delete all contacts from the phone or SIM. Or

select **Option > Delete** in phone book list to delete the contacts one by one.

- Select **Phone Book > Copy All** to copy all from SIM to phone or phone to SIM.
- Select **Phone Book > Memory Status** to view SIM card or phone memory status.

5.9 Speed Dial

- Once you have saved some Contacts you can assign speed dial keys to your favourite contacts. Press and hold the programmed number key to quickly call your assigned Contact. See *Call Settings* for more details.

5.10 Call History

- From the stand by state press the **Green key** to check your call history. You can view you Dialed calls, Received calls and Missed calls.

5.11 Audio Settings

Select **Settings > Audio Profiles > Personalise** to set the following:

a) Tone Setup

Incoming Call	Power Off
Alarms / Reminder	Message Tone
Power On	Keypad Tone

- The Power On / Off tones are played when the phone is switched on or off.
- The volume level for the Power On and Off tone is linked to the Ring Tone volume.

b) Volume

Ring Tone	Ear Piece Volume
Key Tone	In Call Volume *

c) Alert Type

Ring	Vibrate Then Ring
Vibrate Only	Light only
Vibrate and Ring	

- * **Settings > Audio Profile > Personalise > Volume > In Call Volume** sets a preferred second volume setting to quick change the standard earpiece volume. This is activated by long pressing the 0 key during a call.

5.12 Phone Settings

- Select **Settings > Phone Setup > Set Time** to set time (24hrs only) and date.
- Select **Settings > Phone Setup > Set Home City** if required
- Select **Settings > Phone Setup > Schedule Power On/Off** to set automatic power on/off time.
- Select **Settings > Phone Setup > Set Language**. Select from English or Chinese.

- Select **Settings > Phone Setup > LCD Backlight** to set LCD backlight.
- Select **Settings > Phone Setup > Security Codes**. Enable / disable PIN code.

5.13 Call Settings

- Select **Settings > Call Setup > Call Forwarding**. Enables your calls to be diverted to another number when your phone is busy, after no reply, or unreachable.
- Select **Settings > Call Setup > Call Waiting**. If you are on a call you will be notified of another incoming call. Press **Options - Swap** to switch between the two calls.
- Select **Settings > Call Setup > Call Barring** to bar your handset from making outgoing calls in various circumstances. This feature requires the Barring password which is available from your service provider.
- Select **Settings > Call Setup > Send My Number**. By default your number is displayed to the other party. You can disable this if preferred.
- Select **Settings > Call Setup > Call time reminder > Periodic** (set your required time from 1-3000 seconds) You hear a beep during an active call to remind you of the call duration.

- Select **Settings > Call Setup > Speed Dial**. Program speed dial keys. Once saved, long press the key to activate **Speed Dial** to the preset number. Note: Speed Dial 1 = Voicemail, Speed Dial 2 = International Message Bank. Speed dial numbers can only be set to numbers already in your **Contacts**.
- Select **Settings > Call Setup > Handsfree**. When switched on all calls are automatically presented in Handsfree (speaker-phone) mode.

5.14 Network Selection Settings

There is no need to change any of these settings. The handset will automatically choose the best available network.

5.15 Calendar

- Press the **Up arrow** key > Select **Calendar** to view the calendar.

5.16 Calculator

- Press the **Up arrow** key > Select **Calculator**. Press Up/Down keys for the functions +, -, *, /, = and press the **Green key** to confirm it.
- Press the **Red key** to clear input information and to exit the calculator.

5.17 Torch

Switch the torch on or off using the side switch. The torch works whether the handset is on or off, or in the locked or unlocked state so be careful not to activate the torch while the handset is in your pocket.

5.18 Keylock Switch

Slide the Keylock switch down to lock the keypad. If you get an incoming call you can press the Green key to answer or the Red key to reject the call. You can also dial emergency numbers when the keypad is locked. Enter the number and press the Green key to call.

5.19 Alarms / Reminders

Press the **Up arrow** key > Select **Alarms/Reminders** (see the table below...)

- Select the required Alarm or Reminder function from the available options
- Select **Add** > **Edit** to enter a name. (Note: a name or comment is required in this field to Save the alarm).
- Press the down arrow to select the **time field** (hh:mm), press **Change** to enter the alarm time.

- Press the down arrow to select the **date field** (dd.mm), press **Change** to enter the required date.
- Press **Done** to save the alarm when finished.

Alarm Name	Required Fields	Alarm Type
Birthdays	Set the Name, Time and Date	Annual
Important Dates	Set the Name, Time and Date	Annual
Medication Reminder	Set the Name, Time	Daily
Getting Up	Set the Name, Time	Daily
Entertainment	Set the Name, Time	Daily
Count Down	Set the Name, Countdown	Once
Others	Set the Name, Time, date, repeat	Set by the user: (off, once or everyday)

5.20 FM Radio

- Press the **FM key** to turn the radio on or off. Press the **Green key** to start the radio and press the **Red key** to stop, press again to continue. Press the **FM key** to Exit
- Press the **Up / Down** arrow keys to manually tune to the required frequency.
- Select **Option > Channel List > Option > Edit** to enter a new channel directly. Enter the required frequency, use the # key to enter the decimal point.
- Select **Option > Channel List > Option > Play** to play the selected channel.
- Use the side volume keys to adjust the volume.
- Select **Option > Manual Input** to manually input a channel.
- Select **Option > Volume** to set the initial volume which will be remembered every time you start the radio.
- Select **Option > Preset Auto Search** to preset the playlist with available channels
- Select **Option > Loudspeaker** to turn on or off the loudspeaker.

6 Technical Reference

6.1 Technical Specifications

Network	GSM 900, 1800 MHz
Dimensions L×W×H	Approx 108mm x 49.5mm x 15.1mm
Weight	Approx 82g (Including standard battery)
Features	GSM Handset with SMS, FM Radio, 3.5mm headset jack, LED torch and Programmable Switch Call function.
Battery	1000mA hours, Lithium ion (Li-ion)
Screen	96 x 64 pixel, 1.65" monochrome LCD
Continuous idle time*	Up to 300 hours
Continuous talk time*	Up to 300 minutes talk time,
Charge time	Approximately 3-4 hours
Battery Life	Approximately 400 charge cycles

Service Information

- For Warranty Service directions please see <http://www.zte.com.au>
- All calls for PIN number enquiries, Network problems, Next G Services, BigPond account information, Web Access, Account and Billing Information, (U)SIM card registration and general enquiries should be directed to Telstra.

Warranty Information

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water, exposure to solvents or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

The End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations. Your statutory rights are not affected.

Note: Consult the warranty card for full information