

TOPFIELD

TRF-2470

User Reference

High Definition

Digital Terrestrial Receiver

Personal Video Recorder

ABC iView

Home Media Share



Quick Setup in five easy steps

1. Connect the antenna to ANT IN on the back of the PVR unit.
2. Connect your desired audio-video cables from the back of the PVR unit to the back of the television.
(Composite, Component, HDMI)
3. Plug into the power point and turn the unit ON using the switch on the back of the unit.
4. Switch television ON, then use the television remote to select the correct video input channel for the PVR unit.
(for example, AV1, AV2, Component, HDMI, etc)
5. On the main menu go to Installation/Searching then scroll to Start Search, press **[OK]**.
Wait till progress bar on bottom of screen reaches 100 % then press **[OK]** to save and **[EXIT]**.

Contents

Contents	iii
1 Introduction	1
1.1 Features	1
1.2 Controlling the digital receiver	2
1.2.1 Front panel	3
1.2.2 Remote control	5
2 Setup	8
2.1 Unpacking	8
2.2 Safety precautions	8
2.3 Rear panel connections	9
2.4 Connecting up your digital receiver	11
2.4.1 Connecting to the antenna	12
2.4.2 Connecting to your television set	12
2.5 Switching on for the first time	15
3 Service Search	17
3.1 Searching for broadcasting services	17
3.2 Resetting to factory settings	18
3.3 Resetting to user settings	19
3.4 Clearing the services list	19
4 Preference Settings	20
4.1 Video and audio settings	20
4.1.1 High definition television	20

4.1.2	Television aspect ratio	21
4.1.3	Audio mode	22
4.2	Local time setting	23
4.3	Parental control	24
4.4	Options for recording	26
4.5	Options for playback	27
4.6	Options for on-screen display	28
4.7	Options for the front display	29
4.8	Options for Photo Album	30
4.9	Options for standby mode	30
5	Every Day Use	32
5.1	Volume control	32
5.2	Watching television	32
5.2.1	The services list	32
5.2.2	The favourite service lists	34
5.2.3	Viewing programme information	35
5.2.4	Selecting audio tracks	35
5.2.5	Selecting subtitle tracks	36
5.3	Viewing electronic programme guide	36
5.4	Using time-shift	37
6	Organising Services	39
6.1	Editing the favourite lists	39
6.2	How to use on-screen keyboard	41
7	Recording and Playback	42
7.1	Recording a programme	43
7.1.1	Instant recording	44
7.1.2	Timer recording	45
7.1.3	Scheduling recordings using the programme guide	48
7.1.4	Storing a time-shifted programme	49
7.2	File archive	50
7.2.1	To delete a recording	51
7.2.2	To sort recordings	51
7.2.3	To lock a recording	51

7.2.4	To rename a recording	51
7.2.5	To set the playback option	52
7.2.6	To make a new folder	52
7.2.7	To move a recording to another folder	52
7.3	Playing back a recording	52
7.3.1	To navigate using the progress bar	53
7.3.2	To play in slow motion	53
7.3.3	To play in fast motion	54
7.3.4	To make a bookmark	54
7.3.5	To play back a recording repeatedly	55
7.3.6	To play back recordings in sequence	55
7.4	Editing a recording	56
7.5	Copying a recording	56
8	Entertainment	57
8.1	Catching up the programmes (ABC iView)	57
8.1.1	Searching for a favourite show	58
8.1.2	Watching the selected programme	58
8.2	Copying files	59
8.3	Playing back MP3 files	60
8.4	Viewing image files	61
8.4.1	How to move a file to the photo album	61
8.5	Playing back a video file	62
8.6	Playing back YouTube contents (optional)	63
8.7	Sharing image files by Yahoo Flickr (optional)	63
8.8	SHOUTcast Internet radio (optional)	65
8.9	Google weather forecast (optional)	66
8.10	Sharing media content with other devices	66
8.11	Network game	69
8.11.1	Single mode	69
8.11.2	Network mode	73
9	Accessing via Network	74
9.1	Configuring the router	75
9.1.1	To access within the local area network	75
9.1.2	To access over the Internet	76

9.2	Network setup	77
9.2.1	For a wired connection	77
9.2.2	For a wireless connection	78
9.3	Accessing the web server	78
9.4	Accessing the FTP server	80
10	Toppro Application Program	83
11	Firmware Update	86
11.1	From a memory stick	86
11.2	From the firmware server via the Internet	87
A	Troubleshooting	88
B	Universal Remote Control	94
B.1	Code list for television sets	97
B.2	Code list for DVD players	111
B.3	Code list for audio-video receivers	113

Chapter 1

Introduction

The TRF-2470 digital receiver is fully compliant with the international Digital Video Broadcasting (DVB) standard, and thus is able to receive digital broadcasts of that standard. For its operation you need an antenna, which must be installed appropriately.

For the latest news and information, join the Topfield forum at <http://www.topfield.com.au>.

NOTE

In general we equate a channel with a frequency. However, unlike analogue broadcasts, digital broadcasts are not all assigned to their own frequencies; instead, multiple television broadcasts are transmitted through a single frequency. The frequency in digital broadcasting is usually called transponder or multiplex. To reduce confusion in this manual, the word **service** is preferably used than **channel** as a term to indicate one television or radio broadcast.

1.1 Features

This digital receiver has the following features:

- Can store up to 2,000 television and radio services.
- Can create lists of your favourite services.
- Can view information about the current television or radio programme.
- Has an electronic programme guide that provides an overview of scheduled programmes.
- You can record up to four services while you are currently watching another.
- You can record many programmes using a built-in hard drive with large storage capacity.
- Time-shift is a special technical feature available on this digital receiver. You can pause a programme you are watching and resume it again at a later time. Then you can quickly go to any part of the current programme by fast forward or rewind search.
- If you have an external hard drive connected to the digital receiver via the USB or eSATA port, you can record television programmes into it.
- You can play back video files of various formats including DivX.
- You can play a built-in network game with other users via the Internet.
- You can use various Web services including YouTube. (optional)
- You can share media files with other device across the same home network.
- You can catch up the past programmes using the iView service.

1.2 Controlling the digital receiver


You can operate the digital receiver with the remote control or the buttons on the front panel.

NOTE

When the digital receiver is off but plugged into a wall socket, we say that it is in standby mode; on the other hand, when it is on, it is in active mode. Even when you are not using the digital receiver, you should keep it plugged into a wall socket to be in standby mode so that it can run timer events at any time.

1.2.1 Front panel

The front panel of the digital receiver has buttons to control the digital receiver, specific lights and a display to indicate its status. The following indicates what they mean.

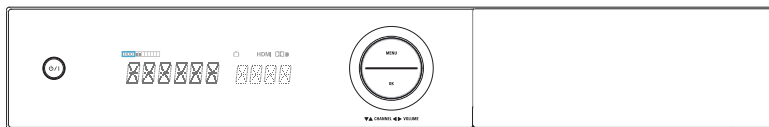

Power button switches the digital receiver between standby mode and active mode.

Front display shows the current time in standby mode, and displays the current service in active mode.


MENU button displays the main menu. It is also used to return to the previous menu from a submenu.

OK button displays the services list. See [§5.2.1](#) for more details. It is also used to select a menu item.

CHANNEL **▼**, **▲** buttons switch to the previous or next service.

VOLUME **◀**, **▶** buttons decrease or increase the volume.

You have to insert your subscription card into the front slot to watch pay services.

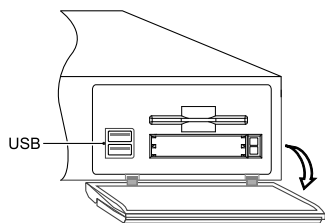

There is a USB port on the front panel for firmware update and data transfer.

1.2.2 Remote control

-  button switches the digital receiver between standby mode and active mode.
-  mutes the sound. Press again to switch it back on.
-  switches the remote control to television mode to operate your television.
-  switches the remote control to receiver mode to operate the digital receiver.
-  switches the remote control to operate your audio-video receiver.
-  switches the remote control to DVD mode to operate your DVD player.
- Numeric buttons are used to enter a service number for service change or to specify values for menu options.
-  switches over between the current service and the previously viewed one.
-  displays the service information box. It is also used to display more information about a programme.
- ,  buttons decrease or increase the volume.
- ,  buttons switch to the previous or next service.
-  displays the services list. See §5.2.1 for more details. It is also used to select a menu item.
- Navigation buttons are used to navigate in menus or to change values for menu options.
-  displays the main menu. It is also used to return to the previous menu from a submenu.
-  displays the electronic programme guide.
-  is used to exit a menu or to hide on-screen information.

-  is used to display the list of recorded programmes that are stored in the internal hard drive. See §7.2 for more details.
-  has different functions per menu.
-  is used to make a bookmark on playback or time-shift.
-  is used to edit a recording.
-  is used to jump to next bookmark position.
-  has different functions per menu.
-  is used to select a subtitle track.
-  is used to select an audio track and a sound mode.
-  is not used in this model.
-  changes video resolution. See §4.1.1 for more details.
-  changes aspect ratio. See §4.1.2 for more details.
-  switches over between television services and radio services.
-  is used to set a sleep timer in 10 minute increments.
-  is used to start recording.
-  is used to stop playback, to stop recording, or to jump back to live television from time-shifted television.
-  is not used in this model.
-  is used for multi purpose functions.
-  is used to start reverse playback. Subsequent presses increase the rewind speed.
-  pauses live television or playback of a recorded programme.
-  is used to start fast forward playback. Subsequent presses increase the playback speed.
-  resumes normal playback speed, or displays the progress bar for navigation on playback or time-shift. To play a recorded programme, see button .

-  is used to jump back to the beginning of the recording on playback.
-  is used to start slow motion playback. Subsequent presses change the playback speed.
-  is used to jump to the end of the recording on playback.
-  has different functions per menu.

NOTE

When using the remote control, point it at the remote sensor on the front panel of the digital receiver.

The actual images and the number of buttons may be different depending on the type of remote control provided by the manufacturer.

Chapter 2

Setup

2.1 Unpacking

Before going any further, check that you have received the following items with the digital receiver.

- Remote control
- Two batteries for the remote control (AAA 1.5 V)
- One Component cable (RCA cable)
- One Composite cable (RCA cable)
- A copy of a quick guide

NOTE

Accessories may vary according to your local area.

2.2 Safety precautions

Please read carefully the following safety precautions.

- The mains voltage must range between 90 and 250 volts. Check it before plugging the digital receiver to the wall socket. For the power consumption of the digital receiver, refer to Table [2.1](#).

- The wall socket should be near the equipment. Do not run an extension lead to the unit.
- The mains plug shall remain readily operable so that it can be removed easily to disconnect the power.
- When placed in a cabinet, make sure there is a minimum space of 10 centimetres around it. For the physical specification of the digital receiver, refer to Table 2.2.
- Protect the power cord from being walked on or pinched. If the cord is damaged, do not use the digital receiver and get the cord replaced.
- Refer all servicing to a qualified service technician.
- To maintain proper ventilation, always leave sufficient space around the digital receiver.

Table 2.1: Power specification


Input voltage	90 to 250 V AC, 50/60 Hz
Power consumption	40 W at maximum in active Under 1 W in passive standby

Table 2.2: Physical specifications

Size	380 × 60 × 265 mm
Weight	3.1 kg
Operating temperature	0 to 45 °C
Storage relative humidity	5 to 90 %

2.3 Rear panel connections

The TRF-2470 has a wide range of connections on the back.

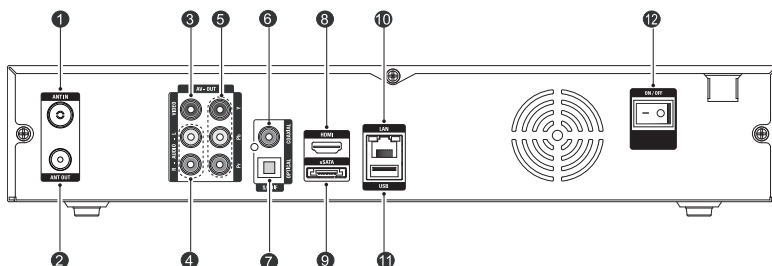

Check what connections your television set has in comparison with the digital receiver.

- | | |
|-------------------------|--|
| 1 ANT IN | Terrestrial broadcasting signal input socket (5V, Max.100mA) |
| 2 ANT OUT | Terrestrial broadcasting signal output socket through the ANT IN socket for another digital receiver |
| 3 VIDEO | Composite video output socket for the television set (yellow) |
| 4 AUDIO L/R | Stereo audio output socket for the television set or the audio-video receiver (white/red) |
| 5 Y/Pb/Pr | Component video output socket for the television set (green/blue/red) |
| 6 S/PDIF COAXIAL | Coaxial-type digital audio output socket for the audio-video receiver |
| 7 S/PDIF OPTICAL | Optical-type digital audio output socket for the audio-video receiver |
| 8 HDMI | Audio and video output socket for the high definition television set |
| 9 eSATA | eSATA port for connection to an external hard drive |
| 10 LAN | Local area network port |
| 11 USB | USB port for firmware update and data transfer. |

- 12** ON/OFF Power switch (You have to turn on this switch first to use this digital receiver.)

Table 2.3: Connectors specifications

HDMI	High definition video output Left & right audio output Dolby Digital audio output
AV-OUT YPbPr	Component video output
AV-OUT VIDEO	Composite video (CVBS) output
AV-OUT AUDIO	Left & right audio output
S/PDIF	Dolby Digital audio output
LAN	10/100 Ethernet
USB	2.0 Host (5 V DC, 500 mA)
eSATA	External SATA 2.0

2.4 Connecting up your digital receiver

There are several ways to set up the digital receiver. Set up the digital receiver suitably to your television and other devices. If you have any problem with your setup or need help, contact your dealer.


WARNING

Connect any components before plugging the power cord into the wall outlet. Always turn off the product, TV and other components before you connect or disconnect any cables.

NOTE

If you encounter any problems setting up your product, please contact your local retailer.

2.4.1 Connecting to the antenna

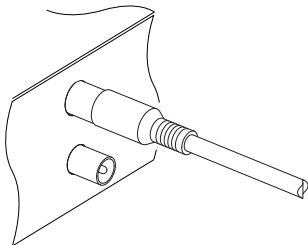

Whatever sort of connection you have between the digital receiver and the television, you need to connect the digital receiver to the antenna so that it can receive digital television broadcasts. Connect the antenna cable to the ANT IN connector. If you have another digital receiver, you may link it from the ANT OUT connector.

NOTE

ANT OUT may also be linked to your television, VCR, or DVD recorder to loop an analogue signal.


2.4.2 Connecting to your television set

For all the following connections of the digital receiver, we recommend you to use the first connector to get the best picture quality. If your television does not have a matching connector, then use the next connector in the following order for a better picture quality.

1. HDMI connector (HDMI)
2. Component connector (YPbPr)
3. Composite connector (VIDEO)

You should configure audio and video settings after connecting up the digital receiver. See §4.1 for a detailed description.


To use the HDMI output

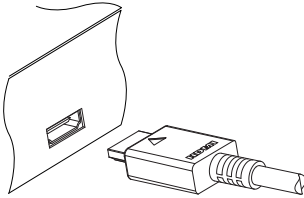

If you have a high definition television set, you should use an HDMI cable for best results. Plug one end of the cable into the HDMI socket on the digital receiver, and plug the other end into the matching socket on your television. In this case, you do not have to make audio connection because it can output stereo audio or digital audio as well.

In this case, you do not have to make audio connection because it can output stereo audio or digital audio as well.

To use the Component video output

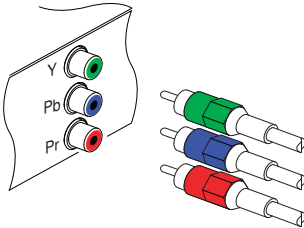


You need to obtain a Component video cable (RCA cable) to use the Component video output. Plug one ends of the cable into the Y (green), Pb (blue) and Pr (red) sockets on the digital receiver, and plug the other ends into the matching sockets on your television.

NOTE

When connecting with the Component video cable, remember to also plug in the additional white and red audio cables from the digital receiver to the back of your television.

To use the Composite video output

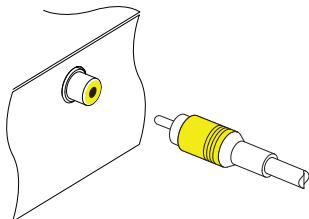


You need to obtain a Composite video cable (RCA cable) to use the Composite video output. Plug one end of the cable into the **VIDEO** (yellow) socket on the digital receiver, and plug the other end into the matching socket on your television.

NOTE

You cannot view high definition video by means of the Composite video output.

To make the audio connection

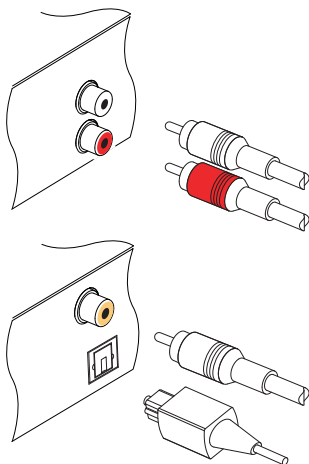

You need to obtain an audio cable (RCA cable) to link the audio connectors. Plug one ends of the cable into the **AUDIO L** (white) and **AUDIO R** (red) sockets on the digital receiver, and plug the other ends into the matching sockets on your television or audio-video receiver.

To enjoy Dolby Digital audio, your television or audio-video receiver must be able to decode Dolby Digital audio, and you need to obtain an S/PDIF cable.

If you want to use the **COAXIAL** connector, prepare a coaxial S/PDIF cable (RCA cable); otherwise to use the **OPTICAL** connector, prepare an optical S/PDIF cable. Plug one end of the cable into the **S/PDIF** socket on the digital receiver, and plug the other end into the matching socket on your audio-video receiver.

NOTE

Enable Dolby Digital output by changing the audio setting to bitstream. See §4.1.3 for more details.

2.5 Switching on for the first time

Now that you have your digital receiver connected, you should plug it into a wall socket. Ensure that your television set is turned on and on the correct video channel so that you will be able to see the display from the digital receiver.

Before switching on the digital receiver, you should insert batteries into the remote control. Open the battery compartment by removing the lid, and then insert the batteries observing the polarity, which is marked on the base of the battery compartment.

Press the  button on the top left corner on the remote control. In a little time, you may see a picture displaying a menu.

If you do not see a picture, try pressing the  button on the remote control. If after several tries you still get no picture, check that the television is set to the correct input. If the picture is good, you can skip to §3.1 to search for available television and radio services. Otherwise, you may need to temporarily connect the Composite video connector (VIDEO) to your television set so that you can see the menu in order to configure the video settings.

CAUTION

If the digital receiver no longer reacts properly to the remote control commands, the batteries may be flat. Be sure to replace only with 1.5V AAA size batteries, and observe the following precautions.

- Do not mix different types of batteries, or new and old batteries.

- Do not use rechargeable batteries.
- Do not recharge the old batteries.
- In order to avoid any risk of explosion, observe the polarities indicated inside the battery compartment.
- Do not subject to excessive heat such as the sun and fire.
- If you are not using the remote control for a long period of time, remove the batteries. The manufacturer accepts no liability for the damage resulting from leaking batteries.
- Batteries, including those which contain no heavy metals, may not be disposed with other household wastes. Please dispose of used batteries in an environmentally sound manner. Find out the legal regulations which apply in your area.

Chapter 3


Service Search

After connecting up the digital receiver, you will need to perform a service search.

NOTE

If there is no service stored, you will be not able to access all menus. A SERVICE is another name for a CHANNEL.

3.1 Searching for broadcasting services

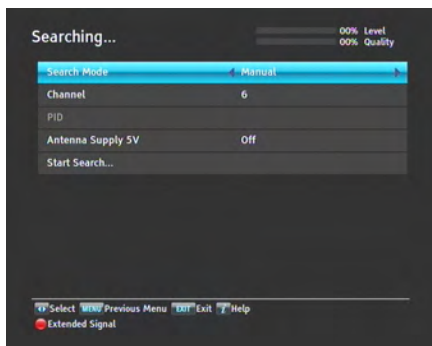

To perform service search, select the Installation > Searching menu. You should see a screen like the left figure.

You should set the **Search Mode** option to **Auto** for the first time after connecting up the digital receiver, then the digital receiver will search for all available services.

You may choose to only search for the services of a specific transponder since more than one service are provided via each transponder. Set the **Search Mode** option to **Manual**, then select your desired transponder at the **Channel** option. The number ranges from 6 to 12 in VHF and 28 to 69 in UHF.

It is possible to search single service in a certain transponder only if you know the desired service's audio and video packet identification (PID). Set the **Search Mode** option to **Advanced**, then the **PID** option becomes enabled. Specify the PIDs of your desired service with the numeric buttons.

To start service search, move down to the **Start Search** item, and press the **OK** button. The digital receiver will start to search for services and display a list of television and radio services as they are found. It is common for no channels to be found until quite late in the process. When the scan is complete, you will see a message telling you how many services have been found. Press the **OK** button to save the list.

3.2 Resetting to factory settings

The digital receiver maintains the following data:

- Services list
- Favourite list
- Timer list
- Preference settings

You can reset all data of the digital receiver. Select the **Installation > System Recovery > Factory Setting** menu, and then you get asked for confirmation. With the choice of **Yes**, the services list, favourite list and timer list will all be cleared, and preference options will be reset to the manufacturer's factory settings.

NOTE

A factory reset will not delete any recorded programmes. However, you have to search services again after a factory reset.

3.3 Resetting to user settings

You can store your own data including the following:

- Services list
- Favourite lists
- Preference settings

Also you can restore them at any time.

To store your data, select the **Installation > System Recovery > Store System Data** menu, then you get asked for confirmation. If you select **Yes**, your data will be stored. Whenever you store your data, they are all overwritten. To restore your data, select the **Installation > System Recovery > Recover System Data** menu, then you get asked for confirmation. With the choice of **Yes**, your data will be restored.

3.4 Clearing the services list

If you only want to clear the services list, select **Installation > System Recovery > Reset Service List**, then you get asked for confirmation. With the choice of **Yes**, the services list will be cleared. After this, you have to do service search again.

Chapter 4

Preference Settings

4.1 Video and audio settings



You have to configure the video and audio settings appropriately for your television set and other devices. Select the **Settings > A/V Output** menu. You should see a screen like the left figure.

4.1.1 High definition television

The digital receiver supports various video resolutions from 576 to 1080. In general, a resolution of 720 or more is considered high definition. The higher the resolution is, the better the quality is. However, if your television set does not support high definition, you cannot enjoy high definition quality picture.

Set the Video Format option as you desire. If you set this op-

tion to 576P, the digital receiver will present even high definition programmes in resolution of 576. On the contrary, if you set it to 1080I, the digital receiver will present even standard definition programmes in resolution of 1080.

It is recommended to set it to **Auto** if you have a high definition television. With that setting the digital receiver will present a programme as it is without any resolution conversion. While watching television you can change the resolution with the **(VF)** button. Whenever you press it, the video resolution is changed in turn.

NOTE

You can enjoy only standard definition video with the Composite video output (AV-OUT VIDEO).

4.1.2 Television aspect ratio

If you have a wide-screen television, set the TV Aspect Ratio option to 16:9.



You can enjoy both wide-screen programmes and normal-screen programmes with your wide-screen television as the above figures show. To watch normal-screen programmes in full screen like the left figure, set the Display Format option to **Full**. Normal-screen pictures then will be inflated to fit to the width of the wide screen. Otherwise, to watch them in the original ratio like the right figure, set it to **Center**. If you have a normal-screen television, set the TV Aspect Ratio option to 4:3.



You cannot fully enjoy wide-screen programmes with your normal-screen television as the above figures show. The left figure shows a normal picture displayed in the normal screen. To watch wide-screen programmes in the shape like the centre figure, set the **Display Format** option to **Letter Box**. Wide-screen pictures then will be reduced to fit to the width of the normal screen. Otherwise, to watch them in the shape like the right figure, set it to **Center extract**. Then wide-screen pictures will be cut out on the left and right sides equally to fit to the width of the normal screen.

4.1.3 Audio mode

Basically, there are two audio sources as you can find two audio sockets on the back panel of the digital receiver. You can enjoy only one source or both of them in either stereo or mono. Set the **Sound Mode** option as you desire.

Apart from this setting, you can change the sound mode with the  button. See §5.2.4 for a detailed description.


The digital receiver can output two types of digital audio signals via the S/PDIF output. One is an encoded signal, and the other is a decoded signal. If you have the digital receiver linked to your audio-video receiver via the S/PDIF output, you have to set the **Dolby Digital** option to **PCM**, which means that the digital receiver will output encoded Dolby Digital audio without decoding so that your audio-video receiver can decode it. Otherwise, set it to **multi-channel**, then the digital receiver will output decoded Dolby Digital audio, scaling it down to two channels.

NOTE

Only if the service you are currently watching provides a Dolby Digital audio track, you can enjoy Dolby Digital sound.

4.2 Local time setting

You should set your local time for timer events.

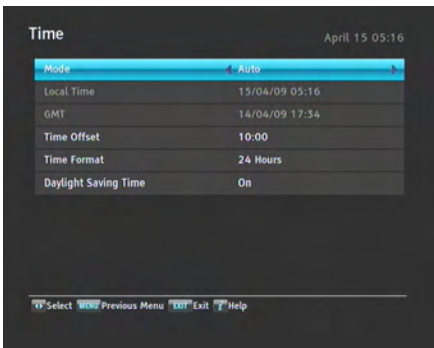

Select the Settings > Time menu. You should see a screen like the left figure. You can set the clock manually or use the time signal, Greenwich Mean Time (GMT), carried as part of the digital television broadcast. To use Greenwich Mean Time, take the following steps:

1. Set the Mode option to Auto, then the Time Offset option becomes enabled.
2. Set the Time Offset option to the time difference between your time zone and GMT referring to Table 4.1.
3. Make sure that your local time is correctly displayed on the Local Time item.

To set the local time manually, set the Mode option to Manual and enter your local time to the Local Time option with the numeric buttons. The time format is *day/month/year 24-hour:minute*.

If daylight saving time is observed in your state at the moment, set the Daylight Saving Time option to On.

NOTE

Daylight saving time adds one hour to the time when the option is set to On. When setting the time offset from Greenwich Mean Time, make sure that time offset does not include daylight saving time.

Table 4.1: Time offset table

Time offset	City
GMT – 12:00	Eniwetok, Kwajalein
GMT – 11:00	Midway Island, Samoa
GMT – 10:00	Hawaii
GMT – 09:00	Alaska
GMT – 08:00	Pacific Time US, Canada
GMT – 07:00	Mountain Time US, Canada
GMT – 06:00	Central Time US, Canada, Mexico City
GMT – 05:00	Eastern Time US, Canada, Bogota, Lima
GMT – 04:00	Atlantic Time Canada, La Paz, Dominican Republic
GMT – 03:30	Newfoundland
GMT – 03:00	Brazil, Georgetown, Buenos Aires
GMT – 02:00	Mid-Atlantic
GMT – 01:00	Azores, Cape Verde Islands
GMT	London, Lisbon, Casablanca
GMT + 1:00	Paris, Brussels, Copenhagen, Madrid
GMT + 2:00	South Africa, Kaliningrad
GMT + 3:00	Baghdad, Riyadh, Moscow, St. Petersburg
GMT + 3:30	Tehran
GMT + 4:00	Abu Dhabi, Muscat, Baku, Tbilisi
GMT + 4:30	Kabul
GMT + 5:00	Ekaterinburg, Islamabad, Karachi, Tashkent
GMT + 5:30	Bombay, Calcutta, Madras, New Delhi
GMT + 6:00	Almaty, Dhaka, Colombo
GMT + 7:00	Bangkok, Hanoi, Jakarta
GMT + 8:00	Beijing, Perth, Singapore, Hong Kong
GMT + 9:00	Tokyo, Seoul, Osaka, Sapporo, Yakutsk
GMT + 9:30	Adelaide, Darwin
GMT + 10:00	Eastern Australia, Guam, Vladivostok
GMT + 11:00	Magadan, Solomon Islands, New Caledonia
GMT + 12:00	Fiji, Auckland, Wellington, Kamchatka

4.3 Parental control

In general, television programmes are classified according to the level of violence, nudity and language of their content.

When you are watching a programme, you can check its programme classification on the information box. For the information box, see §5.2.3. You can prevent your children from watching specific programmes by specifying a maximum permissible level.



Select the **Settings > Parental Control** menu. You should see a screen like the left figure, and you will be asked your Personal Identification Number (PIN). The number is initially set to '0000' as default.

To block programmes with undesired content for family viewing, set the **Censorship** option to your desired level among the following:

No block restricts no programme.

Total block restricts every programme, even those with no programme classification.

G restricts to G or above. G rated programmes are suitable for all audiences.

PG restricts to PG or above rated programmes. PG stands for *Parental Guidance*, the content of which is mild.

M restricts to M or above rated programmes. M stands for *Mature*, the content of which is moderate in impact.

MA restricts to MA or above rated programmes. MA stands for *Mature Audience*, the content of which is strong.

R restricts to R rated programmes. R stands for *Restricted to adults* aged 18 years or over, the content of which is very strong.

AV restricts to AV rated programmes. AV stands for *Adult*

Viewing, the content of which is deep hardcore.

NOTE

If a programme has no rating information, your censorship setting will not take effect.

If anyone is trying to watch a programme that is of or above the censorship setting, the person has to enter the personal identification number to override. To change the number, select the **Change PIN Code** menu, then a box pops up, asking a new PIN. Enter a desired number twice for confirmation.

You can also restrict uses of some menus. Selecting the **Access Control** menu displays a list of menus that you can lock. If the **Time** item is set to **Locked**, you have to enter the PIN when accessing the **Time** menu. If you enter a wrong number, you cannot use the menu. To release a locked item, set it to **Unlocked**.

4.4 Options for recording



To set the options for recording, select the **Settings > Recording** menu. You should see a screen like the left figure.

To enable the time-shift function, you should set the **Time Shifting** option to anything other than **Disable**. The available range for this option is 30 minutes to 5 hours. You will have the latest of the current programme as long as the duration specified at this option.

You can record a programme into both an external and the built-in hard drive. If you want to record a programme into an external hard drive, set Recording Drive option to External; otherwise, set this option to Internal.


If you set the Time Shift Storage option to Enable, the time-shifted programme will be saved in the TimeShift folder of the hard drive.

You can set the duration of the timer recording. Set the Timer Recording Duration option as you desire. Its available range is 10 minutes to 3 hours.

Time padding is the feature of adding extra recording time to the beginning or end of a programme, so that you do not miss any part of the programme. Set the Time Padding of Timer Recording option as you desire.

You can adjust the duration of the instant recording. Set the Instant Recording Duration option as you desire. Its available range is 30 minutes to 5 hours.

4.5 Options for playback

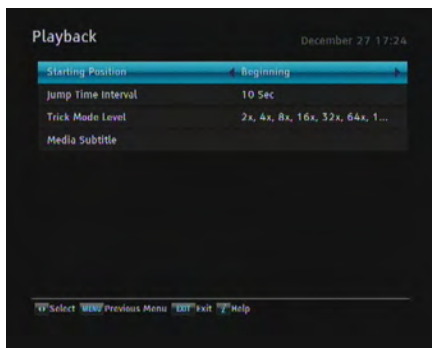

To set the options for playback, select the **Settings > Playback** menu. You should see a screen like the left figure.

If you want to play back a recorded file from beginning, set Starting Position option to Beginning. To play back a recorded file from the part where you were watching, set this option to Continuing.

You can adjust the jump interval that is for playback. Set the Jump Time Interval option as you desire. Its available range is 10 seconds to 3 minutes.

If you want to enjoy more levels of playback speed, set the Trick Mode Level option to 2x, 4x, 8x, 16x, 32x, 64x; otherwise, set it to 4x, 16x, 64x.

NOTE

You can enjoy video files such as DivX with the digital receiver. However, the above options might not be effective depending on the video files to be played. For detailed description on how to play back a video file, refer to §8.5.

If you have subtitle files such as .smi, .sub, .idx, and .srt, the digital receiver can also display them. The Media Subtitle item provides some options for video subtitle. When you play back a video file with a subtitle file, if the subtitle does not match the video, then you can synchronise them by adjusting the value of the Sync option. In addition, you can change the colour and size of subtitle by setting the Font Color and Font Size options to one you prefer.

4.6 Options for on-screen display



To set the options for the on-screen display (OSD), select the Settings > OSD menu. You should see a screen like the left figure.

To adjust the transparency level of the OSD, set the OSD Transparency option as you desire. Its available range is 0 to 50 percent.


To adjust the display time of the information box, set the Info Box Display Time option as you desire. Its available range is 1 to 30 seconds. If you set this option to No Info Box, the information box will not be displayed when you switch services. However, pressing the **i** button will display the information box. If you set this option to Never Hide, the information box will always be displayed. For the information box, see §5.2.3.

In addition, you can raise or lower the position of the information box. Set the Info Box Position option as you desire. Its available range is -10 to +3 lines. The higher you set the option, the lower the information box will be positioned.

To use an animation effect when changing menu, set the Animation option to Enable.

If any service's name is too long to fit the width of the service name column on the services list screen, you can get it to scroll by setting the Text Scroll option to anything other than Disable. With the choice of Full Scroll, it will be fully scrolled until its end disappears; with the choice of Part Scroll, it will be scrolled only to its end.

4.7 Options for the front display

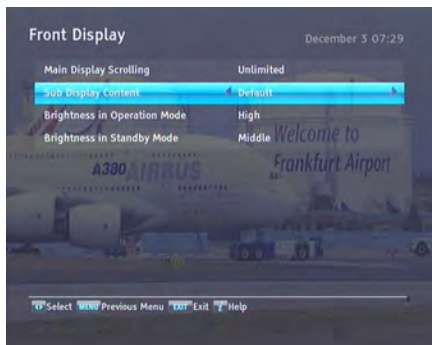

To set the options for the front display, select the **Settings > Front Display** menu. You should see a screen like the left figure.

The front display shows the currently viewed service's number and name. If any service's name is too long to fit the width of the service name column, you can get it to scroll by setting the Main Display Scrolling option to anything other than Disable. With the choice of Unlimited, it will be repeatedly scrolled; with the choice of Once, it will be scrolled only once. If you want to have the current time displayed instead of the service number, set the Sub Display Content option to Time.

You can also adjust the brightness of the front display in active mode and standby mode by setting the Brightness in Operation Mode option and the Brightness in Standby Mode option to any as you like.

4.8 Options for Photo Album

You can change a time interval and effect of slideshow in the photo album. For the photo album feature, see §8.4.

To change the time interval of slideshow, select the **Settings > Miscellaneous** menu, and then set the Slideshow Time Interval option as you desire. Its available range is 3 to 10 seconds.

To change the effect of slideshow, select the **Settings > Miscellaneous** menu, and then set the Slideshow Effect option as you desire. There are four types of effects as follows:

Overlap overlaps the current picture and a following picture.

Cover covers the current picture with a following picture.

Move moves the current picture and displays a following picture.

Mosaic displays a following picture with a mosaic effect.

To use those effects randomly, set this option to **Random**. The default value is **Random**.

4.9 Options for standby mode

You can have the current time displayed on the front display in standby mode. Select the **Settings > Miscellaneous** menu

and set the **Standby Mode** option to **Active**; otherwise, set it to **Passive**. When you set the **Standby Mode** option to **Active**, the receiver can also bypass the signal from the antenna.

Chapter 5

Every Day Use

5.1 Volume control

Use the **VOLUME-** and **VOLUME+** buttons to alter the volume to a comfortable level. You may need to adjust the volume on your television set too. To temporarily switch off the sound, press the **MUTE** button. Press it again to restore the sound to previous level.

5.2 Watching television

To change services, press the **CHANNEL-** or **CHANNEL+** button. Pressing the **RECALL** button switches to the previously viewed service. In addition, you can switch to your desired service by entering its service number with the numeric buttons. You can also select a service to watch in the services list.

5.2.1 The services list

To view the services list, press the **OK** button.



On the services list, you can see the service information as follows:

- Service number and name
- Multiplex information

To select a desired service, put the highlight bar on its entry with the or button and press the button, then the selected service will be presented.

Pressing the or button skips over 10 entries up or down. Entering a service number with the numeric buttons puts the highlight bar on its entry.

You can switch between the television services list and the radio services list by pressing the button.

Pressing the button displays additional options, with which you can do the following:

- By setting the Show Provider option to On, you can view service entries by groups of broadcasters.
- To change the name of the highlighted service, select the Rename option, then the on-screen keyboard appears, with which you can enter a new name. See §6.2 as to how to use the on-screen keyboard.
- You can prevent other family members from watching the highlighted service by setting the Lock option to Locked. You have to enter your personal identification number to watch or unlock it.
- To add the highlighted service into a favourite group, select the Add to Fav option, then the favourite groups will be displayed. Put the highlight bar on a desired group and press the .

- To delete the highlighted service, select the **Delete** option, then you get asked for confirmation. With the choice of **Yes**, it will be deleted. If you want to restore it as before, you have to perform service search again.

5.2.2 The favourite service lists

You can select a service on a favourite list as well as on the services list.



To display the favourite lists, press the **F2** button at the services list screen. For the services list, see §5.2.1.

To select a favourite list, put the highlight bar on a desired favourite group list and press the **OK** button, then the selected favourite group's services will be listed.

As to how to edit the favourite lists, refer to §6.1.

To select a favourite service, put the highlight bar on a desired service and press the **OK** button, then it will be displayed. To select another group, press the **Up** button.

After you have selected a favourite service, if you then switch to another service using the **Left** or **Right** button, it will be also another favourite service of the selected group. The digital receiver will remind you what group you have selected by displaying its name at the top right of the screen whenever you switch services.


To return to the services list, press the **F1** button. Besides that, you can add or delete a favourite group or service.

To add the service you are currently watching into a favourite group, press the **Option** button to display additional options, and then select **Add this service** item.

To remove the currently highlighted favourite group or service, select **Delete** item in the additional option box, then you get asked for confirmation; with the choice of **Yes**, it will be removed.

5.2.3 Viewing programme information

Pressing the **i** button displays the information box, on which you can see all of the following:

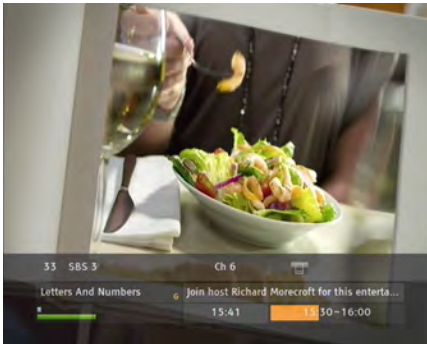

- Service number and name
- Signal level and quality
- Programme name
- Programme classification sign
- Programme summary
- Broadcasting time
- Current time

In addition, you might see the following symbols:

- Subtitle symbol () if subtitle tracks are provided on the current programme.
- Dolby Digital symbol () if a Dolby Digital audio track is provided on the current programme.
- Lock symbol () if the current service is locked.

Pressing the **i** button once more displays detailed information about the current programme. To hide the information box, press the **EXIT** button.

5.2.4 Selecting audio tracks


Some programmes are provided with audio tracks in one or more languages. Pressing the **sd?** button displays available audio tracks. Once you select an audio track, that track will be heard. In addition, you can enjoy audio tracks in four sound modes: **Stereo**, **Mono**, **Left** or **Right**.

5.2.5 Selecting subtitle tracks

Some programmes are provided with subtitle tracks in one or more languages. If the current programme provides subtitle tracks, the subtitle symbol (≡) will be marked on the information box. Pressing the ≡ button displays available subtitle tracks. Once you select a subtitle track, it will be displayed.

5.3 Viewing electronic programme guide

The Electronic Programme Guide (EPG) shows the current and scheduled programmes that are or will be available on each service with a short summary for each programme.

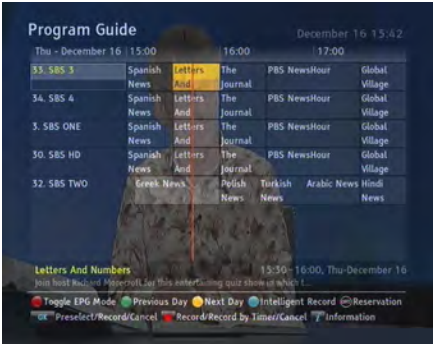

Pressing the **GUIDE** button displays the electronic programme guide, on which you can see the following:

- Scheduled programmes
- programme summary
- Broadcasting date
- Broadcasting time

To see detailed information of a desired programme, put the highlight bar on the programme with the **⏪** or **⏩** button and press the **i** button. To switch to another service, press the **⏪** or **⏩** button.

You can travel over previous days with the **F2** button, and can travel over next days with the **F3** button.

To see the programme guide for radio broadcasts, press the **📻** button. To switch it back, press the **📺** button again.

Pressing the **F1** button will rearrange the form, swapping the columns and rows. To switch it back, press the **F1** button again.

You can make a timer recording on the electronic programme guide. See §7.1.3 for detailed description.

5.4 Using time-shift

You can pause and resume a live television programme, and even rewind and replay it. When you are watching a programme and you miss something, you can rewind and replay it. Or when your attention is needed elsewhere, you can pause a live TV and resume a short time later without losing any of the programme.



When you do this, you are no longer watching the live programme, instead you are watching a delayed presentation. This is called time-shifted television. You can skip commercials until you catch up to the live broadcast.

In order to use the time-shift feature, set the Time Shifting option to desired duration of time. Then the digital receiver will archive the programme as much time as you set in the option. See §4.4.

The time-shift will be reset each time you change to another service. With the time-shift, the following operations are possible:

- To go back in time, hold down the  button; to go forward, hold down the  button. The progress bar is displayed momentarily with a preview window.
- You can navigate using the progress bar, refer to §7.3.1.
- You can jump backward and forward by pressing the  and  buttons. You can change the jump time at the

Jump Time Interval option. See §4.5.

- You can change playback speed. See §7.3.2 for slow motion. For fast motion, see §7.3.3.
- To check your current position in time-shift, press the  button. The time difference compared to live programme is displayed momentarily in top right corner of the screen. A value of -02:00 means two minutes behind the live programme.
- To make a recording of the time-shifted programme,, see §7.1.4.
- To end time-shift, press the  button. The live programme will be displayed.

NOTE

You can adjust some options for time-shift. Refer to §4.4.

Chapter 6

Organising Services

6.1 Editing the favourite lists

You can make your own favourite service lists. In fact, you can define multiple favourite service lists, each being a 'group' of chosen services.



Select the Installation > Edit Favorite List menu. You should see a screen like the left figure. There are three columns:

- Group name (left)
- Favourites list (centre)
- Services list (right)

The services list contains all available services, whereas the favourites list contains only chosen services that have been added to the highlighted group. As you move the highlight bar up or down on the group list, favourite services belonging to the highlighted group get shown in the favourites list.

NOTE

To load guide, go to the specific channel, press the **GUIDE** button, then the guide will populate. Do this to every single channel upon starting up PVR.

You can add up to 30 groups. To add a new group, select the **NEW** item in the group list, then the on-screen keyboard appears. See §6.2 as to how to use the on-screen keyboard.

To rename a group, put the highlight bar on the group entry you want and press the **F2** button, then the on-screen keyboard likewise appears.

To delete a group, put the highlight bar on the group entry you want and press the **F3** button, then a message box appears, asking you for confirmation. With the choice of **Yes**, it will be deleted.

You can add a favourite service to a group by taking the following steps:

1. Put the highlight bar on a desired group entry in the group list and press the **OK** button to select it. The highlight bar then moves to the services list.
2. To add a service to the selected group, put the highlight bar on a desired service entry and press the **OK** button. The selected service entry gets added to the favourite list. Repeat this step to add more entries.
3. Press the **F1** button, and the highlight bar gets moved to the favourite list. You can delete a favourite entry with the **OK** button.
4. To select another group, press the **F1** button again, then the highlight bar gets moved to each column.

Furthermore, you can rearrange a group's favourites by moving a favourite entry. To move a favourite entry, put the highlight bar on the favourite entry you want and press the **F2** button. Press the  and  buttons or  and  buttons to

move it to a desired place and press the **OK** button. To add radio services, press the **RA** button, then radio service entries get listed in the services list. To recall the television services list after adding radio services, press the **TV** button again.

As to how to use the favourite service lists you organised, refer to §5.2.2.

6.2 How to use on-screen keyboard



You can move the highlight key horizontally with the **←** and **→** buttons and vertically with the **↑** and **↓** buttons. Pressing the **OK** button on a key enters its letter in the input line. To type a space, select the **Space** key. To type lower case letters or numerals, select the **Shift** key.

To delete a letter, put the cursor to the right of the desired letter on the input line and then select the **Del** key. You must select the **Save** key to store the name; otherwise if you press the **EXIT** button, the name will not be stored.

Chapter 7

Recording and Playback

You can record TV programmes into an external hard drive as well as the built-in hard drive.

NOTE

To use an external hard drive, you must connect the external hard drive to the USB port or the eSATA port of the digital receiver. You cannot play back the recordings with a regular MPEG player on your computer because they are formatted differently from the standard MPEG format. Visit <http://www.kmplayer.com> where you can find an MPEG player able to play them back.

CAUTION

Do not disconnect the external hard drive while recording or playing back. It may cause damage to recorded programmes. You should disconnect the external hard drive in standby mode only.

Avoid transferring files while the unit is set to record.

This recorder can record four channels simultaneously, however, this is controlled by the channel frequency. Each channel

has other programmes under the one frequency (E.g. Channel Nine has 9, 9HD, GO, GEM) (Channel ABC has ABC News 24, ABC1, ABC2, ABC3, etc.). This recorder can record two programmes on each channel frequency simultaneously. (E.g. 10.TEN Digital plus 11.One HD and 90.GEM plus 99.Go!) Whilst recording the above combination of programmes you can also playback a pre-recorded show.

7.1 Recording a programme



Once a recording gets started, a symbol like the left figure will be displayed at the top right of the screen for a few seconds.

When you are watching a different service from the service being recorded, you will see a number on the centre of the symbol, this indicates the order that the recording has started. When you record two different channels from two different stations, what you are actually doing is locking each tuner to two separate station bandwidths.

For example, if you record channel 7TWO and channel 9 Digital, you have locked the first tuner into all the channels from 7 which includes: 7 Digital, 7 Digital 1, 7TWO and 7Mate. While on the second tuner you have locked in all the channels from 9 which includes: 9 Digital, Gem and Go.

With this in mind, while the above two channels (eg. 7TWO and 9 Digital) are being recorded, you can watch a third channel which can be only one of the following: 7 Digital, 7 Digital 1, 7Mate, Gem or Go.

The same can be said for recording for four channels (eg. 7TWO, 7Mate, 9 Digital and Go). You can watch an additional channel which can be only one of the following: 7 Digital, 7 Digital 1 or Gem.


CAUTION

Do not move the digital receiver nor pull out the power plug while it is running. It may cause damage to recorded programmes. Topfield is not responsible for damages inflicted on files that are stored on the hard drive.

7.1.1 Instant recording

To instantly record a programme you are watching at present, press the  button.

Pressing the  button will not pause the current recording like it does with a video recorder. Instead, pressing the  button will pause the live show and begin time-shifting within the current recording even with the Time Shifting option disabled. In short, it is still possible to pause a recording, but literally recording continues in the digital receiver.

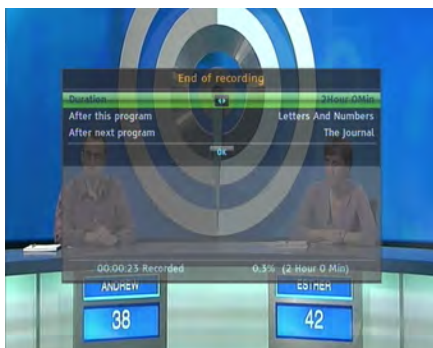


After a recording has started, pressing the  button displays a menu like the left figure, in which you can set the recording duration.

To specify an arbitrary recording duration, set the Duration option as you desire with the  and  buttons and press the  button; the recording will end at the specified time.

If the information about the next programme is provided by the electronic programme guide, the After this program and After next program options will be enabled. Once the After this program option is selected, the current recording will stop at the time when the current programme is scheduled to end.

Likewise, once the **After next program** option is selected, the current recording will stop at the time when the next programme is scheduled to end.

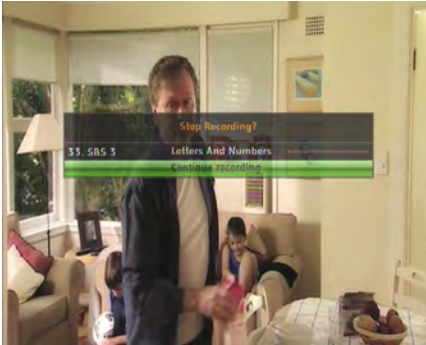

To stop recording, press the  button; then a box like the left figure appears, which shows the programmes currently being recorded. Select recording by using navigation buttons then press **OK** button to stop the recording.

While a recording is going on, you can watch or record another service. To additionally record another service, switch to the service you want to record, and press the  button. Once a recording is started, it is put on the recorded programme list even though it is not finished yet. The recording file is named the program name if available or after its service name with a suffix of a number. To view the recorded programme list, press the  button or alternatively select the **Recording > Recorded Program** menu. See §7.2 for detailed description about the recorded programme list.

7.1.2 Timer recording

You can set a programme to be recorded at a specific time. Even if the digital receiver is in standby mode, it will switch into active mode and start recording at a specified time. When the recording comes to the end, the digital receiver will switch back into standby mode again in one minute. However, if you press any button on the remote control or on the front panel even just one time, the digital receiver will not switch into standby mode.



To add a timer recording, select the **Recording > Reservation** menu, then the timer list will be displayed. To add a new timer event, press the **[F1]** button, and a box like the left figure appears. Take the following steps:

1. Set the **Record** option to **On** to make a recording. If this option is set to **Off**, the digital receiver will turn on at the specified time but not record; instead, you may record with your video recorder or suchlike in this case.
2. You may have two sources for recording, TV and radio. Set the **Type** option to your desired source.
3. Set the **Service** option to the service which provides the programme you want. Pressing the **[OK]** button on this option displays a services list, from which you can select your desired service.
4. Set the **Mode** option as you desire. There are five timer modes:

One Time means literally 'one time'.

Every Day means literally 'every day'.

Every Weekend means 'Saturday and Sunday every week'.

Weekly means 'one day every week'.

Every Weekday means 'from Monday to Friday every week'.

If your favourite programme is broadcast at weekends and you wish to record every episode of the programme, set the **Mode** option to **Every Weekend**.

5. Set the **Date** option to a desired date, on which the digital

receiver will turn on. The date format is *day/month/year-day of the week*.

Set the **Start Time** option to a desired time, at which the recording will be started. The time format is *hour:minute*.


6. Set the **Duration** option to a desired time, in which the recording will be finished.
7. Pressing the **OK** button on the **File Name** option displays the on-screen keyboard, with which you can specify a file name for the timer recording. If you do not specify anything, it will be named after the service name. See §6.2 as to how to use the on-screen keyboard.
8. To set a recording reservation with the above settings, select the **OK** item; otherwise, it will not be saved and will not occur.

You can also edit or delete timer events in the timer list. To edit a timer entry, put the highlight bar on the entry you want and press **OK** button; then appears a box in which you can change its settings in the same manner as making a new one.

To delete a timer event, put the highlight bar on the entry you want to remove and press the **F2** button, then you get asked for confirmation. With the choice of **Yes**, it will be deleted. To delete all timer event, press the **F3** button.

To see the program guide, press the **Option** button.

7.1.3 Scheduling recordings using the programme guide

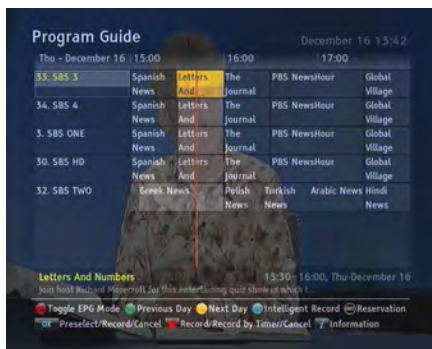

If the electronic programme guide is properly provided, you can make timer events on it. The instructions on how to make timer recordings using the electronic programme guide are as follows:

1. Press the **[GUIDE]** button to display the electronic programme guide.
2. Select a programme you want to record with the navigation buttons.
3. To make a timer event without recording, press the **[OK]** button; the letter **P** is displayed. To make a timer event with recording, press it once more or alternatively press the **[RECORD]** button, then the letter **R** is displayed.
4. Pressing the **[OK]** button once more will cancel the timer.

Intelligent Recording(IR)

Once you choose a show in the programme guide and select Intelligent Record, it not only records the selected show, but also makes timer recordings for all other episodes of the show that can be found on the EPG.



Press the **GUIDE** button to display the EPG and highlight a show you want to record with the navigation buttons. To make intelligent recording, press the **F4** button on the selected show, then the letter IR is displayed in blue circle.

At the same time you set the IR on your favorite show, the receiver will automatically detect the same service name on the EPG. And then, on all other episodes of the show, the letter IR in gray circle will be displayed. This indicates the entire series of the show are automatically scheduled to be recorded. If you want to cancel the IR timer, press the **OK** button on the programme.

NOTE

To check the reservation list, press the **Option** button on the EPG. IR can be applied to the shows only when they are properly provided on the EPG. You can also set IR on four programs simultaneously that start at the same time. Intelligent recording timers cannot be adjusted. If you would like to extend the duration of a intelligent recording time you will need to add timer padding. You can find this under menu/Settings/Recording. Timer padding will automatically add 1 - 30 minutes to the start or end of all shows set to record.

7.1.4 Storing a time-shifted programme

While watching a programme with time-shift, you can record it by performing the following steps:

1. Go to **Settings > Recording** menu and make sure the **Time Shift Storage** option is set to **Enable**.
2. Press the  button to display the progress bar.
3. Hold down the  button to move back in timeshift.
4. Press the  button to start recording. When you get prompted to save the timeshift programme, select **YES** then the timeshift programme is stored in the recorded programme list. At the same time a new live recording will begin from the end of your timeshift file on the same channel.
5. If you wish to stop the live recording, press the  button on the remote.

See §5.4 for detailed description about the time-shift feature.

7.2 File archive

When a programme is recorded, it is stored as a file on the hard drive of the digital receiver. You can select a recording to play back from the recorded programme list.



Select the **Recording > Recorded Program** menu or alternatively press the  button to display the recorded programme list. The file information is comprised of the following elements: file number, file name, recording time, running time, file size and so on.

You can play, move, delete, rename and lock a recording file. You can also sort the recording files by file name, running time or file size. In addition, you can make a new folder.

7.2.1 To delete a recording

To delete a recording, put the highlight bar on it and press the **F4** button, then you get asked for confirmation. With the choice of **Yes**, it will be deleted.

7.2.2 To sort recordings

To sort the recordings, take the following steps:

1. Press the **Option** button to display additional options.
2. Set the **Sorting** option to **Alphabetic**, **Time** or **Size** as you want.
3. Press the **EXIT** button.
4. They will be sorted by the specified option.

7.2.3 To lock a recording

To lock a recording so that other persons cannot play or delete it, take the following steps:

1. Put the highlight bar on a desired recording.
2. Press the **Option** button to display additional options.
3. Set the **Lock** option to **Locked**.
4. Press the **EXIT** button.
5. The lock symbol () is displayed on it.

If you select a locked recording to play it back, you will be asked for your personal identification number.

7.2.4 To rename a recording

To change a recording's name, take the following steps:

1. Put the highlight bar on a desired recording.
2. Press the **Option** button to display additional options.
3. Select the **Rename** option, and the on-screen keyboard appears. Change the name and save it. See §6.2 as to how to use the on-screen keyboard.

7.2.5 To set the playback option

You can enable or disable the playback option which appears when you attempt to play back a recording file. To set the playback option, take the following steps;

1. Put the highlight bar on a desired recording.
2. Press the **[Option]** button to display additional options.
3. To enable the playback option, set the Playback Option to Enable; otherwise set it to Disable. See §7.3 as to how to play back a recording.

7.2.6 To make a new folder

To make a new folder, press the **[F2]** button, then a new folder named GROUP # is created. You can change its name in the same manner as renaming a recording. See above.

7.2.7 To move a recording to another folder

To move a recording to another folder, put the highlight bar on a desired recording and press the **[F3]** button. If an external hard drive is connected to the digital receiver, you get asked to select between the built-in and external hard drive. Select Internal, then the folders are listed. Once you choose a folder, the recording is moved to it.

7.3 Playing back a recording

When a programme is recorded, its additional contents such as audio track or subtitle track are also recorded together. So you can enjoy them while playing back a recording.

The instructions on how to play a recording are as follows:

1. Select the Recording > Recorded Program menu or alternatively press the **[Menu]** button to display the list of recorded programmes.
2. Put the highlight bar on a desired recording and press the **[OK]** button, then an option box pops up.

3. To play from beginning, set the Starting Position option to Beginning; to play from the point that you have stopped at the last time, set it to Continuing. To start playback, select the Play item.
4. To stop playback, press the  button.

During playback, you can enjoy the following tricks:

- To see the detailed information about the currently played recording, press the  button; then the information box appears and shows its file name, running time, programme information, and so on.
- To pause playback, press the  button. To resume it, press the  button.
- To view the progress bar, press the  button; to hide it, press the  button again.
- When the progress bar is hidden, you can move to a desired scene by entering a progress percentage with the numeric buttons.

7.3.1 To navigate using the progress bar

First press the  button to display the progress bar.

- To go forward, hold down the  button; to go backward, hold down the  button.
- If there are no bookmarks, you can jump forward by the minute set to the Jump time Interval option with the  button. See §4.5 for that option. Refer to §7.3.4 as to how to bookmark a position.
- To jump to the beginning, press the  button.
- To jump to the end, press the  button.
- To hide the progress bar, press the  button again.

7.3.2 To play in slow motion

To watch in slow motion during a playback, press the  button. If you press it repeatedly, the playback speed changes in 4

steps: 1/2, 1/4, 1/8 and 1/16 times. To resume normal speed, press the  button.

7.3.3 To play in fast motion

To watch in fast motion during a playback, press the  button. If you press it repeatedly, the playback speed changes. To resume normal speed, press the  button.

You can play not only forward but also backward in fast motion. To play backward, press the  button. If you press it repeatedly, the playback speed changes. To resume normal speed, press the  button.

You can change the playback speed in 3 steps (4, 16 and 64 times) or in 6 steps (2, 4, 8, 16, 32 and 64 times). See §4.5.

7.3.4 To make a bookmark



You can mark favourite parts of a recording by creating bookmarks and then jump to them in sequence. Bookmarks are stored with the recording so that you can use them again afterwards. To make bookmarks, take the following steps during playback:

1. Press the  button to display the progress bar.
2. To add a bookmark, press the  button at a desired scene, then you will see a small pointer appear above the progress bar like in the picture above.
3. To jump forward to the next bookmark, press the  button.

7.3.5 To play back a recording repeatedly

You can play back a recording repeatedly both in whole and in part.

To play back in whole, press the  button when the progress bar is hidden, then the repetition symbol () is displayed on the information box. To cancel it, press the  button again.

To play back in part, take the following steps:

1. Press the  button to display the progress bar.
2. Move to the beginning scene of the part you want to play repeatedly by holding down the  or  button.
3. Press the  button, then the pointer starts to blink.
4. Move to the end scene; the selected part is marked in black.
5. Press the  button again to start repeated playback.
6. To cancel it, press the  button when the progress bar is displayed.

7.3.6 To play back recordings in sequence

You can play several recordings continuously in sequence by performing the following steps:

1. Press the  button or alternatively select the **Recording > Recorded Program** menu to display the list of recorded programmes.
2. Select each desired recording with the  button. Once a recording is selected, it gets numbered.
3. Press the  button to start playback.
4. The selected recordings are played in the sequence that they are numbered.
5. To jump to the beginning of the next recording in the queue, press the  button to display the progress bar, then press the  button.

7.4 Editing a recording

You can cut out or save a part such as commercial from a recording by performing the following steps:

1. Press the  button to display the progress bar during a playback.
2. Move to the beginning scene of the part you want to edit by holding down the  or  button.
3. Press the  button, then the pointer starts to blink.
4. Move to the end scene; the part is marked in black.
5. Press the  button, then the edit options are displayed.
6. If you choose the Cut option, it will be removed from the original recording and discarded.
7. If you choose the Save option, the cut will be saved in a new file which is named after the original recording with a suffix of 'CUT' and a number.

NOTE

Edited files cannot be fast-forwarded and rewinded. The  and  buttons are still active for this feature.

7.5 Copying a recording

You can record the file in whole or in part during a playback by performing the following steps:

1. Start playback of a recording you want.
2. Move to a scene from which you want to start copying by holding down the  or  button.
3. Press the  button, then it will be copied in a new file which is named after the original recording with a suffix of 'COPY' and a number.
4. To stop copying, press the  button.

Chapter 8

Entertainment

This digital receiver provides several special features for entertainment.

NOTE


To fully enjoy all of the features described in this chapter, you had better configure the network settings properly. As to how to configure the network settings, refer to §9.2.

8.1 Catching up the programmes (ABC i@iew)



You can watch past programmes using the ABC iView. Go to Entertainment > ABC iView, then the Home screen appears with featured programs on ABC channel.

8.1.1 Searching for a favourite show

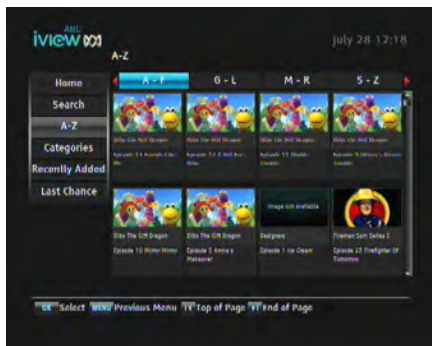

To search a desired programme manually, put the highlight bar on Search menu and press OK to display the on-screen keyboard. You can also search contents by alphabetical index or categories by selecting A-Z or Categories respectively.

To view new programmes recently added, select Recently Added menu. Programmes in iview are available to watch only for a certain period of time, therefore, also check out the Last Chance menu which includes programmes soon to disappear from the iview.

8.1.2 Watching the selected programme



Put the highlight bar on a desired programme and press OK. The receiver will start loading the programme displaying a progress bar. Wait until the status message "Loading" changes to "Play", then put the highlight bar on the Play and press the OK button.

NOTE

Loading time may vary depending on the programme or the internet connection speed. You can pause, stop and resume the playback of the iview programme, but recording or any

other playback control such as fast-forward or rewind is not available.

8.2 Copying files

NOTE

To copy files to the external hard drive, it must be preformatted in the NTFS file system. After this, the external hard drive can be used with the Topfield PVR and your PC.

You can copy files between the built-in hard drive and external hard drive. To copy from the internal to the external hard drive take the following steps:

1. Connect external hard drive to your Topfield unit.
2. Press the **MENU** button, then go to **Recording > Recorded Program**.
3. Select the file you want to transfer using the navigation buttons on your remote. An orange bar should be on top of the selected file.
4. Now press the **F3** button.
5. You will be given the option to **MOVE** to the internal hard drive (used when you want to transfer to a folder on the internal hard drive) or **COPY** to the external hard drive.
6. Select **COPY**, you will then get a screen showing your external hard drive name, select the USB external hard drive name and press **OK**.


NOTE

The copy command will keep the original file on your internal hard drive and then make a 2nd copy of the file on your external hard drive.

To copy from the external to the internal hard drive, take the following steps:

1. Connect an external hard drive to the digital receiver.
2. Press the  button and then press the  or  button to select the External List.
3. Put the highlight bar on a desired file and press the  button, then the list of folders gets displayed.
4. Select a folder in the built-in hard drive.
5. Press the  button, then the selected file will be copied into the built-in hard drive.

8.3 Playing back MP3 files

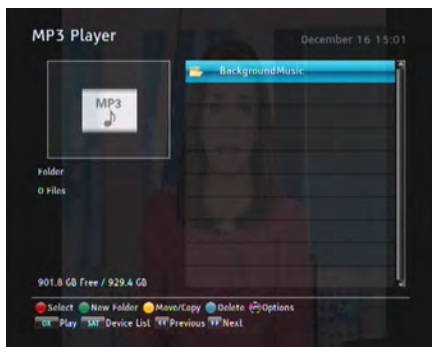

You can enjoy music or audio books in MP3 format on the digital receiver. Refer to §8.2 as to how to copy a file from an external hard drive into the built-in hard drive of the digital receiver. To play an MP3 file, take the following steps:

1. Select the Entertainment > MP3 Player or press the  button and then the  or  button to display the MP3 file list.
2. Put the highlight bar on a desired file; if you want to play several files, select them with the  button.
3. Press the  button to start playback.
4. To stop playback, press the  button.


To play all MP3 files in a subfolder, put the highlight bar on a desired folder, and press the  button. To change from one file to the next or previous file, use the  or  buttons.

8.4 Viewing image files

8.4.1 How to move a file to the photo album

You must move the jpg files into the Photo Album folder first. Please ensure your external hard drive is connected to your unit.

1. Select **[MENU]** button on your remote then go to Entertainment > Media Player.
2. Press the **[SAT]** button on your remote to bring up your external hard drive.
3. Select the external hard drive name and then press **[OK]**.
4. You will then get access to your external hard drive. Navigate through the external hard drive file and folders until you have selected the image file you want to transfer.
5. With the file selected, press the **[F3]** button, then another screen will appear. Select Photo Album and press **[OK]**.

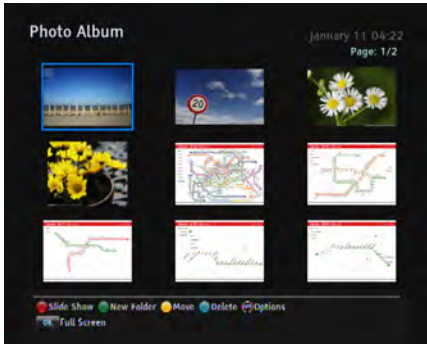

Now, you can view the image files in jpg format by performing the following steps:

1. Select the Entertainment > Photo Album menu, and then press the **[◀]** or **[▶]** button to display the list of image files.
2. Put the highlight bar on a desired file and press the **[OK]** button; if you want to view several files using a slide show, press the **[F1]** button. You can change a time interval and effect of slideshow. See §4.8.
3. To stop viewing, press the **[EXIT]** button.

8.5 Playing back a video file

You can play back media files such as photos, videos and music with this digital receiver. Media file formats that you can play back with the digital receiver are as follows:

- video: DivX, XviD, VOB, MKV, MP4, and AVI
- photo: JPG
- music: MP3



Refer to §8.2 as to how to copy a file from an external hard drive into the built-in hard drive of the digital receiver. To play a video file, take the following steps:


1. Select the Entertainment > Media Player, then press the **(SAT)** button on the remote or press the **(Menu)** button, and then the **(Left Arrow)** or **(Right Arrow)** button to display the video file list.
2. Put the highlight bar on a desired file; if you want to play several files, select them with the **(F1)** button.
3. Press the **(Play)** button to start playback.
4. If it has its own one or more subtitle files, you can select one you prefer with the **(Subtitle)** button to display subtitle.
5. To stop playback, press the **(Stop)** button.

NOTE

This digital receiver supports only version 3.x, 4.x, 5.x, and 6.x of the Divx format.

8.6 Playing back YouTube contents (optional)

YouTube is a video sharing website where users can upload, view and share video files. With the TRF-2470, you can access YouTube and play back various contents.

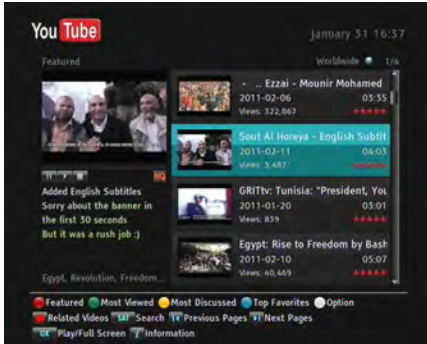

When you select the Entertainment > YouTube, you should see a screen like the left figure.

To play back a YouTube content, select a content with the and buttons and press the button. To play back the content with full screen, press the button again.

You can sort the contents with the option buttons as follows:

- button by most featured
- button by view count
- button from most discussed to least discussed
- button by top favourites
- button related contents

By pressing the button, you can sort the contents by the updated date, country and quality.


You can also search contents by a specific keyword. To search contents by a keyword, press the button, then the on-screen keyboard appears. See §6.2 as to how to use the on-screen keyboard.

To see detailed information about the current one, press the button. To hide the information box, press the button.

8.7 Sharing image files by Yahoo Flickr (optional)

Flickr is an image hosting website and on-line community platform. You can search an image file from the network server and

view the file using the Flickr.

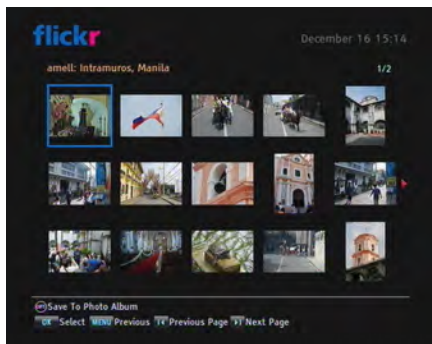

To use this function, select the Entertainment > Flickr.

You can see image files which belong to a specific user by adding a user. To add a user, take the following steps:

1. Press the **F1** button, then the on-screen keyboard appears.
2. Enter a desired user name. As to how to use the keyboard, refer to §6.2.
3. After adding a user, select the user with the  and  buttons and press the **OK** button.

To delete a user, put the highlight bar on a desired user and press the **F2** button, then you get asked for confirmation. If you select YES, it will be deleted.

You can also search image files by a specific keyword. To do that, take the following steps:

1. Press the **F3** button to go to the keyword search mode.
2. Press the **F1** button, then the on-screen keyboard appears.
3. Enter a keyword as you desire. As to how to use the keyboard, refer to §6.2.
4. Select the **Save** key on the on-screen keyboard to start searching image files.

To save an image file to the photo album, press the **Option** button. For the photo album see §8.4.

8.8 SHOUTcast Internet radio (optional)

SHOUTcast™ Radio is one of the largest directories of professionally and community programmed online radio stations in the world. Today SHOUTcast™ Radio features over 25,000 stations from around the globe. If you are into pop or rock music, want to check out local or world programming, you're sure to find something you like on SHOUTcast™ Radio.



To use SHOUTcast, select the Entertainment > SHOUTcast.

To listen to a radio station, select a radio station with the  and  buttons and press the  button.

To search radio stations by genre, press  button.

You can also search radio stations by a specific keyword. To do that, take the following steps:

1. Press the  button, then the on-screen keyboard appears.
2. Type a keyword you desire. As to how to use the keyboard, refer to §6.2.
3. Select the Save key on the on-screen keyboard to start searching radio stations.

To add a radio station to a favourite list, put the highlight bar on a desired radio station and press the  button. To display the favourite list, press the  button.

Powered by



For more details, visit the SHOUTcast web site, <http://www.shoutcast.com>. You can check their terms of service at the <http://www.shoutcast.com/disclaimer>.

8.9 Google weather forecast (optional)

You can view the weather of your city or other cities.



To view the weather, select the Entertainment > Weather, then you should see a screen like the left figure.


To change a city, take the following steps:

1. Press the **F1** button to see additional options.
2. Set the Continent, Country and City options as you desire with the navigation buttons.
3. Press the **EXIT** button.

Pressing the **Option** button toggles between the Centigrade and Fahrenheit.

8.10 Sharing media content with other devices


You can share media content with other media sharing devices across a home network. If you have, for example, a DivX player that has media sharing feature and is connected to the same home network through a router or other network interface, you can play back on the digital receiver the media content out of the DivX player, or vice versa.

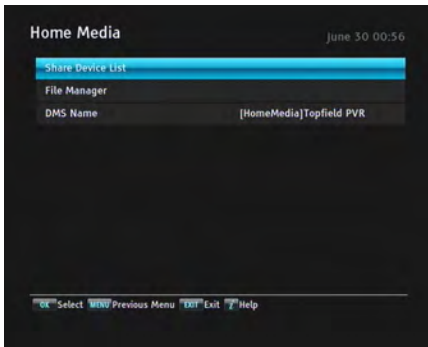

Select the Entertainment > Home Media menu, then you should see a screen like the left figure. The name, [HomeMedia] Topfield PVR, specified at the DMS Name option is used as an identifier for other networked devices. If you want to change the name, press the **(OK)** button on the name, then the on-screen keyboard will appear.

In general, there are four methods you can share media content from one device to another device as follows:

- Device A accesses and plays the media content out of device B.
- Device A commands device B to play B's own media content.
- Device A commands device B to access and play the media content out of device A itself.
- Device A commands device B to access and play the media content out of device C.

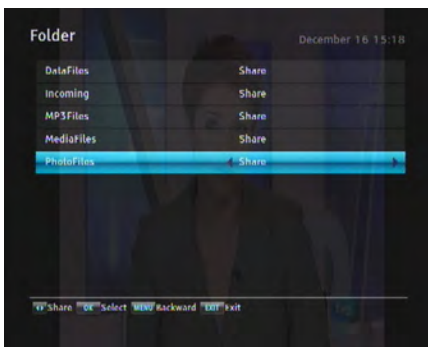

Before going further, you had better designate some of the folders in the digital receiver's hard drive for sharing so that they can be accessed and played by other networked devices as well. Select the File Manager > My HardDisk > Share Setting menu and set the folders you want to share to Share. Other devices will only access those folders you designate to be shared.

To play back media content out of other networked devices, take the following steps:

1. Select the **Share Device List** menu, then the list of all available networked devices gets displayed.

NOTE

Some digital media servers (DMS) may not work with this receiver.

2. Select a device which has media content you want to play, then the list of media files on the selected device gets displayed.
3. Select a media file you want to play, then the digital receiver would pull and play the selected media file if it can play back.
4. If you want to make any other networked device play your selection, press the **F4** button instead of the **OK** button, then the list of shared devices gets displayed. Select a device you want to use as a player, then the designated device would pull and play the selected media file if it can play back.
5. If you want to download your selection to the digital receiver, press the **F3** button instead of the **OK** button, then the selected media file gets copied into the digital receiver's hard drive. You can check the downloaded media files on only the FTP server of the digital receiver.

NOTE

In order for the digital receiver to find the folders shared on your computer you must first install a media server software on your PC.

If you have Windows 7 you will need to turn on the media server component in windows media player. Alternatively you can also use another media server program.

8.11 Network game

You can play a network game named Battle Tank on the digital receiver. You can play the game by yourself or with others via the network.

8.11.1 Single mode

To play the game in single mode, select the Entertainment > Game > Battle Tank (Single), then take the following steps:

1. Select game mode.
2. Select a character.
3. Buy items as you desire.
4. Select a map. If you play the game by yourself, you do not need to select a map.
5. Start playing.

If you want to out of the game while palying, press the **EXIT** button on the remote control.

Selecting game mode



When you select the Entertainment > Game > Battle Tank (Single), you should see a screen like the left figure.

You can select game mode as you desire. If you want to out of the game, select the EXIT option.

There are two modes as below:

Single play playing by yourself.

Double play playing with another user.

Select a mode with the  and  buttons and press the  button.

Selecting a character



After selecting game mode, you should see a screen like the left figure.

Select a character referring to Table 8.1.

If you select the , a character will be chosen randomly.

When you play the game for the first time, you can select only two characters. To get a new character, you have to play in single mode and clear all 13 stages.

Table 8.1: Buttons for selection

Action	1 Player	2 Player
Left		
Right		
Up		
Down		startbutton
Select		

You can see the selected character's information of the 1 Player on the left bottom of the screen. Also you can see the selected character's information of the COM or 2 Player on the right bottom of the screen. You have to select a character in 30 seconds; otherwise, the character will be selected automatically.

Buying items



After selecting a character, you should see a screen like the left figure. Buy a item referring to Table 8.1.

When you finish selecting items, select the READY on the screen as follows:

- **1 Player** : Select the READY using the (MENU) button and press the (OK) button.
- **2 Player** : Select the READY using the (F1) button and press the (F2) button.

Selecting a map



After buying items, you should see a screen like the left figure.

Select a map with the (D) and (C) buttons.

After selecting a map, select the START on the screen.

Select the START using the (MENU) button and press the (OK) button. If you play the game by yourself, you do not need to select a map.

Playing the Battle Tank

When you start the game, you should see a screen like the following figure. Play the game referring to Table 8.2.



- 1** The character's weapons.
- 2** The angle of the character.
- 3** You can see the direction and speed of wind.
- 4** You can see the information of the character as follows:
 ENERGY displays the character's energy.
 POWER displays the power of shot.
 MOVE displays the movement bar.
- 5** You can check your position and enemy's position on this mini-map.
- 6** You can use those items during playing game.
- 7** Displays current player.
- 8** Displays the turn time. If the time is over, turn will be changed to the other player.

Table 8.2: Buttons for playing

Action	Remote Control
Changing weapon	 
Changing angle	 
Moving character	 
Using items	   
Skipping turn	
Changing view of map	   startbutton
Firing a shot	

8.11.2 Network mode

To play the game in network mode, select the Entertainment > Game > Battle Tank (Network), and then take the following steps:

1. Select a game server.
2. Log on to the game server.
3. Joining a game.
4. Selecting a character, map and items for playing.
5. Start playing.

NOTE

Refer to the Battle Tank user guide as to how to play Battle Tank in network mode. You can download it from the Top-pro website, <http://www.topfield.com.au>.

Chapter 9

Accessing via Network

NOTE

The following section describes complex functions that should only be used by owners with advanced computer knowledge.

This digital receiver provides features of web service and FTP service, by which through the network you can make scheduled recordings, or transfer recording files to your computer.

Here you need a router, which will connect the digital receiver to your computer or to the Internet. If you want to have a wireless connection, you need a wireless router.

To use the network features of the digital receiver, you should take the following steps:

1. Configuring your router for the digital receiver.
2. Configuring the network settings on the digital receiver.
3. Accessing the home page of the digital receiver. Refer to §9.3 for detailed description about things you can do by using the web service of the digital receiver.
4. Accessing the FTP Server of the digital receiver.

NOTE

The web server and FTP server of the digital receiver do not work in standby mode. So it must be powered up at all times if you wish to use the web service at any time.

9.1 Configuring the router

In this section, the setup program of *WRT54G*, which is a router manufactured by *Linksys*, will be referred to as an example of how to configure the router for network access.

NOTE

For detailed description about how to set up the router, refer to the manual of your router.

9.1.1 To access within the local area network

Once your router is powered up, a local area network gets created whether or not it is connected to the Internet.

Local IP Address : . . .

Subnet Mask : . . . 

DHCP Server : ☒ Enable ☐ Disable

Starting IP Address :

Maximum Number of DHCP Users :

Client Lease Time : minutes (0 means one day)

WINS : . . .

You can let the router automatically assign a dynamic IP address to the computers or devices connected to the network by enabling the DHCP server of the router. In this case, you can access the digital receiver with the IP address which is assigned to the digital receiver by the router.

If the digital receiver reboots, a new dynamic IP address will be assigned to it. You had better assign a static IP address to the digital receiver to avoid this inconvenience. As to how to assign a static IP address, refer to the manual of your router; as to how to specify a static IP address on the digital receiver, see §9.2.

9.1.2 To access over the Internet

When you are away from home, you can access the digital receiver inside your home if your router is configured to route access to the digital receiver by means of port forwarding. Via this feature, your router will lead you to the digital receiver when you access your router with its IP address.

Port Range					
Application	Start	End	Protocol	IP Address	Enable
PVRHTTP	80	to 80	Both v	192.168.1.161	☒
PVRFTP	20	to 21	Both v	192.168.1.161	☒
	0	to 0	Both v	192.168.1.0	☐
	0	to 0	Both v	192.168.1.0	☐

Your router may be assigned to a dynamic IP address by an Internet service provider. So if the router has rebooted, you cannot access it unless someone in your home can inform you of the changed IP address. However, many routers support Dynamic Domain Name System (DDNS) service, which can settle this problem. The following image is an example of one such DDNS service provider.



The screenshot shows the DynDNS website interface. The main heading is 'New Dynamic DNSSM Host'. Below this, there are input fields for 'Hostname' (set to 'tipe'), 'IP Address' (set to '221.132.76.1'), and 'Enable Wildcard' (unchecked). There is also a field for 'Mail Exchanger (optional)' and a checkbox for 'Backup MX'. A 'Add Host' button is located at the bottom right of the form. The left sidebar contains a 'My Account' menu with links to 'My Services', 'Account Upgrades', 'MailHop Outbound', 'Resume DNS', 'SLA', 'Premier Support', 'My Zones', 'Add Zone Services', 'My Hosts', 'Add Host Services', and 'Dynamic DNS'.

If you use a DDNS service, you can access your router with a domain name. The instructions on how to use the DDNS service are as follows:

1. Make an account on a web site providing DDNS service,

which should be supported by your router.

2. Configure your router with the account so that it can communicate with the web site.

DDNS Service :	DynDNS.org
User Name :	ylihoze
Password :	*****
Host Name :	tftpvr.dyndns.org
Internet IP Address :	221.132.76.3
Status :	DDNS is updated successfully


Whenever a new dynamic IP address is assigned to the router, it will inform the DDNS service provider of the new IP address. This makes it possible that you access the router with a domain name at any time.

9.2 Network setup

9.2.1 For a wired connection

1. Connect your Ethernet cable from your router to the Top-field recorder.
2. Press **Installation > Network Setting > IP Setting**.
3. Select **Wired/Wireless LAN**. Then select **Wired** as the preferred connection.
4. It is recommended to use a dynamic IP address by the router therefore select **DHCP** as the connection type. However if a static connection is set then please refer to your router for an IP address, Subnet Mask, Gateway, Primary DNS, Secondary DNS.
5. Once a connection has been set scroll down to activate profile and press the OK button on the remote.
6. A successful connection will populate all the IP settings and the Level/Quality bars on the TV screen will show a high percentage level.

9.2.2 For a wireless connection

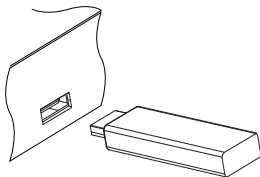

1. Connect the USB wireless dongle to the USB port on the PVR.
2. Press **Installation > Network Setting > IP Setting**.
3. Select **Wired/Wireless LAN**. Then select **Wireless** as the preferred connection.
4. Select AP list and press OK. A list of available networks will be shown, then select your personal network.
5. Once network is selected choose the security mode WPA / WPA2 / WEP. Select your WPA / WPA2 / WEP algorithm according to your router setting.
6. Enter the pre-shared key which is also known as your network password. Network password must be exactly the same as your router setting including Upper/Lower case and any numbers used.
7. A successful connection will populate all the IP settings and the Level/Quality bars on the TV screen will show a high percentage level. If the fields are not populated check the password and any security settings.

NOTE

After selecting activate please allow up to 5 seconds for fields to populate. Most routers can be accessed via a web browser. Refer to your Router user guide on how to access router setting.

9.3 Accessing the web server


To Access to the web server, set the **Installation > Network Setting > Web Server** option to **Enable**.

Select the Installation > Network Setting > User Info menu. At this time, you have to enter Personal Identification Number (PIN). Then set the User ID and Password options as you desire. And select OK to save the settings. When you access to the web server, you will be asked for the account that was made with these options.


In way of the web server of the digital receiver, you can do the following:

- Download recording files.
- Create new recording timers.
- View information about the programme currently being recorded.
- View the system information of the digital receiver.

To access the digital receiver's home page through your web browser, enter its IP address, or domain name if you use a DDNS service. For the DDNS service, refer to the user manual of your router.

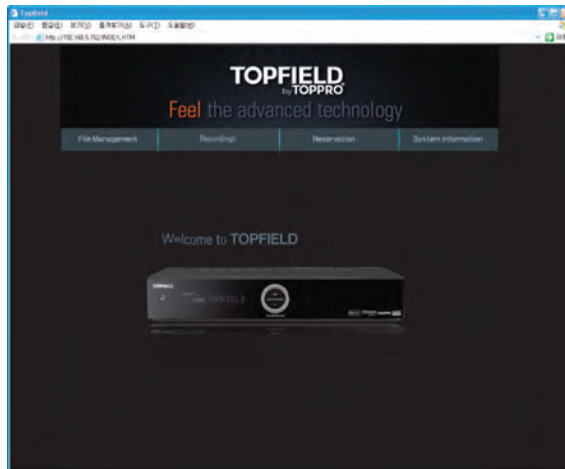

 You cannot only download but also upload recording files or MP3 files in the File Management page. However, if you




196

0.1 1 10 100 1000 10000 100000 1000000


NOTE

You can access the FTP server with an anonymous account. However, with an anonymous account you can only download files. You cannot upload files.

You need an FTP client program to access the FTP server of the digital receiver.

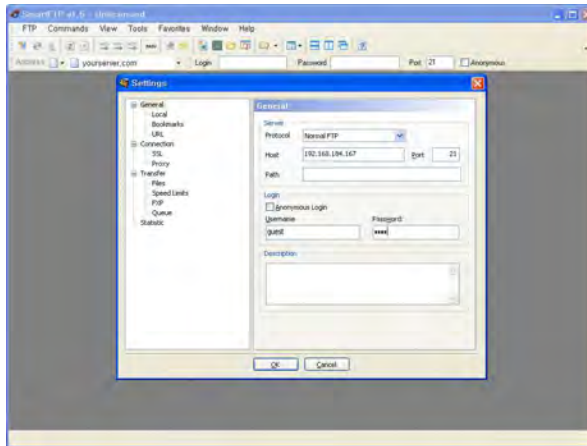

You can log into the FTP server with the user name and password specified in the Installation > Network Setting > User Info menu.

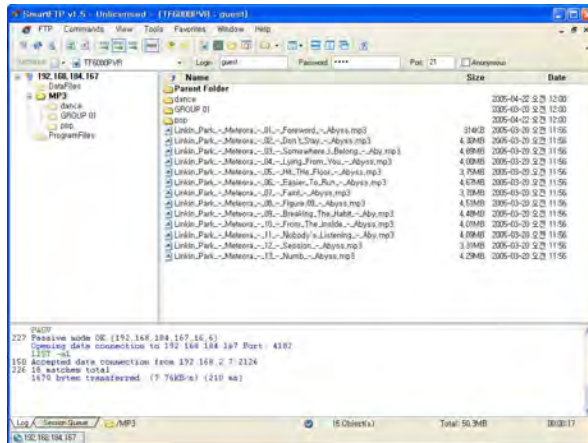

NOTE

The maximum number of user connections is one. This means that you cannot access the FTP server while someone else is occupying it.

Chapter 10

Toppro Application Program

If you are good at programming with C/C++ language, you may make an executable program to run on the digital receiver. We call user-made programs TopproApplication Programs (TAP).



For TAPs writers, Toppro provides two versions of *gcc* compiler and TAP API (Application Program Interface) libraries that are available from Toppro's website, <http://www.topfield.com.au>. One is *Linux* version, and the other is *Cygwin* version.

Cygwin is a Unix-like environment and command-line interface for *Microsoft Windows*.

Your TAPs will be run with the following conditions:

- A TAP's file extension must be *tap*; if it has any other extension name, it will be ignored.
- TAPs must be situated in the Program Files folder; if they

are placed in any other folder, they will be ignored.

Before you start the TAP, you will need to load the TAP file into the program file menu by doing the following:

1. Press the  button and then the  or  button to display the program files list.
2. Insert the USB with the TAP file into your unit.
3. On the remote, press the  button. Press the  on top of the name of your external hard disk.
4. Use the navigation keys to highlight the TAP file.
5. Press the yellow button on top of the file.
6. It will prompt you that the file will be moved into the program files folder. Press .

NOTE

If you would like the TAP to start when the unit starts up, move the TAP file into the Auto Start folder in the Program Files menu.

To run a TAP in the digital receiver, take the following steps:

1. Press the  button and then the  or  button to display the program files list.
2. Place the highlight bar on a program file you want to run, and press the  button to start it up.
3. If it is a running-in-the-background program, its entry in the list gets marked in green when it starts. You may have several programs run in the background at a time.
4. To stop a program running in the background, place the highlight bar on its entry in the list, and press the  button; otherwise you can stop it with the  button.



The figure on the left is a screenshot of *ScreenCapture.tap*, with which you can capture screen in *bmp* format from the digital receiver. Not only this TAP but a lot of sample TAPs are available in the TAP API.

By the way, the digital receiver will not show the list of the screenshots saved by the *ScreenCapture.tap* because *bmp* files are supposed to be ignored by the digital receiver. So, to view the screenshots, you need to transfer them to your computer via FTP.

If you want to have a program automatically run when the digital receiver starts up, then move the program file to the AutoStart folder. If you want to abort the execution of it, press the @ button at start-up.

NOTE

Toppro is not responsible for any results caused by a use of unauthorised TAPs.


Chapter 11

Firmware Update

The digital receiver has a stable and convenient firmware to use. However, once in a while a new firmware may be released to improve the digital receiver. You can get the latest firmware and the firmware update tool, which runs on most versions of Windows, from the Toppro website, <http://www.topfield.com.au>.

11.1 From a memory stick

If you have a USB memory stick, you can update the firmware from it by taking the following steps:

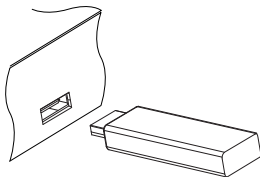

1. Download a new firmware from the Toppro website.
2. Copy the firmware file to your memory stick.
3. Insert the USB memory stick into the USB port on the digital receiver.
4. Select the Installation > Firmware Upgrade > USB Firmware Upgrade menu, and the files in the USB memory will be listed.


5. Place the highlight bar on the right firmware file and press the **OK** button, and a countdown will be displayed on the front display of the digital receiver.
6. When the message of 'END' appears, restart the digital receiver.

11.2 From the firmware server via the Internet

You can update the firmware from the firmware server which is being run by Toppro via the Internet. Make sure that the digital receiver is connected to your router before configuring the network settings on the digital receiver.

NOTE

For detailed description about how to set up the router, refer to the manual of your router.

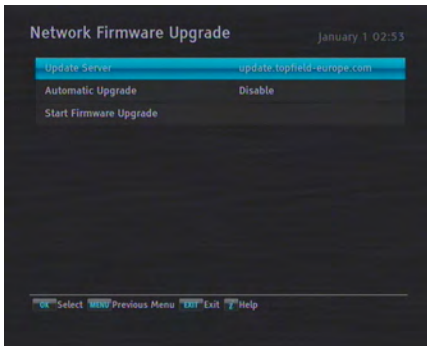

Select the Installation > Firmware Upgrade > Network Firmware Upgrade menu. You should see a screen like the left figure.

To enable the digital receiver to update the firmware automatically when a new firmware is available, set the **Automatic Upgrade** option to **Enable**. Otherwise if you want to do that by yourself, select the **Start firmware upgrade** option, then you get asked for confirmation. With the choice of **Yes**, it will check up whether a new firmware is available, and it starts firmware update if any.

Appendix A

Troubleshooting

List of Symptoms

No power / No front display	89
I have connected my PVR unit but getting no picture on the Television set	89
When the Service Scan is finished I get zero channels . .	90
I get a pixilated image on the my Television	90
Can not receive or adjust sound through the PVR unit . .	90
Can not rewind live Television	90
The Free to Air Guide is blank	91
I can not set the correct aspect ratio	91
Lost part of my show because it went longer then the recording time set	91
Can not get a network connection	91
Can not connect my external HDD	92

Can not get the time to show on the front of the PVR unit	92
I am unable to get out of the MENU	92
No picture through RF loop out to my Television	92
My PVR unit doesn't go to standby after instant recording (non timer recording)	93
Cannot view guide content	93

Before you call a repair person for your Topfield product, check the list of possible problems and solutions.

No power/ No front display

- Make sure the main switch on the back of PVR unit is switched to ON.
- Properly insert the power plug into the power socket.
- If the power outlet is controlled by a switch, make sure the wall switch is ON.
- Remove the power plug from the wall and wait 10 seconds, then plug back in.
- Plug another appliance into the outlet, if the other appliance doesn't work then have a qualified electrician repair the outlet.
- Plug the Topfield unit into a different outlet.

I have connected my PVR unit but getting no picture on the Television

- Check that you have connected the cables from the Topfield to the TV
- The connection must be via an AV output out of the Topfield to an AV input of the TV.
- Check that you are in the correct AV setting on the TV. For example if you connected the PVR unit to AV2 on the TV make sure you set your TV with the TV remote to AV2 before the PVR unit can be used.
- Press the **(VF)** button on the remote and set to the correct resolution.

576i/576p/720/1080i/AUTO. You may need to press the **(VF)** button multiple times to cycle through all the different formats. All formats will be displayed on the front screen of the Topfield unit.

When the Service Scan is finished I get zero channels

- Make sure the antenna is plugged into the wall socket.
- Check that there is a signal coming from the antenna by connecting it directly to the TV or another device.
- You must have signal strength between 50%–90%
- Indoor antenna is not recommended as the signal is not enough to display channels when a service is scanned.

I get a pixilated image on the my Television

- Check the plug on the PVR unit and the wall making sure that it's a tight connection.
- Check that there is a signal coming from the antenna by connecting it directly to the TV or another device.
- You must have signal strength between 50%–90%

Can not receive or adjust sound through the PVR unit

- Adjust volume using the **(VOLUME-)** and the **(VOLUME+)** on the Topfield Remote.
- Use the TV remote to adjust the sound to approx 50% then use the Topfield remote to adjust volume.
- Check the connection between the TV and the PVR product.
- Make sure you are in the correct AV on the TV

Can not rewind live Television

- Make sure that Timeshift is enabled, **Settings > Recording**.
- Check that Hard Disc Drive is working by playing back a previous recorded program.

The Free to Air Guide is blank

- Move to every channel and give the recorder a few minutes to populate the guide for each channel.
- Factory reset and re scan all the services in the INSTALLATION part of the MENU.
- Check the broadcaster sends a Free to Air guide for that service.

I can not set the correct aspect ratio

- Change the aspect ratio on the Topfield unit by pressing the **[AR]** button on the Topfield remote. 16:9/4:3
- Check the aspect ratio on your TV. Refer to the user guide of you TV for information about this procedure.
- Check the broadcast of the program. For example some programs are only broadcasted in 4:3

Lost part of my show because it went longer then the recording time set

- When setting a Reservation add an extra few minutes to the Duration to cover for programs going over the predicted time.
- When recording off the Free to Air guide press the  button twice on the Topfield remote and adjust the duration to cover for programs going over the predicted time.
- Adjust the Padding in the Settings > Recording > Time Padding of Timer Recording. Adjust according to personal preference.

Can not get a network connection

- Make sure you are using a Router and not a Modem.
- You can only establish a connection by using the Network cable directly to the Topfield unit.
- Your router settings are not set up correctly in the Topfield unit.

- The router is not switched on.
- Check connection of Ethernet cable, making sure they are a tight fit in the socket.
- Re start Router and try again.
- You are not using a Topfield USB wireless dongle.

Can not connect my external HDD

- Make sure external HDD is formatted in NTFS, then re-formatted to the system when it is connected. This will ensure that the hard drive is ready to use and the full capacity is available.
- The HDD must not be more than 1000 GB (1 TB)
- You must make sure that the external HDD is self powered

Can not get the time to show on the front of the PVR unit

The PVR unit is designed to save power when in standby mode as per the Australian MEPS standard. This reduces power consumption to less than 1W when in STAND BY. This can be adjusted in the **Settings > Miscellaneous > Standby Mode**, from **Passive** to **Active**.

I am unable to get out of the MENU

- With all Topfield product you are unable to exit from the MENU unless channels have been tuned in to the recorder.
- Check the antenna connection.

No picture through RF loop out to my Television

To output an RF signal in standby mode the recorder must be set to **Active**. This can be adjusted in the **Settings > Miscellaneous > Standby Mode**, from **Passive** to **Active**.

My PVR unit doesn't go to standby after instant recording (non timer recording)

When an instant recording has been activated the recorder will need to stay on until the recording finishes. To place the recorder into Standby after the recording has finished press the Power button on the remote during a recording and the following message is displayed "RECORDER NOT FINISHED, DO YOU WANT TO POWER OFF?" move green tab to YES and leave recorder ON, do not execute the function. The television may be turned off and the recorder will go into standby (sleep mode) when the recording has finished.

Cannot view guide content

Perform a factory reset and service search to allow the unit to restart the guide. Be sure to save your settings in the Installation section before applying a factory reset.

Appendix B

Universal Remote Control

The universal remote control allows you to operate the most important functions such as power on/off and volume control on your television, audio-video receiver, or DVD player. For the use of buttons, refer to Table B.1. To be able to control the device, you must adapt the remote control to the device first.

Take the following steps:

1. Turn on the device you want to operate.
2. Point the remote control at the remote sensor on the device.
3. Hold down the **OK** and device button simultaneously for two seconds until the light flashes on. For example, if you want to operate your television with the remote control, press the **OK** and **TV** buttons simultaneously.
4. Find the manufacturer of the device from the codes list.
5. Enter the three-digits code you have found for your device and press the **OK** button.
6. If the setting is finished correctly, the light blinks twice and the device will be turned off. Otherwise, repeat from the step 2.

If you cannot find a code for your device, do as follows:

1. Turn on the device you want to operate.
2. Point the remote control at the remote sensor on the device.
3. Hold down the **OK** and device button simultaneously for two seconds until the light flashes on. For example, if you want to operate your television with the remote control, press the **OK** and **TV** buttons simultaneously.
4. Press the **CHANNEL+** or **CHANNEL-** button until the device turns off.

If you want to find out the number which you set for your device, do as follows:

1. Hold down the **OK** and device button simultaneously for two seconds. For example, if you want to know the number which you set for your television, press the **OK** and **TV** buttons simultaneously.
2. Press the **i** button. Then the light will show the number with blinks. For example, if the number is 3, the light will blink three times. In case of 0, the light will blink ten times.

You can reset the settings by doing as follows:

1. Hold down the **TV** and **0** buttons simultaneously for more than five seconds.
2. Each device button blinks three times in the following order: **PVR** → **DVD** → **AUX** → **TV**
3. After that, all settings will be reset to the manufacturer's factory settings.

NOTE

Some buttons may not work properly depending on a device. If your device code is not listed on the following pages, you will not be able to use this remote as a universal remote for your specific device.

Table B.1: Operating buttons

PVR	TV	DVD	AUX
	Power on/off	Power on/off	Power on/off
	Volume up	Volume up	Volume up
	Volume down	Volume down	Volume down
	Mute	X	Mute
	X	X	Channel up
	X	X	Channel down
	0	0	X
	1	1	1
	2	2	2
	3	3	3
	4	4	4
	5	5	5
	6	6	6
	7	7	7
	8	8	8
	9	9	9
	TV INPUT	X	X
	X	Up	X
	X	Down	X
	X	OK	X
	Left	Left	X
	Right	Right	Right
	X	Menu	X
	X	Guide	X
	X	Exit	Exit
	X	Stop	X
	X	Rewind	X
	X	Pause	X
	X	Play	X
	X	Fast forward	X

B.1 Code list for television sets

A			
ACCENT	049, 063	ANITECH	049, 063, 076, 195, 407
ACEC	112	ANSONIC	045, 049, 063, 107, 112, 195, 210, 242, 391, 413, 421
ACURA	195	APOLLO	165
ADMIRAL	065, 076, 163, 171, 190, 307, 324, 369	ARC EN CIEL	029, 034, 074, 182, 186, 415, 424
ADYSON	379	ARCAM	029, 379, 424
AGASHI	076, 379	ARDEM	392
AGEF	324	ARISTONA	049, 050, 063, 065, 079, 112, 158, 160, 188
AIKO	049, 063, 076, 102, 141, 172, 195, 225, 379	A.R.SYSTEM	049, 063
AIM	049, 063	ARTHUR MARTIN	075, 107, 127, 133, 136, 139, 148, 153, 307, 425
AIWA	376, 377	ASA	003, 020, 065, 078, 080, 091, 117, 146, 171, 197, 235, 307, 319, 324, 341, 375, 406, 408
AKAI	019, 049, 050, 055, 063, 076, 102, 107, 123, 133, 139, 141, 150, 172, 174, 182, 195, 209, 225, 326, 333, 379, 428, 432, 433, 437	ASBERG	049, 063, 407
AKIBA	006, 049, 063, 123, 380	ASORA	195
AKITO	049, 063, 106	ASTRA	195
AKURA	006, 049, 076, 096, 123, 195, 419, 426	ASUKA	006, 050, 076, 123, 379
ALARON	042, 334	ATLANTIC	049, 050, 063, 113, 236, 242, 379
ALBA	018, 044, 049, 050, 107, 123, 134, 163, 179, 184, 195, 225, 228, 232, 239, 379, 413, 421, 431	ATORI	195
ALBIRAL	121, 326, 372	AUCHAN	107, 425
ALCYON	407	AUDIOSONIC	031, 049, 063, 074, 076, 195, 213, 379, 392, 421
ALLORGAN	050, 094, 236, 334	AUDIOTON	050, 076, 379, 392, 421
ALLSTAR	049, 063	AUSIND	075, 090, 407
AMPLIVISION	113, 379, 421, 425	AUTOVOX	050, 071, 078, 079, 080, 083, 090, 147, 156, 236, 254, 305, 319, 323, 324, 379, 407, 413, 416
AMSTRAD	004, 011, 049, 063, 076, 123, 131, 172, 195, 225, 426	AWA	018, 049, 063, 131, 195, 206, 320, 379, 426, 433
ANAM	049, 063, 195	AYOMI	411
ANGLO	076, 195	B	
		BAIRD	074, 102, 182, 209, 321, 329, 379, 409

BANG & OLUFSEN	324
BARCO	107, 355, 371, 372, 422
BASIC LINE	006, 031, 049, 107, 123, 159, 195, 207, 226
BASTIDE	379
BAUR	012, 049, 053, 063, 107, 150, 172, 244, 245, 246, 247, 301, 357, 414, 416
BAZIN	379
BEKO	063, 184, 240, 241, 392, 421, 433
BEON	049, 063, 163
BEST	213, 421
BESTAR	049, 063, 421
BINATONE	379
BLACK STAR	413
BLACKTRON	006
BLACKWAY	006
BLAUPUNKT	019, 053, 057, 060, 113, 118, 244, 245, 246, 247, 248, 249, 308
BLUE SKY	006, 049, 063, 123, 195, 232
BLUE STAR	006
BONDSTEC	413
BOOTS	050, 106, 379
BPL	006, 049, 063
BRANDT	074, 182, 218, 415, 424, 436
BRANDT ELECTRONIQUE	029, 034, 074, 182, 186
BRINKMANN	049, 063, 163
BRION VEGA	049, 063, 065, 083, 167, 172, 173, 181, 196, 324, 356
BRITANNIA	379
BROTHER	076
BRUNS	056, 065, 324
BSR	094, 107, 110, 139, 168, 314
BTC	123

BUSH	006, 018, 049, 076, 094, 106, 107, 123, 134, 139, 142, 143, 172, 179, 195, 209, 223, 225, 226, 232, 239, 307, 379, 416
BUSH (UK)	107, 147, 168
C	
CAPSONIC	076
CARAD	049, 063
CARENA	049, 063, 380
CARREFOUR	018, 406
CARVER	177
CASCADE	049, 063, 064, 195
CASIO	049, 063
CATHAY	049, 063
CCE	049, 063, 379
CENTURION	049, 063
CENTURY	044, 054, 065, 163, 189, 324, 411, 413
CGE	002, 044, 054, 090, 093, 094, 096, 107, 139, 142, 163, 168, 189, 369, 407, 413, 421
CIHAN	111
CIMLINE	031, 123, 134, 195
CITY	195
CLARIVOX	056, 121, 125, 163, 406
CLATONIC	076, 123
CLATRONIC	031, 045, 049, 063, 076, 113, 123, 195, 225, 379, 407, 413, 421, 431
CMS HIGHTEC	379
COMTEL	111, 125
CONCORDE	195
CONDOR	006, 045, 049, 050, 063, 113, 163, 195, 210, 379, 413, 421
CONTEC	018, 131, 195, 206, 302, 320, 379
CONTINENTAL EDISON	029, 034, 074, 182, 186, 232, 415, 424
COSMEL	195, 213
CROSELY	044

CROSLEY	054, 065, 090, 093, 094, 104, 107, 139, 324, 407, 413
CROWN	049, 063, 154, 163, 170, 195, 209, 232, 372, 407, 419, 421, 431
CS ELECTRONICS	031, 123, 379, 413
CTC	413
CTC CLATRONIC	045
CURTIS MATHES	126, 190, 212
CYBERTRON	123

D

DAENYK	042
DAEWOO	063, 123, 140, 145, 161, 193, 195, 379
DAINICHI	123, 379
DANSAI	063, 076, 141, 195, 379
DANSETTE	426
DANTAX	392, 421
DATSURA	209
DAWA	049, 063
DAYTRON	049, 063, 195, 226
DE GRAAF	023, 107, 122, 139, 209, 307
DECCA	049, 063, 102, 106, 111, 120, 200, 331, 379
DECCA (UK)	046, 050, 102, 106, 131
DEITRON	049, 063
DENKO	076
DENON	126, 212
DER	321
DERWENT	105
DESMET	049, 063, 113
DIAMANT	049, 063
DIGILINE	049, 063
DIXI	063, 195, 379, 413
DOMLAND	423
DORIC	104, 105
DREAN	049, 063

DTS	195
DUAL	049, 050, 063, 095, 107, 139, 156, 168, 182, 242, 243, 379, 414, 416, 423, 424
DUAL-TEC	195, 168, 050, 040
DUMONT	045, 065, 080, 102, 139, 146, 319, 324, 339, 341, 375, 379, 406, 408
DUMONT-FINLUX	020, 045, 061, 075, 078, 091, 104, 117, 147
DUX	049, 063, 112
DYNATRON	049, 063

E

ELBE	049, 063, 107, 121, 123, 172, 194, 210, 242, 337, 368, 369, 391, 411, 421, 435
ELBIT	111
ELCIT	045, 046, 047, 062, 065, 104, 107, 150, 168, 324, 413
ELECTA	006, 076
ELECTRO TECH	195
ELEKTA	006, 076
ELEKTRONSKA	318
ELG	049, 063
ELIN	003, 020, 049, 063, 107, 139, 172, 195, 379, 408, 416
ELITE	031, 049, 063, 123
ELMAN	045, 168
ELTA	076, 195, 379
EMERSON	004, 006, 042, 044, 049, 063, 065, 113, 225, 324, 327, 406, 413
EMPEROR	006
ERRES	063, 112
ESC	049, 063
ETRON	049, 063, 107, 139, 195
EURO-FEEL	076
EUROMANN	049, 063, 076, 379, 421
EUROPA	049, 063

EUROPHON 044, 045, 046, 049, 050,
063, 068, 107, 120, 168,
318, 336, 379, 413

EXPERT 107, 236, 242, 425

EXQUISIT 049, 063, 413

F

FAMILY LIFE 049, 063

FENNER 063, 195

FERGUSON 001, 032, 050, 073, 074,
076, 080, 082, 102, 103,
121, 158, 182, 204, 218,
244, 245, 246, 251, 306,
319, 321, 322, 328, 329,
344, 409, 411, 436

FIDELITY 049, 050, 063, 076, 107,
158, 225, 307, 364, 379

FIDELITY (UK) 133

FILSAI 050, 379

FINHER 359

FINLANDIA 033, 122, 139, 172, 197,
209, 223, 307, 375, 419

FINLUX 003, 020, 042, 045, 049,
061, 063, 075, 078, 080,
090, 091, 102, 104, 107,
117, 139, 146, 147, 163,
197, 210, 235, 319, 324,
339, 341, 375, 379, 406,
407, 408, 428, 429, 437

FIRST LINE 045, 049, 063, 094, 102,
107, 134, 139, 191, 195,
209, 210, 379, 411, 413,
416

FISHER 018, 041, 050, 056, 065,
069, 102, 104, 107, 117,
139, 143, 156, 172, 189,
206, 209, 320, 324, 379,
408, 414, 416, 421

FLINT 031, 049, 063, 102, 123,
379, 380

FNR 045

FORGESTONE 158

FORMENTI 090, 107, 113, 139, 307,
324, 379, 407

FORMENTI-PHOENIX 050, 075, 104, 113, 148,
307

FORTRESS 190, 324

FRABA 049, 063, 421

FRIAC 045, 049, 063, 195

FRONTECH 076, 139, 195, 307, 379,
413, 416

FUJITSU 042, 045, 102, 107, 195,
236, 327, 379

FUJITSU GENERAL 195, 379

FUNAI 042, 076, 094, 314, 327

G

GALAXI 045, 049, 063

GALAXIS 045, 049, 063, 163, 421

GBC 031, 104, 107, 139, 143,
168, 195

GE 006, 074, 182, 218

GEANT CASINO 107, 425

GEC 049, 063, 102, 104, 107,
120, 171, 172, 192, 307,
379, 416

GEC (UK) 046, 050, 102, 107, 150,
162, 192

GELOSO 031, 047, 062, 104, 107,
139, 168, 171, 195, 307,
413

GENERAL 064, 074, 182

GENERAL TECHNIC 195

GENEXXA 049, 063, 123, 307, 426

GOLDHAND 379

GOLDLINE 213

GOODMANS 018, 042, 063, 076, 102,
134, 139, 141, 143, 155,
182, 195, 218, 225, 232,
379, 428

GORENJE 124, 189, 421

GPM 123

GRADIENTE 049, 063, 170, 177

GRAETZ	049, 063, 090, 104, 136, 139, 153, 159, 162, 171, 172, 198, 225, 307	HIKONA	123
GRANADA	013, 018, 033, 041, 063, 102, 104, 105, 112, 120, 148, 164, 165, 171, 209, 218, 237, 238, 240, 241, 252, 307, 325, 363, 379, 407, 418, 419	HINARI	004, 018, 042, 049, 066, 094, 107, 119, 123, 133, 134, 139, 143, 179, 195, 209, 232, 307, 327
GRANADA (UK)	046, 050, 090, 107, 139, 143, 162, 307	HISAWA	006, 031, 123, 380, 425
GRANDIN	006, 031, 049, 063, 107, 113, 123, 195, 379, 380, 425, 431, 435	HIT	342
GRONIC	045	HITACHI	007, 009, 018, 020, 023, 033, 049, 050, 063, 074, 086, 102, 104, 107, 110, 126, 127, 139, 143, 150, 162, 168, 171, 176, 182, 185, 186, 192, 212, 218, 231, 304, 307, 309, 315, 333, 334, 344, 361, 379, 416, 418
GRUNDIG	005, 019, 049, 053, 063, 080, 090, 101, 115, 118, 166, 232, 244, 245, 246, 247, 248, 249, 308, 340, 341, 406, 407	HITASHI FUJIAN	013, 164, 252
H		HITSU	123, 195, 379
HALIFAX	076, 379	HORNYPHON	049, 063, 112
HAMPTON	379	HOSHAI	123, 379
HANIMEX	094	HUANYU	379
HANSEATIC	006, 018, 049, 050, 063, 094, 104, 107, 113, 143, 172, 195, 324, 379, 391, 416, 421, 423	HYGASHI	379
HANTAREX	045, 046, 049, 063, 195	HYPER	050, 168, 195, 254, 361, 379, 413
HANTOR	049, 063	HYPERSONIC	172
HARLEY DAVIDSON	042	HYPSON	006, 049, 063, 076, 379, 380, 411, 425
HARWOOD	049, 063, 195, 426	I	
HAUPPAUGE	049, 063	IBERRIA	049, 063
HCM	006, 031, 049, 063, 076, 123, 163, 195, 379, 426	ICE	049, 063, 076, 123, 195, 225, 379
HEMA	195, 379	ICES	123, 379
HEMMERMANN	150, 416	IMPERIAL	002, 044, 049, 054, 063, 090, 093, 094, 107, 142, 163, 168, 189, 301, 307, 369, 407, 413, 416, 421
HIFIVOX	029, 034, 074, 182, 186, 304, 424	INDIANA	049, 063
HIGASHI	050	INGELEN	090, 104, 136, 139, 153, 159, 162, 171, 198, 232, 435
HIGHLINE	049, 063, 076	INGERSOL	195

INNO HIT 044, 046, 049, 050, 063,
066, 102, 123, 155, 195,
217, 379, 407, 413

INNOVATION 049, 063

INTERACTIVE 210

INTERBUY 076, 195, 413

INTERFUNK 049, 063, 065, 067, 074,
090, 104, 107, 112, 139,
150, 153, 159, 172, 182,
301, 302, 324, 363, 421

INTERVISION 006, 045, 049, 055, 063,
076, 107, 123, 225, 232,
378, 379, 380, 381, 382,
384, 385, 386, 387, 388,
389, 413, 421, 423

IRRADIO 031, 049, 063, 066, 075,
090, 123, 155, 195, 254,
407, 413

ISUKAI 006, 049, 063, 123

ITC 379

ITS 006, 031, 049, 063, 076,
123, 225, 379

ITT 042, 090, 107, 117, 134,
139, 150, 157, 159, 162,
165, 171, 172, 193, 197,
198, 209, 301, 307, 343,
350, 375, 416, 428

ITT-NOKIA 042, 090, 097, 104, 107,
117, 134, 136, 139, 150,
153, 159, 162, 165, 171,
172, 185, 193, 197, 198,
209, 301, 307, 343, 350,
375, 416, 428, 433, 435,
437

ITV 049, 063, 076, 413

J

JEAN 018

JEC 141

JET POINT 365

JVC 018, 103, 123, 129, 143,
158, 170, 174, 182, 225,
364, 409, 433

K

KAISUI 006, 031, 049, 050, 063,
123, 195, 207, 379, 380

KAMOSONIC 050

KAMP 379

KAPSCH 107, 172, 236, 242, 408

KARCHER 003, 006, 020, 031, 045,
049, 050, 063, 068, 076,
107, 195, 207, 217, 421,
435

KATHREIN 124

KAWASHO 379

KB ARISTOCRAT 107

KENDO 044, 045, 049, 055, 063,
134, 172, 210, 413, 421,
435

KENNEDY 071, 079, 104, 107, 139,
236, 305, 323, 369

KINGSLEY 379

KLARMAX 371, 372

KNEISSEL 049, 063, 210, 242, 369,
391, 411, 421, 435

KOLSTER 045, 049, 063, 416

KONKA 031, 049, 063, 123, 225,
232

KORPEL 049, 063

KORTING 027, 065, 094, 113, 324,
421

KOSMOS 049, 063

KOTRON 076, 426

KRAKING 411

KRIESLER 050, 063, 065, 079, 112,
158, 160, 188

KTV 050, 379

KYOSHU 076, 163

KYOTO 107

KYUSHU 426

L

LECSON 049, 063

LEMAIR 210

LENCO	049, 063, 107, 195, 408	MAGNAFON	045, 046, 050, 068, 075, 090, 120, 235, 336, 379, 407
LENOIR	050, 195	MAGNAVOX	018, 042, 049, 063
LESA	413	MANDOR	076
LEYCO	049, 063, 076, 094, 102, 431	MANESTH	063, 076, 094, 113, 134, 141, 379
LEYEO	076	MANHATTAN	049, 063, 195
LG (GOLDSTAR)	023, 049, 050, 055, 063, 107, 139, 152, 155, 168, 172, 195, 202, 203, 219, 254, 379, 413, 421	MARANTZ	063
LIESENKOTTER	049, 063, 112	MARELLI	324
LIFETEC	049, 063, 076, 123, 195	MARK	063, 195, 379
LLOYD'S	195	MASUDA	123, 195, 225
LOEWE	049, 063, 089, 324, 391, 421	MATSUI	001, 004, 018, 041, 049, 050, 063, 094, 100, 102, 106, 107, 131, 134, 141, 143, 150, 171, 179, 180, 195, 209, 218, 225, 229, 232, 244, 245, 246, 307, 314, 331, 379, 380, 416, 431
LOEWE OPTA	035, 046, 049, 052, 063, 065, 120, 144, 213, 324	MAXIMAL	119, 139
LOGIC	331	MAXWELL	371, 372
LOGIK	032, 131, 158, 225, 364	McMICHAEL	192
LOGIX	195	MEDIATOR	049, 063, 112
LUMA	063, 107, 110, 133, 171, 172, 195, 210, 236, 242, 307	MEDION	049, 063, 195
LUMATRON	049, 063, 076, 107, 172, 236, 242, 329, 379	MEGAS	435
LUX MAY	049, 063, 195	MEGATRON	126, 212
LUXOR	042, 050, 090, 107, 122, 127, 133, 139, 150, 155, 159, 165, 172, 185, 197, 209, 307, 312, 330, 416, 418, 428, 429	MELECTRONIC	003, 049, 063, 074, 182, 195, 210, 375, 379, 408, 413, 416, 428, 429
LYCO	076	MELVOX	425,
M		MEMOREX	099, 195
M ELECTRONIC	003, 235, 375	MEMPHIS	102, 195, 213
MAAZ	371, 372	MERCURY	049, 063, 195
MADISON	049, 063	METZ	019, 049, 051, 053, 065, 067, 070, 092, 118, 244, 245, 246, 247, 324, 412
MAGNADYNE	045, 046, 047, 062, 065, 104, 107, 120, 139, 150, 168, 318, 324, 413	MICROMAXX	049, 063, 195
		MINERVA	019, 053, 080, 090, 118, 232, 244, 245, 246, 247, 248, 249, 340, 341, 406, 407
		MINOKA	049, 063, 419, 426
		MISTRAL	158

MITSUBISHI	013, 018, 019, 021, 049, 063, 065, 105, 124, 131, 132, 143, 157, 164, 183, 190, 244, 245, 246, 252, 326, 330, 331
MIVAR	043, 046, 050, 058, 072, 081, 090, 120, 155, 318, 337, 379, 391, 407, 421, 434
MONACO	195
MORGAN'S	049, 063
MOTION	407
MOTOROLA	190
MTC	049, 063, 379, 416, 421
MTEC	106
MULTISTANDARD	045
MULTITEC	049, 063, 195
MULTITECH	031, 045, 046, 049, 050, 063, 120, 189, 195, 379, 392, 413, 416, 421
MURPHY	102, 104, 105, 107, 117, 171, 254, 307, 379, 408
MURPHY (UK)	162
MUSIKLAND	123
N	
NAD	172, 209
NAIKO	049, 063
NAKIMURA	049, 063
NAONIS	036, 040, 071, 079, 110, 171
NAT	085, 149, 151
NATIONAL	033, 085, 104
NEC	018, 049, 063, 113, 131, 143, 177, 195, 379, 380
NECKERMANN	002, 012, 049, 050, 063, 065, 107, 133, 139, 163, 180, 189, 210, 247, 250, 307, 312, 324, 357, 379, 413, 416, 421
NEDIATOR	063

NEI	063, 125, 225
NESCO	042, 413
NETSAT	049, 063
NETWORK	213
NEUFUNK	049, 063, 195, 435
NEW WORLD	123
NEWTECH	049, 050, 063, 182, 195, 379
NICAMAGIC	379
NIKKAI	018, 049, 063, 076, 102, 123, 139, 141, 195, 213, 379
NIKKIA	066
NOBLEX	049, 063, 076, 359, 360
NOBLIKO	044, 045, 050, 075, 080, 090, 235, 379, 406, 407
NOGAMATIC	029, 034, 074, 182, 186, 424
NOKIA	090, 104, 107, 117, 134, 136, 139, 150, 153, 157, 159, 162, 165, 171, 172, 193, 197, 198, 209, 301, 307, 330, 343, 350, 416, 419, 428, 429, 433, 437
NORDMENDE	017, 029, 034, 038, 049, 063, 074, 083, 130, 150, 165, 174, 182, 186, 218, 244, 245, 246, 304, 307, 333, 334, 424
NOVATRONIC	003, 020, 049, 063
O	
OCEANIC	086, 094, 104, 107, 108, 109, 116, 139, 159, 172, 209, 425
OCEANIC(F)	150
ODEON	076
OKANO	049, 063, 076, 102, 421
OMEGA	076
ONCEAS	050
ONWA	031, 123, 225, 432
OPERA	049, 063
OPTIMUS	099, 315
OPTONICA	190

ORBIT	049, 063	PAUSA	195
ORION	004, 042, 045, 049, 051, 063, 076, 094, 113, 131, 134, 139, 150, 179, 191, 195, 199, 216, 314, 331, 366, 367, 426	PAUZA	195
ORLINE	049, 063, 123	PERDIO	049, 063, 102, 107, 113
ORMENTI-PHOENIX	104	PERFEKT	049, 063
ORMOND	195	PERSHIN	425
OSAKA	066	PHILCO	002, 016, 044, 049, 054, 063, 065, 090, 093, 094, 104, 107, 126, 142, 163, 168, 189, 212, 324, 369, 407, 413, 421
OSAKI	049, 063, 066, 076, 102, 106, 123, 379, 426	PHILHARMONIC	379
OSIO	049, 063, 155	PHILIPS	015, 022, 049, 050, 063, 065, 079, 089, 111, 112, 157, 158, 160, 175, 182, 188, 192, 215, 217, 220, 221, 247, 250, 313, 324, 337, 342, 350, 363, 374, 427
OSO	123	PHOENIX	049, 050, 063, 075, 102, 104, 107, 113, 148, 324, 379, 392, 421
OSUME	018, 102, 123, 302	PHONOLA	022, 050, 063, 065, 079, 112, 158, 160, 188, 250, 324, 379
OTTO VERSAND	012, 018, 049, 050, 053, 063, 074, 094, 104, 107, 113, 134, 139, 143, 172, 190, 244, 245, 246, 247, 250, 312, 357, 362, 379, 413, 414, 416	PILOT	049, 063
P		PIONEER	049, 063, 074, 172, 182, 209, 218, 227, 307, 421, 427
P.T ACTRON	111	PIONIER	392, 421
PAEL	050, 075, 379	PLANTRON	049, 063, 076, 195
PALLADIUM	012, 049, 063, 107, 163, 210, 247, 324, 357, 379, 413, 416, 421	PLAYSONIC	379
PALSONIC	049, 055, 063, 076, 379, 426	POLICOM	074
PANAMA	049, 063, 076, 195, 379, 413	POPPY	195
PANASONIC	049, 063, 099, 104, 107, 137, 139, 149, 151, 172, 397, 398, 400, 401, 405	POWERPOINT	232
PANAVISION	049, 063, 210	PRANDONI-PRINCE	044, 046, 075, 090, 120, 171, 172, 307, 407, 413
PATHE CINEMA	107, 113, 121, 379, 391, 411, 416, 425	PRECISION	379
PATHE CINEMA(F)	050, 168	PREMIER	142
PATHE MARCONI	029, 034, 074, 182, 186, 415, 424	PRIMA	076, 195, 307
		PRINCE	044, 046, 075, 171
		PRINZ	102, 185, 416
		PROFEX	107, 139, 195
		PROFI-TRONIC	045, 049, 063

PROLINE	030, 049, 102, 112, 191, 366, 436
PROSONIC	049, 063, 085, 149, 151, 195, 225, 379, 421, 431
PROTECH	045, 063, 076, 139, 163, 195, 379, 413, 416
PROVISION	049, 063
PYE	050, 063, 065, 079, 112, 157, 158, 160, 188, 250
PYMI	049, 063, 112, 195, 324

Q

QUADRA VISION	425
QUASAR	045, 046, 068, 075, 099, 155, 413
QUELLE	003, 018, 019, 020, 049, 050, 053, 063, 074, 075, 076, 078, 080, 090, 091, 094, 113, 115, 117, 118, 131, 139, 146, 147, 150, 153, 155, 172, 195, 206, 235, 244, 245, 246, 247, 254, 301, 319, 320, 340, 341, 379, 406, 408, 413, 416
QUESTA	018

R

RADIALVA	049, 063, 074, 107, 123
RADIOLA	050, 063, 065, 079, 112, 158, 160, 188, 250, 342
RADIOMARELLI	045, 046, 047, 062, 063, 065, 104, 105, 150, 168, 324, 413
RADIONETTE	003, 020, 117, 150
RADIO SHACK	049, 063
RADIOTONE	049, 063, 076, 163, 195, 421, 426, 431
RANK	341
RANDT	029
RANK	147, 406
RBM	341

RBM (UK)	147
RCA	190, 218, 436
RECOR	049, 063
RECTILIGNE	049, 063
REDIFFUSION	018, 059, 105, 139, 171, 172, 307, 343
REDIFFUSION (UK)	150, 162
REDIFUSION	104, 105
REDSTAR	049, 063
REFLEX	049, 063
REVOX	049, 063, 421
REX	036, 040, 063, 071, 079, 095, 107, 110, 171, 210, 236, 242, 243, 305, 307, 323, 338, 413
RFT	076, 102, 390, 391, 392, 393, 394, 395, 421
R-LINE	049, 063
ROADSTAR	031, 049, 063, 076, 163, 195
ROBOTRON	056, 065, 324
RODEX	049, 063
ROTEL	302
ROWSONIC	050
ROYAL LUX	421, 426
RTF	056, 065

S

SABA	014, 017, 029, 034, 038, 046, 065, 074, 077, 107, 120, 133, 139, 172, 182, 186, 218, 304, 307, 324, 333, 334, 424, 436
SACCS	121
SAGEM	006, 380, 435
SAISHO	004, 050, 076, 084, 107, 131, 132, 134, 179, 195, 233, 307, 330, 331, 379
SALORA	033, 075, 107, 127, 133, 136, 139, 148, 150, 153, 171, 172, 185, 198, 209, 301, 307, 312, 416, 418, 419

SAMBERS	045, 046, 068, 075, 090, 120, 155, 336, 407	SENTRA	123, 139, 141, 195
SAMSUNG	050, 063, 066, 076, 102, 155, 189, 195, 217, 359, 360, 365, 379, 421	SERINO	380, 435
SANDRA	379	SHARP	018, 094, 143, 170, 190, 206, 214, 302, 362, 364
SANELA	411	SHORAI	042, 094
SANSUI	049, 063, 225	SIAM	049, 063
SANTON	195	SIAREM	045, 046, 065, 104, 107, 120, 139, 324
SANYO	003, 018, 020, 041, 049, 050, 056, 063, 065, 102, 107, 117, 131, 143, 189, 195, 198, 201, 206, 209, 302, 320, 325, 331, 351, 379, 391, 408, 421	SICATEL	121
SAVE	049, 063	SIEMENS	003, 018, 019, 023, 049, 053, 063, 066, 113, 118, 206, 244, 245, 246, 247, 248, 249, 302, 307
SBR	063, 112, 157, 158, 192, 313	SIERA	050, 063, 065, 079, 112, 158, 160, 188
SCHAUB LORENZ	090, 104, 136, 139, 153, 159, 162, 171, 198, 307, 416, 433	SIERRA	049, 063, 112
SCHNEIDER	031, 040, 050, 063, 065, 069, 079, 095, 104, 107, 112, 114, 139, 148, 156, 158, 160, 168, 172, 182, 188, 195, 225, 242, 243, 250, 307, 328, 342, 379, 413, 414, 416, 423	SIESTA	421
SCOTT	042, 327	SILVA	049, 063, 379
SEARS	042	SILVER	018, 042, 049, 063, 076, 172
SEG	018, 045, 049, 050, 056, 063, 076, 107, 172, 195, 232, 379, 413	SINGER	045, 047, 049, 063, 065, 104, 195, 324, 369, 413, 425
SEI	004, 045, 049, 051, 063, 094, 107, 139, 236, 314, 324, 357, 416	SINUDYNE	004, 031, 045, 051, 063, 065, 094, 104, 107, 134, 139, 150, 172, 210, 216, 236, 314, 324, 357, 366, 367, 416
SEL SINUDYNE	250	SKANTIC	307, 418
SELECO	036, 040, 063, 071, 079, 095, 107, 110, 171, 172, 210, 236, 242, 243, 305, 307, 323, 338, 339, 369	SKY	049, 063
SENCORA	195	SOGERA	113
		SOLAVOX	066, 102, 107, 123, 139, 172, 307
		SONITRON	209, 379, 421
		SONNECLAIR	049, 063
		SONOKO	006, 050, 063, 076, 195, 379
		SONOLOR	012, 107, 139, 159, 172, 209, 357, 425
		SONTEC	049, 063, 094, 421
		SONY	012, 018, 028, 045, 131, 143, 204, 208, 211, 331, 357, 358, 370

SOUND & VISION	031, 045, 123
SOUND WAVE	049, 113, 163
SOUNDESIGN	042
SPECTRA	195
SSANGYONG	195
STANDARD	049, 050, 063, 113, 123, 195, 379
STARLIGHT	049, 063, 076, 107, 195
STENWAY	006, 031, 123
STERN	036, 040, 063, 071, 079, 095, 107, 110, 171, 236, 242, 243, 305, 307, 323, 338
STRATO	049, 063, 076, 195
SUNKAI	049, 063, 094, 123, 134, 179, 191, 232, 314, 367
SUNSTAR	049, 063, 195, 225, 431
SUNWOOD	049, 063, 195
SUPERLA	379
SUPERTECH	049, 063, 123, 195, 379
SUPRA	195
SUSMU	218
SUTRON	195
SWISSLINE	413
SYDNEY	379
SYTONG	425

T

TACTUS	106
TANDBERG	065, 074, 078, 172, 182, 210, 213, 304
TANDY	050, 096, 102, 123, 190, 307, 379, 413
TASHIKO	018, 050, 107, 143, 177, 192, 201, 379, 419
TATUNG	049, 050, 063, 102, 106, 111, 120, 131, 200, 253, 331, 379
TEAC	049, 063, 076, 195, 380, 416, 426

TEC	040, 050, 064, 168, 195, 213, 218, 242, 243, 379, 413
TECH LINE	049, 063, 195
TECHICA	123
TECHNEMA	113
TECHNICS	099, 315
TEDELEX	379
TEIRON	195
TEKNIKA	042, 327
TELEAVIA	029, 034, 074, 182, 186, 415, 424
TELECOR	049, 063, 107, 123, 242, 379, 423
TELEFUNKEN	032, 049, 063, 064, 074, 082, 182, 186, 187, 218, 392, 424, 436
TELEFUSION	049, 063
TELEGAZI	049, 063, 076, 107, 123, 242
TELEMEISTER	049, 063, 113
TELESONIC	049, 063
TELESTAR	049, 063
TELETECH	049, 063, 195, 213, 413
TELETON	018, 067, 107, 236, 242, 379, 416
TELEVIDEON	050, 075, 104, 107, 113, 148, 379
TELEVISIO	425
TEMCO	094
TEMPEST	049, 063, 195
TENNESSEE	049, 063
TENSAI	003, 020, 050, 055, 063, 094, 113, 117, 123, 195, 225, 379, 408, 413
TETUNG	046
TEVION	049, 063, 195
TEXTET	050, 195, 379
THOMSON	008, 010, 017, 024, 029, 034, 049, 063, 064, 074, 134, 147, 174, 182, 186, 218, 230, 234, 304, 309, 333, 334, 415, 424, 436

THORN	049, 053, 063, 103, 106, 141, 158, 218, 222, 321, 329, 408, 409, 411, 419	UNIVERSUM	003, 004, 012, 018, 020, 049, 063, 074, 076, 094, 107, 131, 155, 163, 165, 172, 195, 202, 206, 210, 213, 235, 244, 245, 246, 320, 357, 375, 379, 406, 407, 408, 413, 416, 421, 428, 429, 437
THORN-FERGUSON	032, 073, 074, 076, 080, 082, 103, 121, 158, 306, 319, 321, 322, 328, 329, 357, 358, 364, 375	UNIVOX	049, 063, 107, 121, 213, 324, 409, 411
THRON	117	UTAX	050
TMK	143	V	
TOKAI	049, 063, 102, 107, 195, 213, 379	VEGAVOX	163
TOKYO	141, 379	VESTEL	049, 063, 107, 125, 364, 379
TOMASHI	006, 031, 123	VEXA	063, 195
TOSHIBA	001, 018, 045, 128, 141, 143, 147, 205, 341, 369, 379, 406	VICTOR	174
TOWADA	045, 379, 416	VIDEO SYSTEM	049, 063
TOYODA	195	VIDELOGIQUE	031, 123, 379
TRAKTON	076	VIDEO SYSTEM	049, 063
TRANS CONTINENS	044, 046, 049, 063, 075, 171, 307, 379	VIDEOTECHNIC	113, 379
TRANSONIC	049, 063, 380	VIDEOTON	107, 418
TRANSTEC	379	VIDIKRON	045
TRIDENT	379	VIDTECH	018
TRISTAR	123, 364	VIPER	213
TRIUMPH	004, 046, 049, 063, 128, 147, 197, 235, 339, 375	VISIOLA	379
U		VISION	049, 063, 113
UHER	049, 063, 069, 080, 090, 113, 147, 148, 163, 236, 242, 307, 392, 407, 414, 421	VISTAR	172, 236
ULTRAVOX	044, 045, 047, 049, 050, 063, 065, 104, 107, 133, 139, 324, 379, 413	VOLTEC	074
UMA	305	VORTEC	063
UNIC LINE	049, 063, 165	VOXSON	049, 063, 065, 090, 163, 171, 307, 324, 407
UNITED	049, 063	W	
		WALTHAM	049, 063, 163, 182, 307, 379, 418
		WATSON	049, 063, 107, 113, 123, 195, 244, 245, 246, 423, 431
		WATT RADIO	045, 050, 068, 104, 107, 121, 139, 150, 336, 379, 416
		WEGA	018, 049, 063, 139, 143, 324
		WEGA COLOR	065, 088

WEGAVOX	195
WELTBlick	063, 113
WESTINGHOUSE	063, 094
WESTON	168
WHARFEDALE	049, 063
WHITE	045
WHITE WESTINGHOUSE	049, 050, 063, 113, 213, 379
WINCO	426
WINDSTAR	006
WINTERNITZ	361
X	
XRYPTON	049, 063

Y	
YAMISHI	006, 049, 063, 123, 379, 380
YOKAN	049, 063
YOKO	049, 050, 063, 076, 123, 195, 379, 413, 421
YORX	123
Z	
ZANUSSI	036, 040, 063, 071, 079, 095, 110, 171, 236, 305, 307, 323, 338, 379
ZOPPAS	036, 040, 071, 079, 110, 171, 307

B.2 Code list for DVD players

3 DLAB 072

A

AIWA 075

ALBA 087

AMSTRAD 085

A-TREND 086

B

BLUE SKY 080

BUSH 078, 079, 082, 085

C

CINE ULTRA 082

CYBER HOME 086

D

DAEWOO 083

DENON 002, 019, 022, 034, 051

DENVER 082

DENZEL 077

DIGITOR 079

DIVIDO 083

DUAL 076, 077

E

ELTA 079

ENZER 077

G

GE 003, 004

GRUNDIG 072, 080

H

HARMAN KARDON 001, 066

HITACHI 077

J

JMB 080

JVC 006

K

KENWOOD 007, 034, 043, 050, 069

KISS 077

L

LAWSON 083

LECSON 081

LENCO 082

LG (GOLDSTAR) 005, 055, 064, 070

LIFETEC 076

LOGIX 083

M

MAGNAVOX 009, 033, 056

MANHATTAN 083

MARANTZ 033, 059, 072

MATSUI 076, 080

MEDION 076, 083

MICROMEDIA 009

MICROMEGA 072

MINOWA 083

MITSUBISHI 023, 036

MONYKA 077

N

NAD 010, 062

NEUFUNK 077

O

ONKYO 009, 015, 048

OPTIMUS 050

ORION 080

ORITRON 076

P

PANASONIC 024, 025, 030, 034, 035,
044, 052

PHILIPS 009, 033, 056, 072

PHONOTREND	082
PIONEER	010, 012, 020, 038, 041, 046, 065, 071, 074
PROLINE	076
PROSCAN	003, 004, 037
PROVISION	082

R

RAITE	077
RCA	003, 004, 018, 037
REC	034, 078
REVOY	082
ROADSTAR	078, 079, 082

S

SANSUI	080
SCAN	083
SCHNEIDER	076
SEG	077, 085
SHARP	021, 028, 050
SHINCO	087
SM ELECTRONIC	079
SONY	015, 029, 043, 045, 067
STANDARD	076

T

TEAC	087
TECHNICS	034
TENSAI	076, 079
TEVION	076
THOMSON	003, 004, 073
TOKAI	077
TOKIWA	083
TOSHIBA	009, 010, 033, 057, 058
TV PROJECT	008

U

UNIVERSUM	085
-----------	-----

W

WALKVISION	087
WESDER	082
WHARFEDALE	081

Y

YAMAHA	016, 017, 030, 034, 063
YAMAKAWA	077, 084

Z

ZENITH	005, 009, 033, 055, 064, 083
--------	---------------------------------

B.3 Code list for audio-video receivers

A

ADCOM	082, 092, 225, 161, 023, 148, 149
AIWA	170, 018, 104, 202, 203, 213, 211, 188
AKAI	189
ANTHEM	127, 128
ARCAM	141, 255
ATLANTIC_TECHNOLOGY	134
AUDIO_FILE	071

B

B&K	096, 097
BOSE	070, 170, 224, 147, 227, 199
BOSTON_ACOUSTICS	246

C

CARVER	006, 028, 061, 071, 201, 214, 226, 185, 022, 077, 050
CLARION	026

D

DELPHI	251
DENON	109, 215, 230, 234, 002, 121, 133

E

ELAN	057, 090
ESCIENT	229

F

FISHER	047, 214, 182
FLEXTRONICS	207
FOSGATE_AUDIONICS	231, 134

G

GOLDSTAR	008
----------	-----

H

HARMAN_KARDON	231, 233, 153, 154, 118, 119
HITACHI	020

I

INTEGRA	029
---------	-----

J

JVC	163, 191, 114, 034, 091
-----	-------------------------

K

KENWOOD	026, 066, 145, 192, 182, 005, 037, 196, 252
KLH	123
KRELL	150, 072, 197, 222

L

LEXICON	120, 235, 236, 237, 159, 160
LINN	124, 206
LUXMAN	137, 139, 052, 165, 115, 004, 009

M

MAGNAVOX	086, 164, 152, 208
MARANTZ	006, 028, 031, 040, 063, 185, 186, 015, 056
MCINTOSH	238, 053
MERIDIAN	100, 012, 013
MITSUBISHI	242, 243, 204
MONDIAL	157, 158, 042, 043, 081, 112
MYRYAD	030, 099

N

NAD	186, 113, 038, 216, 210
NAKAMICHI	111, 244, 245, 172, 183, 054
NIRO	135

NILES	241	SAMSUNG	016
O		SANSUI	040, 048, 110, 065, 228, 063
ONKYO	029, 017, 046, 108, 080, 209	SANYO	047, 059
OPTIMUS	026, 041	SCOTT	019
OUTLAW	134	SHARP	026, 094, 131, 175
P		SHERWOOD	024, 102, 106, 246
PANASONIC	032, 195, 219, 177, 098, 221	SONY	018, 247, 248, 166, 101, 184, 218, 025, 179, 180, 220
PARASOUND	129, 130, 132, 003, 103, 105, 125, 126	SOUNDESIGN	036
PHILIPS	249, 250, 063	SUNFIRE	142, 143, 146
PIONEER	014, 039, 044, 069, 168, 116, 035, 078	T	
POLKAUDIO	251	TEAC	005, 019, 049, 111, 212, 217
PROCEED	144, 021	TECHNICS	122, 193, 219, 178, 177, 200, 254, 007
R		THETA_DIGITAL	136
RCA	010, 048, 117, 156, 067, 055	TOSHIBA	060, 087, 033
REALISTIC	019, 073, 075	Y	
ROTEL	074, 083, 085	YAMAHA	026, 253, 169, 067, 173, 205, 011, 232, 089, 027, 051, 181
RUSSOUND	223, 239		
S			



Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.

ABOUT DIVX VIDEO: DivX[®] is a digital video format created by DivX, Inc. This is an official DivX Certified[®] device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified[®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX[®], DivX Certified[®] and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.



Correct disposal of this product

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can dispose this product for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

At any time during the life of a product Topfield Co., Ltd. may change or modify the hardware or software on any product to introduce new features or improve the functionality of the product.