


USER GUIDE

8 Channel MPEG-4 Triplex Digital Video Recorder

Ver. 1.0

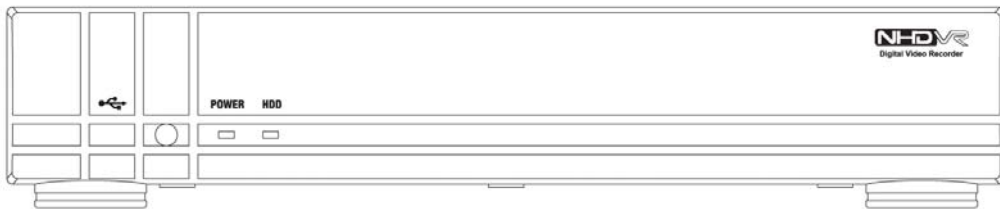


About this user guide

Before installing and using this unit, please read this user guide carefully.

Be sure to keep it handy for later reference.

The specification and information are subject to change without notice for quality improvement.

Safety Precautions

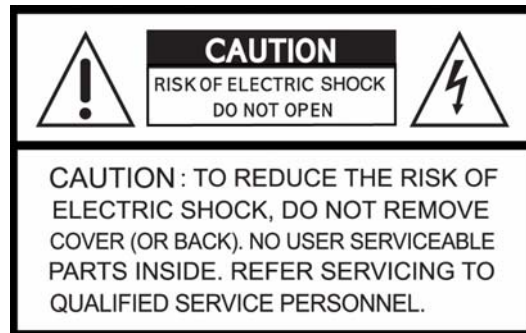

Explanation of Graphical Symbols



This symbol indicates the presence of important operating and maintenance (servicing) instruction in the literature accompanying the product.



This symbol indicates the presence of un-protected "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Cautions

This product has multiple-rated voltages (110v and 220v).

See installation instructions before connecting to the power supply.

This product uses a Lithium battery.

To avoid of risk of explosion, do not replace the battery on the main board by anything other than a Lithium battery. Dispose of used batteries according to the manufacturer's instructions.

This equipment and all communication wirings are intended for indoor use only.

To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.

Warnings

Installation and servicing should be performed only by qualified and experienced personnel.


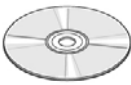



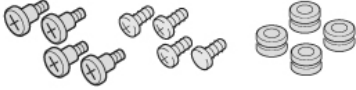

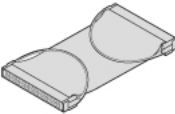

Power off the DVR when connecting cameras or sensor cables.

The manufacturer is not responsible for any damage caused by improper use of the product or failure to follow instructions for the product.

The manufacturer is not responsible for any problems caused by or resulting from the user physically opening the DVR for examination or attempting to fix the unit. The manufacturer may not be held liable for any issues with the unit if the warranty seal is removed.

Product Components

The package contains the main unit and its components as specified below. When you purchase the unit, please check to ensure the components specified below are included

DVR Set	
Client Software CD	
Remote Control	
Battery 1.5V (AAA x 2EA)	
User Guide	
Rubber ring & Screws	
Power Cable	
IDE HDD Cable (2EA)	
Power Cord (110V or 220V)	

Compatible HDD models

Company	Capacity	RPM	Buffer	Interface
HITACHI	80 GB	7200 RPM	2 M	E-IDE
	160 GB	7200 RPM	8 M	E-IDE
	250 GB	7200 RPM	8 M	E-IDE
	500 GB	7200 RPM	8 M	E-IDE
MAXTOR	80 GB	7200 RPM	2 M	E-IDE
	200 GB	7200 RPM	2 M	E-IDE
	250 GB	7200 RPM	8 M	E-IDE
	300 GB	7200 RPM	16 M	E-IDE
SAMSUNG	80 GB	7200 RPM	2 M	E-IDE
	160 GB	7200 RPM	2 M	E-IDE
Western Digital	160 GB	7200 RPM	2 M	E-IDE
	200 GB	7200 RPM	8 M	E-IDE
	250 GB	7200 RPM	8 M	E-IDE
	320 GB	7200 RPM	8 M	E-IDE
SEAGATE	40 GB	7200 RPM	2 M	E-IDE
	80 GB	7200 RPM	2 M	E-IDE
	120 GB	7200 RPM	2 M	E-IDE
	160 GB	7200 RPM	2 M	E-IDE
	300 GB	7200 RPM	8 M	E-IDE
	400 GB	7200 RPM	8 M	E-IDE
	500 GB	7200 RPM	8 M	E-IDE

Specifications

ITEM			8 Channel, 120 fps
Video	Input	Channel, Input Level	8 CH, Composite 1.0Vp-p, 75 Ohm
		Signal Format	NTSC/PAL(Auto detection)
		Video Loss Check	Yes
	Output	Main Monitor Output	1 CH Composite Output
			15pin D-Sub RGB Output
		Output Level	Composite 1.0Vp-p +_0.2, 75 Ohm
		Signal Format	NTSC/PAL
			Analog SVGA(800x600 @75Hz, True Color)
Alarm	Sensor Input		4 (NC/NO Selectable)
	Alarm Output		1 (By Alarm, Motion, Video Loss)
Recording	Compression		MPEG-4
	Multi-operation		TRIPLEX (Playback/Record/Network)
	Resolution	NTSC	MAX.120fps @ 352x240
			MAX.60fps @ 704x240
			MAX.30fps @ 704x480
		PAL	MAX. 100fps @ 352x288
			MAX. 50fps @ 704x288
			MAX. 25fps @ 704x576
			Recording quality grade
	Recording Mode		Continuous / Schedule / Motion/ Sensor/ Manual
	Motion Detection		Motion detection setup by Grid
	Pre & Post Recording		Yes
Display	Frame Rate(/sec)		NTSC : 30fps/channel, 60 field
			PAL : 25fps/channel, 50 field
Playback	Multi-Decoding		1, 4 split screen -> x2,4,8 8 split screen -> x2, 4
	Playback Speed	Fast Forward / Reverse	× 2, 4, 8
	Search Mode		Event, Archive, Log, Time Line
Storage	Internal HDD	Interface Type	EIDE/ATA133/S-ATA(option-External storage support)

		Capacity of 1 HDD	1EA Max. 750GB
	File system		NaFS: Own developed & Designed for never broken by any power failure
	Backup	USB 2.0 flash stick	JPEG & AVI&DVR
		Network	Moving picture & Still Image
User I/F	Menu Display		Text UI
	Input Method		Remote controller
Network	Dynamic IP support		Yes
	Network Interface		10/100 base-T Ethernet (RJ-45)
Network Client S/W	Functions		Live, Search, Backup
	Central Monitoring System		Yes
Additional Functions	DLS (Day Light Saving)		Yes
	Language		Yes
	S/W Upgrade		USB 2.0 memory stick
General	Power Source		DC 12V
	Unit Weight		1.6kg(Full package w/HDD : app.3.0kg)
	Dimension(WxHxD)		340x250x60mm

TABLE OF CONTENTS

1. Features	10
2-1. Front Panel	11
2-2. Rear Panel	12
2-3. Remote controller	13
3. Setting Up the DVR	14
3-1. Setup – Main Screen	14
3-2. Setup – Live Mode	16
3-3. Setup – Recording Mode	16
3-3-1. Motion Zones	18
3-3-2. Recording Schedule	18
3-4. Setup – Device Mode	19
3-4-1. ALARM-OUT	20
3-5. Setup – System Mode	20
3-6. Setup – Security Mode	23
3-7. Setup – Network Mode	24
3-7-1. Ports	25
3-7-2. Network types	26
3-7-2-1. LAN	26
3-7-2-1. DHCP	27
3-7-2-1. ADSL (PPPOE)	27
3-8. Setup - Storage Mode	28
3-9. Saving Setup	29
4. Live & Search	29
4-1. Live Window	29
4-2. SEARCH Window	30
4-3. Play mode	31
4-4. LOG Search	32
5. Archiving Video into USB Memory Device	33
5-1. Capturing images or video	33
5-1-1. Still Image backup onto USB flash memory or CD media	33
5-1-2. Video backup onto USB flash memory or CD media	33
5-2. Transferring still images or video from the ARCHIVE list	34
5-3. Playback of Backup Video	35
5-3-1. Playback of backup video in AVI format	35

5-3-2. Playback of backup video in exclusive (NaFs) format.....	35
6. Upgrading Firmware	36
7. Network – By an exclusive viewer.....	37
7-1. Overview.....	37
7-2. Minimum PC requirements	38
7-3. Installing the program	38
7-4. Live viewer.....	39
7-5. Search and Playback Viewer.....	41
7-5-1. Backup	42
7-6. PC System configuration	42
7-6-1. General	43
7-6-2. Site	43
7-6-3. Event	44
7-6-4. Record.....	45
7-6-5. Disk	46
8. Network – By an web-browser viewer	47
8-1. Download Web Brower Viewer and Connection.....	47
8-2. Main Features.....	48
8-2-1. Live.....	48
8-2-2. Search and Playback	49
APPENDIX.....	50
1. How to register DDNS (Dynamic Domain Name Server)	50
1-1. Setting of NETWORK Setup menu.....	50
1-2. Checking Mac address on the rear panel of DVR and Registration No.	50
1-3. Registration at DDNS.	51
2. Network access using Domain name	52

1. Features

- 8 channels real-time live display and 8 channels simultaneous playback.
- MPEG-4 - Unbeatable recording picture quality and compression ratio has been tuned for years. It best fits for minimizing recording space and networking speed.
- TRIPLEX - Simultaneous Recording, Playback, and Networking
- NaFS (File System developed) - Designed & developed for preventing loss and broke of recording data by any power failure.
- Multiplexing operation
- Reliability - Real Time Operating System and simplified hardware as well as watchdog timer ensure the reliability.
- Individual channel recording and playback with different frame rate.
- High-quality live and playback resolution.
- Multi-site management - Supported by CMS application.
- Network features - Remote Live, Playback, and Backup.
- Network via LAN, DHCP, ADSL (Dynamic and Static IP address).
- User-friendly setup menu with graphic user interface.
- Easy to schedule a complicated weekly recording plan.
- The OSD icons on screen provide various helpful and well-explained information.
- Motion detection – Grid 30x24 motion zone per camera is provided.
- USB ports for JPEG, MPEG data backup and software upgrade using USB flash memory stick.
- Still image capture and review as JPEG format.
- Easy operating with the buttons on the front and the remote controller.
- User verification by password certification.
- Video loss detection.
- Backup - Still-images or AVI data into USB flash memory stick, USB CDRW, and Network.
- Multi-Languages -User can easily select language from Setup menu.

2. Name, Function and Connection

2-1. Front Panel

The following information will help you operate the front panel controls.

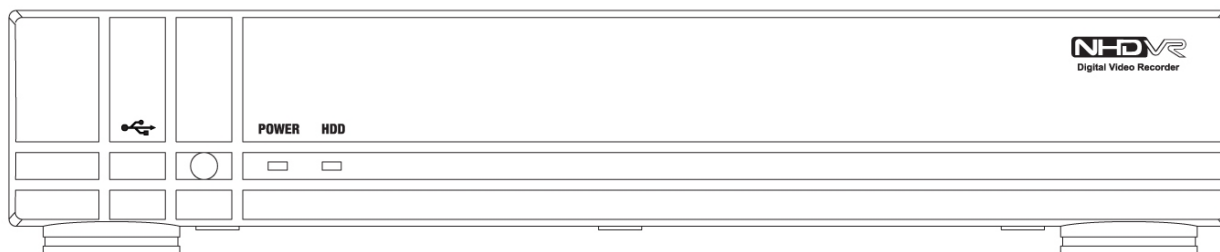


Figure 2.1.1. Front panel

Table2.1.1. Front LED and Port

Name	Description
POWER	LED Light is on when power is applied to the system.
HDD	LED light is on when the system is accessing hard disk.
USB port	There is a USB port located on the left side of the front panel. This USB port is used to archive footage into a USB storage device.

2-2. Rear Panel


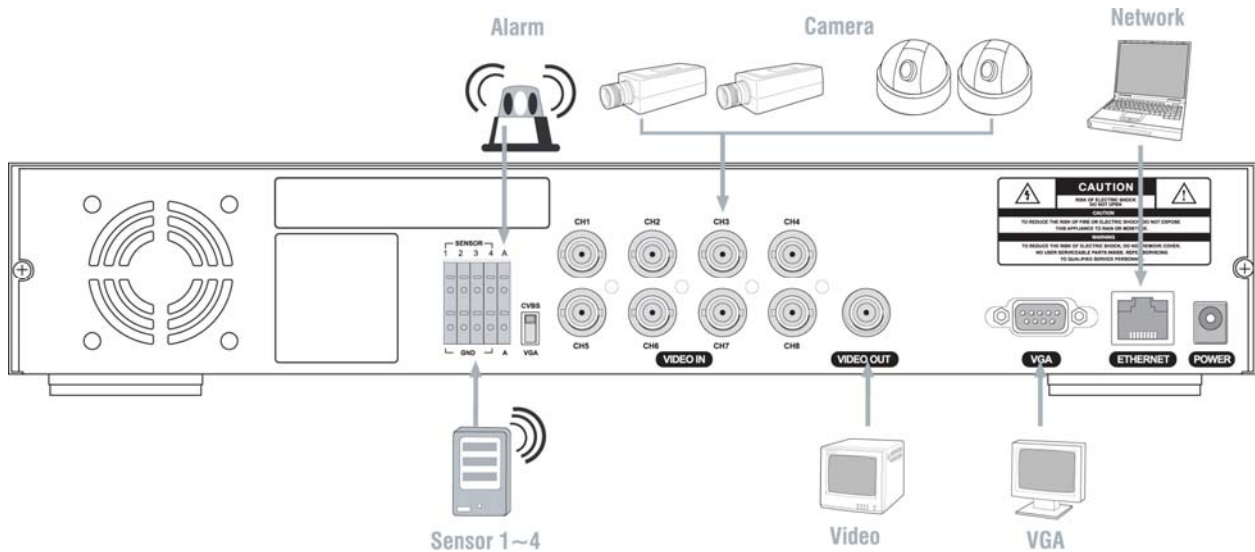


Figure 2.2.1. Rear Panel

Table 2.2.1. Rear panel connections

Connection	Purpose
VIDEO IN	8 connectors for video input. Connect camera output to Video-in (NTSC/PAL)
VIDEO OUT	1 connectors for video output.
VIDEO	Composite video output in NTSC or PAL format
VGA	Connector for VGA monitor
SENSOR IN	Connector for sensor device connection.
ALARM OUT	1 connector for alarm device connection. Provides simple On/Off switching by using relay. 0.5A/125V, 1A/30V
LAN	RJ45 connector for LAN connection.
DC 12V	Apply 12V DC using the DC adaptor supplied with the equipment.
RS-232	For engineering use only.
SWITCHES	Select VGA monitor or CVBS (Composite Video Blanking Sync) monitor. Do not change the setting when the power is on. When the position of the switch is changed, the DVR should be rebooted to apply the new setting.

2-3. Remote controller

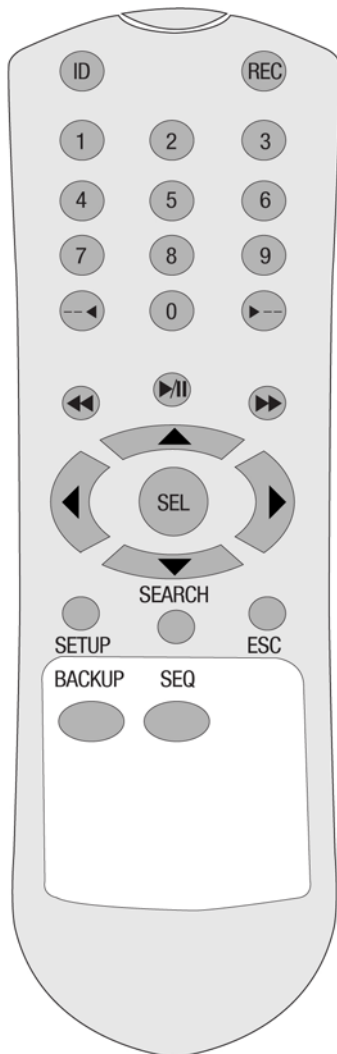

F/REW	Jump 60 seconds backward
PLAY	Play/Pause
F/ADV	Jump 60 seconds forward
FF	Fast Forward
SETUP	Setup menu screen
SEQ	Sequential channel conversion
RECORD	Manual recording
SEARCH	Search menu screen
DIRECTION	Direction or number 1 to 4
SELECT	Enter
ID	DVR ID (ID Button + DVR ID number)
ESC	Esc
NUMBER	Channel 1 to 8
BACKUP	Capture

3. Setting Up the DVR

The following sections detail the initial setup of the DVR

3-1. Setup – Main Screen

When you press the SETUP button, the DVR will ask for a password. The default password is 1111, which can be entered by pressing the up button 4 times and then pressing the SEL button. We recommend you protect the system by assigning a new password immediately. The procedure for assigning a password is found in section 3.6. After a password has been assigned,



enter the password by using the direction keys (representing 1, 2, 3, & 4), and then press the SEL button for the password validation. Once the password is entered, you will see the screen as shown in Figure 3.1.1. Navigate through the menu items and press the SEL button to enter the sub-category menu.

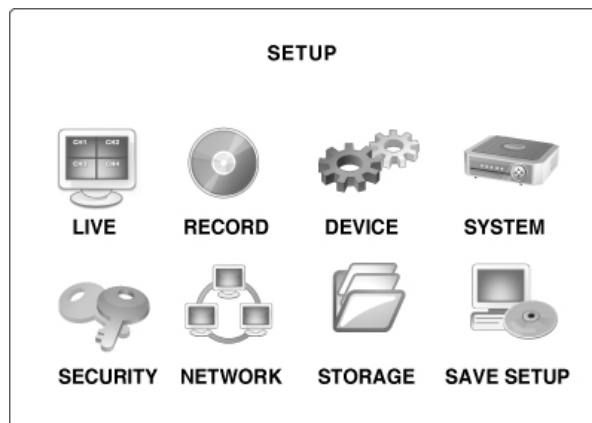


Figure 3.1.1. Setup menu screen

LIVE	OSD
	SEQUENCE
	SEQ-DWEL TIME
	OSD CONTRAST
	CHANNEL — DISPLAY, BRIGHTNESS, CONTRAST, HUE, SATURATION
RECORD	RESOLUTION
	CHANNEL — Frame rate, Quality, Recording, Motion zone, Motion sensitivity, Sensor recording, Pre record, Post record, Schedule
DEVICE	ALARM OUT
	KEY TONE
	REMOTE CONTROL ID
	SENSOR — TYPE
SYSTEM	DVR ID
	DESCRIPTION
	LANGUAGE
	LOAD FA CTORY DEFAULT
	LOAD DEFAULT
	DATE FORMAT
	SET DATE & TIME - DAY LIGHT SAVING
SECURITY	ADMIN PASSWORD
	USER PASSWORD
	NETWORK PASSWORD
NETWORK	PORT
	CLIENT ACCESS
	BANDWIDTH SAVING
	NETWORK TYPE – DHCP/LAN/ADSL(PPPOE) - DDNS
STORAGE	OVERWRITE
	FORMAT
	DISK INFO
	LOAD SETUP FROM A USB
	SAVE SETUP TO USB
	RECORD LIMIT
	RECORD LIMIT DAYS

Table 3.1.1. Setup menu configuration

3-2. Setup – Live Mode

Set the values for live display. Navigate through the menu items by pressing the UP or DOWN button. The value of the menu item may be changed by pressing the LEFT or RIGHT button.

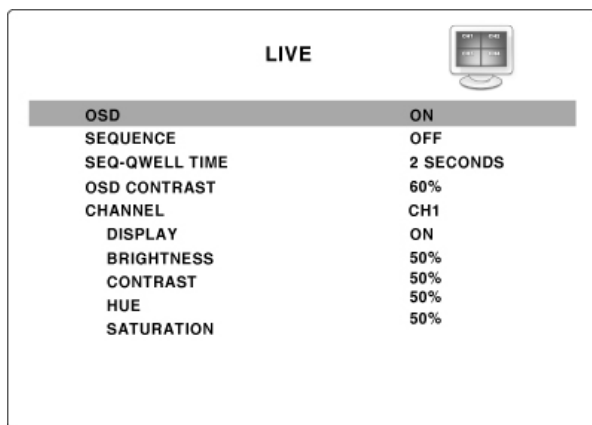


Figure 3.2.1. Live mode setup screen

Table 3.2.1. Menu items in LIVE mode setup

Item	Description
OSD	Enable/disable on-screen-display.
SEQUENCE	Enable/disable SEQ button
SEQ-DWELL TIME	Set the dwell time for each, 4 or 9 channels display in sequential display mode.
OSD CONTRAST	Set the visibility level of the On Screen Display (OSD)
CHANNEL	Select the channel for applying the following settings. Press SELECT to change channel name.
DISPLAY	Enable/disable display of the video channel in live display mode
BRIGHTNESS	Change the brightness value for the specified channel
CONTRAST	Change the contrast value for the specified channel
HUE	Change the hue value for the specified channel
SATURATION	Change the saturation value for the specified channel

3-3. Setup – Recording Mode

Set the values for recording video. Navigate through menu items by pressing the UP or DOWN button. User can change the value of the menu item by pressing the LEFT or RIGHT button.

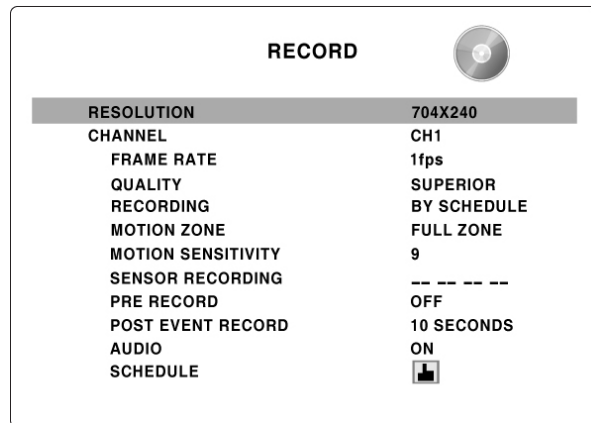


Figure 3.3.1. Recording mode setup screen

Table 3.3.1. Menu items in Recording mode setup

Menu item	Description
RESOLUTION	Set the resolution to either 704x480, 704x240, or 352x240 for NTSC. (PAL: 704*576/ 704*288/ 352*288)
CHANNEL	Select the channel to apply the following settings on. Changes you make will immediately take effect with the selected channel.
FRAME RATE	Set the frame rate for the specified channel. The sum of the frame rate values from each channel cannot exceed the maximum frame rates for a specific recording resolution. 120/100fps: 352*240(NTSC)/352*288(PAL) 60/50fps: 704*240(NTSC)/704*288(PAL) 30/25 fps: 704*480(NTSC)/704*576(PAL)
QUALITY	Select the recording quality for the specified channel. Options are: Network, Standard, High, Super or Ultra.
RECORDING	Set a recording mode for each channel. Select one of Continuous, By Motion, By Sensor, By Schedule or Disable.
MOTION ZONE	Select Full Zone or Partial Zone for motion sensing.
MOTION SENSITIVITY	Set the motion sensitivity for the specified channel. Control the motion sensitivity from 1 to 9.
SENSOR RECORDING	Enable setting up to 4 sensors for the specified channel.
PRE RECORD	Enable/disable pre-event recording. Pre-event recording time is 3 seconds and only intra-frames are recorded for pre-event recording.
POST EVENT	Set the post event recording time duration for the specified channel

RECORD	from 10 to 30 seconds.
SCHEDULE	Set the recording schedule.

3-3-1. Motion Zones

By selecting Partial Zone in the Motion Zone menu, user can set-up the motion sensing zones in the screen. Move around each rectangular zone using 4 direction key buttons and press SEL button to include the rectangular region as part of the motion sensing zone. The rectangular blocks included as part of the motion zone are indicated by changing the color of the blocks.

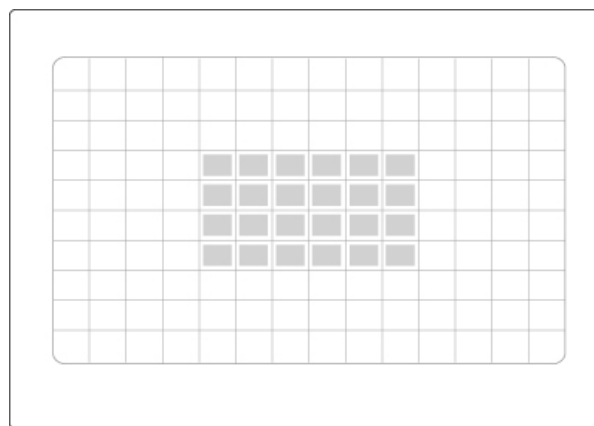


Figure 3.3.2. Motion Zone selection screen

3-3-2. Recording Schedule

To set up a recording schedule, select SCHEDULE in the RECORD menu.

Use the arrow buttons to navigate through the items and set the recording.

[ALL]: Selected recording mode using the SEL button is applied to the entire time zone and all channels.

[SUN to SAT]: Selected recording mode using the SEL button is applied to the entire time zone for the specified channel.

[Vertical Bar “ | “]: Selected recording mode using the SEL button is applied to the entire channel for the selected time zone. Each vertical bar “ | “ corresponds to one hour.

[- Individual Block of Time]: Selected recording mode using the SEL button is applied to the selected 1-hour increment for the selected channel.

[SEL]: The recording mode such as C (continuous), M (motion), S (sensor) and disable mode can be selected by using the SEL button.

[COPY FROM to COPY TO]: Setup values of recording mode for the selected channel can be copied for another channel setup.

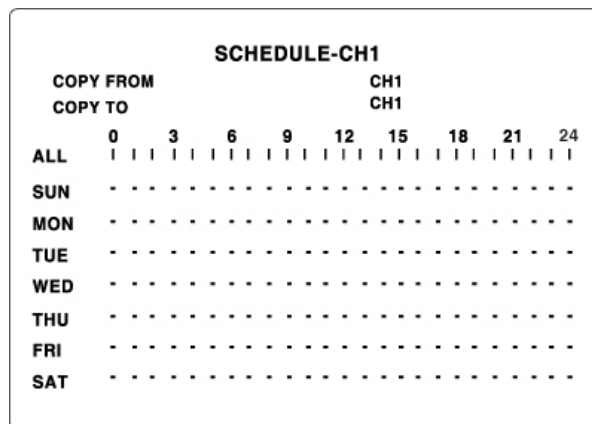


Figure 3.3.3. Schedule recording setup screen

3-4. Setup – Device Mode

Set the values for device setting. Navigate through menu items by pressing the UP or DOWN button. User can change the value of the menu item by pressing the LEFT or RIGHT button.

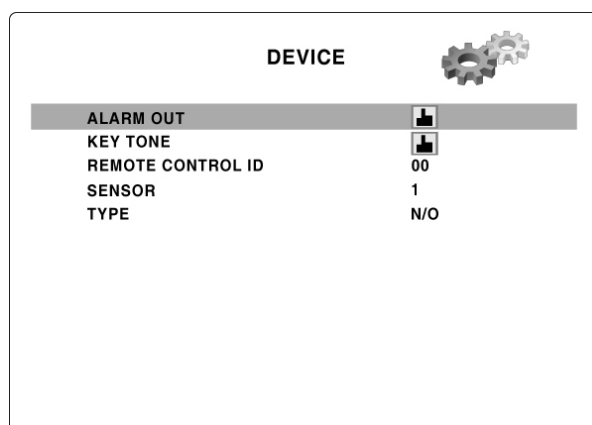


Figure 3.4.1. Device mode setup screen

Table 3.4.1. Menu items in Device Setup screen

Item	Description
ALARM-OUT	Set the sensor, motion, and video loss for each alarm.
KEY TONE	Enable/disable key tone.
REMOTE CONTROL ID	Select a ID of remote controller. 1. Select ID. 2. Press the same number as ID set in DVR on a remote controller.

	Before selecting ID, R:A is displayed as default on the live screen.
SENSOR	Select sensor from 1 to 4.
TYPE	Set the type of sensor for the specified channel. Options are: None, N/O (normal open), and N/C (normal closed).

3-4-1. ALARM-OUT

Table 3.4.2. Menu item in ALARM-OUT Setup screen

Item	Description
ALARM OUT	Select alarm 1.
SENSOR IN	Enable setting up to 4 sensors of 4 sensors.
MOTION ON	Enable setting up to 4 cameras of 8 cameras.
VIDEO LOSS ON	Enable setting up to 4 cameras of 8 cameras.
ALARM DURATION	Set the dwell time of alarm from 3 to 255 seconds.

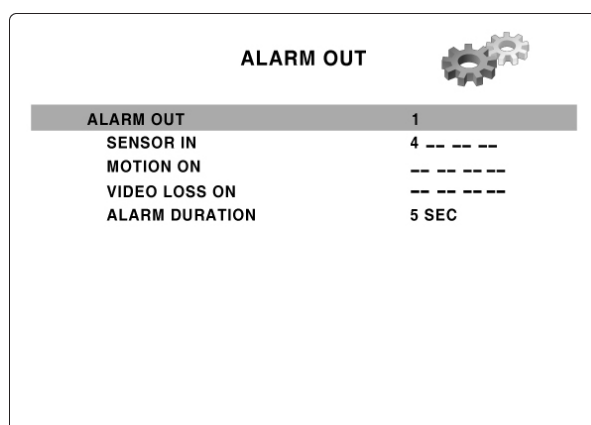


Figure 3.4.2. Alarm-out setup screen

3-5. Setup – System Mode

In this menu, system parameters can be input. Navigate through the menu items by pressing the UP or DOWN button. User can change the value of the menu items by pressing the LEFT or RIGHT button and UP or DOWN button.

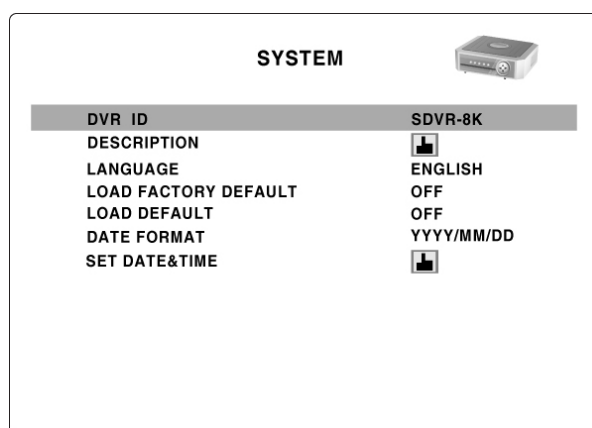


Figure 3.5.1. System setup screen

Table 3.5.1. Menu items in System Setup screen

Item	Description
DVR ID	The name of the system. Press the SEL button and move through the position for each alphanumeric character by pressing the LEFT or RIGHT button. UP or DOWN button is used to change the character for each location. 9 characters are available.
DESCRIPTION	System information.
LANGUAGE	User can select a language.
LOAD FACTORY DEFAULT	User can initialize all setting value as the factory default.
LOAD DEFAULT	Select OFF or ON. Select ON to load defaults. (Password, date format, DLS, Network setting, and HDD Overwrite will not be included.)
DATE FORMAT	Select the preferred date and time display
SET DATE&TIME	Set the present date, time and daylight saving for the DVR. DATE & TIME Set the present date and time for the DVR. Press SEL, then use the LEFT and RIGHT arrow controls to navigate through the position of each alphanumeric character in the date and time. Use the UP and DOWN arrow controls to change the selected character. Press ESC and select YES to confirm the new date and time.
DAY LIGHT SAVING	Set the DLS (Daylight Saving) for the area. The options are: OFF /USA / EU / Others/.

-
1. USA (DLS time is applied automatically when being on the DLS time zone and is displayed on the current time)
 2. EU (Set the GMT area for DLS time apply on the current time)
 - GMT AREA +00:00
 3. OTHERS
 - BEGIN (MAR 1ST SUN/00H)
 - END (SEP 1ST MON/00H)

(Set the BEGIN and END time for the specific area except EU and USA) use the UP and DOWN arrow controls to change the value of month, week, day and hour.

CAUTION:

-Do not set the start time to 23:00 for DLS.

-DLS can't be applied, if the date of BEGIN and END is same.

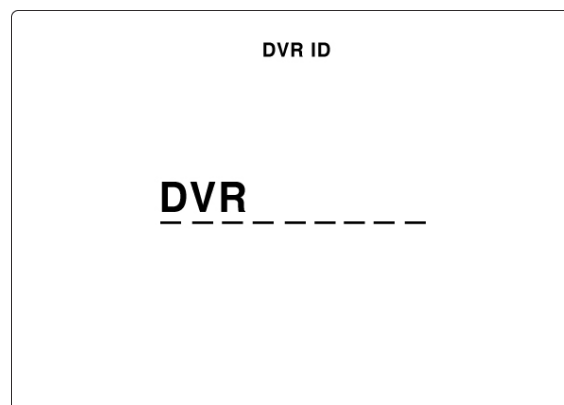


Figure 3.5.2. DVR ID setup screen

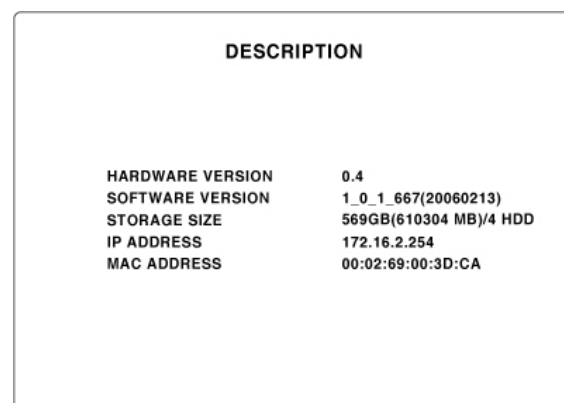


Figure 3.5.3. DVR information display screen



Figure 3.5.4. Date & Time setup screen

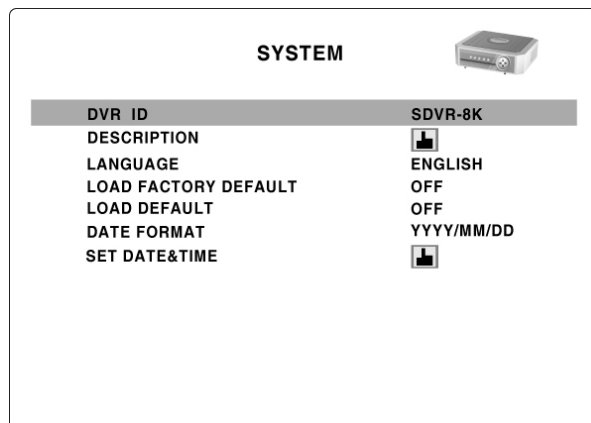


Figure 3.5.5. Daylight Saving setup screen

3-6. Setup – Security Mode

In this menu, password and security parameters can be input. Navigate through the menu items by pressing the UP or DOWN button. User can change the value of the menu items by pressing the LEFT or RIGHT button.

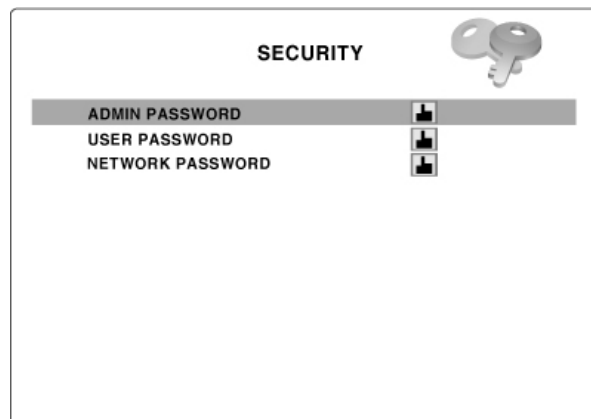


Figure 3.6.1. Security setup screen

Table 3.6.1. Menu Items in Security Setup Screen

Item	Description
ADMIN PASSWORD	Set a password for administrator. Once this menu is selected, the system will ask you current password and new password. Follow the procedure provided by the system. The password numbers can be input by using direction keys. The default password is 1111. ADMIN PASSWORD works on Setup, Record, Search and all operations.
USER PASSWORD	Set a password for user. Once this menu is selected, the system will ask you current password and new password. Follow the procedure provided by the system. The password numbers can be input by using direction keys. The default password is 1111. USER PASSWORD works for Search only.
NETWORK PASSWORD	Set a password for network client. Once this menu is selected, the system will ask you current password and new password. Follow the procedure provided by the system. The password numbers can be input by using direction keys. The default password is 1111.

3-7. Setup – Network Mode

Network parameters can be input in this screen. These parameters are used for remote clients who are connected to the DVR over the network.

Table 3.7.1. Menu items in Network Setup screen

Item	Description
PORT	Port number (Default: 5445)
CLIENT ACCESS	Enable/Disable remote access through client software.
BANDWIDTH SAVING	Enable/Disable only key frame transmission. "ON" mode is favorable for use of low network bandwidth. Mostly, set "OFF" for normal use.
NETWORK TYPE	Set the type of network connection. Options are: LAN, DHCP, ADSL Note. Other parts of the Network Setup screen change depending on what network type you select.
DHCP	Sets to use DHCP (If this is selected, DVR automatically get IP varying from time to time from network.)
ADSL (PPPoE)	ID: Registered ID is necessary for ADSL connection. Password: Registered password is necessary for ADSL connection.

LAN	<p>IP: Register IP address that is assigned for DVR.</p> <p>Gateway: Register Gateway that is assigned for DVR.</p> <p>Subnet Mask: Register Subnet Mask that is assigned for DVR.</p>
DDNS	<p>Enable/disable using domain name address through DDNS server.</p> <p>“ON” mode, DDNS server name appears for domain registration.</p> <p>The DDNS sever name is <u>ns.standalone4ch.com</u>.</p> <p>CAUTION: Do not change this sever name. If this is changed, the DDNS service cannot be used.</p> <p>Registration</p> <p>Check the MAC address of DVR from Setup>System>Description.</p> <p>Please contact a distributor or an installer to register your DVR on a DDNS Server. Register the domain name on DDNS Server.</p> <p>After the domain name and MAC address of the DVR are registered on a DDNS server, user can access the network with their own domain name.</p>

3-7-1. Ports


When you connect one or more DVRs to a network through an IP sharing device, each device must have a unique TCP port number for access to each unit from outside the LAN. Also, the IP sharing device must be configured for port forwarding so when each port is accessed on the IP sharing device, it will forward to the appropriate DVR.

Note: This port number is listed next to the Port menu option in the Network Setup screen. If you plan to access the DVR units only from within the same LAN, the TCP port does not have to be changed.

Network access beyond Router

In order to access beyond Router (Firewall), user must open 1 TCP port for Command level, Live channels, and Storage channels. If this port is not open properly, user can not access DVR beyond a router.

If DVR sets port number with 5445 as bellow, user has to open 1 TCP port of 5445.

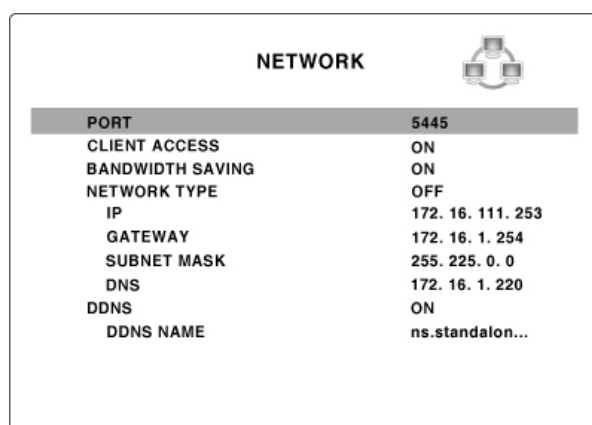

NETWORK	
PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	OFF
IP	172. 16. 111. 253
GATEWAY	172. 16. 1. 254
SUBNET MASK	255. 225. 0. 0
DNS	172. 16. 1. 220
DDNS	ON
DDNS NAME	ns.standalon...


Figure 3.7.1. Network setup screen

3-7-2. Network types

There are three network types. Each type requires different settings.

3-7-2-1. LAN

1. for the use of fixed IP. (See your network administrator if you do not have this information.)
2. When DVR is installed in IP sharer that is connected with ADSL, a user can assign fixed IP to DVR from IP sharer that is connected with ADSL, a user can assign fixed IP to DVR from IP sharer itself using “DMZ” function out of such sharer. Input IP set in DMZ on “IP” field and Gateway of ADSL modem on “Gateway” field. Similarly, for Subnet Mask, DNS address, input relevant values in IP sharer.

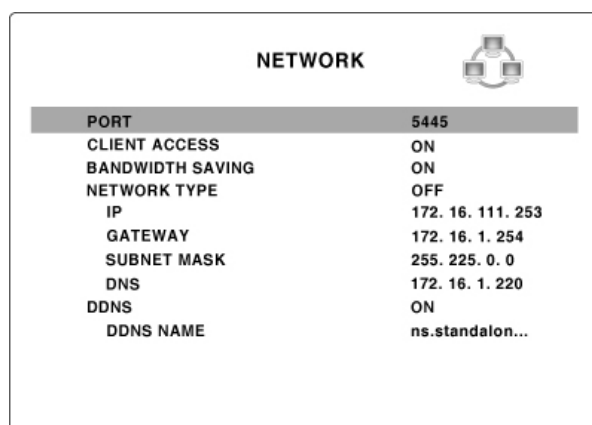

NETWORK	
PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	OFF
IP	172. 16. 111. 253
GATEWAY	172. 16. 1. 254
SUBNET MASK	255. 225. 0. 0
DNS	172. 16. 1. 220
DDNS	ON
DDNS NAME	ns.standalon...

Figure 3.7.2. Network setup screen - LAN

Table 3.7.2. LAN


Item	Description
IP	The fixed IP address of the DVR
GATEWAY	The IP address of the gateway

SUBNET MASK	The subnet mask for the LAN
DNS	Set the DNS IP.

3-7-2-1. DHCP

An IP address is automatically assigned by the DHCP server, which automatically assigns IP address and other parameters to new devices.

When ADSL or other network being used adopts variable IP method, not fixed IP. This option is used as a way to automatically get IP address.

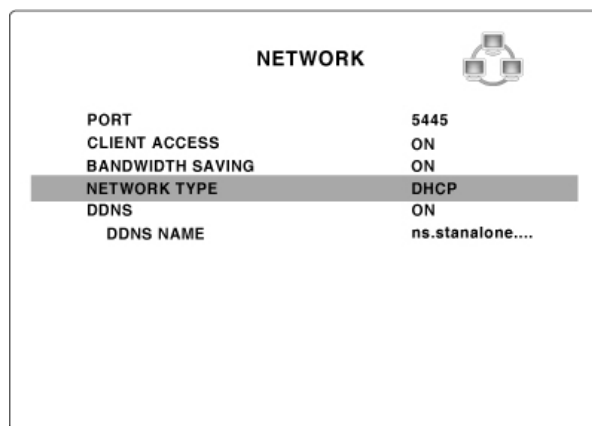

The image shows a network configuration screen titled "NETWORK" with a network icon. The settings are as follows:


Parameter	Value
PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	DHCP
DDNS	ON
DDNS NAME	ns.stanalone....

Figure 3.7.3. Network setup screen - DHCP

3-7-2-1. ADSL (PPPOE)

To use this ADSL (PPPoE) function when the network type connecting the DVR is using PPPoE method.

If ADSL type is not using inputting IP and Password like VDSL or DVR is installed in IP sharer, a user can not select this function. In this case, a user should select DHCP or LAN.

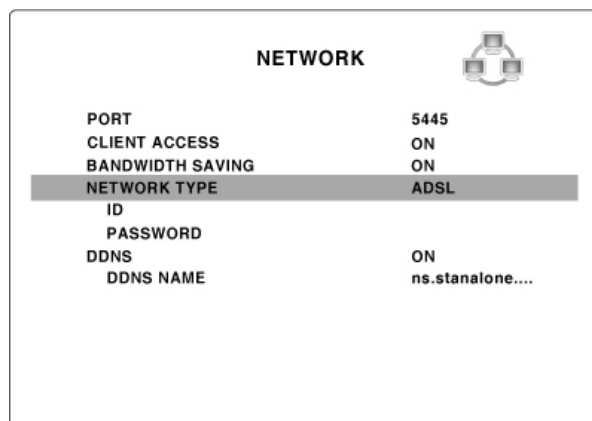

The image shows a network configuration screen titled "NETWORK" with a network icon. The settings are as follows:

Parameter	Value
PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	ADSL
ID	
PASSWORD	
DDNS	ON
DDNS NAME	ns.stanalone....

Figure 3.7.4. Network setup screen - ADSL

Table 3.7.3. ADSL

Item	Description
ID	The user ID for ADSL connection
PASSWORD	The password for ADSL connection

3-8. Setup - Storage Mode

User can set recording mode in the hard disk drive or initiate format of the hard disk driver.

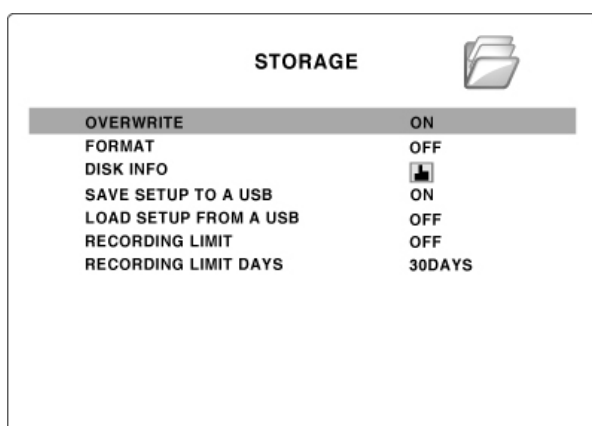


Figure 3.8.1. Storage setup screen

Table 3.8.1. storage setup

Item	Description
OVERWRITE	Overwrite existing material when hard disk drive is full.
FORMAT	Format hard disk drive.
DISK INFO	Information such as capacity, usage, recording times, and others of all HDD installed in DVR.
SAVE SETUP TO A USB	User can save the current configuration of DVR to the USB memory stick. Put the USB stick into the USB port on the front panel and press SEL to start the saving process
LOAD SETUP FROM A USB	User can upload the configuration of DVR to another DVR using the USB Memory stick. Put the USB stick into the USB port on the front panel and press SEL to start the loading process. After upgrade is completed, DVR will reboot automatically and setup value will be applied.
RECORDING LIMIT	Enable/disable recording limit days for the video data onto the hard disk drive.

RECORDING	Set the recording limit days for the video data onto the hard disk drive from 2
LIMIT DAYS	to 90 days.

3-9. Saving Setup

To preserve the changed setup values, select the SAVE SETUP menu and select CONFIRM.

4. Live & Search

4-1. Live Window

In the Live window, video inputs from the cameras are displayed on the configuration of the live setup. Various indicators showing the status of the DVR are shown as OSD symbols. Refer to Table 4.1.1 for the meanings of the indicators.

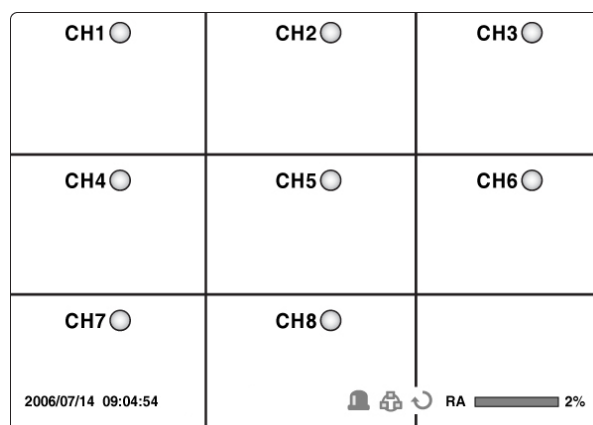







Figure 4.1.1. Live window

Table 4.1.1. Indicator ICONS in Live window

Icon	Description
	Continuous recording in progress
	Manual recording in progress
	Motion recording in progress
	Event indicator. When there is an alarm (sensor alarm or motion alarm) in the video channel, this icon will be highlighted in bright red.
	Indicates that a network client is connected to the DVR.




	Indicates that sequencing mode is enabled.
	Enable the sensor recording

Table 4.1.2. Button functions in Live window

Button	Description
SETUP	Launch the SETUP menu.
SEQ	Sequential channel display in 1, 4 or 8 split mode.
PLAY/PAUSE	Launch the SEARCH window.
	Use to select channel 1 to 4 in full screen mode or to change the quad display in quad display mode by using the LEFT or RIGHT button. And use to select and highlight a channel to display in full display mode in 9 split display mode. The channel display in quad display mode is followed the setting in the setup menu.
SEL	Switch between full screen and current display mode.
ESC	No action
REC	Select for manual recording for all channels.

4-2. SEARCH Window

1. Select the date of the video to begin searching by using the direction buttons to navigate through the month.

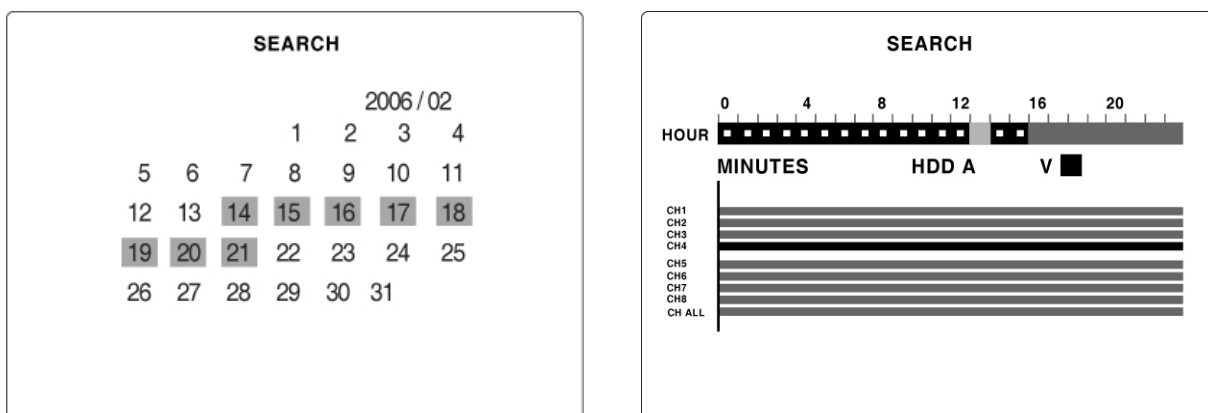






Figure 4.2.1. Search screen – Date

2. Once you have selected the date, press the SEL button to move to the time line search window.
3. Use the buttons REW  & FF  to select a hour time zone on the 24hours time table. Once you have selected the time zone, press the SEL button to move to the 60 minutes time table and select all or each channel for playing back the recorded video.
4. Once you select the time zone, then move the time line select Bar (Red) to the point you wish to start playing video by using the LEFT or RIGHT buttons or F/REW  & F/ADV .
5. Press the SEL button to playback the recorded video.

4-3. Play mode

During the playback of a recorded event, the mode changes from SEARCH to PLAY. While in PLAY mode, you may return to SEARCH LIST by pressing the ESC button.

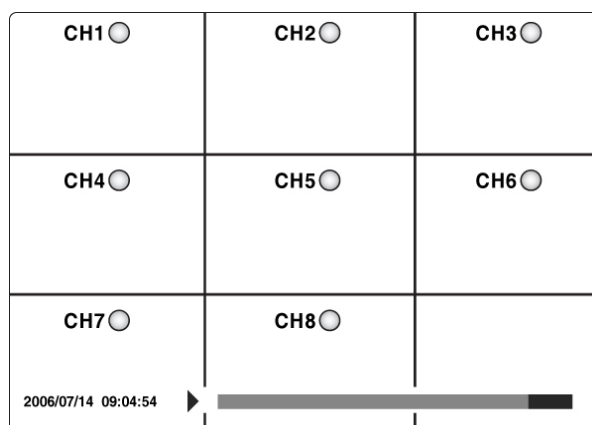


Figure 4.3.1. Play mode screen

Table 4.3.1. Button functions in Play mode

Button	Description
ESC	Return to the previous menu screen or exit from the setup menu
REW	Press to rewind the footage at 1x, 2x, 4x, and 8x speeds. Reverse playback speed is shown as -1x(normal), -2x (2 times normal), -4x (4 times normal), and -8x (8 times normal) at the bottom right of the screen.
F/REW	Jump/Step backward. The playback position moves 60 seconds backward.
PLAY/PAUSE	Press to play or pause recorded video.
F/ADV	Jump/Step forward. Playback position moves 60 seconds forward.
FF	Press to fast forward the footage at 1x, 2x, 4x, and 8x speeds. Playback speed is indicated as +1x, +2x, +4x, and +8x for normal, twice, 4 times, and 8 times of the regular speed at the bottom right of the screen.



Use to select channel 1 to 4 in full screen mode or to change the quad display by using the LEFT or RIGHT button.

The channel display in quad display mode is followed the setting in the setup menu.

SEL

Switch between full screen and current display mode.

4-4. LOG Search

User can see the log list by selecting this item.

LOG

2006/02

			1	2	3	4
5	6	7	8	9	10	11
12	13	14	15	16	17	18
19	20	21	22	23	24	25
26	27	28	29	30	31	

LIST

(1/1)

[2006/03/23 13:43:02] Enter Setup

[2006/03/23 13:41:02] Exit Setup

[2006/03/23 13:45:02] Enter Setup

[2006/03/23 13:49:02] Exit Setup

Figure 4.4.1. Log list screen

5. Archiving Video into USB Memory Device

To archive a still image or video to a USB storage device, user must first capture a still image or video to a hard disk drive.

5-1. Capturing images or video

5-1-1. Still Image backup onto USB flash memory or CD media

Still images can be captured and archived onto the USB stick, CD media or hard drive in live mode or while playing back recorded video.

In live mode, press the BACKUP button to launch the archive function.

1. When you press BACKUP button, the archiving screen will display as Figure 5.1.1.
2. And the DVR will ask which media you will take for archiving.
3. Once you select the media, the system will start to archive the data to the selected media.

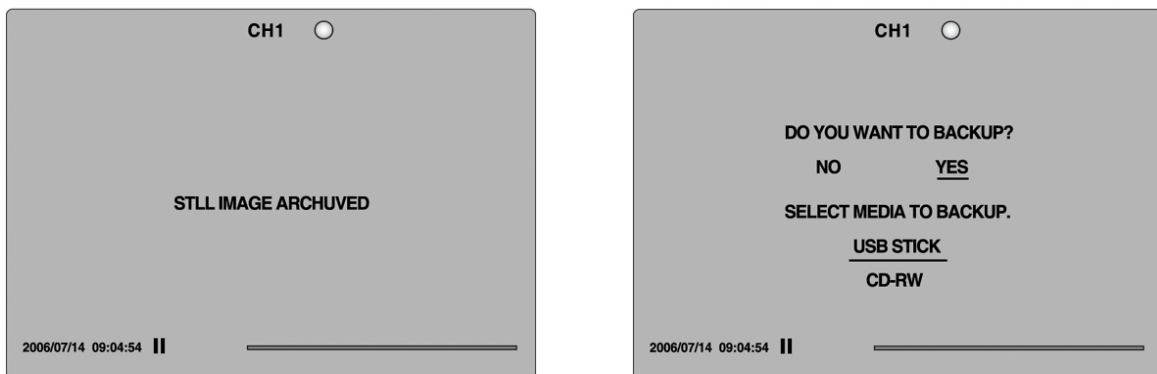


Figure 5.1.1. Still Image Archiving and Backup Screen

5-1-2. Video backup onto USB flash memory or CD media

Video can be captured and archived onto the USB stick, CD media or hard drive while playing back recorded video.

In playback mode, press the BACKUP button to launch the archiving function.

1. When you press BACKUP button, the DVR will ask whether to archive a Still Image or Video clip.
2. If the user selects VIDEO, the DVR will ask which media you will take for archiving as Figure.

3. If the user selects VIDEO, the DVR will ask for the setting of the archiving duration.
4. Once you select the media, the system will start to archive the data to the selected media.

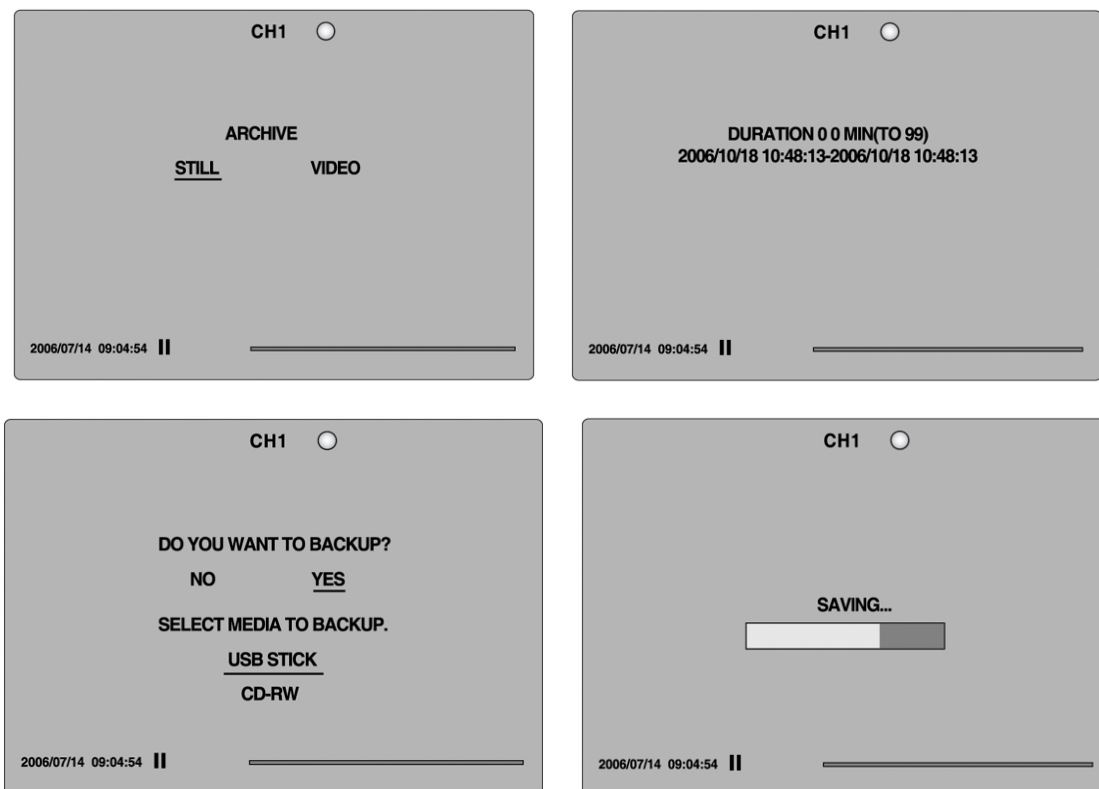


Figure 5.1.2. Video Archiving and Backup Screen

The DVR will convert the corresponding portion of the video into an AVI file.

5-2. Transferring still images or video from the ARCHIVE list

The stored data onto hard drive will be found in the ARCHIVE list in SEARCH menu.

User can back up still images or video into the storage device from the ARCHIVE list.

1. Select the date to begin searching by using the LEFT, RIGHT, UP and DOWN buttons to navigate through the days.
2. Once you have selected the date, press SEL to open the list of stored data.
3. Use the UP and DOWN buttons to scroll through the on-screen listings.
4. Use the LEFT and RIGHT buttons to display a list of stored events that happened previous to or after the current selection.
5. Once the desired event has been selected, press SEL to view the still image or the first frame of the selected video.
6. Press the BACKUP button to launch the archiving function in playback mode.

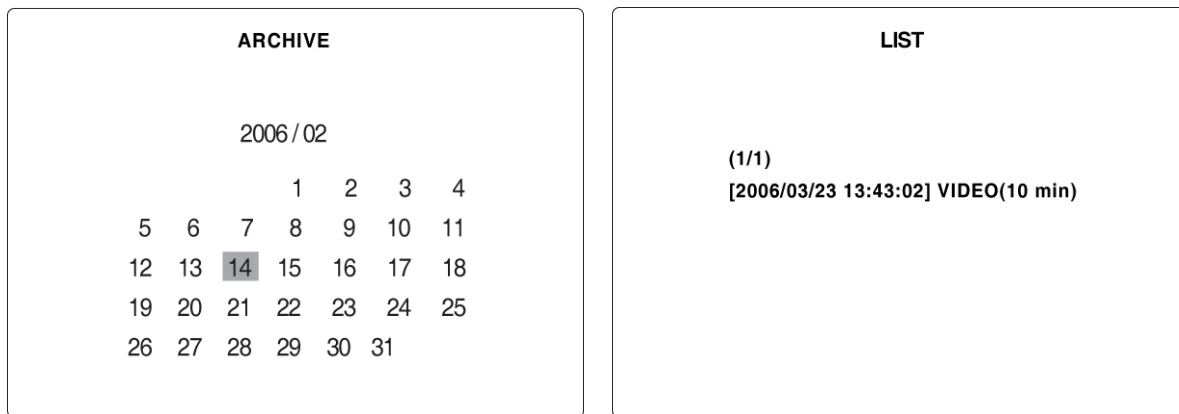


Figure 7.2.1. Archive Search Screen

5-3. Playback of Backup Video

5-3-1. Playback of backup video in AVI format

If the proper codec is not installed on your PC, the AVI file may not be played correctly. If this happens, install the 'FFDSHOW' codec that can download from open sites.

5-3-2. Playback of backup video in exclusive (NaFs) format

If the data is backed up in an exclusive file format, this video can be played only an exclusive player in CD that is provided with DVR.

6. Upgrading Firmware

In order to upgrade, the firmware upgrade file must first be downloaded and copied into the USB memory stick. Create a new folder in the USB memory stick and name it “upgrade”. Copy the firmware upgrade file “app8xxxxxx.bin” into the “upgrade” folder.

NOTICE

The folder on the USB memory stick must be named “**upgrade**”.

After the firmware upgrade is copied into the USB memory stick, connect the USB memory stick to the USB port on the front panel and do the following:

1. Press the SETUP button and enter the admin password.
2. Go to PASSWORD and select the ADMIN PASSWORD.
3. Enter the password as 12341234, and press the SEL button.
4. The engineering mode screen “DVR DIAGNOSTICS” will appear.
5. Select USB upgrade, and then the upgrading will start automatically.
6. After the upgrade is completed, select Boot Application to reboot DVR.

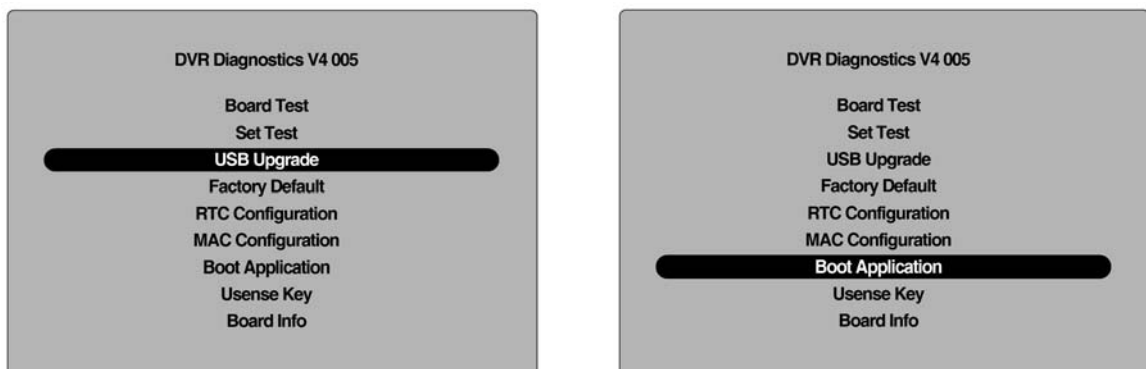


Figure 6.1.1. Engineering mode screen

7. Network – By an exclusive viewer

The DVR provides a live remote monitoring feature. Remote monitoring requires installation of a software client program on your PC.

NOTICE

In a high bandwidth network, a maximum of four users can access one DVR simultaneously. In a low bandwidth network it is recommended that only one user access the DVR at a time.

For remote viewing, the frame rate is limited to 1 frame/sec when there is no recording operation in the DVR. When the DVR is recording, the video frame rate for remote live monitoring will follow the recording frame rate on the DVR.

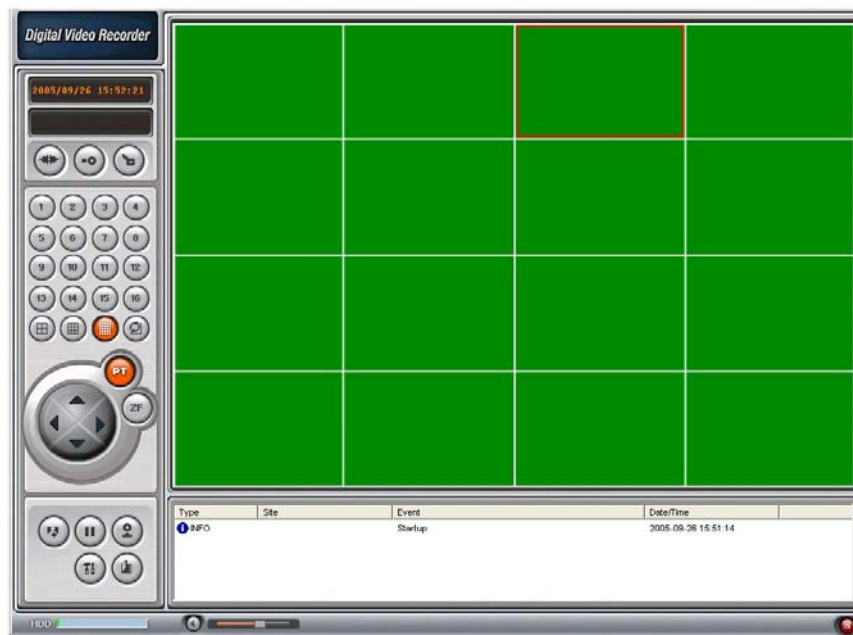


Figure 7.1. Main user interface

7-1. Overview

The remote software supports remote live viewing, search, playback and system configurations. By installing the Network Client Viewer on a Windows PC, you can monitor real-time and recorded images via optional Ethernet network.

7-2. Minimum PC requirements

PC Specification	Minimum Requirement	Recommended
CPU	Intel Pentium III 500Mhz	Intel Pentium IV 2Ghz
Memory	128MB	256MB
VGA	16MB	64MB
Resolution	1024x768	1024x768
Disk space	10MB	10MB
OS	Windows 2000	Windows 2000, Professional, XP Vista
Network	10/100Base T	10/100Base T
Others	Direct X 8.1	Direct X 9.0 or Higher

Before installing the program, check the PC specifications. The Network Client Viewer may not perform correctly if the PC does not meet the minimum requirements.

7-3. Installing the program

1. Insert the provided CD into the CD-ROM drive of your PC.




2. Run `network.exe` to start the installation process.
3. Follow the on-screen directions.



4. Double click the `Network Client` icon to start the program.

7-4. Live viewer



When installation is complete, double click the  icon on your desktop to start the program.

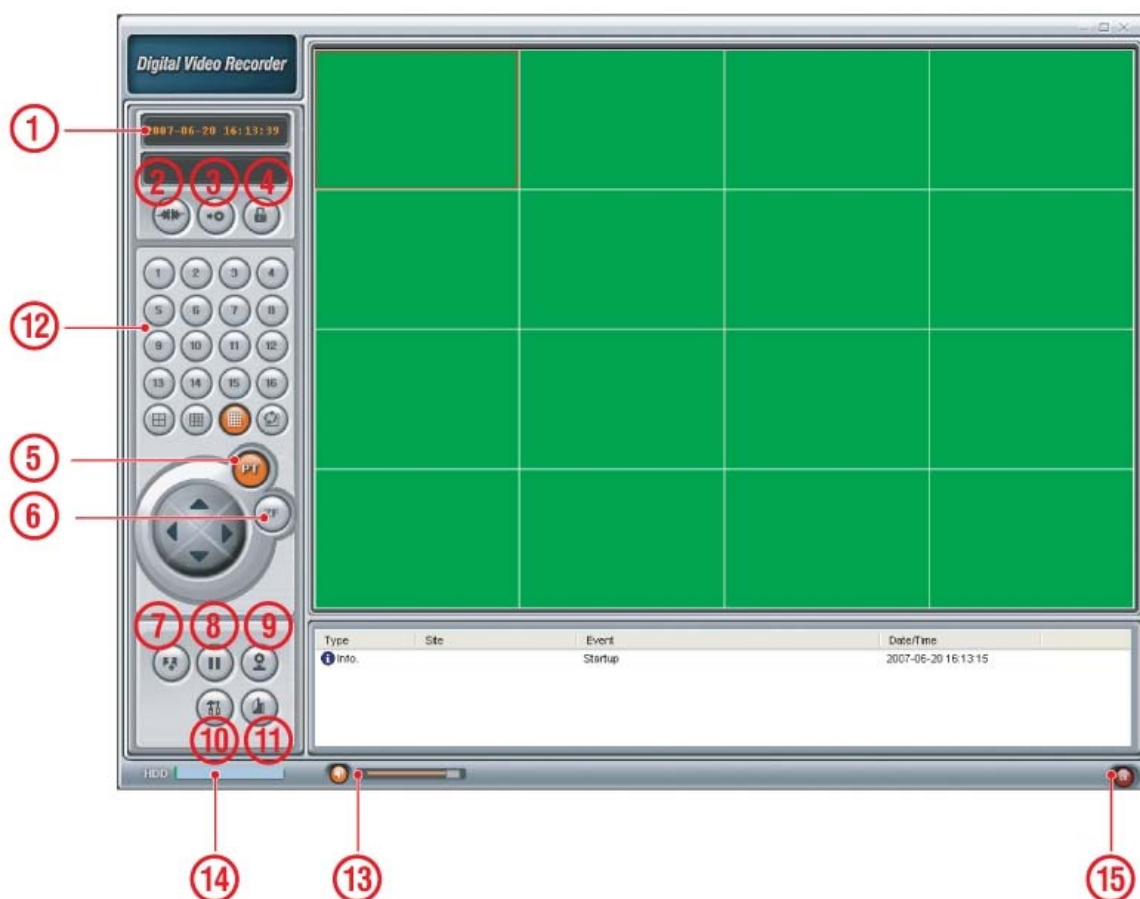
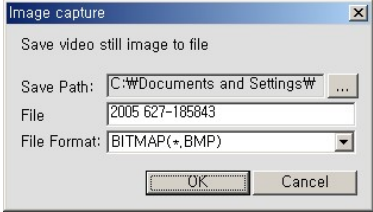


Figure 7.4.1. Main user interface

Table 7.4.1. Main controls in Live

NO	Button	Description
1	DATE & TIME	Displays the current date and time.
2	CONNECT	Click this icon to connect to the DVR
3	SEARCH	Click this icon to search for recorded video.
4	LOCK/ UNLOCK	Click this icon to lock/unlock all operations of the client software. Once the lock or unlock icon is clicked, this pop up window appears. Remember the password and enter it when you operate the client software.

5	PAN/TILT	Use these buttons to control the PAN/TILT features on the remote camera.
6	ZOOM/ FOCUS	Use these buttons to control the ZOOM/ FOCUS features on the remote camera.
7	CAPTURE	<p>Click this icon to capture a still image.</p> <p>Once the capture icon is clicked, this pop-up window appears.</p> <p>The still image is captured in either jpeg or bmp file format.</p> 
8	PLAY/PAUSE	Click this icon to play/pause live video.
9	RECORD	Enable or disable recording of live video to local disk.
10	SETUP	Click this icon to setup configuration of client software.
11	EXIT	Click this icon to exit the client software.
12	DISPLAY MODE	Click these icons to select display mode.
13	AUDIO	<p>Use the volume control bar to set the audio level.</p> <p>The audio can be turned on or off by clicking the audio icon.</p>
14	HDD USAGE	DVR HDD storage Indicator.
15	ALARM	The alarm output indicator lights up for 5 seconds if alarm output is activated on the DVR.

7-5. Search and Playback Viewer

The search window can be accessed by clicking the search icon on the upper right of the main user interface.

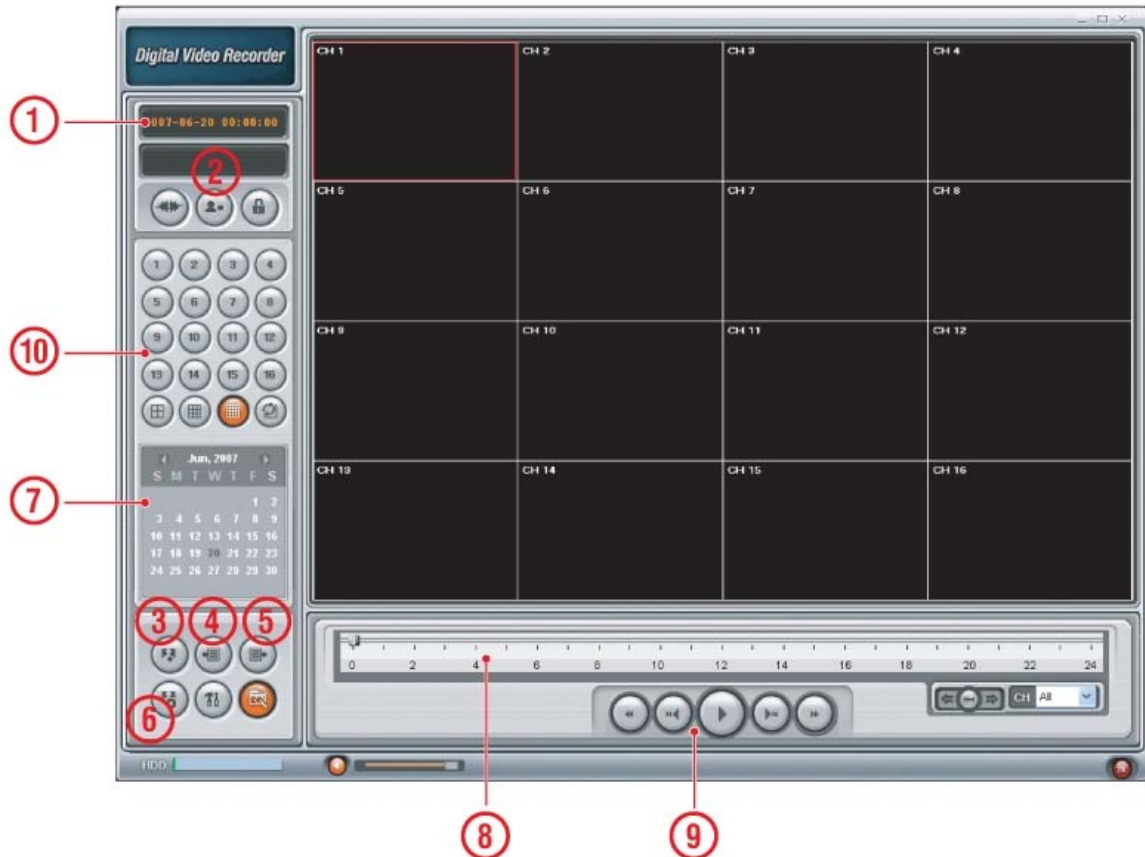


Figure 7.5.1. Main user interface


Table 7.5.1. Main controls in Search

No	Button	Description
1	DATE & TIME	Displays the recording time of the data selected on the time bar at the bottom of the main user interface.
2	LIVE	Click this icon to see live video.
3	CAPTURE	Click this icon to capture a still image of recorded video. Once the capture icon is clicked, this pop up window appears. The still image is captured in either jpeg or bmp file format.
4	MARK IN	Click this icon to set the start time for video backup.
5	MARK OUT	Click this icon to set the ending time for video backup.

6	BACKUP	Click this icon to backup the selected recorded video in AVI format.
7	SEARCH CALENDAR	The calendar shows dates with recorded video in a light blue and the selected date in dark blue.
8	TIMELINE BAR	The timeline shows recorded data in dark blue on the bar. You can adjust the time-line scale and move it to the time you wish to play back. Click the play icon to display the recorded video.
9	PLAY BUTTONS	
10	DISPLAY MODE	Click these icons to select display mode.


7-5-1. Backup

You can back up recorded video in AVI format from the search viewer.

1. Click the MARK IN icon  when the scale on the blue timeline is on the time you wish to the backup file to begin.

2. Set the ending time on the blue timeline by dragging the scale to the ending time for the backup file and clicking the MARK OUT icon . The color of the timeline between the beginning time and ending time will change to dark green.

3. Next, click the backup icon  and the pop up window appears as below.

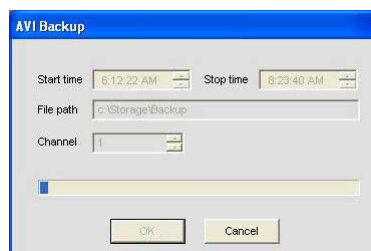

The beginning and ending time can also be set on this window.

After selecting a channel for backup, click the OK button. The backup will begin.

7-6. PC System configuration

Click the setup icon  to setup the configuration of PC that the network client S/W is installed.

7-6-1. General

Once you click the setup icon, this pop up window appears. Select security options and set a password. When you access any of the selected functions, you will need to enter the password. You can also set the save path for capturing and backup.


Security Option: Set a password for security options.

Save Path: Specify the location to record the receiving video for Backup and still image for Capture.

Automatic reconnection: If a user selects this function, the client S/W will automatically try to connect to the previously connected IP address if the network connection is lost.


Display network statistics: If a user selects this function, the client S/W will display network status, Bit rate and Frame rate.

Time Format: Change the way the Client software displays the time.

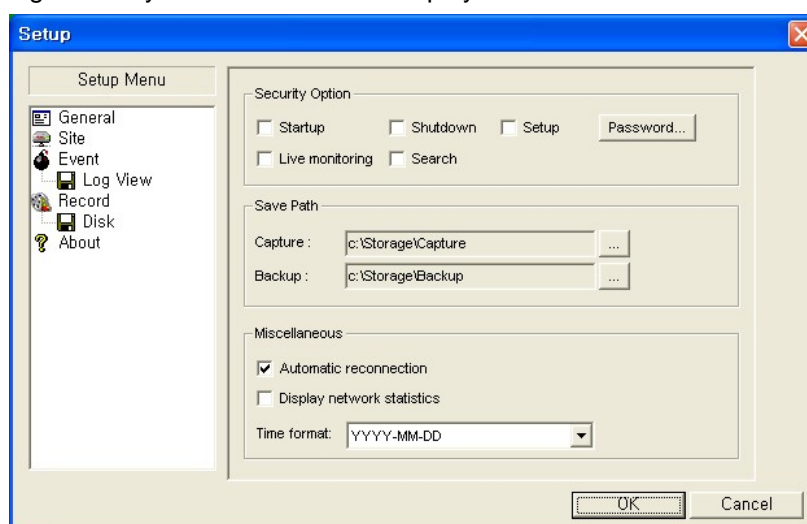


7-6-2. Site

This option shows the channel information of the DVR and allows you to change the channel title.

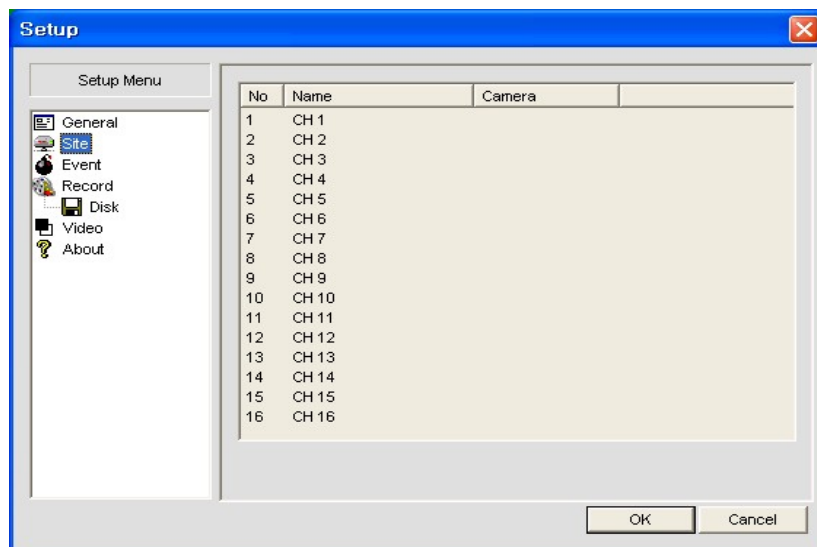


7-6-3. Event

You can set event items, the amount of local disk space you want to allow and the save path for the log file.

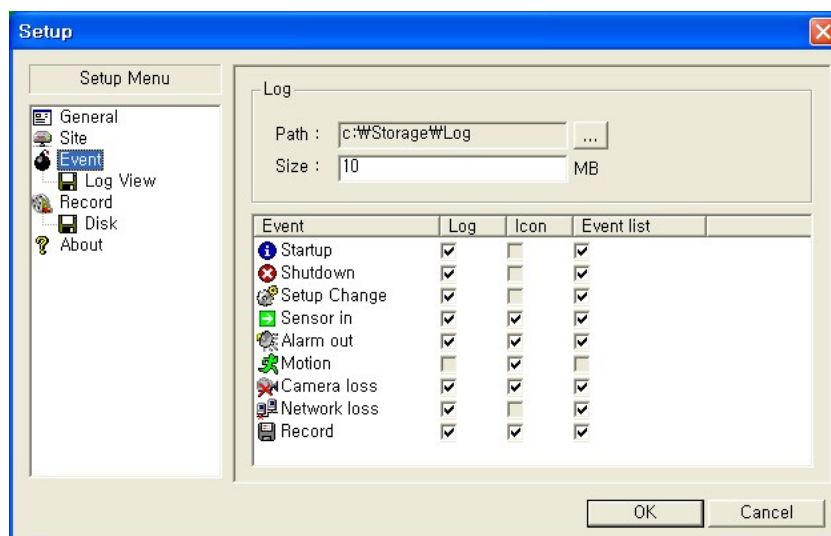


- LOG – Select to save event log into 'log file'.
- ICON – Select to display the event on live video.
- EVENT LIST – Select to show the event in the 'Event List' window of live mode.

You can search and check the recorded log data.

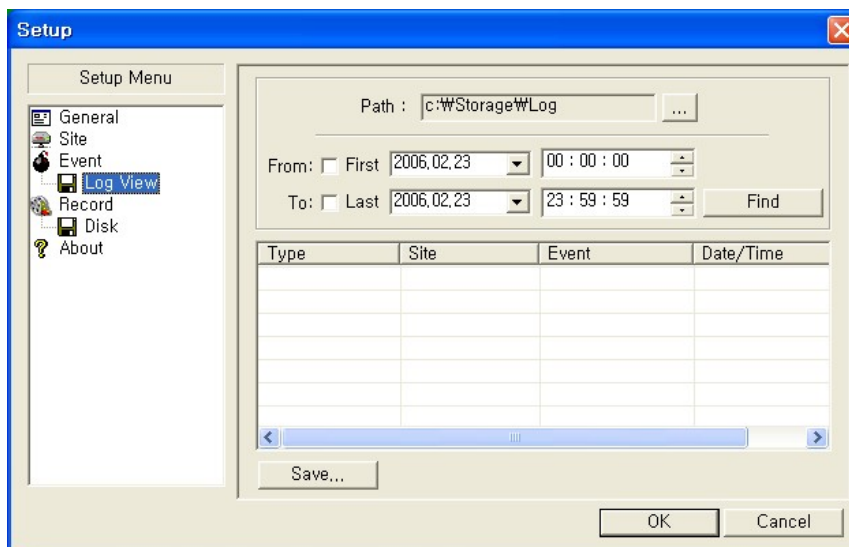


7-6-4. Record

You can set the recording conditions for Always, Event, or Auto recording. You can also select individual channels or all channels to record.

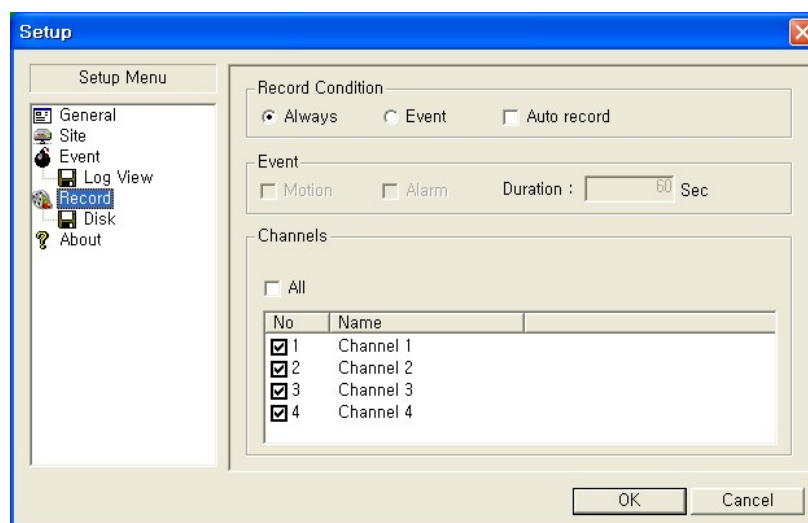

When you set the recording condition to Event, you can set event for motion or alarm with duration. You can also set each or all channels to record.

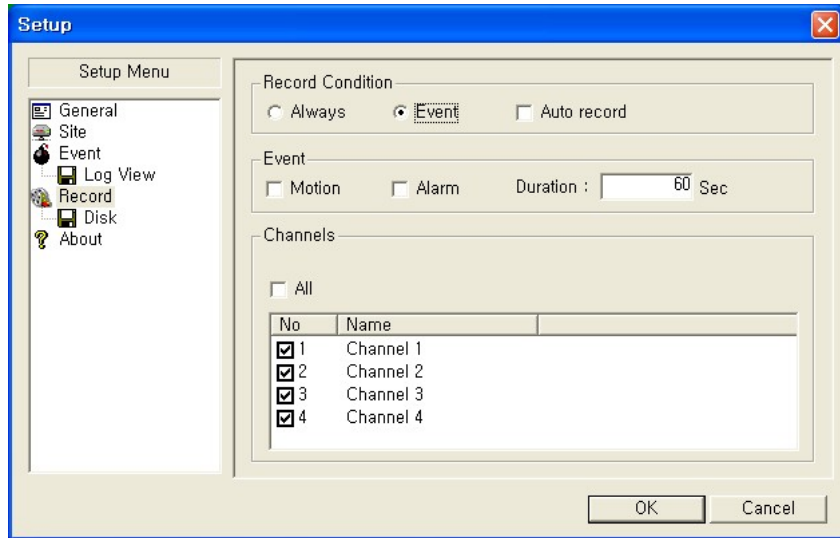

7-6-5. Disk

You can select which local disk to use and the amount of disk space you want to allow the program to use for recording. You can also choose to overwrite data or stop recording when the maximum amount of disk space is full.



8. Network – By an web-browser viewer

The DVR provides a live remote monitoring feature by web-browser viewer.


8-1. Download Web Brower Viewer and Connection

1. User needs to access <http://ns.standalone4ch.com/webview2/> to get a web browser viewer. Then the window will appear as bellow. Click “YES” to download Web Browser Viewer from the server run by the manufacturer.




2. Web Browser Viewer will be downloaded and installed.



3. Click  button and enter IP address (or Domain name using DDNS), the password, and Port number.



4. Then user can access DVR.

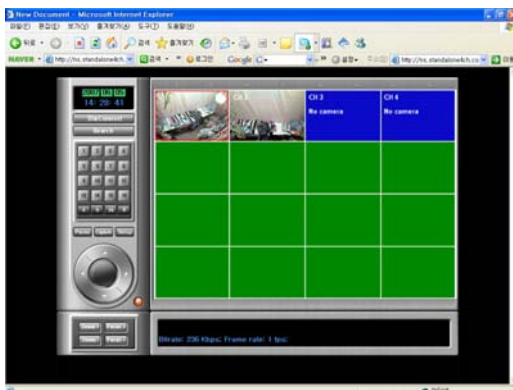

8-2. Main Features

8-2-1. Live

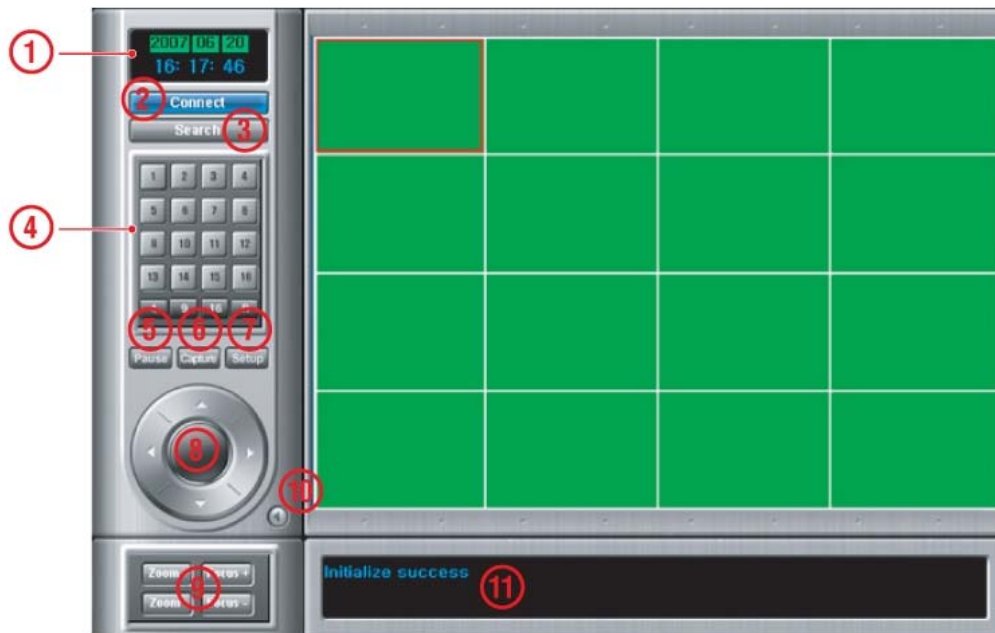


Figure 8.2.1. Main user interface - Live

Table 8.2.1. Main controls in Live

No	Name	Description
1	DATE & TIME	Displays the current date and time.
2	CONNECT	Click this icon to connect to the DVR
3	SEARCH	Click this icon to search for recorded video.
4	LIVE DISPLAY MODE	Click these icons to select display mode.
5	PAUSE	Click this icon to pause the display screen.
6	CAPTURE	Click this icon to capture the image from live display.
7	SETUP	Click this icon to control remotely the setting of DVR.
8	PAN/TILT	Use these buttons to control the PAN/TILT features on the remote camera.
9	ZOOM/FOCUS	Use these buttons to control the ZOOM/ FOCUS features on the remote camera.
10	AUDIO	The audio can be turned on or off by clicking the audio icon.
11	CONNECTION STATUS	Shows the client connection information.

-2-2. Search and Playback

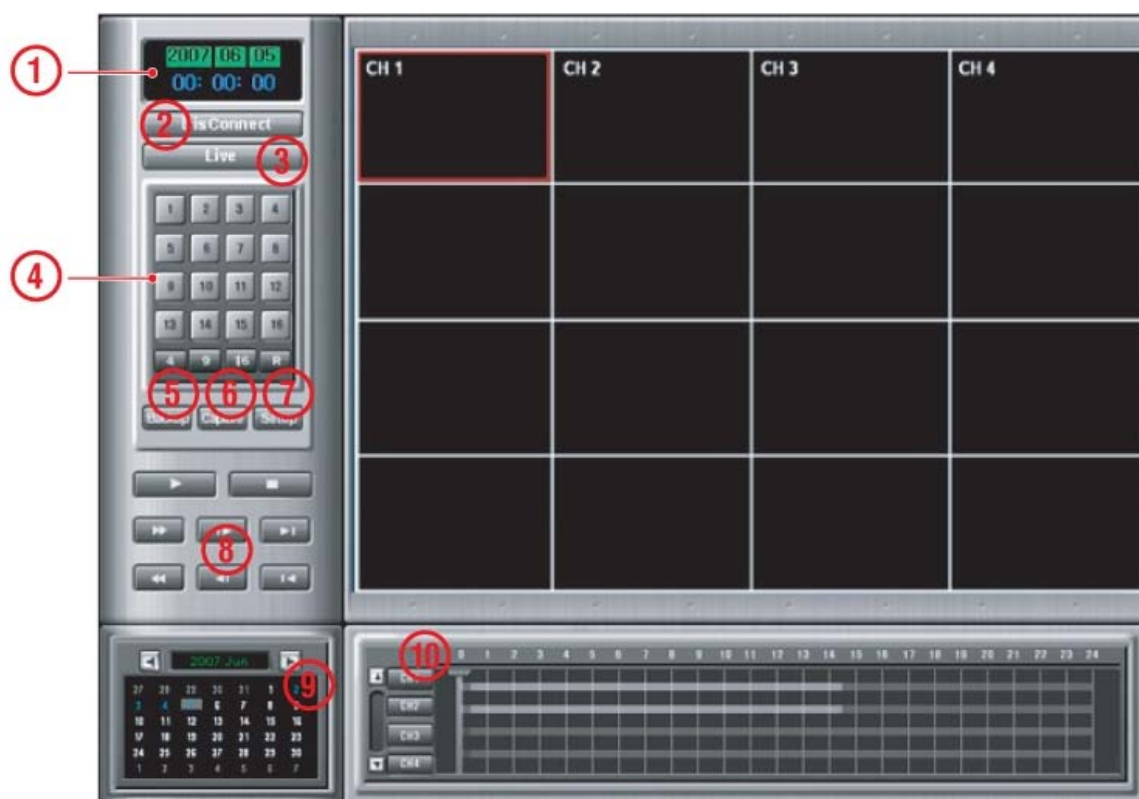


Figure 8.2.2. Main user interface – Search & Playback

Table 8.2.2. Main controls – Search & Playback

No	Name	Description
1	DATE & TIME	Displays the current date and time.
2	Connect/Disconnect	Click this icon to connect to the DVR
3	LIVE	Click this icon to search for recorded video.
4	DISPLAY MODE	Click these icons to select display mode.
5	BACKUP	Click this icon to pause the display screen.
6	CAPTURE	Click this icon to capture the image from playback.
7	SETUP	Click this icon to control remotely the setting of DVR.
8	PLAYBACK BUTTONS	Use these buttons to control the PAN/TILT features on the remote camera.
9	SEARCH CALENDAR	Use these buttons to control the ZOOM/ FOCUS features on the remote camera.
10	TIMELINE SEARCH WINDOW	The audio can be turned on or off by clicking the audio icon.

APPENDIX

1. How to register DDNS (Dynamic Domain Name Server)

If DVR is installed in network using dynamic IP addressing and user want to access DVR with domain name instead of IP address, user should register DVR and domain name with DDNS.

1-1. Setting of NETWORK Setup menu

A. Please go to SETUP>NETWORK. There are three network types such as DHCP, ADSL, and LAN.

NETWORK	
PORT	5445
CLIENT ACCESS	ON
BANDWIDTH SAVING	ON
NETWORK TYPE	OFF
IP	172. 16. 111. 253
GATEWAY	172. 16. 1. 254
SUBNET MASK	255. 225. 0. 0
DNS	172. 16. 1. 220
DDNS	ON
DDNS NAME	ns.standalon...

B. Please select proper network type and set DDNS as ON.

DHCP: Select when DVR is installed in Local Network with router or IP sharer and IP address is automatically assigned by the DHCP server.

LAN: Select when DVR is installed in Local Area Network with router or IP sharer and IP address is static and private IP address.


ADSL (PPPoE): To use this ADSL (PPPoE) function when the network type connecting the DVR is using PPPoE method.

If ADSL type is not using inputting IP and Password like VDSL or DVR is installed in IP sharer, a user can not select this function. In this case, a user should select DHCP or LAN.

C. Please make sure DNS SERVER NAME is “**ns.standalone4ch.com**”.

1-2. Checking Mac address on the rear panel of DVR and Registration No.

Please check the Mac address (Serial No.) and Registration No. on the rear panel of the system. Registration No. can be provided by manufacturer or distributor.

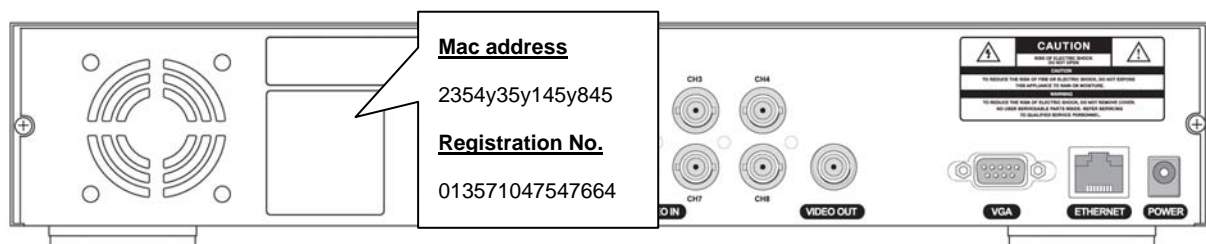

NOTE: If there is not registration No. on the system, please contact the distributor or manufacturer.

1-3. Registration at DDNS.

A. Please login <http://standalone4ch.com> and join member.




Enter an ID (which must be more than 4 and less than 12 characters, alpha and or numerical). Please check your ID with the "[check]" button to make sure the ID you choose is available. Choose your Password (which also must be more than 4 and less than 12 characters, alpha and or numerical). Confirm your (Password). Enter your Name and E-Mail address. The DDNS Service Administer will send a confirmation e-mail to the Subscriber's e-mail address, so please enter your e-mail address correctly.

B. Press Registration and register DVR as bellows,



Input MAC Address and Registration that you checked from the rear of DVR. And input Domain Name and press [check] to see if Domain name is usable or not.

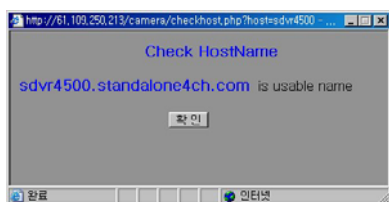

NOTICE

ID and password of registration DDNS is not the same as “Domain name”.

You may use alpha and numerical characters as well as hyphens for your Domain name. (i.e. [A~Z], [a~z], [0~9] or [-] for your domain name and it is case sensitive).

C. Press List and check the status of registration.

Camera & Server List		
MPRG4 CAMERA & SERVER		
:: My List		[Info change] [Delete]
	Host Name	Status
	http://teleeye.standalone4ch.com	

⌘ elapsed time since last update


	Less than 5 minutes
	5 to 20 minutes
	More than 20 minutes
	No update history

Status	Specification
	Elapsed time since last update is Less than 5 minutes
	Elapsed time since last update is more than 5 minutes and less then 20 minutes
	Elapsed time since last update is more than 20 minutes
	No update history


2. Network access using Domain name

If DDNS registration is successful, you can access your DVR via the provided Network Client S/W.

A. Run Network Client S/W program and click the “connect” button.

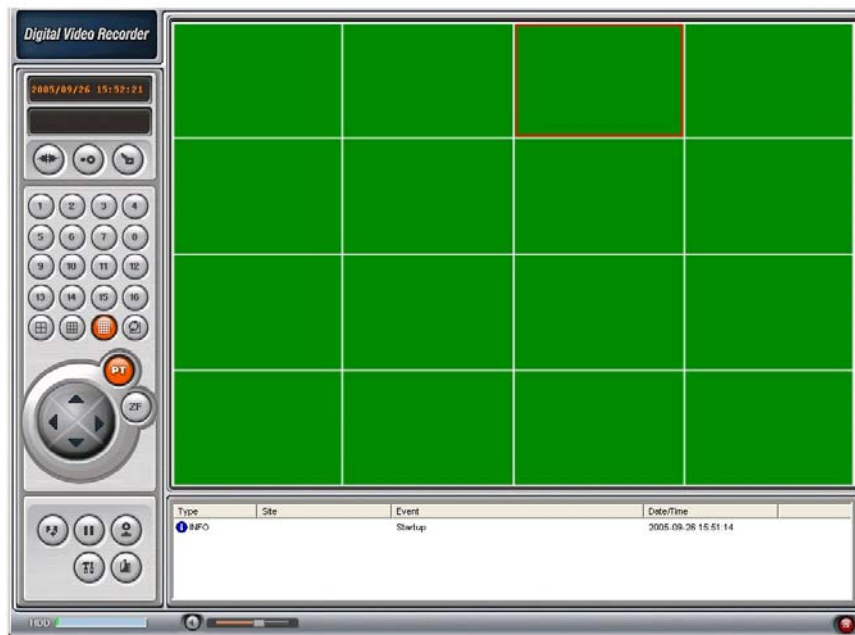

B. Enter your domain name instead of IP address in the “IP Address” field.

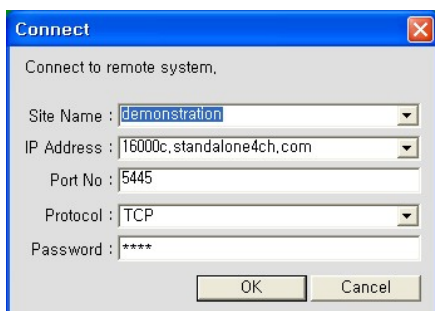

C. Enter the Port no, Protocol and Password in each filed.