

clarisonic

PLUS

FACE AND BODY
SONIC CLEANSING

EN User Guide



FIG. 1. CLARISONIC® PLUS

EN

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

READ ALL INSTRUCTIONS BEFORE USE

DANGER – To reduce the risk of electrocution:

1. **Do not** place or store the charger where it can fall or be pulled into a bathtub or sink.
2. **Do not** place the charger in or drop the charger or plug into water or other liquid. Charger unit is not for immersion or for use in the shower.
3. **Do not** reach for a charger or plug that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
2. Use this product only for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.
3. Keep the cord away from heated surfaces.
4. Never use while sleeping or drowsy.
5. Do not use outdoors or where oxygen is being administered.

Never operate the Clarisonic brush handle if it is damaged. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.

SAVE THESE INSTRUCTIONS

The handle and charger have no serviceable parts.

The supply cord cannot be replaced. If the cord is damaged, the charger must be unplugged and replaced.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

For further details please see our website.

EN

IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic. Refer to our website for more information.

We recommend that you **do not** share brush heads.

We recommend that you start with one of the Clarisonic cleansers that have been optimized for gentle daily use with Clarisonic Skin Cleansing Systems. For more information about Clarisonic cleansers please visit our website. **Do not** use the Clarisonic with jagged exfoliating particles such as shells. Clarisonic brushes may be used with soft, rounded exfoliating particles.

Using the Clarisonic to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water. This product uses magnets.

Treatment of electrical and electronic equipment at end of life applicable in the European Union and other European countries with selective collection systems:



This product should not be treated as household waste but should be handled at a designated collection point for the recycling of electrical and electronic equipment. Please contact your local authority for further details of your nearest designated collection point.

FIG. 1. CLARISONIC PLUS

- | | |
|---|--|
| A HANDLE | E SPEED INDICATOR |
| B BRUSH HEAD  | F BATTERY INDICATOR  |
| C ON/OFF BUTTON | G CHARGING CRADLE  |
| D SPEED BUTTON  | |

INSTRUCTIONS FOR THE USE OF CLARISONIC PLUS AND CLEANSER

Prior to the first use, charge the Clarisonic handle for 24 hours.

- Remove eye makeup by hand.
- Apply cleanser directly to moistened skin or to a damp brush head.
- Push the on/off button to turn on your sonic cleansing system.
- Select desired speed. 
- Follow T-TIMER prompts while gently moving brush head in small circular motions. 
- The Clarisonic will automatically shut off after the cleansing cycle.
- Rinse skin thoroughly to remove excess cleanser.


The Clarisonic handle is waterproof for use in the shower or bathtub. Refer to the IMPORTANT SAFEGUARDS section (in this User Guide) regarding the charger.

NOTE: Keep brush head flush to the skin. Pressing too hard will impede the motion and reduce effectiveness.

REPLACING THE CLARISONIC BRUSH HEAD

- To remove the brush head: 1) Grip the brush head firmly, then push and twist it counter-clockwise; 2) Pull the head away from the handle
- To attach the brush head: Push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

Tip: Use the brush head cap to easily remove and attach the brush head with a simple twist.

 We make a variety of interchangeable brush heads, uniquely designed and engineered for specific skin types or conditions. For more information visit our website.

FEATURES OF YOUR PLUS

3 SPEED SETTINGS FOR FACIAL CLEANSING

Speed is indicated both audibly and visually. To change speeds, press the speed button while the Clarisonic PLUS is on. The factory setting is low speed.

Speed	Audible indication	Visible indication
High	5 ascending beeps	upper red light on
Normal	3 ascending beeps	lower red light on
Low	3 descending beeps	no red lights on


BODY SETTING

When the Body Brush Head is installed, press the speed button to switch between the two body settings: constant & pulsating (indicated visually).

Body Setting indication	Audible indication	Visible
Constant only	no	upper red light
Pulse only	no	lower red light

CLEANSING TIMER (T-TIMER)

For even and thorough cleansing of your face, the PLUS features a proprietary T-TIMER that beeps and pauses momentarily during your cleansing cycle, to indicate it is time to move to another part of your face. We recommend the one-minute factory default setting: 20 seconds on your forehead, 20 seconds on your nose/chin, and 10 seconds on each cheek.

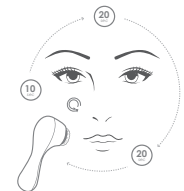

T-TIMER settings for facial cleansing are indicated by different audible sequences. To change the setting, press and hold the on/off button for 2 seconds. To change to a different setting, release the on/off button, then press twice and hold.

T-TIMER settings for facial cleansing

Audible indication	Cleansing duration	T-TIMER beeps
1 long beep & 2 short beeps	2 minutes	at 40, 80, 100 seconds
1 long beep only	2 minutes	none
1 long beep & 1 short beep	1 minute (factory default setting)	at 20, 40, 50 seconds

EN

With optional Body Brush Head attached

Audible indication	Cleansing duration	T-TIMER beeps
No beeps	3 minutes	none

To **pause** the cleansing cycle for up to 30 seconds, press the on/off button. The red lights flash in pause mode. To resume, press the on/off button.

CHARGING

Place your PLUS in its charging cradle (brush head towards cradle) overnight to recharge it. Allow 24 hours for a full charge. A full charge allows up to 30 minutes of use, and about 20 minutes of use with the optional Body Brush Head. The green lights on the back of the handle indicate charge level. When the battery is low, the brush handle will beep immediately after use to alert you to place it in the cradle for charging.

UNIVERSAL VOLTAGE CHARGING CRADLE for worldwide use

Compatible with international and domestic outlets (100-240 Volts AC; 50/60 Hz) with the respective country plug adapter.

If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.

CARING FOR YOUR CLARISONIC

To keep your Clarisonic in optimum condition, care for it as follows: Do not use abrasive cleaners or chemicals to clean any part of the Clarisonic. Do not put any part of the Clarisonic in a dishwasher.

HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof.

INFREQUENT USE: The Clarisonic handle should receive a charge occasionally. If you rarely use the handle, charge it every 3 months to maintain its charging capability.

EN

BRUSH HEADS



Brush heads need to be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

CLARISONIC CUSTOMER SERVICE INFORMATION

For general inquiries please visit our website clarisonic.com/customerservice or contact your in-country customer service team.

Australia:

Clarisonic is a part of the Luxe Division of L'Oréal Australia Pty Ltd. For general customer service inquiries, please visit www.clarisonic.com.au, contact Consumer Affairs by telephone 1300 820 430 or email luxuryproductsadvisory@au.loreal.com.

Manufactured by:

clarisonic

Pacific Bioscience Laboratories, Inc.
Redmond, WA 98052 USA

www.clarisonic.com/customerservice

© Pacific Bioscience Laboratories, Inc. 2013.

All rights reserved. Clarisonic is a registered trademark of Pacific Bioscience Laboratories, Inc.

Distributed by:

L'Oréal Australia Pty. Ltd. 564 St. Kilda Road, Melbourne, Vic 3004 Australia

MADE IN USA

PBL07315_EN

