

7.0 Brand/Model Chart

Brand	Code No.	Brand	Code No.	Brand	Code No.
Aikira	138	Hitachi	39, 50, 51, 52, 53, 120	Panasonic	47, 61, 62, 63, 64, 65
Aircon	42, 57, 58	Hualing	37, 70	Panda	28
Apton	67	Huifeng	73	Philco	41
AUX	21	Linycin	70	Samsung	49, 102, 111, 112, 119, 135
Chang Hong	80, 87, 88, 89, 101	Kang Li	43	Sanyo	45, 59, 60, 80, 81, 82, 83, 87, 88, 89, 90, 91, 92, 93, 94, 95, 99, 100, 101, 105, 130, 131, 132, 133, 134
Chigo	42, 57, 58	Kelon	12, 13, 14, 96	Shangling	70
Chuanhua	37, 73	Kolin	44	Sharp	7, 8, 66, 96, 97, 98, 110
Chunlan	19, 103, 104	Konka	70	Shinco	22
Conrowa	37,70,73	Lennox	69, 121, 15, 18	Shining	70
Daewoo	70	LG	17, 116, 117	Siemens	46
Daikin	0, 1, 2, 6, 11, 26, 29, 30, 31, 32, 33, 126, 127	Midea	54, 55, 56, 73	Tadiran	54
Fujitsu	25, 27, 34, 122, 123, 124, 125	Midea-Toshiba	48	TCL	24
Galanz	4, 70, 118	Miller	40, 42, 54, 55, 56, 57, 58,	Toshiba	71, 139
General	16, 25, 27, 34	Mirage	15, 18, 69, 121	Trane	3, 137, 138
Gree	15, 18, 69, 107, 108, 121	Mitsubishi Electric	35, 37, 70, 106, 140	Voltas	4
Guangda	37, 73	Mitsubishi Heavy	20, 36, 38, 42, 73, 74, 75, 76, 77, 78, 79, 84, 85, 86, 128, 129	Xileng	103
Haier	23, 109, 113, 114, 115, 136	National	0	York	15
Hisene	9, 10, 68	NEC	80, 81, 82, 83, 88, 89, 90, 91, 92, 93, 94, 95, 99, 100, 101, 105, 130, 131, 132, 133, 134	Yutu	70

Please note – different models work on different frequencies. Please choose the brand and enter the codes until the remote controller connects. If it does not connect or your brand is not listed, please contact Customer Support on 0800 LINK HELP (NZ) or 1800 LINK HELP (Australia)

LE130 REMOTE CONTROLLER FOR SPLIT-TYPE AIR CONDITIONERS USER GUIDE



CONTENTS

Features	1.0
Operation Guide	2.0
Power	2.1
System Setup	2.2
Changing Modes	2.3
Setting Temperatures	2.4
Setting Fan Speed	2.5
Setting Swing	2.6
Z-Wave	3.0
Z-Wave Setup	3.1
Enrolling Z-Wave	3.2
Un-enrolling Z-Wave	3.3
Setting Swing	2.6
Battery Level Indicator	4.0
Remote Controller Holder	5.0
Reset	6.0
Icon Reference Chart	7.0
Brand/Model Chart	7.0



1.0 Features

The Schlage LE130 Universal Remote Controller for split-type systems operates in two ways;

1. A standard remote controller, able to operate a wide range of brands (refer to Brand/Model Chart)
2. Through Z-Wave on the Schlage LiNK system, able to be operated remotely via a computer or smart phone

Please read through the instructions before use.

2.0 Remote Controller Operation Guide

2.1 Power on/off

- Use the red button to turn on or off the unit
- While OFF only the Room Temperature and Type Number will display on the LCD screen
- While ON the Set Temperature, Working Mode, Room Temperature and Z-Wave (if applicable) icons will display on the LCD screen

2.2 System Setup (for Z-wave setup, refer to 3.1)

- To enrol the universal remote controller to your split-type unit:
 - a. Turn the Universal Remote Controller on
 - b. Press and hold the SET button for 3 seconds. The icon "TYPE" will flash
 - c. Scroll to select the code relating to your brand of system (refer to Brand/Model Chart)
 - d. Press the SET button to select your brand. This code number will display on the screen and can be changed at any time by repeating the above steps

2.3 Changing Modes*

- Press the MODE button to change between AUTO, COOL, DRY, FAN and HEAT modes

2.4 Setting Temperature*

- Use the UP or DOWN buttons to set the temperature between 16°C and 32°C

2.5 Setting Fan Speed*

- The fan speed can be set to AUTO, LOW, MEDIUM or HIGH

2.6 Setting Swing Function

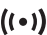
- Press the SWING button to turn on or off

3.0 Z-Wave

(Remote Management Capabilities)

The below directions apply to enrolling the remote controller onto the Schlage LiNK system. If you are enrolling onto a different system, please consult the applicable user guide.

3.1 Z-Wave Enrolment

- a. Refer to the Schlage LiNK Bridge and Setup User Guide to aid in enrolling the remote controller on the bridge
- b. On the remote controller press and hold the SET and FAN buttons simultaneously for 3 seconds. The LED light will flash 3 times.
- c. Once the Universal Remote Controller has been successfully enrolled onto the LiNK system, the Z-Wave icon  will appear on the screen

3.2 Z-Wave Un-Enrolment

- a. Refer to the Schlage LiNK Bridge and Setup User Guide to un-enrol the remote controller on the bridge
- b. On the remote controller press and hold the SET and FAN buttons simultaneously for 3 seconds. The LED light will flash 3 times
- c. Once the Universal Remote Controller has been successfully un-enrolled from the bridge, the Z-Wave icon will disappear from the screen

4.0 Batteries and Battery Level Indicator

- There are four indication levels;

Full 

Good 

Low 

Empty 












5.0 Remote Controller Holder

- Install the remote controller holder in a place where the signal can be received by the unit
- When the remote controller is not used, place it in the holder to ensure communication between the remote controller and air conditioning unit

6.0 Reset

- Gently press the RESET button with a thin instrument once to reset all settings to default settings
- The Z-Wave and Brand Codes will not reset

7.0 Icon Reference Chart

Icon	Name / Description
	Dry Mode
	Auto Mode
	Cool Mode
	Fan Mode
	Heat Mode
	Temperature Set
AUTO	Fan speed Auto
	Fan speed (low-medium-high)
TYPE 888	Library Code Number
	Room Temperature
	Infra-Red transmission
	Z-Wave Connected
	Battery Level

* The functionality of these settings will depend on the functions available on your heat pump/split system