

VAXCARE

Please register your warranty. Send in your completed Warranty Card.

If you require any further assistance or advice about any VAX please call VAXCARE on

1300 36 4040 (Australia - cost of a local call)
and **0800 800 900** (NZ)



VAX Appliances (Australia) Pty Ltd
A.C.N. 009099736

296 Victoria Road Malaga Western Australia 6090.

EMAIL: vaxcare@vax.com.au

WEBSITE: www.vax.com.au

vax AUST. & NZ BRANCHES

• NSW/ACT

Unit 2, 239 Beaconsfield St,
Milperra, NSW 2214
Telephone: (02) 9792 8900
Facsimile: (02) 9792 8911

• VICTORIA/TASMANIA

Unit 3, 46 Burgess Road,
Bayswater North, VIC 3153
Telephone: (03) 9761 7160
Facsimile: (03) 9761 7175

• SOUTH AUSTRALIA/ NORTHERN TERRITORY

Unit 3, 75-77 Grange Road,
Welland, SA 5007
Telephone: (08) 8340 2222
Facsimile: (08) 8346 7933

• QUEENSLAND

186 Kerry Road,
Archerfield, QLD 4108
Telephone: (07) 3216 7350
Facsimile: (07) 3216 7375

• WESTERN AUSTRALIA

296 Victoria Road,
Malaga, WA 6090
Telephone: (08) 9247 8100
Facsimile: (08) 9247 8192

• VAX APPLIANCES NEW ZEALAND

27 Clemow Drive
Mt Wellington, Auckland
Telephone: (09) 5736220
Facsimile: (09) 5736224
Email: vaxnz@vax.co.nz



www.vax.com.au

Vaxcare:
AUST: 1300 36 4040
NZ: 0800 800 900

Hunter

V-074



Please read carefully before using
the cleaner. Always fully extend
the mains cable before use.

Instruction Manual

Important Safety Instructions

When using this electrical appliance, basic precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

IMPORTANT: The manufacturer will not accept responsibility for damage caused when the appliance is not used according to the instructions, or for uses other than those for which it was intended.

To reduce the risk of fire, electric shock or injury:

- **Before use, always fully extend the power cord but not beyond the yellow mark.**
- **WARNING: INJURY COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
- Do not leave appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- This appliance is not intended for use by young or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to your Authorised Vax Service Agent for service.
- Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- **To prevent a whipping action, when rewinding the power cord allow cord to run through palm of hand. Rewind 1-1½ metres at a time.**

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not attempt to service the unit while appliance is plugged in.
- Do not use vacuum to pick up water or any wet materials.

VAXCARE Service & Help AUSTRALIA 1300 36 4040 NEW ZEALAND 0800 800 900

If you have any queries or concerns about using your Vax, call VAXCARE. Please make a note of the serial number and model number of the appliance before calling. (Aust only: Mon-Fri. 10.00am to 6.00pm. EST) Calls are charged at the local rate. An answerphone is available outside of these hours.

There are over 300 approved Vax Service Agents in Australia and New Zealand. For the nearest Service Agent, please refer to your Vax warranty or call VAXCARE or visit www.vax.com.au

Technical Specification

Voltage: 220-240V/50Hz
Wattage: 2000 watts
Filters: Air intake - washable
Air outlet - non washable HEPA
Weight: 9kg
Part No: 72000

Subject to technical change without notice.

Dust Disposal

Stop the unit and disconnect the suction hose.

Dust Bag Replacement

When the dust bag is full, replace it. Open the front cover, remove the paper dust bag and replace with a new one. If a cloth bag is used, clean by thoroughly shaking to release dust and dirt particles, then put it back into the machine.



Filter Maintenance

Air Intake Filter - Washable

The air intake filter is located in the dust bag compartment and is positioned directly behind the dust bag. To access the filter, the front cover must be raised.

Air intake (motor) filter (pullout)



When the air intake (motor) filter is dirty, remove the filter and wash carefully in luke warm water. Allow the filter to dry completely before replacing it. Do not clean filter in a washing machine. Do not dry filter with a hair dryer.

Washing: A severely soiled or clogged filter should be thoroughly washed with fresh tepid water.

Use a mild detergent if required. Never wash the filter with boiling water or expose it to an open flame to dry.

Drying: Allow filter to air dry. Do not use dryers of any description. Never insert the filter unless it is completely dry.

Air Outlet (HEPA) Filter - Non Washable

Air outlet grill lock (Detach the grill and remove the HEPA filter)



NOTE:

The pleated HEPA filter cannot be washed and reused. When dirty it must be replaced.

Replacement Dust Bags & Filters

Replacement dust bags and filters are available from your Vax stockist or Vax direct. Phone Vaxcare or visit: www.vax.com.au

Parts & Function

Cord & Plug

When unplugging the power cord, always use the plug. Do not pull by the cord.



On/Off Switch

Press the switch to start the motor. To stop the motor, press the switch again.



Power Control

Set the POWER CONTROL to MAX for maximum suction. In the MIN position suction power is decreased.



Suction Hose Stopper

Insert the suction hose connector all the way up to the stopper. To detach, press the hose stopper and pull the hose up and away from machine.



 
Cord Rewind

To rewind the cord back into the unit, press the cord rewind button.



To rewind the power cord, press the cord rewind button with one hand and guide the power cord with the other hand. Rewind 1-1/2 metres of cord at a time. This will prevent the cord whipping, which could cause damage or injury

Parts & Accessories

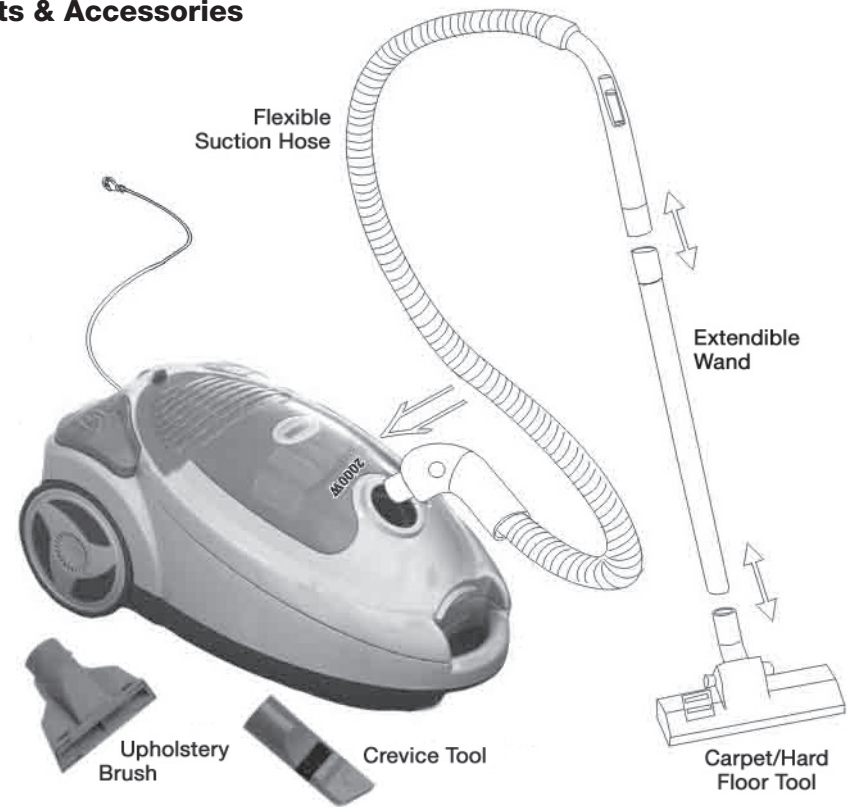

Do Not Vacuum the Following Items

Do not vacuum needles, drawing-pins or string.



Do not use to vacuum lighted matches, burning cigarette ends or hot ash.



Don't use the appliance to vacuum liquid.



WARNING

Do not run the appliance over the power cord.



Do not set the appliance near heater.



Do not obstruct the air intake and outlet vents.

 


Operations

Power Cord



Before using the appliance, fully extend the power cord but not beyond the yellow mark and insert the plug into power socket.

When rewinding the power cord guide it with one hand. Rewind 1-1½ metres of cord at a time. This will prevent the cord from whipping which could cause damage or injury.

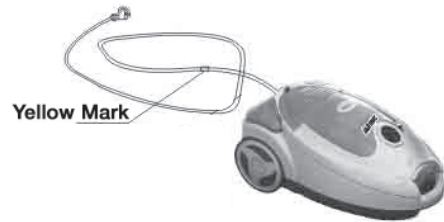

Fitting the Extension Tube

  Fitting the extension tube, suction hose and floor tool.

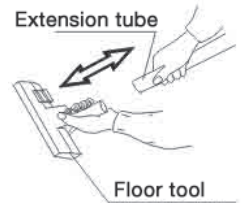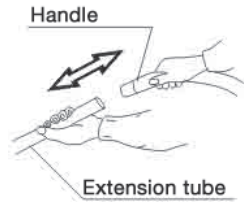

Connecting the Suction Hose

Insert the suction hose into the air intake duct on the top of the appliance and press until it clicks into position.



Switching On

Insert the plug into the power socket. Press the on/off switch.



 
Suction Control

Adjust the power control setting for desired vacuuming operation. Use of the air control valve will further regulate the suction power.



Vacuum Air Control Valve

In some instances the vacuuming power of the cleaner may be too strong. In these cases, use the vacuum air control valve (on the handle) to regulate the vacuum suction power. Slide the valve open to reduce the suction power.

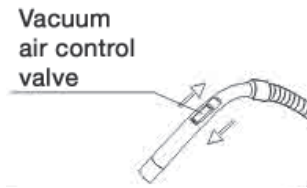


Tools and Accessories

Floor Tool

The floor tool has a lever for two positions.

 HARD FLOORS: For vacuuming wooden floors, tiles, linoleum or vinyl covered floors - use with bristle down.

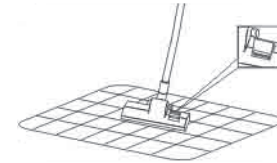

CARPETS & RUGS: For vacuuming carpets and rugs - retract bristles.



Attachments

Crevice Tool

For vacuuming sills, narrow openings, edges and gaps.



Upholstery Brush

For vacuuming upholstery and delicate items.

