

Operating instructions



for condenser tumble dryer T 7944 C

To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before it is installed and used for the first time.

en - AU, NZ

M.-Nr. 07 850 910

Caring for the environment

Disposal of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposal of your old appliance or machine

Electrical and electronic appliances / machines often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance or machine. Therefore, please do not dispose of your old machine or appliance with your household waste.



Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.

It should be unplugged or disconnected from the mains electricity supply by a competent person.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

Energy saving tips

To avoid unnecessarily long drying times and high consumption of energy:

- Make sure that your laundry is thoroughly spun before drying.

The higher the spin, the greater the savings that can be made in energy and time during drying.

- Load according to the optimum amount of laundry recommended for the programme being used (see Programme chart).

Underloading is uneconomical. Overloading gives a poorer quality of drying and may cause unnecessary creasing.

- Make sure the room in which the dryer is located is well ventilated.
- Make sure the fluff filters are clean before using the dryer.
- Check the condenser unit from time to time and clean it when necessary.

Caring for the environment	2
Warning and Safety instructions	6
Operating the tumble dryer	15
Control panel	15
Notes on laundry care	17
Care symbols	17
Tips on drying	17
How to dry correctly	18
Brief instructions	18
Extra options/Delay start	21
Extra options	21
Low temperature	21
Buzzer	21
Delay start	21
Programme chart	22
Changing the programme sequence	25
Once a programme has started	25
- changing the programme	25
- cancelling the programme and then selecting a different programme	25
- cancelling the programme and then removing the laundry	25
Changing Delay start	25
Adding or removing laundry after a programme has started	25
Time remaining	25
Electronic system lock	26

Contents

Cleaning and care	27
Emptying the condensed water container	27
Cleaning the fluff filters	28
Cleaning them whilst dry	28
Cleaning them with water	29
Cleaning the tumble dryer	29
Cleaning the condenser unit	30
Removing the condenser unit	30
Checking the condenser unit	31
Cleaning the condenser unit	31
Replacing the condenser unit	32
 Problem solving guide	 33
Problem solving guide	33
Check and fault messages in the display	33
An unsatisfactory drying result	36
Other problems	37
Changing the lamp	39
 After Sales service	 40
Future updates (PC)	40
Optional accessories	40
 Installation and connection	 41
Front view	41
Rear view	42
Installation site	42
Transporting the machine to its installation site	42
Washer-dryer stack	42
Levelling the machine	43
Room ventilation	43
Before moving the tumble dryer again (e.g. when moving houses)	43
External condensed water outlet	44
Arranging the drain hose	44
External drainage via a sink or gully	45
Installation conditions requiring a non-return valve	45
Electrical connection	47

Consumption data 48

Technical data 49

Programmable functions 50

Extending the range of the drying level for the "Cottons" programme. 50

Extending the drying level for the "Minimum iron" programme 51

Anti-crease setting 52

Altering the volume of the buzzer 53

Extending the drying level for the "Automatic plus" programme 54

Extending the cooling down time 55

Standby 56

Memory function 58


Clean out airways indicator 59

Keypad tone 60

Adjusting the dryer's electronics for very soft water 61

Extending the drying level range. 62

Warning and Safety instructions

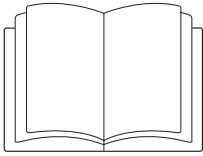

► It is **essential** to read these instructions.

This tumble dryer conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the tumble dryer, please read these instructions carefully before using it for the first time. They contain important information on its safety, installation, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

► This tumble dryer is designed for domestic use and for use in similar environments by guests in hotel or motel rooms, bed & breakfasts and other typical living quarters. This does not include common/shared facilities or commercial facilities within hotels, motels or bed & breakfasts.

► This tumble dryer must only be used to dry items which have been washed in a water solution and which are marked on the manufacturer's care label as being suitable for tumble drying. "Dry cleaning kits" for freshening up garments in a tumble dryer are increasingly available on the market. If using, do so at your own risk, and follow the instructions provided on the packaging. Any other usage is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation of the tumble dryer.

Warning and Safety instructions

- ▶ The tumble dryer is not intended for outdoor use.
- ▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they are supervised whilst using it or have been shown how to use it correctly by a person responsible for their safety.
- ▶ This tumble dryer must not be installed and operated in mobile installations (e.g. on a ship).

Safety with children

- ▶ Keep children away from the tumble dryer at all times. It is not a toy! To avoid the risk of injury do not allow them to play on or near it or to play with its controls. Supervise children whilst you are using it.
- ▶ Older children may only use it if its operation has been clearly explained to them, and they are able to use it safely, recognising the dangers of incorrect use.

Warning and Safety instructions

Technical safety

► Before setting up the tumble dryer, check it for any externally visible damage.

Do not install or use a damaged tumble dryer.

► Before connecting the tumble dryer, ensure that the connection data on the data plate (voltage and connected load) match the mains electricity supply. If in any doubt, consult a qualified electrician.

► The electrical safety of this tumble dryer can only be guaranteed when continuity is complete between it and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

► Do not connect the tumble dryer to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the tumble dryer (e.g. danger of overheating).

► Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele approved service technician. Ensure current is not supplied to the tumble dryer until after maintenance or repair work has been carried out.

► Faulty components must only be replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the tumble dryer be guaranteed.

Warning and Safety instructions

- ▶ If the connection cable is faulty, it must only be replaced by a Miele approved service technician to protect the user from danger.
- ▶ In the event of a fault or for cleaning purposes, the tumble dryer is only completely isolated from the electricity supply when:
 - it is switched off at the wall socket and the plug is withdrawn, or
 - it is switched off at the mains, or
 - the mains fuse is disconnected, or the screw-out fuse is removed (in countries where this is applicable).
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the tumble dryer and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the warranty.
- ▶ Do not make any alterations to the tumble dryer, unless authorised to do so by Miele.

Warning and Safety instructions

Correct use



Caution! Risk of fire.

To avoid the possible danger of fire, please read these warnings carefully.



A clogged filter is a fire hazard!

The fluff filter must be cleaned after every programme.

- ▶ Remove all objects from pockets such as lighters and matches.
- ▶ To prevent the risk of fire, the following textiles must not be dried in this tumble dryer:
 - Items which have not been washed.
 - Items, such as workwear, which have not been thoroughly cleaned and which are still soiled with grease, oil or other deposits (such as cosmetics, lotions etc).

If items have not been thoroughly cleaned, there is a danger that these might ignite when heated, even after they have been removed from the dryer at the end of the programme.
 - Items that have been soiled with substances such as cooking oil, acetone, petrol, kerosene, spot removers, turpentine, waxes, wax removers and other chemicals (e.g. mops and floor cloths) should be washed in hot water with extra detergent before being dried in the tumble dryer.
 - Items which have been splashed with hair lacquer, hair spray, nail polish remover or similar substances.

Warning and Safety instructions

When washing such heavily soiled items, ensure that you use sufficient detergent and select a high temperature. If in doubt, wash the items several times.

► Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer.

The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat.

If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.

If it is unavoidable that fabrics contaminated with vegetable or cooking oil, or hair care products, be placed in a tumble dryer, they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

► To prevent the risk of fire, the following textiles or products must not be dried in this tumble dryer:

- Items which have been dry-cleaned (for example with a chemical treatment).
- Fabrics which contain a large proportion of rubber, foam rubber or rubber-like materials. For example, products made from latex foam rubber, shower caps, waterproof textiles, rubberised articles and items of clothing and pillows with foam rubber filling.
- Fabrics which contain padding or fillings (e.g. pillows, jackets). If these were damaged, the filling could get out with the risk of igniting in the dryer.

Warning and Safety instructions

► In many programmes, the heating phase is followed by a cooling down phase to ensure that the items are not too hot to handle when you remove them (this also avoids the danger of the laundry self-igniting). The programme is not finished until the cooling down phase is complete.

Ensure that you always wait until the end of the programme before removing the laundry.

► **Warning:** Do not switch the tumble dryer off before the end of the drying programme. If this was done, remove and spread out all items quickly so that the heat is dissipated.

► Fabric conditioner and similar products must be used according to the instructions on the manufacturer's packaging.

► The tumble dryer is not to be used if industrial chemicals have been used to clean it.

Warning and Safety instructions

- ▶ The dryer must not be used without the fluff filters in place or if the fluff filters are damaged in any way.
- ▶ The fluff filters must be cleaned regularly.
- ▶ The dryer must not be used without the condenser unit in place.
- ▶ The fluff filters must be thoroughly dried after cleaning. Damp or wet filters could cause operational faults.
- ▶ Do not install the tumble dryer in a room where there is a risk of frost occurring. At temperatures around freezing point the tumble dryer may not be able to operate properly.
There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and / or condensed water container. The ambient room temperature should be between +2°C and +35°C.
- ▶ If the water is drained externally through the drain hose instead of being collected in the condensed water container, make sure the drain hose is securely attached if you hang it in a sink or basin to avoid the hose slipping and the water causing damage.
- ▶ Condensed water is not drinking water.
It can cause health problems in both people and animals.
- ▶ Always keep the area around the tumble dryer free of dust and fluff. Dust drawn into the tumble dryer can cause blockages in the condenser unit over time.
- ▶ Do not let anyone sit or lean on the door, as this can cause the tumble dryer to tip up.

Warning and Safety instructions

► Always close the door after use. This way you will avoid the danger of:

- Children climbing onto or into the dryer or hiding things in it.
- Pets or other small animals climbing into it.

► The tumble dryer must not be hosed down.


Accessories

► Only use genuine Miele spare parts and accessories with this appliance.

If non-Miele parts are used, warranty, performance and product liability claims may be invalidated.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Control panel

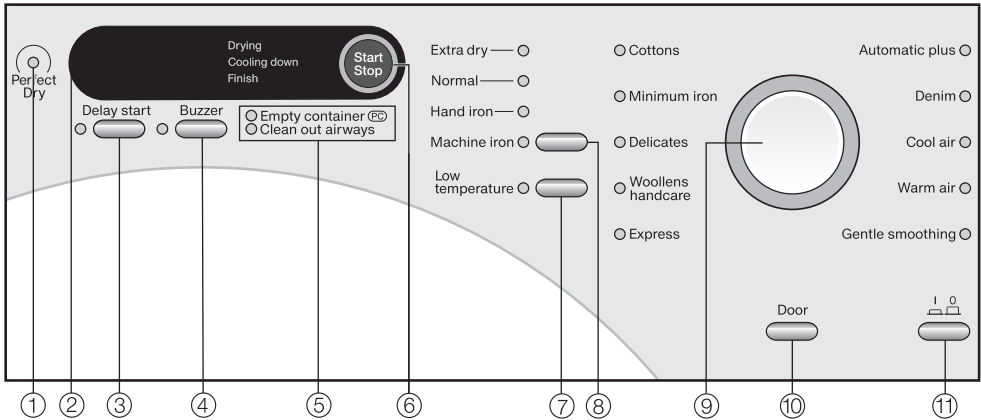

① **Perfect Dry** indicator light

For all drying levels. See the next page.

② **Display**

See the next page.

③ **Delay start** button

This button is used for:

- Delaying the start of a programme.
- Selecting *Warm air/Cool air*.

④ **Buzzer** button

An audible tone sounds at the end of the programme.

⑤ **Check lights**

See problem solving guide and After Sales service.

⑥ **Start/Stop** button

For starting the programme selected and cancelling a programme once it has started.

The button flashes when a programme is selected and then is on constantly when the programme has started.

⑦ **Low temperature** button

Delicate fabrics are dried at a lower temperature.

⑧ **Drying level** button

Indicator lights show the selected drying level.

⑨ **Programme selector**

Indicator lights show the selected programme.

⑩ **Door** button

Pressing this button will open the door even when the dryer is switched off at the mains.

⑪ **On/Off** button

For switching the machine on or off.

Operating the tumble dryer

The following information appears in the display:

- Programme duration.
- Programme sequence
 - Drying*
 - Cooling down*
 - Finish*
- Check and fault messages

The following functions are selected via the display

- Programme duration
 - Warm air, Cool air*
- Delay start

You can delay the start of a programme.

Once the Delay start time has finished, the programme begins automatically.

- Programmable functions

The programmable functions are used to alter the machine's electronics to suit changing requirements. See "Programmable functions" for more details.

Perfect Dry indicator light

The Perfect Dry system measures the laundry's residual moisture in programmes with drying levels and provides a more precise drying result.

After starting the programme, the electronics will measure the duration of the programme (Estimated time remaining). The *Perfect Dry* indicator light will flash during this time.

The programme duration will be shown after a short time and the indicator light will go out.

Once the selected drying level has been reached, the *Perfect Dry* indicator light will remain on until the end of the programme.

The *Perfect Dry* indicator light always remains dark during the following time controlled programmes: *Woollens handcare, Cool air, Warm air, Gentle smoothing*.

Programme duration / Estimated time remaining

The expected time will automatically be displayed (Estimated time remaining).

The following factors all affect the estimated time remaining: Residual moisture content after spinning; type of fabric; size of load; room temperature; fluctuations in power supply.

The electronics continually assess conditions in the tumble dryer and adjust the estimated time remaining for a more accurate reading. Because of this, the time displayed can alter during the course of a programme.

In the same way, programmes may finish early. This can happen with particularly fine fabrics, very small loads or if items were partly dry beforehand.

Care symbols

Drying	
	Normal/higher temperature.
	Reduced temperature: Select <i>Low temperature</i> for sensitive fabrics.
	Do not tumble dry
Ironing	
	Very hot.
	Hot.
	Warm.
	Do not iron.

Tips on drying

- See the "Programme chart" for maximum recommended loads for each programme.

Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

- Down-filled fabrics have linings which have a tendency to shrink, depending on the quality of the item. These fabrics should only be dried in the *Smoothing* programme.
- Pure linen should only be machine dried if specified as suitable by the manufacturer on the care label. Otherwise the surface of the fabric may become rough.
- Loopknit garments (e.g. T-shirts, underwear) have a tendency to shrink after the first wash. Therefore: To avoid further shrinking, do not overdry these fabrics. When buying loopknit garments, it is advisable to take their shrinkage properties into account.
- Creasing in minimum iron fabrics increases with the size of the load. This applies in particular to very sensitive fabrics (e.g. shirts, blouses). If in doubt, reduce the size of the load.
- Starched laundry can be dried in the tumble dryer. To achieve the usual finish, double the amount of starch should be used.
- New dark coloured garments should be washed separately from light coloured garments. Do not dry these together with light garments as they may lose their colour (also onto plastic components in the tumble dryer). Dark coloured fibres can also settle on light coloured garments and vice versa.
- Do not tumble dry loopknit garments! Spin garments for at least 30 seconds after washing.
- Open jackets so that they can dry evenly.
- Use the *Automatic plus* programme for drying mixed loads of cottons, colours and minimum iron fabrics.
- Woollen fabrics and wool blends tend to shrink and become matted if dried in a tumble dryer. These fabrics should only be dried using the *Woollens handcare* programme.

How to dry correctly

Brief instructions

The headings numbered (1, 2, 3 ...) show the operating sequence and can be used as a brief guide to using your machine.

1 Sort the laundry

Separate the washed laundry and sort it according to . . .

- . . . the drying level required,
 - . . . the type of fibre or weave,
 - . . . size,
 - . . . the moisture content after spinning.
- In this way an even drying result will be achieved.

⚠ Make sure that objects, e.g. detergent dispensing balls, have been removed from the laundry. They could melt and cause damage to the dryer or the laundry.

- Check seams and stitching to ensure that padding and linings are intact.
- Remove all objects from pockets such as lighters and matches.
- Fasten duvet covers and pillow cases to prevent small items from being rolled up inside them.
- Fasten zips, hooks and eyes etc.
- Tie fabric belts and apron strings.
- Sew in or remove underwiring from bras.

2 Switch on the tumble dryer

The tumble dryer may be switched on after loading, saving energy as the light will not come on.


- Switch on the dryer by pressing the  button.

3 Load the tumble dryer

- Press the *Door* button to open the door.
- Load the laundry loosely into the drum.

Do not overload the drum. See the "Programme chart" for recommended loads for each programme. Overloading can cause unnecessary wear and tear to the laundry and give a disappointing drying result.


- Before closing the door, make sure the fluff filter is correctly positioned in the door.

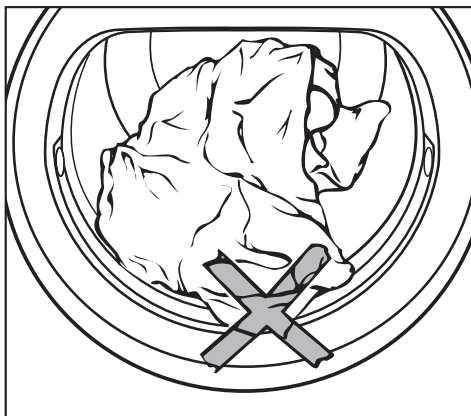

Check the laundry is right inside the drum so that it cannot get trapped or damaged when the door is shut.

- Shut the door either with a gentle swing, or lean against it and push it shut.

4 Select a programme

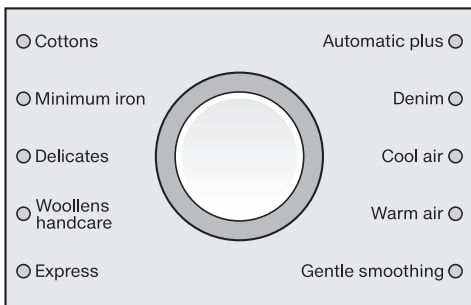


- Select the programme you want.

The relevant indicator light will come on. Indicator lights for drying levels or Extra options and times may also be displayed.

Programmes with drying levels

Using the *Cottons Normal Plus* programme is recommended for a mixed cotton load and is the programme used in energy consumption tests to AS/NZS 2442 (Refer to www.energyrating.gov.au website for consumption data).

- *Cottons, Minimum iron, Delicates, Express, Automatic plus, Denim*

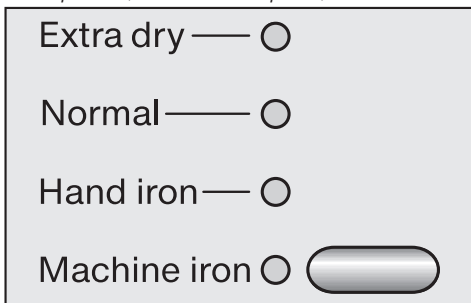

- Press the relevant button repeatedly until the indicator light comes on (with almost all programmes).

Four drying levels can be selected with *Cottons* and *Express*. The selection of the other programmes is either limited or not changeable.

Tip:

You can extend the range of drying levels for some of the programmes (see "Programmable functions").

Woollens handcare, Gentle Smoothing

- this programme cannot be changed.

Select Cool air/Warm air duration

The indicator light for the *Delay start* button will flash when this function is selected.

- Press the *Delay start* button until the required time appears in the display.

Selectable functions:

- *Cool air*: 20 minutes up to 1 hour.
- *Warm air*: 15 minutes up to 2 hours.

5 Select any Extra options / Delay start

- By pressing the relevant button, you can select:
 - Low temperature, Buzzer, Delay start* (see "Extra options/Delay start").
 - Anti-crease* (see next page) is always switched on.

However: Delay start is not possible in combination with *Warm air/Cool air*.

How to dry correctly

⑥ Start the programme

The indicator light for the *Start/Stop* button will flash when a programme is being selected. The flashing indicates that a programme can be started.

- Press the *Start/Stop* button.

The *Start/Stop* button will now light up.

Perfect Dry only flashes/illuminates during programmes with drying levels. It remains dark during time controlled programmes (see "Operating the tumble dryer").

Note: The duration shown in the display is only an estimate and can change.

Before the end of a programme

The heating phase is followed by a cooling down phase (*Cooling down* lights up). The programme is not finished until the cooling down phase has been completed.

There is no cooling down phase with: *Woollens handcare*.

⑦ Remove the laundry when the programme has finished

0 and *Finished* will appear in the display to indicate that the programme has finished. The buzzer (if selected) will sound at intervals.

After the programme has finished, the drum will continue to rotate for 2 hours at intervals if the garments are not immediately removed. This reduces creasing.

There is no anti-crease with: *Woollens handcare*.

The dryer has a standby mode. If the *Start/Stop* button flashes slowly during

or after the programme, this is not a fault (see "Standby").

- Press the *Door* button.
- Open the door.
- Remove the laundry.

Check that all items have been removed from the drum. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

If the dryer is switched on at the mains and the door is opened, the drum lighting will come on. It will go out a few minutes later to save energy.

- Switch on the dryer by pressing the  button.
- Clean the fluff filters.
- Close the door.
- Empty the condensed water container (unless the dryer has been connected for external drainage).
- Check the condenser unit intermittently and clean if necessary (see "Cleaning and care").

Extra options

The relevant indicator light will come on when selected.

Low temperature

For all delicate or minimum iron fabrics with the  symbol on the care label (e.g. acrylic garments). The programme duration is longer.

On some programmes *Low temperature* is a standard part of the programme and so cannot be deselected.

Buzzer

A buzzer sounds (at intervals for a maximum of 1 hr) to let you know the programme has finished.

The buzzer will always sound when there is a fault, even if it has been switched off.

Delay start

The start of a programme can be delayed by 30 minutes up to 24 hours.

- Select a programme.
- Press the *Delay start* button repeatedly until the required delay period appears in the display.
 - The *Delay start* indicator light will flash.
 - The selection can be made in steps of 30 minutes up to **10h** and afterwards in one hour steps.
 - If you keep the *Delay start* button pressed in, the time will continue to increase up to **24h**.

To begin Delay start

- Press the *Start/Stop* button.
 - The *Delay start* indicator light will light up constantly.
 - Delay start counts down in one hour steps to **10h** and afterwards in minute steps until the programme starts.
 - The drum will turn briefly every hour to help prevent creasing.

To cancel or change Delay start

- Press the *Start/Stop* button to cancel Delay start.
- Press the *Delay start* button repeatedly until the required delay period appears in the display.
- Press the *Start/Stop* button to begin Delay start.

Add laundry

You can add laundry while Delay start is counting down:

- Switch the dryer off.
 - Opening the door before switching off the dryer first will cancel Delay start.
- Open the door and add laundry.
- Close the door and switch the dryer on.

Programme chart

Cottons		Max. load: 7 kg*
Extra dry, Normal		
Fabric type	Single and multi-layered cotton fabrics such as towels, bathrobes, T-shirts and underwear.	
Notes	– Select <i>Extra dry</i> for multi-layered and very thick fabrics. – Do not use <i>Extra dry</i> for loopknit fabrics (e.g. T-shirts, underwear), as they have a tendency to shrink.	
Low temperature	Low temperature (select this option for delicate fabrics with the  symbol on the care label).	
Hand iron, Machine iron		
Fabric type	Cotton and linen fabrics. for example: table linen, bed linen, starched laundry.	
Note	To prevent laundry from drying out, it should be rolled up until you are ready for ironing.	
Low temperature	Low temperature (select this option for delicate fabrics with the  symbol on the care label).	
Minimum iron		Max. load: 3.5 kg*
Normal, Hand iron		
Fabric type	Minimum iron items made of cotton, synthetic or mixed fibre, for example: dresses, trousers, skirts or table cloths.	
Low temperature	Low temperature (select this option for delicate fabrics with the  symbol on the care label).	
Delicates		Max. load: 2.5 kg*
Normal, Hand iron		
Fabric type	Delicate items made of synthetic fibres, easy care cotton or blended fabrics, e.g. shirts, blouses and evening wear with sequins and beading.	
Low temperature	Low temperature cannot be deselected.	

* Weight of dry laundry

Programme chart

Woollens handcare		Max. load: 2 kg*
Fabric type	Woollen fabrics.	
Notes	– This programme only fluffs up woollen garments. They are not dried completely by this programme. – Remove garments as soon as the programme has finished and leave to finish drying at room temperature.	
Low temperature	Low temperature cannot be deselected.	
Express		Max. load: 3.5 kg*
Extra dry, Normal, Hand iron, Machine iron		
Fabric type	Tougher fabrics with the care label  suitable for the <i>Cottons</i> programme.	
Note	Reduced programme duration.	
Automatic plus		Max. load: 5 kg*
Normal, Hand iron		
Fabric type	Mixed loads of garments suitable for the <i>Cottons</i> and <i>Minimum iron</i> programmes. Sort according to colour.	
Denim		Max. load: 3 kg*
Normal, Hand iron		
Fabric type	Denim garments, e.g. trousers, jackets, skirts or shirts.	
Low temperature	Low temperature (select this option for delicate fabrics with the  symbol on the care label).	

* Weight of dry laundry

Programme chart

Cool air		Max. load: 7 kg*
Fabric type	Any item which only needs airing.	
Warm air		Max. load: 7 kg*
Item	– "Voluminous" and multi-layered fabrics whose layers have different drying characteristics: e.g. jackets, pillows. – For drying individual items, e.g. bath towels, swimwear, tea towels and small loads.	
Note	Do not select the longest drying time to start with. Check the items as you are drying them to find the optimum time.	
Note	You can use the <i>Warm air</i> programme to help remove odours from cotton clothing which has been worn but is still clean (select a duration of between 1/2 and 1 hour). Items must be suitable for drying in a tumble dryer. Dampen the garments a little beforehand or add a fabric conditioner sheet. The Warm air programme will not be as effective at removing odours from any parts of the garments which are made of synthetic fibres.	
Low temperature	Low temperature (select this option for delicate fabrics with the  symbol on the care label).	
Smoothing		Max. load: 1 kg*
Fabric type	– Cotton and linen fabrics. – Minimum iron items made of cotton, synthetic or mixed fibres. For example: trousers, anoraks, shirts.	
Notes	– Suitable for dry and damp laundry/fabrics. – Smoothes out creasing caused during the spin cycle in the washing machine. – Remove garments as soon as the programme has finished so that they are easy to iron.	
Low temperature	Low temperature cannot be deselected.	

* Weight of dry laundry

Changing the programme sequence

Once a programme has started

- changing the programme

You cannot change to another programme once a programme has started (this prevents unintentional alterations).

You will need to cancel the current programme before you can select a new one.

- cancelling the programme and then selecting a different programme

- Press the *Start/Stop* button.

The items will be cooled down, depending on the temperature reached and how long they have been dried for.

If you press the *Start/Stop* button again during the cooling down phase, *Finish* will appear in the display.

- Press the *Door* button.
- Close the door.
- Select and start a new programme.

- cancelling the programme and then removing the laundry

- Refer to the following: "Adding or removing laundry after a programme has started".
- Switch the dryer off after closing the door.

Changing Delay start

- See "Delay start".

Adding or removing laundry after a programme has started

- Press the *Door* button.
- Open the door.



Danger of burning:

Do not touch the back of the drum when adding or removing items. The drum and the items can get very hot.

- Add or remove items as required.
- Close the door.
- Press the *Start/Stop* button.

Time remaining

Changes to the programme sequence can alter the estimated time remaining in the display.

Electronic system lock

The system lock prevents your machine being used without your knowledge.

You can switch on the system lock if required.

The dryer's electronics are then locked. The dryer can still be switched on but a programme cannot be started.

- If an attempt is made to start a programme, the indicator light for the *Low temperature* button will come on and the key symbol  will appear in the display.

The door is not locked and can be opened at any time.

Locking

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

❶ Press the *Low temperature* button and keep it pressed in up to step ❺.

❷ Press the  button.

The *Automatic plus* indicator light will come on.

❸ Slowly turn the programme selector three positions stage by stage in a clockwise direction. Each of the three programme indicator lights must come on one after the other.

❹ Now slowly turn the programme selector six positions stage by stage in an anti-clockwise direction. Each of the six programme indicator lights must come on one after the other.

The indicator light for the *Low temperature* button will flash and a key symbol  will appear in the display.

❺ Release the *Low temperature* button.

The system lock is activated.

- Switch the dryer off.

Deactivating the system lock

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

- The procedure is the same as for activating the lock. Repeat steps ❶ to ❺.

At step ❺ the indicator light for the *Low temperature* button will stop flashing and the key symbol  will go out.

The electronics are no longer locked.

Emptying the condensed water container


The condensed water will be collected in the condensed water container unless the appliance has been fitted with a drain hose (see "Installation").

Empty the condensed water container after every drying programme.


The *Empty out container* indicator light will come on if the maximum level of the condensed water container is reached.

The indicator light will go out when the door is opened and closed again.

 Close the door fully. Otherwise the door and the front panel of the condensed water container could suffer damage when pulling the container out.

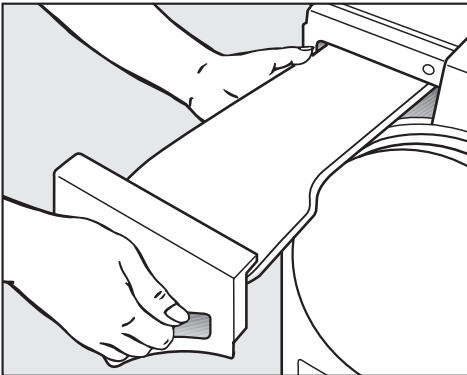

- Pull out the container.
- Hold it at the front and towards the back and keep it in a horizontal position when carrying it.

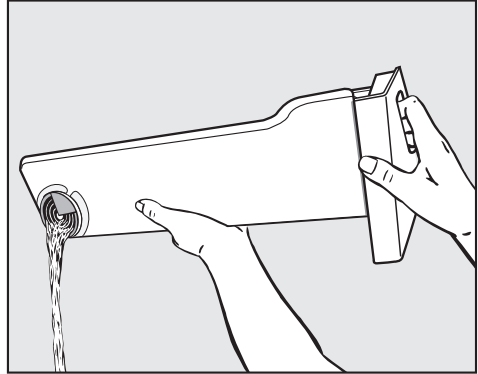

- Empty the container.
- Replace the container in the dryer.

 Condensed water should not be consumed. It could lead to health problems for people and animals.

Condensed water can be put to household use (e.g. in a steam iron or humidifier). To ensure that any residual particles of fluff in the condensed water are removed before use, pass it through a fine sieve or paper filter first.


Cleaning and care

Cleaning the fluff filters


The fluff which is created by the drying process is collected by the fluff filters in the door and the door opening. Clean the filters after **each** drying programme*.

Cleaning them whilst dry

Tip: You can also use a vacuum cleaner to remove the fluff.

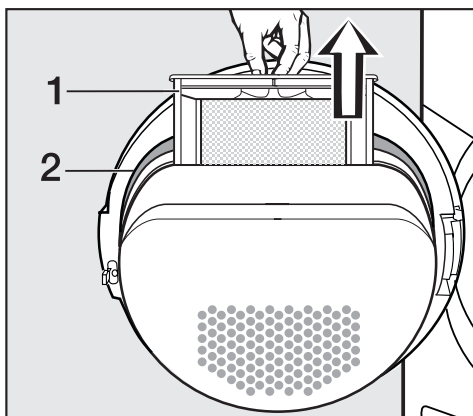


- Open the door and pull the fluff filter (1) out of the door as illustrated.

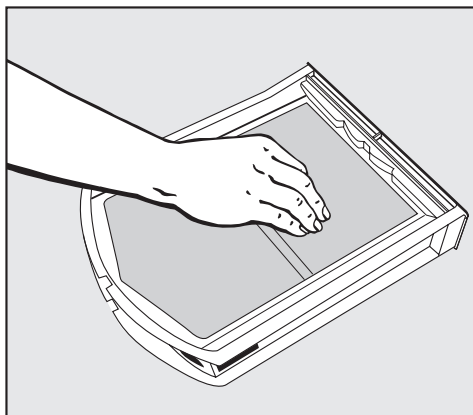

- Use your fingers to remove the fluff from the surface of the filter.

- Remove any fluff from the hollow part of the door opening. You could also use a cleaning brush which is available as an optional extra from your Miele Chartered Agent or from Miele, or use a vacuum cleaner.
- Also clean the door seal (2) with a damp cloth.
- Once clean, push the filter back into the door holder until it clicks into position. Ensure it is facing the correct way.

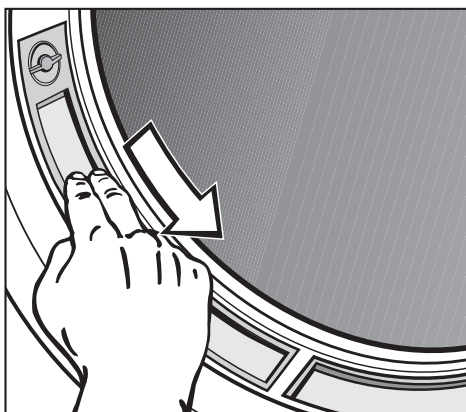

- Use your fingers or a vacuum cleaner to remove the fluff from the two fluff filters in the door opening.
- Close the door.

* Always check the fluff filters if the *Clean out airways* indicator light comes on.


 A clogged filter is a fire hazard!
The lint filter must be cleaned after every programme.

Cleaning them with water

If there is a great deal of compacted fluff on any of the filters, they can be removed and cleaned under hot running water.

- Open the door and pull the fluff filter out of the door as described previously.

The two filters in the door opening can also be removed if you need to clean them with water.

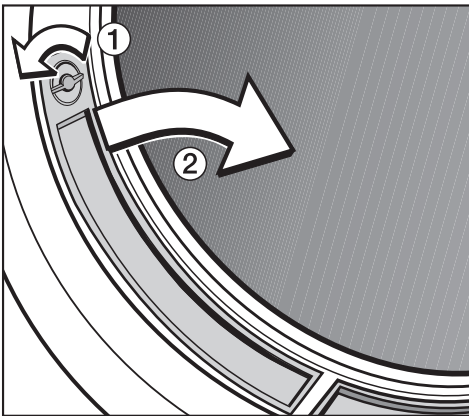

- Turn dial ① and pull the filter by the dial out of the door opening as shown ②. Do the same on the other side.
- Rinse all the filters under hot, running water.
- Then shake the filters until no more water droplets are visible.
- Dry the filters thoroughly with care.
- Clean the area underneath these filters, e.g. with a vacuum cleaner.

Do not replace them if they are damp or wet. Damp or wet filters could cause operational faults.

- Push the large filter back into the door holder until it clicks into position. Ensure it is facing the correct way.
- Replace the filters in the door opening by first inserting them at the bottom and then pressing them into place at the top.
- Lock both dials.

Cleaning the tumble dryer

Disconnect the machine from the mains electricity supply.

- Clean the housing and control panel with a slightly damp cloth and a mild detergent or soapy water.
- The drum and other stainless steel parts can be cleaned with a suitable proprietary stainless steel cleaner following the manufacturer's instructions.

Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts. The machine must never be hosed down.

- Dry all parts with a soft cloth.


Cleaning and care

Cleaning the condenser unit


Detergent residue, hair and fine fluff from the dryer can get through the fluff filters and block the condenser unit. Dust from the room in which the dryer is installed can also get into the condenser unit and cause a blockage.

Check the condenser unit at least twice a year. Always check it if the *Clean out airways* indicator light comes on. If the dryer is used frequently, then check the condenser unit after approx. 100 drying cycles. Clean it if necessary.


Removing the condenser unit

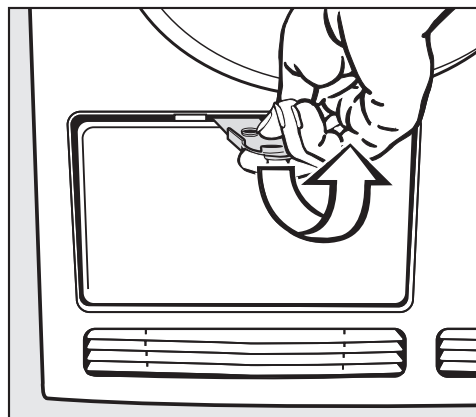


- Open the service panel.
- Now remove the panel by pulling it diagonally upwards and place it to one side.

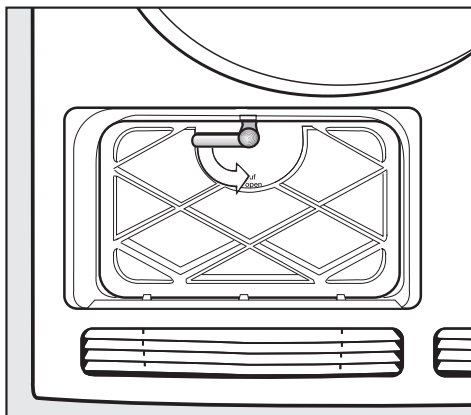

- Turn the lever on the inner cover downwards to the vertical position.
- Tilt the cover forwards.
- Remove it by pulling it diagonally upwards.

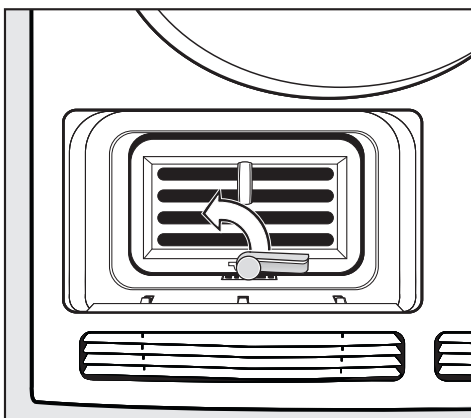


- Turn the lever on the condenser unit upwards to the vertical position.

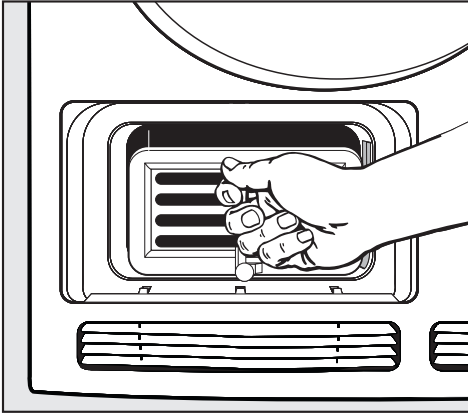

- Pull the condenser unit out of its housing by the handle.

Checking the condenser unit

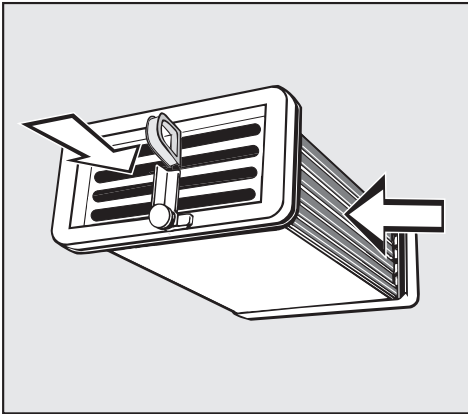

- Hold the condenser unit up to the light **as shown**.
- Check to see if there is any fluff inside it.
The arrows in the illustration above indicate where to look.

If you cannot see any fluff:


- Replace the condenser unit (see following page).

If you can see some fluff:

- Clean the condenser unit as described below.

Cleaning the condenser unit

- **When rinsing the condenser unit, make sure you position it as shown in the next two illustrations.**

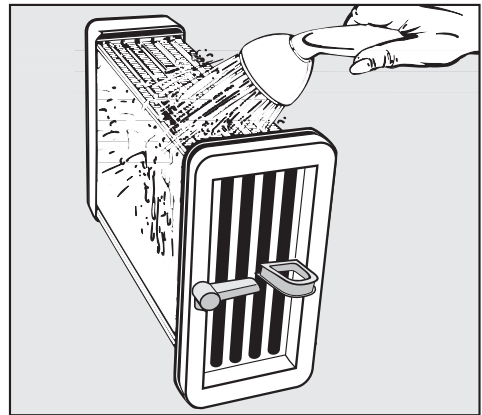

- Use a shower head or similar to rinse the unit out **as shown**.

Cleaning and care



- Then flush the unit through from the front.
- Check the condenser unit again for any visible fluff and if necessary flush it through again until it has all gone.
- Remove any soiling still visible inside the housing unit.
- Also make sure the rubber seals are clean.

The rubber seals must not be removed and must be free of kinks.
- Shake any excess water out of the unit until no more water droplets are visible.

Replacing the condenser unit

- With the handle facing upwards, push the condenser unit back into position in its housing.
- Turn the lever down to the horizontal position, making sure that the hook on the lever clicks into the groove.

When replacing the inner cover after cleaning, ensure that the rubber seal fits correctly into the groove.

- Replace the cover making sure the hooks locate correctly. Hold it at an angle and push it gently downwards.
- Then turn the lever upwards into the horizontal position to lock the cover.
- Replace the service panel and press the upper edge until it clicks into position.

It is important to ensure that both the condenser unit and the cover are correctly positioned and locked. Otherwise water may leak from the machine.

Problem solving guide

Most faults can be resolved by yourself. This will save time and money as a call-out charge will apply to customer service visits where the problem could have been rectified as described in these Operating instructions.

With the help of the following notes, minor faults in the performance of the appliance, some of which may result from incorrect operation, can be put right without a call-out being necessary. Please note:

 Repair work to electrical appliances must only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Check and fault messages in the display

Problem	Possible cause	Remedy
U-0 appears in the display. The Low temperature indicator light is flashing.	The system lock is activated.	If you wish to use the tumble dryer, the system lock needs to be deactivated (see "Electronic system lock").
The programme is cancelled. U and Finish appear in the display. The buzzer sounds.	This is not a fault. In some programmes, if the drum has been overloaded or underloaded, the programme will be cancelled. This can also happen if the items are already dry.	Use the <i>Warm air</i> programme to dry individual items. – Open and close the door.
The programme is cancelled. The buzzer sounds. Cooling down or Finish is flashing in the display.	There is no immediate cause.	– Switch the dryer off and then on again. – Start a programme. If the programme stops again and Cooling down or Finish flashes again, there is a fault. Contact Miele.

Problem solving guide

Problem	Possible cause	Remedy
The following flashes at the end of a programme: <i>[]...[]...[]...</i>	The programme has finished but the laundry is still cooling down.	You can remove the laundry and spread it out to allow the heat to dissipate, or leave it in the dryer to cool down more.
The <i>Clean out airways</i> indicator light comes on.	The dryer is not working efficiently or economically. Possible cause: Blockages due to fluff or detergent residues.	– Cleaning the filters is usually all that is required. However, if the message does not go out after you have cleaned the filters, then also check all the possible causes described under "The drying process goes on too long or even switches off". To delete the message: – Open and close the door while the dryer is switched on.
		The <i>Clean out airways</i> indicator light can be deactivated (see "Programmable functions").
The programme is cancelled. The <i>Clean out airways</i> indicator light comes on. The buzzer sounds.	See above for possible causes and their remedies.	To delete the fault message: – Open and close the door while the dryer is switched on. – Start a programme. – If this warning appears again, contact Miele.
The <i>Empty out container</i> indicator light comes on. The buzzer sounds.	The condensed water container is full or there is a kink in the drain hose.	– Empty out the condensed water container. – Check the drain hose. To delete the message: – Open and close the door while the dryer is switched on.

Problem solving guide

Problem	Possible cause	Remedy
The indicator light <i>Start/Stop</i> flashes slowly and the display is dark.	The dryer is on standby. This is a normal function and does not indicate a fault.	See "Programmable functions".
Some programmes won't start anymore. The indicator light for that programme doesn't light up anymore either.	There is no immediate cause.	– Switch the dryer off and then on again. – Select the programme that cannot be started. – If you still can't start the programme, there is a fault. Contact Miele.
The <i>Start/Stop</i> indicator light flashes/does not flash.	The flashing indicates that a programme can be started.	After the programme has started, the flashing will change to a constant light.

Problem solving guide

An unsatisfactory drying result		
Problem	Possible cause	Remedy
The laundry is not sufficiently dry.	The load consisted of different fabrics.	– Final drying cycle with <i>Warm air</i>. – Select a different programme next time*.
Items made of synthetic fibres are charged with static electricity after drying.	Synthetic fibres tend to attract a static charge.	Static charges can be reduced by adding a fabric conditioner to the final rinse in the washing programme or a fabric conditioner sheet to the load when drying.
There is a build-up of fluff.	Fluff is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any fluff to form and has no appreciable effect on the lifetime of the fabric.	Fluff is collected by the fluff filters and can be easily removed (see "Cleaning and Care").

* You can alter the drying levels for some programmes: (see "Settings menu").

Other problems		
Problem	Possible cause	Remedy
The drying process goes on too long or even switches off.	In some circumstances, the Clean out airways indicator light still comes on, even though the filters are clean. <i>Clean out airways.</i>	Please check all the possible causes and switch the dryer off and then back on again.
	Ventilation to and from the dryer may be insufficient (e.g. because it is installed in a small room). This has caused the temperature in the room to rise sharply.	Open a door or window while the machine is in operation for increased air flow.
	The vents below the door are covered.	– Remove any fluff.
	The fluff filters are clogged with fluff or were still wet when they were replaced.	– Remove any fluff. – The fluff filters need to be dry.
	Detergent residue, hair and fine fluff can block the condenser unit.	The condenser unit should be checked and cleaned from time to time.
	The laundry has not been spun sufficiently.	Make sure that your laundry is thoroughly spun at the appropriate spin speed in the washing machine.
	The tumble dryer has been overloaded.	Do not exceed the maximum load for the programme selected.
	Metallic components, e.g. zippers have prevented the dryer from registering the correct moisture level.	– Open the zippers next time. If the problem occurs again, dry garments with long zippers using the <i>Warm air</i> programme (timed drying).

Problem solving guide


Problem	Possible cause	Remedy
Water leaks from the machine after the condenser unit has been cleaned.	– The inner cover of the condenser unit has not been locked properly and/or the condenser unit has not been positioned correctly. – There is a build-up of fluff.	– Ensure that the condenser unit is positioned correctly and lock the inner cover. – Check the rubber seals. – Use a cloth to remove any visible fluff from the inside of the condenser unit housing.
A programme cannot be started.	There is no immediate cause.	– Is the dryer switched on? – Is the mains plug plugged in? – Is the door closed properly? – Has the fuse or circuit breaker tripped?
Power cut.	When power is restored to the dryer after a power cut, the programme will continue as long as the cooling down phase had not been reached.	
The interior drum lighting does not come on.	The lighting switches off automatically (to save energy).	– Switch the dryer off and then on again. – If the lamp needs to be replaced, follow the instructions: Refer to the following:

Changing the lamp

Disconnect the machine from the mains electricity supply.

- Open the door.

You will find the interior lamp cover at the top of the drum aperture.

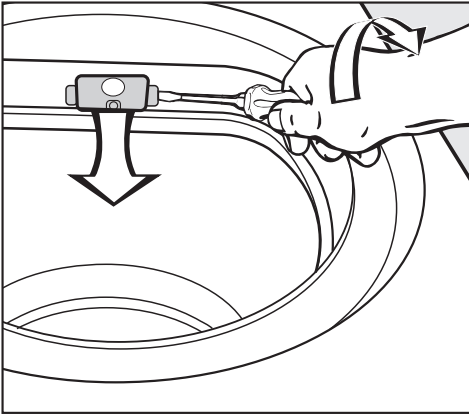

- Insert a suitable tool, such as a wide bladed screwdriver, under the side edge of the lamp cover as illustrated.
- Apply a little pressure and, whilst doing so, turn your wrist in the direction of the arrow to open the cover.

The cover will open downwards.

The temperature resistant lamp should only be ordered from your Miele Chartered Agent or from Miele.

The lamp specification and maximum wattage are stated on the data plate and on the lamp cover.

- Replace the lamp.
- To close the cover, push it upwards and press it on the left and right until you hear it click into position.


⚠ Ensure that it is fitted into position securely, as any moisture could cause a short circuit.

After Sales service

In the event of any faults which you cannot remedy yourself, please contact

- Your Miele Chartered Agent or
- Miele (see back cover for address).

When contacting Miele, please quote the model and serial numbers, both of which are located on the data plate situated on the right-hand side below the drum aperture.

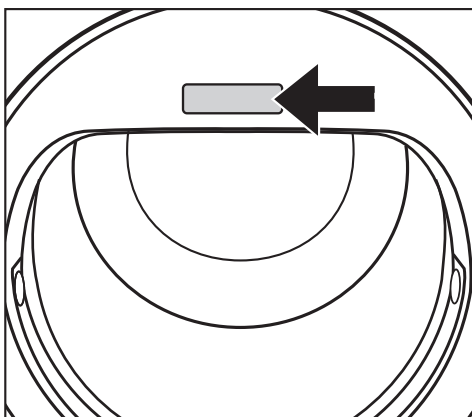

Future updates (PC)


The indicator or check light marked **PC** on the control panel is the interface used by the Miele service technicians during service work for testing purposes and for updating the machine's programme data.

Optional accessories

Optional accessories for these dryers are available from your Miele Chartered Agent or from Miele.

Please note that telephone calls may be monitored and recorded to improve our service.

Front view

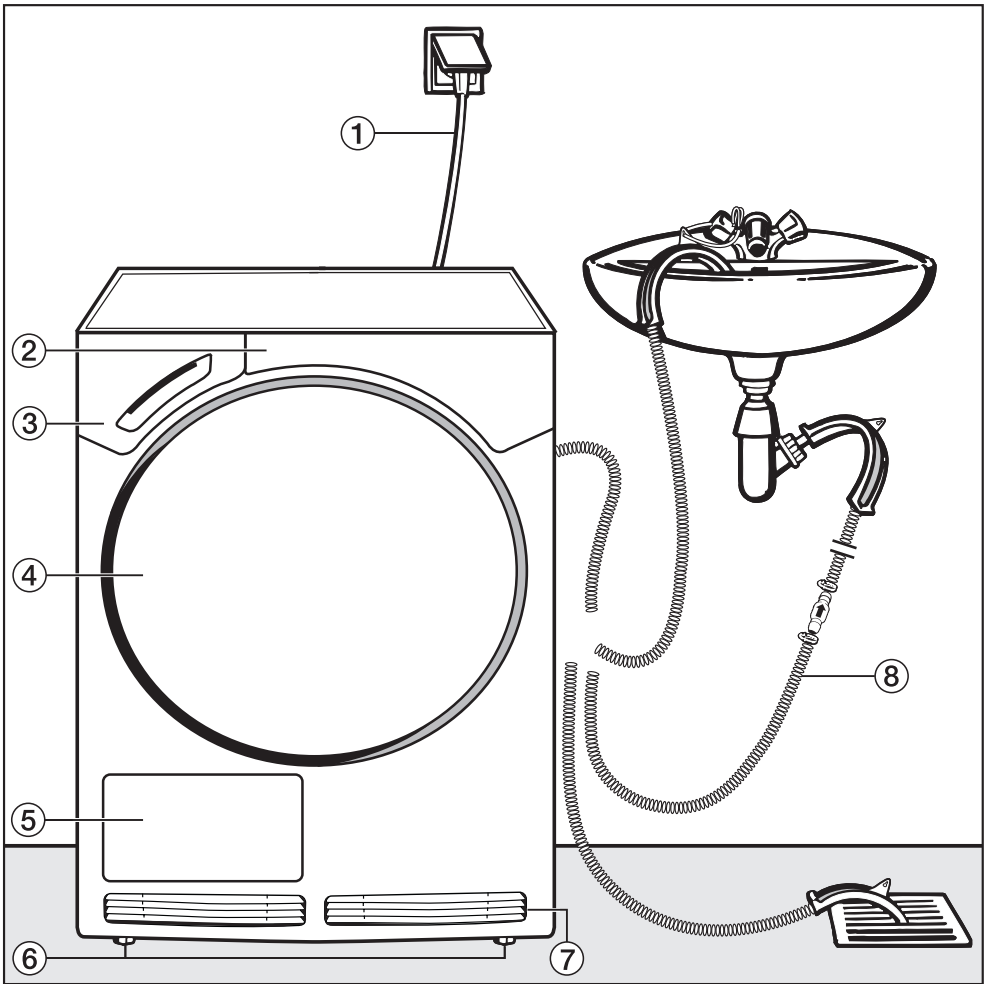

① Mains connection cable

② Control panel

③ Condensed water container

④ Door

⑤ Service panel for condenser unit


⑥ Four height adjustable screw feet

⑦ Air inlet and outlet vent for cooling the condenser unit

⑧ External drainage options (e.g. via wash basin, wash basin drain outlet or gully)

Installation and connection

Rear view

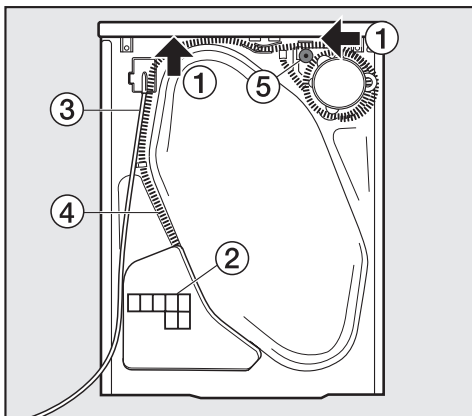

- ① Protruding lid for holding when moving the machine (see arrows)
- ② Air inlet vent for cooling the condenser unit
- ③ Mains connection cable
- ④ Hose for external drainage of condensed water
- ⑤ Accessories for connection to a sink drain outlet

Installation site

This tumble dryer can be installed under a sufficiently high worktop.

⚠ Make sure the dryer door can be opened without hindrance after installation.

⚠ The machine lid must not be removed.

Transporting the machine to its installation site

When moving the dryer, hold it by the lid where it protrudes to the rear. To manoeuvre the machine out of its packing case to its installation site, hold it by the front feet as well as by the edge of the lid where it protrudes to the rear of the washing machine.


Washer-dryer stack

The tumble dryer can also be combined with a Miele washing machine in a washer-dryer stack. The appropriate "WTV" stacking kit* to match your dryer is required.


* accessory available to order

⚠ Stacking kits must only be installed by a suitable qualified fitter.

Levelling the machine

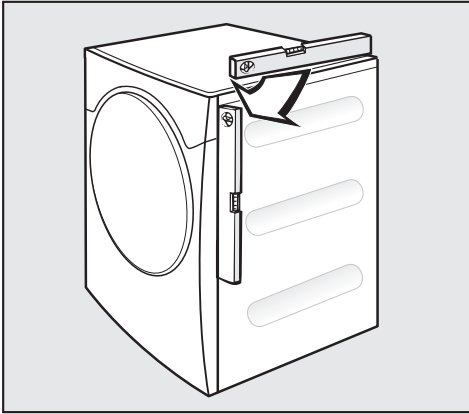

The machine must be perfectly level to ensure safe and proper operation.

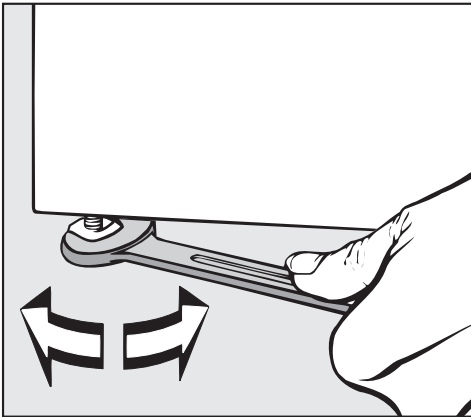

- The screw feet can be adjusted to compensate for any unevenness in the floor.

 The air inlet and outlet vents on the front and back of the machine must not be covered as this would prevent sufficient ventilation for cooling the condenser unit.

 The gap between the base of the dryer and the floor must not be minimised by a plinth or thick-piled carpet as this will prevent a sufficient intake of cold air.

Room ventilation

The air which is taken in when the dryer is in operation is blown out of the vents on the front of the machine and warms up the air in the room. It is very important, particularly if the room is small, to ensure adequate ventilation. Opening a window, for example, will allow more air to enter the room. Otherwise running times and energy consumption could be increased.

Before moving the tumble dryer again (e.g. when moving houses)

After each use a small quantity of condensed water will collect in the area around the pump. This water can run out if the tumble dryer is tipped up when it is being moved. It is a good idea to run the *Warm air* programme for approximately 1 minute before moving it. Any remaining condensed water will then be fed into the condensed water container or out through the drain hose.

Installation and connection

External condensed water outlet

General notes

When drying is in progress, condensed water is pumped into the condensed water container through the drain hose at the back of the dryer. The condensed water can also be drained off directly if the machine is installed near a sink, drain outlet etc. so that the condensed water container does not have to be emptied.

Drain hose length 1.50 m

Maximum delivery head 1.50 m

Maximum drain hose length 4.00 m

 If the on-site water drainage system is not fitted with a non-return valve or an appropriate air gap, one must be fitted to prevent the risk of back-flow (See "Installation conditions requiring a non-return valve").


The following optional accessories are available:

- an extension hose
- a non-return valve kit for connection to an external condensed water outlet (includes an extension hose). Maximum delivery head with non-return valve fitted: 1.00 m


Arranging the drain hose

 Do not pull on the drain hose and do not stretch it or allow it to become kinked as it could get damaged.

- There will be a small amount of residual water in the drain hose. Have a container ready to collect this.

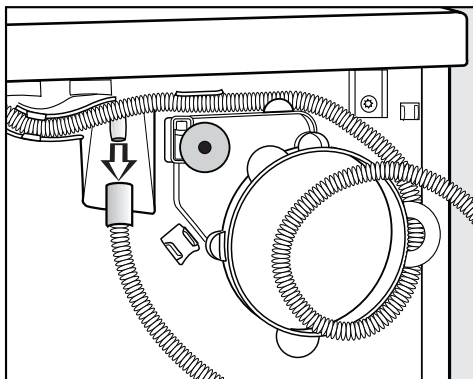

- Pull the hose off its connection (see arrow).
- Allow any residual water to run into the container.
- Unwind the hose and pull it carefully out of the holders.

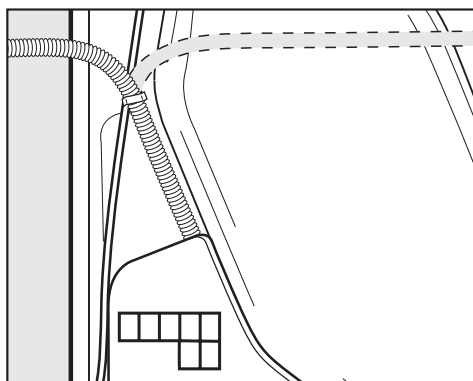

- Position the hose to the right or left-hand side as necessary.

Leave the hose in the middle holder to prevent it from becoming kinked inadvertently.

External drainage via a sink or gully

- See "Front view" illustration.

⚠ If you want to drain the water off into a sink, you will need to secure the hose carefully, e.g. by tying it to a tap to make sure it cannot slip during use. Otherwise there is a risk of overflowing water which could cause damage.

- Use the bow-shaped guide to prevent the drain hose from becoming kinked.

Installation conditions requiring a non-return valve


⚠ Certain installation conditions require the fitting of a non-return valve (available as an optional accessory). A non-return valve will prevent the risk of back-flow out of the dryer which could cause damage.

A non-return valve is required:

- If the tumble dryer is connected to a sink drain outlet (see the following section).
- If the tumble dryer is connected to a drainage system **already in use** by another appliance, e.g. a dishwasher or washing machine.


Example: Connection to a sink drain outlet

The drain hose with non-return valve fitted can be connected directly to a suitable sink drain outlet.

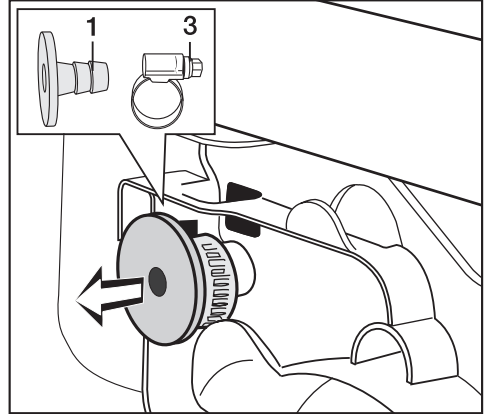

- Remove the following from the back of the dryer at the top:
Adapter **1** and hose clip **3** behind it.

Installation and connection

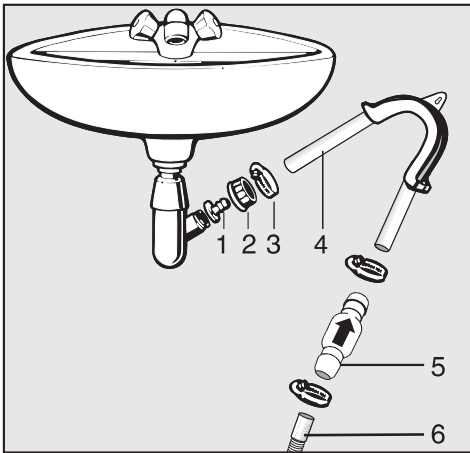

- 1 Adapter
- 2 Nut
- 3 Hose clip
- 4 End of the hose
- 5 Non-return valve
- 6 Tumble dryer drain hose

- Fit adapter **1** to the sink drain outlet using nut **2**.

If this nut has a flat disc in it, you should take the disc out first.

- Attach the end of the hose **4** to adapter **1**.
- Use a screwdriver to tighten hose clip **3** up close to the nut.

 Non-return valve **5** has to be fitted with the arrow pointing in the direction of flow (i.e. towards the sink). Otherwise water will not drain out of the machine.

- Fit non-return valve **5** to the tumble dryer drain hose **6**, making sure it is fitted in the correct direction (see arrow on non-return valve).
- Secure the non-return valve using hose clips.

Electrical connection

This tumble dryer is supplied ready for connection to an AC single phase supply. The machine is supplied with a mains cable with moulded plug.

The accessibility of the plug must be always ensured in order to separate the dryer from the mains.

The appliance should be connected up only by a qualified electrician, in accordance with national and local safety regulations.

For extra safety, it is advisable to install a residual current device (RCD) with a trip current of 30 mA.

The voltage, rated load and plug rating are given on the data plate. Please ensure that these match the household mains supply.

Important

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter A or coloured red.

WARNING
THIS APPLIANCE MUST BE
EARTHED

Consumption data

	Load ¹	Final spin speed in a domestic washing machine	Residual moisture	Energy	Duration
	kg	rpm	%	kWh	min.
Cottons Normal²	7.0	1000	60	3.80	121
Cottons Normal	7.0	1200	53	3.45	110
	7.0	1400	50	3.25	105
	7.0	1600	48	2.90	95
	7.0	1800	43	2.85	93
Cottons Normal + Low temperature	7.0	1000	60	4.10	169
Cottons Hand iron²	7.0	1000	60	3.00	96
Cottons Hand iron	7.0	1200	53	2.65	85
	7.0	1400	50	2.50	80
	7.0	1600	48	2.10	70
	7.0	1800	43	2.05	68
Minimum iron Normal²	3.5	1200	40	1.35	44
Minimum iron Normal + Low temperature	3.5	1200	40	1.40	66
Minimum iron Hand iron	3.5	1200	40	1.15	39
Automatic + Normal	5.0	600	50	2.70	102
Delicates Normal	2.5	700	50	1.50	98
Denim Normal	3.0	900	60	2.30	109
Smoothing	1.0	1000	60	0.50	30
Woollens handcare	2.0	1000	50	0.11	4

¹ Weight of dry laundry

²EN 61121:2005 test programme

All data without a "star" placed against it was calculated using EN 61121:2005.

Note for test institutes:

Results based on European Standards.

Before testing in accordance with EN 61121, dry a 3 kg load of cotton laundry with 70% residual moisture as per the above standard using the Cottons Normal programme without any Extra options.

Consumption data can vary from the nominal values given above depending on the size of the load, types of textiles, residual moisture levels after spinning, fluctuations in the electricity supply and any Extra options selected.

Technical data

Height	850 mm
Width	595 mm
Depth	634 mm
Depth with door open	1,074 mm
Suitable for pushing under a worktop	Yes
– Height	850 mm
– Width	600 mm
Suitable for stacking	Yes
Weight	52 kg
Drum volume	111 l
Maximum capacity	7 kg dry weight
Capacity of condensed water container	approx. 4.2 l
Drain hose length	1.50 m
Maximum delivery head	1.50 m
Maximum drain hose length	4.00 m
Length of connection cable	2.00 m
Voltage	See data plate
Rated load	
Fuse rating	
Lamp wattage	
Test certificates awarded	
Energy consumption	see "Consumption data"

Programmable functions

Extending the range of the drying level for the "Cottons" programme

The electronics of this dryer ensure a very effective and energy efficient drying process.

You can, however, extend the range of the drying level in this programme.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
 - The door is closed.
 - ❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.
 - ❷ Switch the dryer on.
- Wait until the indicator light for the *Start/Stop* button lights up constantly. . .
- ❸ . . . and then release the *Start/Stop* button.
- The *Low temperature* indicator light will briefly flash once.

The option selected will be displayed by a **number** which will alternate with *P*.

❶ **The drying level will be damper.**

❶ **Standard setting**

(The *Automatic plus* indicator light will also flash once.)

❷ **The drying level will be drier.**

(The *Automatic plus* indicator light will also flash twice.)

❹ Pressing the *Start/Stop* button switches from one to the other.

❺ Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps ❶ to ❸.

■ Switch the dryer off after step ❸.

Extending the drying level for the "Minimum iron" programme

The electronics of this dryer ensure a very effective and energy-efficient drying process. You can, however, extend the range of the drying level in this programme.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
 - The door is closed.
 - ➊ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ➋-➌.
 - ➋ Switch the dryer on.
- Wait until the indicator light for the *Start/Stop* button lights up constantly. . .
- ➌ . . . and then release the *Start/Stop* button.
 - ➍ Press the *Low temperature* button once.
 - The *Low temperature* indicator light will briefly flash on and off twice.

The option selected will be displayed by a **number** which will alternate with *P*.

➐ **The drying level will be damper.**

1 **Standard setting**

(The *Automatic plus* indicator light will also flash once.)

2 **The drying level will be drier.**

(The *Automatic plus* indicator light will also flash twice.)

➏ Pressing the *Start/Stop* button switches from one to the other.

➐ Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps ➊ to ➌.

■ Switch the dryer off after step ➌.

Programmable functions

Anti-crease setting

Helps prevent creasing if laundry is not normally removed immediately after the end of a programme.

Anti-crease

- is set as a standard setting. You can shorten the time or switch it off completely.
- can be used for all programmes, except *Woolens handcare*.
- should always be switched on.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
 - The door is closed.
- 1 Press the *Start/Stop* button and keep it pressed in whilst carrying out steps 2–3.

- 2 Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

- 3 . . . and then release the *Start/Stop* button.

- 4 Press the *Low temperature* button twice.

- The *Low temperature* indicator light will briefly flash on and off three times.

The option selected will be displayed by a **number** which will alternate with *P*.

0 Anti-crease deactivated.

1 1 hour Anti-crease

(The *Automatic plus* indicator light will also flash once.)

2 Default setting. 2 hours Anti-crease.

(The *Automatic plus* indicator light will also flash twice.)

- 5 Pressing the *Start/Stop* button switches from one to the other.

- 6 Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

- Repeat steps 1 to 4.

- Switch the dryer off after step 4.

Altering the volume of the buzzer

The buzzer has two volumes.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

1 Press the *Start/Stop* button and keep it pressed in whilst carrying out steps 2-3.

2 Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

3 . . . and then release the *Start/Stop* button.

4 Press the *Low temperature* button three times.

- The *Low temperature* indicator light will briefly flash on and off four times.

The option selected will be displayed by a **number** which will alternate with *P*.

□ **Default setting. Normal buzzer**

/ **Loud buzzer**

(The *Automatic plus* indicator light will also flash.)

5 Pressing the *Start/Stop* button switches from one to the other.

6 Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps 1 to 4.

■ Switch the dryer off after step 4.

Programmable functions

Extending the drying level for the "Automatic plus" programme

The electronics of this dryer ensure a very effective and energy-efficient drying process.

You can, however, extend the range of the drying level in this programme.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.
- ➊ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ➋-➌.

- ➋ Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

- ➌ . . . and then release the *Start/Stop* button.

- ➍ Press the *Low temperature* button four times.

- The *Low temperature* indicator light will briefly flash on and off six times.

The option selected will be displayed by a **number** which will alternate with *P*.

➎ **The drying level will be damper.**

➏ **Standard setting**

(The *Automatic plus* indicator light will also flash once.)

➐ **The drying level will be drier.**

(The *Automatic plus* indicator light will also flash twice.)

- ➑ Pressing the *Start/Stop* button switches from one to the other.

- ➒ Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

- Repeat steps ➊ to ➌.

- Switch the dryer off after step ➒.

Extending the cooling down time

The cooling down phase which takes place before the end of a programme can be lengthened if required. This makes the garments easier to handle.

The cooling down time is only available for programmes with drying levels.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷–❸.

❷ Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button five times.

- The *Low temperature* indicator light will briefly flash on and off seven times.

The option selected will be displayed by a **number** which will alternate with *P*.

⚙ Default setting

1 **The cooling down time will be five minutes longer.**

(The *Automatic plus* indicator light will also flash once.)

2 **The cooling down time will be ten minutes longer.**

(The *Automatic plus* indicator light will also flash twice.)

❺ Pressing the *Start/Stop* button switches from one to the other.

❻ Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Programmable functions

Standby

To save energy, the display goes out after 10 minutes and the indicator light for the *Start/Stop* button will start flashing slowly.

Reactivate from Standby

- Turning the programme selector or pressing one of the buttons switches the display back on again. This will not alter a running programme.

On

Standby is activated:

- if a programme is not selected after the machine has been switched on.
- after a programme has started.

However: The display will switch on for 10 minutes if Delay start has finished, after the end of a programme or the anti-crease cycle.

The buzzer (if selected) will sound for 10 minutes after the end of a programme.

Factory default settings. Not in current programme

As in "On".

But: The display will not switch off during a programme.

Off

The display will not switch off during a programme.

Follow steps (①,②,③ ...) to programme and store in memory.

- See the next page.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷–❸.

❷ Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button six times.

- The *Low temperature* indicator light will briefly flash on and off eight times.

The option selected will be displayed by a **number** which will alternate with *P*.

❶ On

! **Factory default settings. Not in current programme**

(The *Automatic plus* indicator light will also flash once.)

❷ Off

(The *Automatic plus* indicator light will also flash twice.)

❺ Pressing the *Start/Stop* button switches from one to the other.

❻ Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Programmable functions

Memory function

The electronics will memorise any Extra options selected for a programme. The duration selected for the timed drying programmes will also be stored in memory. These settings will be selected automatically the next time the programme is chosen. You can either accept these or change them by pressing the appropriate button.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷–❸.

❷ Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button seven times.

- The *Low temperature* indicator light will briefly flash nine times.

The option selected will be displayed by a **number** which will alternate with *P*.

❏ **Default setting. Memory deactivated.**

/ **Memory.**

(The *Automatic plus* indicator light will also flash.)

❺ Pressing the *Start/Stop* button switches from one to the other.

❻ Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Clean out airways indicator

Fluff should be removed after drying. The Clean out airways indicator will remind you to *Clean the filters* when a certain amount of fluff has collected in the filters. You can decide at what level of fluff this reminder should be given.

You will have an idea of how often this should be done after a few drying programmes.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷–❸.

❷ Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button eight times.

- The *Low temperature* indicator light will flash on and off slowly once.

The option selected will be displayed by a **number** which will alternate with *P*.

❶ **The *Clean out airways* indicator light is deactivated.**

❷ **The *Clean out airways* indicator light will come on when there is a heavy build-up of fluff**
(The *Automatic plus* indicator light will also flash once.)

❸ **Default setting**
(The *Automatic plus* indicator light will also flash twice.)

❹ **The *Clean out airways* indicator light will come on when there is only a light build-up of fluff**
(The *Automatic plus* indicator light will also flash three times.)

❺ Pressing the *Start/Stop* button switches from one to the other.

❻ Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps ❶ to ❹.

■ Switch the dryer off after step ❹.

Programmable functions

Keypad tone

An audible tone sounds each time a button is pressed.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

1 Press the *Start/Stop* button and keep it pressed in whilst carrying out steps 2-3.

2 Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

3 . . . and then release the *Start/Stop* button.

4 Press the *Low temperature* button nine times.

- The indicator light *Low temperature* will flash on and off slowly once and will then flash on and off quickly once.

The option selected will be displayed by a **number** which will alternate with *P*.

□ **Default setting. Keypad tone deactivated.**

/ **Keypad tone activated**

(The *Automatic plus* indicator light will also flash.)

5 Pressing the *Start/Stop* button switches from one to the other.

6 Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps 1 to 4.

■ Switch the dryer off after step 4.

Adjusting the dryer's electronics for very soft water

 Extremely soft water can affect the sensitivity of the control electronics.

Important

If the dryer is installed in an area with very soft water, you should contact your local water supplier for information and advice regarding water hardness and water conductivity.

If the water conductivity is less than 150 μS , the following programmable function will need to be activated.

This programmable function should not be activated if, despite the water being extremely soft (as would be the case if a water softener were used), its conductivity is greater than 150 μS .

Otherwise, the drying result will not be satisfactory.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

1 Press the *Start/Stop* button and keep it pressed in whilst carrying out steps **2-3**.

2 Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

3 . . . and then release the *Start/Stop* button.

4 Press the *Low temperature* button ten times.

- The indicator light *Low temperature* will flash on and off slowly once and will then flash on and off quickly twice.

The option selected will be displayed by a **number** which will alternate with *P*.

Default setting

1 Adjusted for very soft water (with low conductivity)
(The *Automatic plus* indicator light will also flash.)

5 Pressing the *Start/Stop* button switches from one to the other.

6 Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

■ Repeat steps **1** to **4**.

■ Switch the dryer off after step **4**.

Programmable functions

Extending the drying level range

You can extend the range of the drying levels for many of the programmes:

Machine iron plus

(drier than Machine iron).

Slightly dry

(drier than Hand iron).

Normal plus

(drier than Normal).

You can use this programming function only for programmes which allow you to select the drying levels.

Follow steps (1,2,3 ...) to programme and store in memory.

Before you begin, first ensure that:

- The dryer is switched off.
- The door is closed.

❶ Press the *Start/Stop* button and keep it pressed in whilst carrying out steps ❷-❸.

❷ Switch the dryer on.

Wait until the indicator light for the *Start/Stop* button lights up constantly. . .

❸ . . . and then release the *Start/Stop* button.

❹ Press the *Low temperature* button eleven times.

- The indicator light *Low temperature* flashes short once and long three times.

The option selected will be displayed by a **number** which will alternate with *P*.

❏ Default setting

/ **Drying level range extended**

(The *Automatic plus* indicator light will also flash.)

- ❺ Pressing the *Start/Stop* button switches from one to the other.
- ❻ Switch the dryer off.

The settings have been changed. You can alter the settings again at any time.

Control

- Repeat steps ❶ to ❹.
- Switch the dryer off after step ❹.

To select the extended drying level

- Select a programme.
- Press the drying level button repeatedly until one or two indicator lights come on.
 - Indicator lights *Extra dry* and *Normal* = Normal plus
 - Indicator lights *Hand iron* and *Normal* = Slightly dry
 - Indicator lights *Machine iron* and *Hand iron* = Machine iron plus

Miele Australia Pty. Ltd.

ABN 96 005 635 398

Head Office Melbourne:

1 Gilbert Park Drive
Knoxfield, VIC 3180

Miele Gallery and Office Melbourne:

208-210 Coventry Street
South Melbourne, VIC 3205

Miele Gallery and Office Sydney:

3 Skyline Place
Frenchs Forest, NSW 2086

Miele Gallery and Office Brisbane:

39 Harvey Street North
Eagle Farm, QLD 4009

Miele Gallery and Office Adelaide:

83-85 Sir Donald Bradman Drive
Hilton, SA 5033

Miele Gallery and Office Perth:

205-207 Stirling Highway
Claremont, WA 6010



www.miele.com.au



Miele New Zealand Limited Miele Gallery and Head Office

Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland
New Zealand
Telephone: 0800 264 353
www.miele.co.nz

Miele Global Headquarters Germany

Miele & Cie. KG

Carl-Miele-Straße 29
33332 Gütersloh
Federal Republic of Germany