

Quick Reference Sheet For TK-EX4 (Transmitter / Remote)					
Command	Hot Keys	Front Panel Button	Description		
Receiver Access Permission	Scroll Lock + Scroll Lock + M + (Z) (z) = 1: Full access (keyboard, mouse and video) to receiver (z) = 2: Access Denied (No keyboard or mouse control, blank screen) (z) = 3: View only (only video, No Keyboard or mouse control)	Receiver Mode: Video: Receiver can view only (no keyboard or mouse) Control: Receiver has full access (keyboard, mouse and video)	Various levels of access given to the receiver to the remote (transmitter) computer		

Quick Reference Sheet For TK-EX4 (Receiver / Local)							
Command	Hot Keys	Front Panel Button	On-Screen Display (OSD)	Description			
Select Local / Remote	Scroll Lock + Scroll Lock + -	Press the Select button	_	Toggle between local and remote computer on the receiver			
Show OSD Menu	Scroll Lock + Scroll Lock + Space Bar			Activates the OSD			
System Information	_		F1	Displays firmware version of the receiver and transmitter, CPU module date and access mode information			
Video Setting	_		Video Setting	Use left and right arrows to configure the brightness and sharpness [ range: 0-63; default: 0 ]			
View Monitor Information	_		EDID Setting	Shows the model of the monitors connected to the transmitter and receiver. Select "Read monitor" to refresh monitor information			
Password Setting	_		Password Setting	Enable/disable password protection [default: disable; password length <= 8 characters] Note: You must press F10 to logout if he password protection is enabled			
Auto Logout	_		Auto Logout	Enable/Disable and configure auto logout time [range:0~10 minutes; default: 0 ]			
Manual Logout	_		F10	Manually logout from the OSD			
Define Hot key	Scroll Lock + H + (Y)   (Y) = Scroll Lock, Caps Lock, F12 or Num Lock	_	Hotkey	Define the hot key sequence among 4 alternative keys			
OSD Menu Timeout	_		OSD Timeout	Specify the timeout for OSD menu [range: 0, 20, 25,30, 35,40, 45,50, 55, 60); default:0 seconds; 0 = disable]			
Console Delay	_		Console Delay	Delay time between when the transmitter and receiver have keyboard/mouse control of the computer connected to the transmitter [range: 0, 3, 5, 10, 20, 30 seconds; default: 0 seconds].			

