

Battery Warning

BATTERY WARNING:

INTERNAL BURNS / CHOKING HAZARD

Swallowing batteries may lead to serious injury or death (severe burns can occur within 2 hours).

IMMEDIATELY SEE A DOCTOR

Emergency Telephone Numbers

AUSTRALIA 000 NEW ZEALAND 111

Poisons Information Centre

AUSTRALIA 13 1126 NEW ZEALAND 0800 764 766

KEEP BATTERIES OUT OF REACH OF CHILDREN

Dispose of batteries immediately and responsibly

- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Remove exhausted batteries from the product.
- Remove batteries from the battery compartment when not in use.
- Never throw batteries in a fire or attempt to open up their outer casing.



Made in China for

ProPERT Housewares

A division of
SUPERTEX INDUSTRIES PTY LTD
- a wholly-owned Australian company
ABN 85 003 833 029

For further information -

website: www.supertex.com.au

Email: customerservice@supertex.com.au

Telephone: (02) 8756 3000

Facsimile: (02) 9748 6622



A signatory to the
Australian Packaging Covenant

N2853



PLEASE DO NOT
LITTER



RECYCLABLE
PAPER

ProPERT®



ELECTRONIC KITCHEN SCALE

with Clock and Timer

Model 1183

Operating Instructions

Instructions for use

Remove all packaging before first using the scale.

Note: *The insulator tab found underneath the battery in the battery compartment must first be removed for the scale to function.*

Weighing

1. Place the scale on a hard, level surface. If you intend using a bowl, place it on the platform first before entering weighing mode.
2. Press the ON/TARE button to enter weighing mode. The scale displays 'HELO', then '0' appears immediately after. The scale is ready for weighing.
3. The scale displays in grams (g) or ounces (oz). To change the unit measure, press 'UNIT'.
4. Put the item to be weighed in the bowl or on the platform - the weight will appear on the display
5. If no further weighing is carried out within the next 30 seconds, the scale automatically returns to the clock display. Otherwise, press 'MODE' to do this.

To use the Tare function

This scale allows the separate weighing of items as each item is added to the scale. No need to empty your bowl.

After weighing the first item, press the 'ON/TARE' button again to reset the display to zero. The word 'TARE' will appear in the bottom left corner of the display, which indicates that the Tare Function is operating.

With the first item still on the platform or in a bowl or container, add the second item. The readout will now show the weight of the second item only. Repeat these steps if you have additional items to weigh. The total combined weight of the items must not exceed the capacity of the scale, which is 3000g / 105.8oz.

The total weight of the items on the scale, (including the container or bowl if using one), can be obtained by pressing the 'ON/TARE' button again. Then remove all items from the scale. The total weight will be displayed as a minus figure.

Time setting

1. The LCD (liquid crystal display) defaults to the clock.
2. To reset the time, press and hold 'MODE' **for a few seconds** till the minute sector flashes.
3. Then press and hold 'UNIT' till the required minute setting is reached.
4. Press and hold 'MODE' again till the hour sector flashes.
5. Then press and hold 'UNIT' till the correct hour digit is reached.
6. When this is done, press 'MODE' once again. The LCD will display the new time.

Countdown timer setting

1. To set the countdown timer, press 'MODE' **once**.
2. You are now in 'countdown setting' mode.
3. Press and hold 'MODE' again till the seconds sector flashes.
4. Then press and hold 'UNIT' to select the number of seconds required
5. When this is done, press 'MODE' once again till the minute sector flashes.
6. Then press and hold 'UNIT' to select the number of minutes required
7. When this is done, press 'MODE' to commence the countdown.
8. The alarm sounds off when countdown reaches zero.
9. Press 'MODE' to stop the alarm.
10. If left idle for 60 seconds, the scale automatically returns to the clock display. Otherwise, press 'MODE' to do this.

Overloading

When the scale is overloaded (+3000g/105.8oz), the display will read 'Err'. Remove the weight immediately or damage to the scale may occur.

Low battery indicator

The low battery symbol will appear on the readout indicating the battery needs to be replaced. Always use a good quality, fresh Lithium battery.



Caring for your Scale

The glass platform may be detached for easy cleaning. Clean the scale with a damp cloth using a mild detergent or non-abrasive household cleaner, but do not allow water to get inside the scale. Wipe dry with a soft cloth.

Remove the battery if the scale is not being used for a long period of time.

Specifications

Model 1183

Weighs in grams (g) or ounces (oz)

Capacity: 3,000g (3kg) or 105.8oz (6lb 6oz)

Graduation: 1g or 0.1oz

Uses Strain Gauge technology, *which is an electrical resistance or 'strain' measured by a steel bar within the scale, being depressed by the weight of the food on the scale. This 'strain' is then converted to a digital weight readout.*

Solid natural wood base

4mm thick, tempered safety glass, 140mm Diameter

Overload indicator 'Err'

Low battery indicator

Tare Function

Clock

Electronic countdown timer with alarm