

PRECAUTIONS

Care must be taken to replace parts properly because they could affect the performance of the steering system and result in a driving hazard.

TROUBLESHOOTING

Problem	Possible cause	Remedy	Page
Hard steering	Tires improperly inflated	Inflate tires to proper pressure	SA-3
	Excessive caster	Check front wheel alignment	SA-5
	Steering system joint worn	Replace steering system joints	SR-35
	Lower arm ball joints worn	Inspect lower arm ball joints	SA-22
	Steering column binding	Inspect steering column	SR-5
	Steering gear out of adjustment or broken	Adjust or repair steering gear	SR-35
	Power steering belt loose	Adjust belt	SR-21
	Oil level in reservoir low	Check reservoir	SR-21
	Power steering unit faulty	Check power steering unit	SR-26
Poor return	Tires improperly inflated	Inflate tires to proper pressure	SA-3
	Wheel alignment incorrect	Check front wheel alignment	SA-4
	Steering column binding	inspect steering column	SR-5
	Steering gear out of adjustment or broken	Adjust or repair steering gear	SR-35
Excessive play	Front wheel bearing worn	Replace front wheel bearing	SA-9
	Main shaft yoke or intermediate shaft yoke worn	Replace main shaft or intermediate shaft	
	Lower arm ball joints worn	Inspect lower arm ball joints	SA-22
	Steering system joints worn	Replace steering system joints	SR-35
	Steering gear out of adjustment or broken	Adjust or repair steering gear	SR-35
Abnormal noise	Steering linkage loose	Tighten steering linkage	
	Steering system joints worn	Replace steering system joints	SR-35
	Steering gear out of adjustment or broken	Adjust or repair steering gear	SR-35

