


Operating instructions

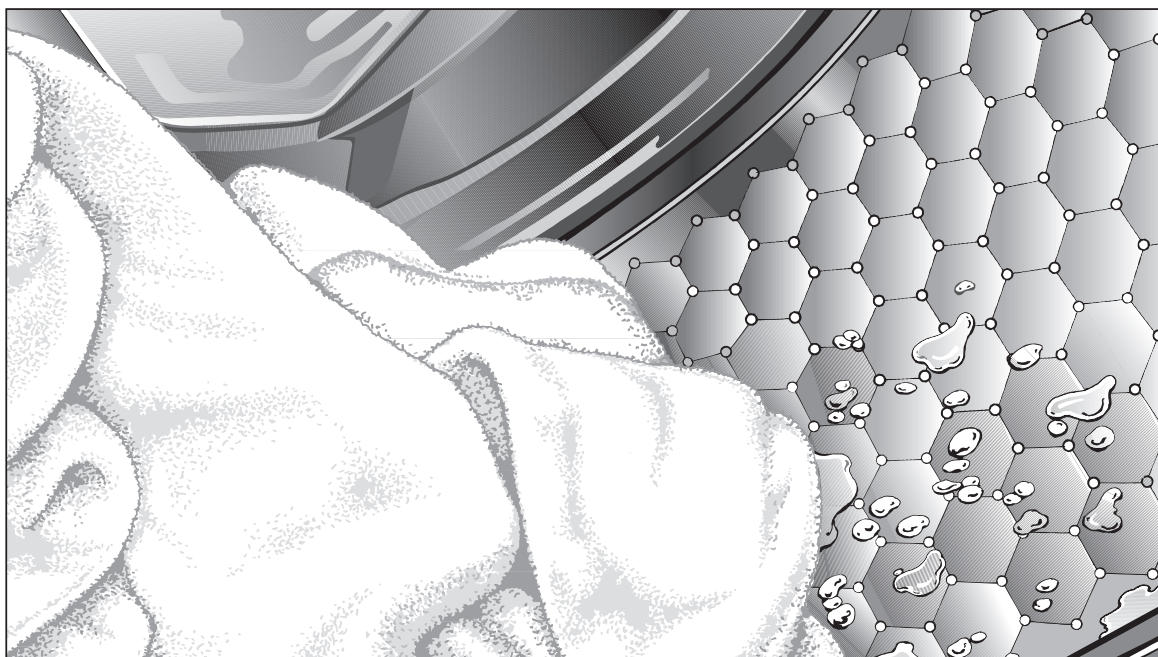

for Washing machine W 5903 WPS

To avoid the risk of accidents or damage to the machine, it is **essential** to read these instructions before it is installed and used for the first time.

en - AU, NZ

M.-Nr. 07 647 500

Caring for the environment

Disposal of the packing material


The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

Rather than just throwing these materials away, please ensure they are offered for recycling.

Disposal of your old appliance or machine

Electrical and electronic appliances / machines often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance or machine. Therefore, please do not dispose of your old machine or appliance with your household waste.

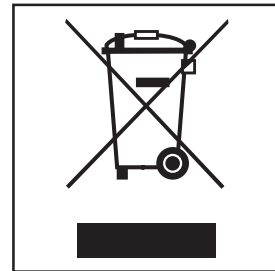

Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.


It should be unplugged or disconnected from the mains electricity supply by a competent person.

The plug must be rendered useless and the cable cut off directly behind the appliance to prevent misuse.

Caring for the environment	2
Warning and Safety instructions	6
Operating the washing machine	10
Control panel	10
Display	11
Before using for the first time	12
Washing environmentally and economically	14
Energy and water consumption	14
Detergent consumption	14
How to wash correctly	15
Brief instructions	15
Programme selection	20
Extra options	22
Spinning	23
Delay start	24
Programme chart	25
Garment care label symbols	27
Programme sequence	28
Changing the programme sequence	30
Cancelling a programme	30
Interrupting a programme	30
Change	30
Adding or removing laundry after a programme has started	31
Detergent	32
The correct detergent	32
Water softener	34
Washing with several components	34
Fabric conditioners and liquid starch	35
Automatic dispensing of fabric conditioner or liquid starch to laundry at the end of a programme	35
Adding fabric conditioner or starch separately	35
Colour run and dye removers/dyes	35

Contents

Cleaning and care	36
External casing and fascia panel	36
Extra cleaning	36
Cleaning the detergent dispenser drawer	36
Cleaning the filter in the water inlet	38
Problem solving guide	39
What to do if	39
The programme does not start	39
Fault messages in the display	40
General problems	41
An unsatisfactory wash result	42
The drum door does not open when you press the Door button.	43
Opening the drum door in the event of a blocked drain outlet and/or power failure	44
After sales service	46
Future updates (PC)	46
Appliance warranty	46
Optional accessories	46
Installation and connection	47
Front view	47
Rear view	48
Installation surface	49
Installing the washing machine	49
Removing the transit bars	49
Re-fitting the transit bars	51
Levelling the machine	52
Screwing out and adjusting the feet	52
Building under a continuous worktop / in a kitchen run	53
Washer and Dryer stack	53
The Miele Waterproof system	54
Connection to the water supply	55
Cold water connection (mains water supply)	56
Hot water connection	56
Connection to the drainage system	57
Electrical connection	58

Technical data	59
Consumption data	60
Consumption data for the nominated energy labelling programme according to AS/NZS 2040.1 & AS/NZS 2040.2 Standard	60
Notes for test institutes:	60
Settings menu	62
To open the Settings menu	62
Selecting settings	62
To close the Settings menu	62
Language 	62
Gentle action	63
Soak	63
Water plus	63
Longer pre-wash	63
Suds cooling	64
Lock code	64
Buzzer	65
Keypad tone	66
Display brightness	66
Display contrast	66
Text brightness	66
Standby display	67
Memory	67
Anti-crease	67
Water intake	68
Optional accessories	69
CareCollection	69

Warning and Safety instructions

This washing machine conforms to current safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the washing machine, please read these instructions carefully before using it for the first time. They contain important information on its installation, safety, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

Correct application

► The washing machine is designed exclusively for domestic purposes and must only be used to wash garments which have been declared suitable for washing by the manufacturer indicated on the garment care label.

Any other use may be dangerous. The manufacturer cannot be held liable for damage resulting from incorrect or improper use or operation.

► The washing machine is not suitable for outdoor use.

► This washing machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning its use by a person responsible for their safety.

► This washing machine must not be installed and operated in mobile installations (e.g. on a ship).

Safety with children

► Keep children away from the washing machine at all times. It is not a toy! To avoid the risk of injury, do not allow children to play on or near it or to play with its controls. Supervise children whilst you are using it.

► Older children may only use the washing machine if its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

► For machines with a 'porthole' door, remember that the porthole glass will be hot when washing at very high temperatures.
Do not let children touch it.

Technical safety

► Before setting up the washing machine, check it for any externally visible damage.

Do not install or use a damaged washing machine.

► Before connecting the washing machine, ensure that the connection data on the data plate (voltage and rated load) match the mains electricity supply. If in any doubt, consult a qualified electrician.

► The electrical safety of this washing machine can only be guaranteed when continuity is complete between it and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested and where there is any doubt, the household wiring system should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

► Do not connect the washing machine to the mains electricity supply by an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

► Faulty components must only be replaced by genuine Miele original spare parts. Only when these parts are fitted can the safety standards of the machine be guaranteed.

► Unauthorised repairs could result in unforeseen dangers for the user, for which Miele cannot accept liability. Repairs should only be undertaken by a Miele approved service technician. Ensure current is not supplied to the machine until after maintenance or repair work has been carried out.

► If the connection cable is faulty, it must only be replaced by a Miele approved service technician to protect the user from danger.

► In the event of a fault or for cleaning purposes, the washing machine is only completely isolated from the electricity supply when:

- it is switched off at the wall socket and the plug is withdrawn, or
- it is switched off at the mains, or
- the mains fuse is withdrawn, or the screw-out fuse is removed (in countries where this is applicable).

► The Miele "Water protection system" protects from water damage provided the following conditions have been met:

- the machine is correctly plumbed in and connected to the electricity supply.
- if a fault has been identified, the machine must be examined by a competent person before further use, and repaired if necessary.

► In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the machine and its surroundings in a clean condition at all times. Any damage which may be caused by cockroaches or other vermin will not be covered by the machine warranty.

Warning and Safety instructions

► This washing machine must not be installed and operated in mobile installations (e.g. on a ship).

► Do not make any alterations to the washing machine, unless authorised to do so by Miele.

Correct use

► Do not install your washing machine in rooms where temperatures below freezing may occur. Frozen hoses may burst or split. The reliability of the electronic control unit may be impaired at temperatures below freezing point.

► Before using the washing machine for the first time, check that the transit bars at the rear of the machine have been removed (see section on "Installation"). During spinning, a transit bar which is still in place may result in damage to both the machine and adjacent furniture or appliances.

► Turn off the tap if the machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.

► Flooding danger.

If hooking the drain hose into a wash basin, check that the water can drain off quickly enough to prevent the sink from overflowing. Make sure the drain hose is secure, so that the force of the water flowing out of the hose does not dislodge it.

► Take care to ensure that foreign objects (e.g. nails, pins, coins, paper clips) do not find their way into the machine with the laundry. These may damage components of the machine (e.g. suds container, drum), which in turn can result in damage to the laundry.

Warning and Safety instructions

► If the correct amount of detergent is dispensed, the machine should not need to be descaled. If, however, you do wish to descale the machine, only use Miele Descaler for washing machines and strictly observe the instructions on the packaging. If in doubt, contact Miele or your Miele Chartered Agent.

► Textiles which have been pre-treated in solvent-based cleaning agents must be thoroughly rinsed in clean water before being washed in the machine.

► Never use solvent-based cleaning agents, e.g. those containing benzene, in this machine, as this may result in damage to component parts and create toxic fumes. Such agents also pose a fire and explosion hazard.

► Never use solvent-based cleaning agents, e.g. those containing benzene, to clean the outside surfaces of this machine. They can cause damage to plastic surfaces.

► Only use dyes specified by the manufacturer as being suitable for use in a domestic washing machine. Always observe the manufacturer's instructions carefully.

► Colour run and dye removers contain sulphur compounds which can cause damage such as corrosion. Do not use these products in this machine.

► If liquid detergent comes into contact with the eyes, rinse them thoroughly with lukewarm water immediately. If swallowed, seek medical assistance immediately and retain the packaging or label for reference. Those with skin problems or sensitive skin should avoid their skin coming into contact with liquid detergent.

► Only remove laundry from the washing machine once the drum has stopped turning. Reaching into a moving drum is extremely dangerous and could result in injury.


Accessories

► Accessory parts may only be fitted when expressly approved by Miele. If other parts are used, warranty, performance and product liability claims will be invalidated.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Operating the washing machine

Control panel

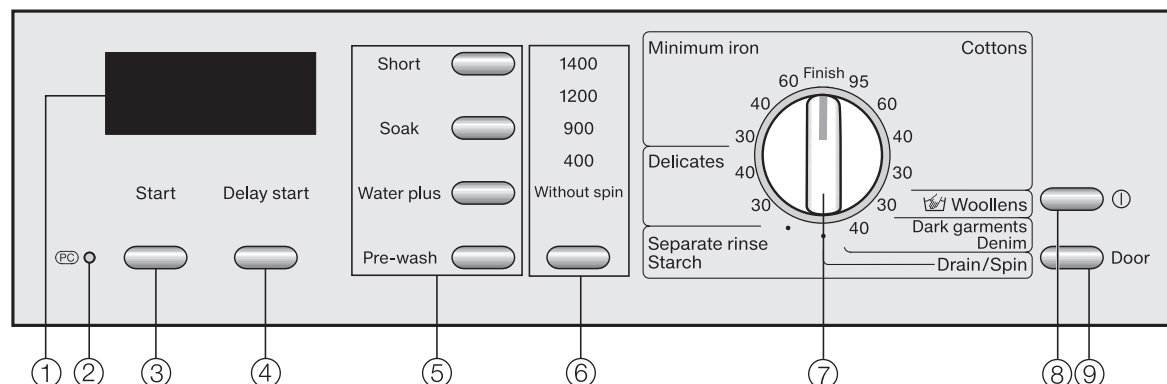

① Display

See the next page for more information.

② PC / Optical interface

This is used by service technicians to run diagnostic checks on your machine and can also be used to update programming data in the future.

③ Start button

For starting the programme selected. The green backlight of the word *Start* flashes if a programme can be started and stays lit up if a programme has already been started.

④ Delay start button

For selecting delay start. If a delayed start has been selected, the words *Delay start* will be illuminated in yellow.

⑤ Extra option buttons

Various Extra options can be added to the washing programmes. If an Extra option has been selected, the relevant *Extra options* will be illuminated in yellow.

⑥ Spin button

For selecting the spin speed or *No spin*. The selected spin speed is illuminated in yellow.

⑦ Programme selector

For selecting a wash programme and the appropriate temperature. The programme selector can be turned clockwise or anti-clockwise.

⑧ ① button

For switching the washing machine on and off. To save energy, the washing machine will switch off automatically 15 minutes after programme end/ Anti-crease or if no other function is selected after switching on.

⑨ Door button

Opens the machine door.

Display


The display shows:

- the programme duration (Time left display)
- the programme sequence
- the selected Delay start
- the Settings
- Fault message and notes

Display fascia

The *Start* and *Delay start* buttons have a second function during initial operation and in the menu settings.

This secondary function is made visible with the display fascia.

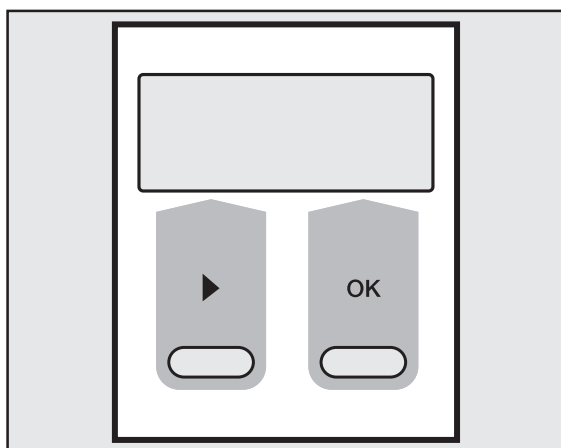

Programme duration

After the start of a programme, the estimated programme duration will appear in the display in hours and minutes.

When Delay start is being used, the programme duration will appear after the delay start time has elapsed.

During the first 8 minutes the machine measures how much water is being absorbed by the laundry. The programme duration may be longer or shorter depending on this absorbency rate.

Delay start

The delay start time selected will appear in the display.

After the machine has started, the delay start time counts down.

Once the delay start time has finished, the programme begins and the estimated programme duration appears in the display.

Settings

The settings can be used to tailor washing programmes to suit your individual requirements. The selected function will be shown in the *Settings* menu.

Before using for the first time

Before using the machine for the first time, ensure that it is correctly installed and connected. See "Installation and connection".

This washing machine has completed a comprehensive functional test. A small quantity of water remains in the drum as a result.


The initial operation consists of four steps. The washing machine guides you automatically through steps **1** to **3**.

For safety reasons, spinning is not possible until the machine has been prepared for using for the first time. To activate the spinning function, you must run a wash programme without laundry and without detergent.

Using detergent could result in an excessive build-up of foam.

This also activates the ball valve. The ball valve prevents detergent escaping from the suds container into the sump during a wash programme, thus making maximum use of the detergent.

1. Welcome screen

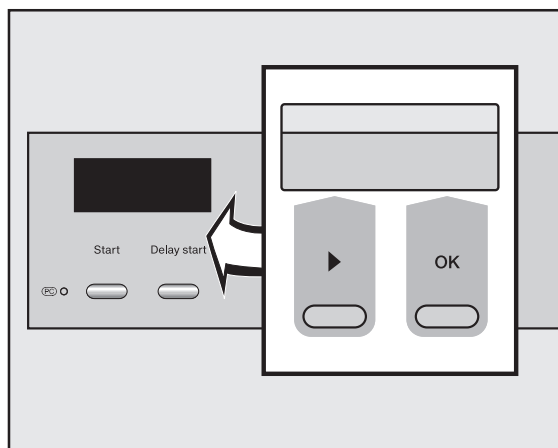

- Place the display fascia onto the panel.
- Press the ① button in.



The welcome screen will appear in the display every time the washing machine is switched on until a programme lasting longer than 1 hour has been completed.

Before using for the first time

2. Language settings display

You will be asked to select the language you require for the display. It is possible to change the language at any time via the *Settings* menu.



- The required language can be selected by pressing the ► button. Confirm with **OK**.

3. Reminder to remove transport struts

To avoid the risk of damage, the transport struts must be removed before the machine is used for the first time. See "Installation and connection" for instructions on how to do this.




- After removing the transport struts (if this has not already been done by your fitter), press the **OK** button.
- Remove the display fascia.

4. Running your first programme

Your machine is now ready for the first programme to be run.



- Turn the programme selector to *Cottons 60°C*.

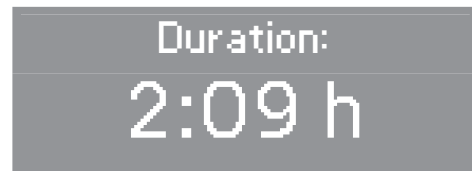

Start flashes green.

- Press the *Start* button.

The washing machine will now run a complete wash programme.



- Turn the programme selector to *Finish*.
- Switch off the washing machine.

The machine is now ready for use.

Washing environmentally and economically

Energy and water consumption

- Water consumption and energy usage are determined by the size of the load.
To make the most out of your machine, load the maximum dry load for the programme you are using.
- When smaller loads are washed in the *Cottons* programme, the automatic load recognition system will reduce the amount of water, time and energy used. This may mean that the time left shown in the display is adjusted during the course of the wash programme.
- Use the *Cottons 60°C* programme rather than the *Cottons 95°C* programme. This allows you to save between 35-45% energy. This is sufficient for most soiling. Use the *Soak* programme for more stubborn soiling.
- Using the *Cottons 40°C* programme is recommended for a normally soiled load and is the programme used in energy/water consumption tests to AS/NZS 2040 (Refer to consumption data).

Detergent consumption

- Do not exceed the amounts of detergent recommended by the manufacturer on the packaging.
- Adjust the dosage to the degree of soiling of the laundry.
- Reduce the amount of detergent with smaller loads (approx. $\frac{1}{3}$ less than the amount recommended can be used when washing a half load).

Choosing the correct Extra option (Short, Soak, Pre-wash)

Select:

- A wash programme together with the *Short* Extra option for light to normal soiling where there are no obvious marks.
- A wash programme without any Extra options for normal to heavy soiling with visible staining.
- A wash programme together with the *Soak* Extra option for heavily soiled laundry.
- The *Pre-wash* Extra option for laundry with large amounts of dirt (e.g. dust, sand).


When drying with a tumble dryer

Selecting the highest possible spin speed for the wash programme will save energy when drying in a tumble dryer afterwards.

Brief instructions

The headings numbered ①, ②, ③, . . . show the operating sequence and can be used as brief instructions.

① Sort the laundry

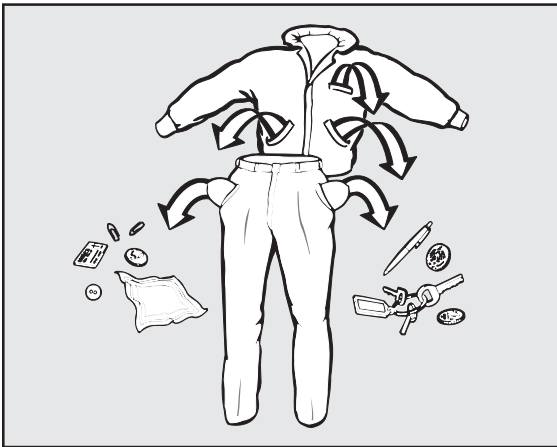

- Empty all pockets.

⚠ Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to garments and components in the machine.

- Badly soiled areas, stains etc. should be cleaned as soon as possible, preferably whilst still fresh. Spillages should be carefully dabbed off using a soft colourfast cloth. Do not rub!

Badly soiled areas can be pre-treated with liquid detergent, stain removers etc. first, following the manufacturer's instructions. With particularly stubborn stains, ask your dry cleaner for advice.

⚠ If you use a solvent-based cleaning agent (e.g. one containing benzene) to pre-treat a stain, make sure that any plastic parts (e.g. buttons) are protected, and that the cleaning agent is rinsed off before washing the garment in the machine.

⚠ Do not use solvent-based cleaning agents in this machine.

- Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.

Dark textiles often contain excess dye and should be washed separately several times first. Always wash whites and coloureds separately.

- Curtains: Remove lead weights first or place in a laundry bag.
- Underwiring and collar stiffeners: Any loose wiring in bras, shirt collar stiffeners, etc. should be removed or sewn-in.
- Close any zips, fasten hooks and eyes etc. before washing.
- Fasten duvet covers etc. to prevent small items from being rolled up inside them.

Do not wash any items in this machine which are specified by the manufacturer as **not washable** on the care label (☒ symbol).

How to wash correctly

② Switch on the washing machine.

- Press the ① button.


Select
programme

③ Load the drum

- Press the *Door* button to open the drum door.
- Unfold the laundry and load loosely in the drum. Mixing both large and small items gives better wash results and also helps distribute the load evenly during spinning.


The most efficient use of energy and water is achieved when a full load is washed. However, do not overload as this causes creases and reduces cleaning efficiency.

Make sure that no garments are caught between the drum door and seal.

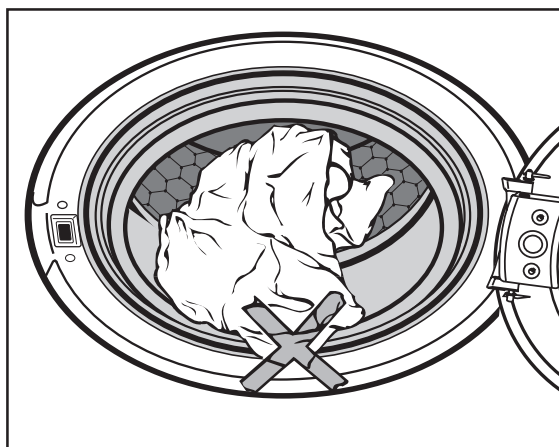

- Shut the door with a gentle swing.

④ Select a programme

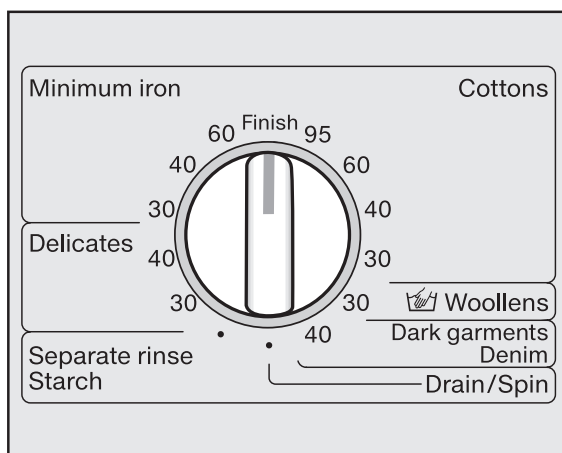


- Turn the programme selector to the required programme.

Duration:
1:45 h

The estimated programme duration will appear in the display.

How to wash correctly

5 Selecting Extra options (if required)

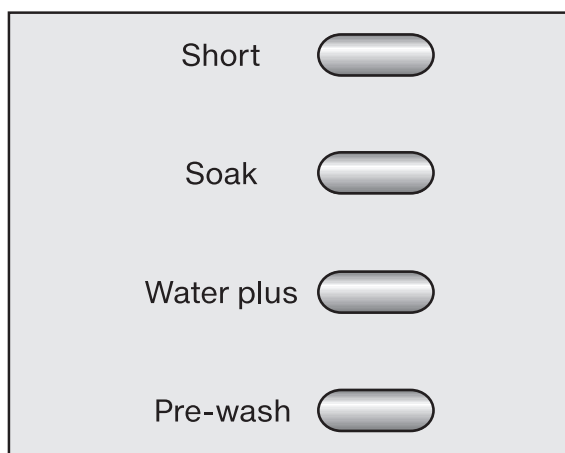


- Press the button for the programme you wish to run. The Extra option will be illuminated.

Not all the Extra options are suitable for use with every programme. You can only select Extra options which are compatible with the basic programme being used.

See "Extra options" for more information.

6 Selecting Spin speed (if required)

You can reduce the final spin speed.

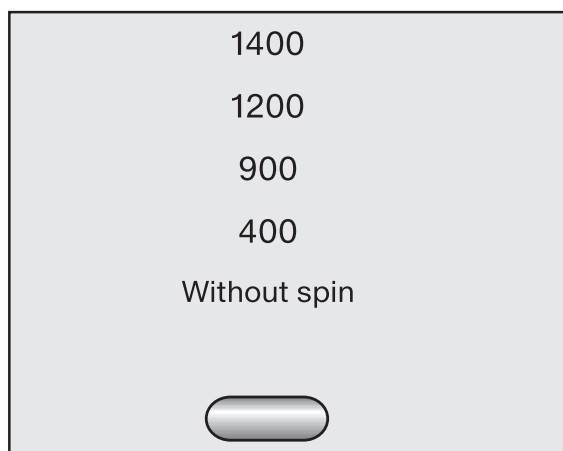

- Press the *Spin* button until the required spin speed is highlighted in yellow.

See "Spin" for more information.

7 Selecting Delay start (if required)

The start of the programme can be delayed from 15 minutes up to a maximum of 23 hours and 45 minutes. This allows you to make use of night-time economy electricity rates, for example.

See "Delay start" for more information.

How to wash correctly

8 Add detergent


It is important to dispense the correct amount, because . . .

. . . too little detergent results in:

- laundry not getting properly clean and with time it may become grey and hard to the touch.
- greasy particles clinging to the laundry.
- limescale deposits on the heater elements.



. . . too much detergent results in:

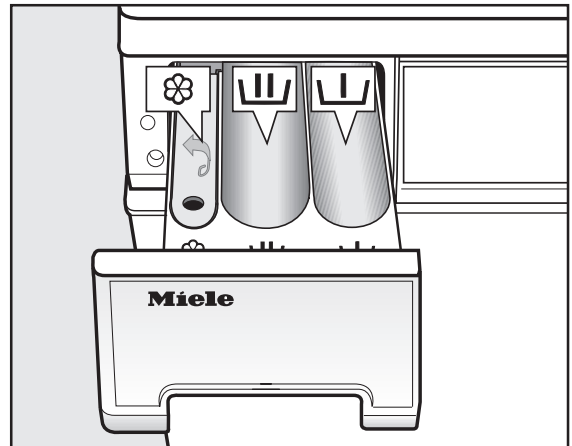- excessive foam which causes a low level of agitation and poor wash, rinse and spin results.
- higher water consumption (an additional rinse cycle will automatically switch on).
- a burden to the environment.



- Pull out the detergent drawer and place detergent in the compartments as follows:



Detergent for the pre-wash (divide the total recommended amount as follows: add $\frac{1}{3}$ to compartment  and $\frac{2}{3}$ to compartment )



Detergent for the main wash



Fabric conditioner or liquid starch

- Close the detergent drawer.

See "Detergent" for further information.

9 Start the programme

- Press the *Start* button.

If a delay start time has been set, this will count down in the display. At the end of the delay start time or immediately after the programme has started (if no delay start time has been selected), the estimated programme duration will appear in the display. During the first 8 minutes the machine measures how much water is being absorbed by the laundry. The programme duration may be longer or shorter depending on this absorbency rate.

The programme sequence is also shown in the display. The programme sequence display shows the stage the programme has reached.

10 Remove the laundry when the programme has finished


Anti-crease
Finished

- Press the *Door* button again to open the door.

The machine will switch off automatically 15 minutes after the end of the Anti-crease phase. Push the ① button to switch the machine back on.


- Remove the laundry.

Check that all items have been removed from the drum. Left items might shrink in the next wash or discolour other items.

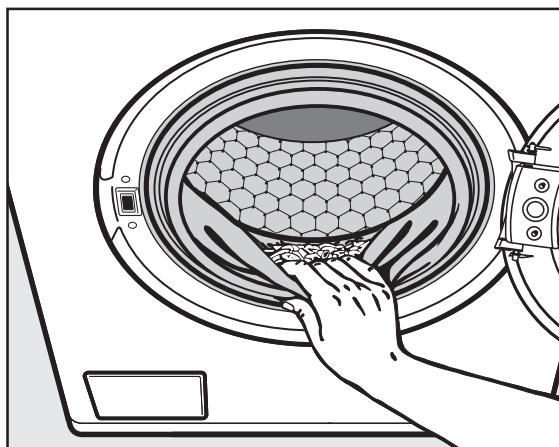


- Check the folds in the door seal for any small articles, e.g. buttons, which might be lodged there.
- Turn the programme selector to *Finish*.
- Switch the machine off with the ① button.
- To avoid the build-up of mildew, it is recommended that the door is left ajar when the machine is not in use.

Programme selection

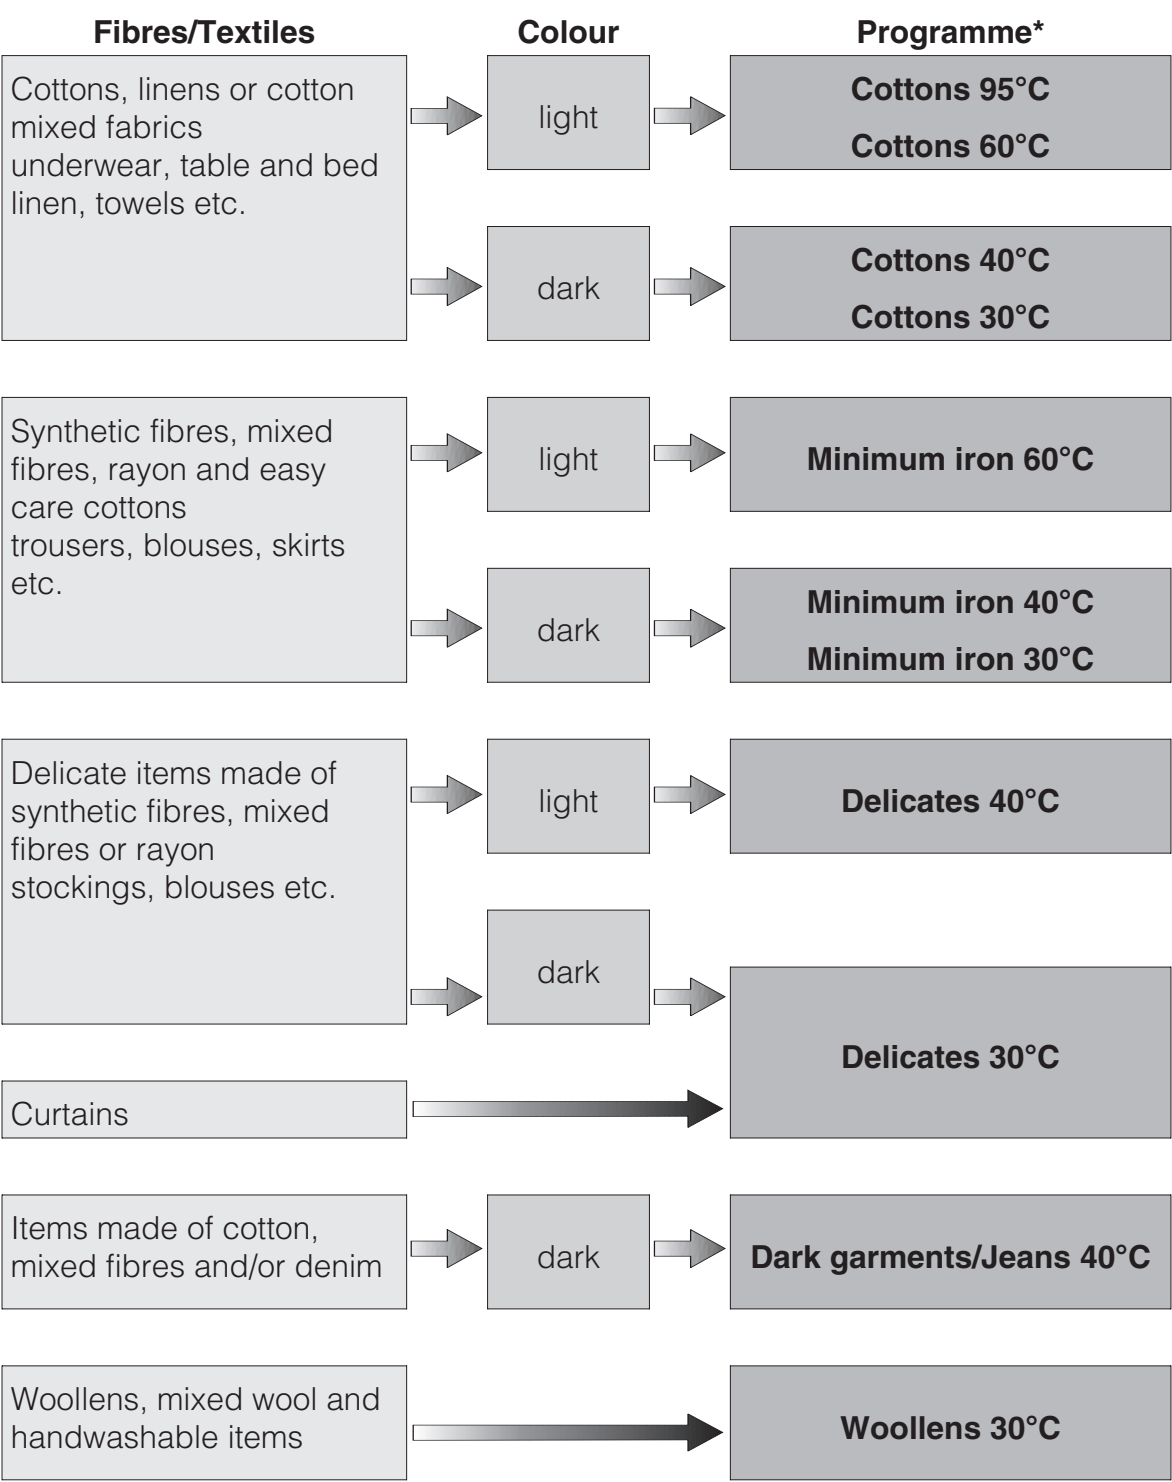

* Please follow the manufacturer's care instructions.

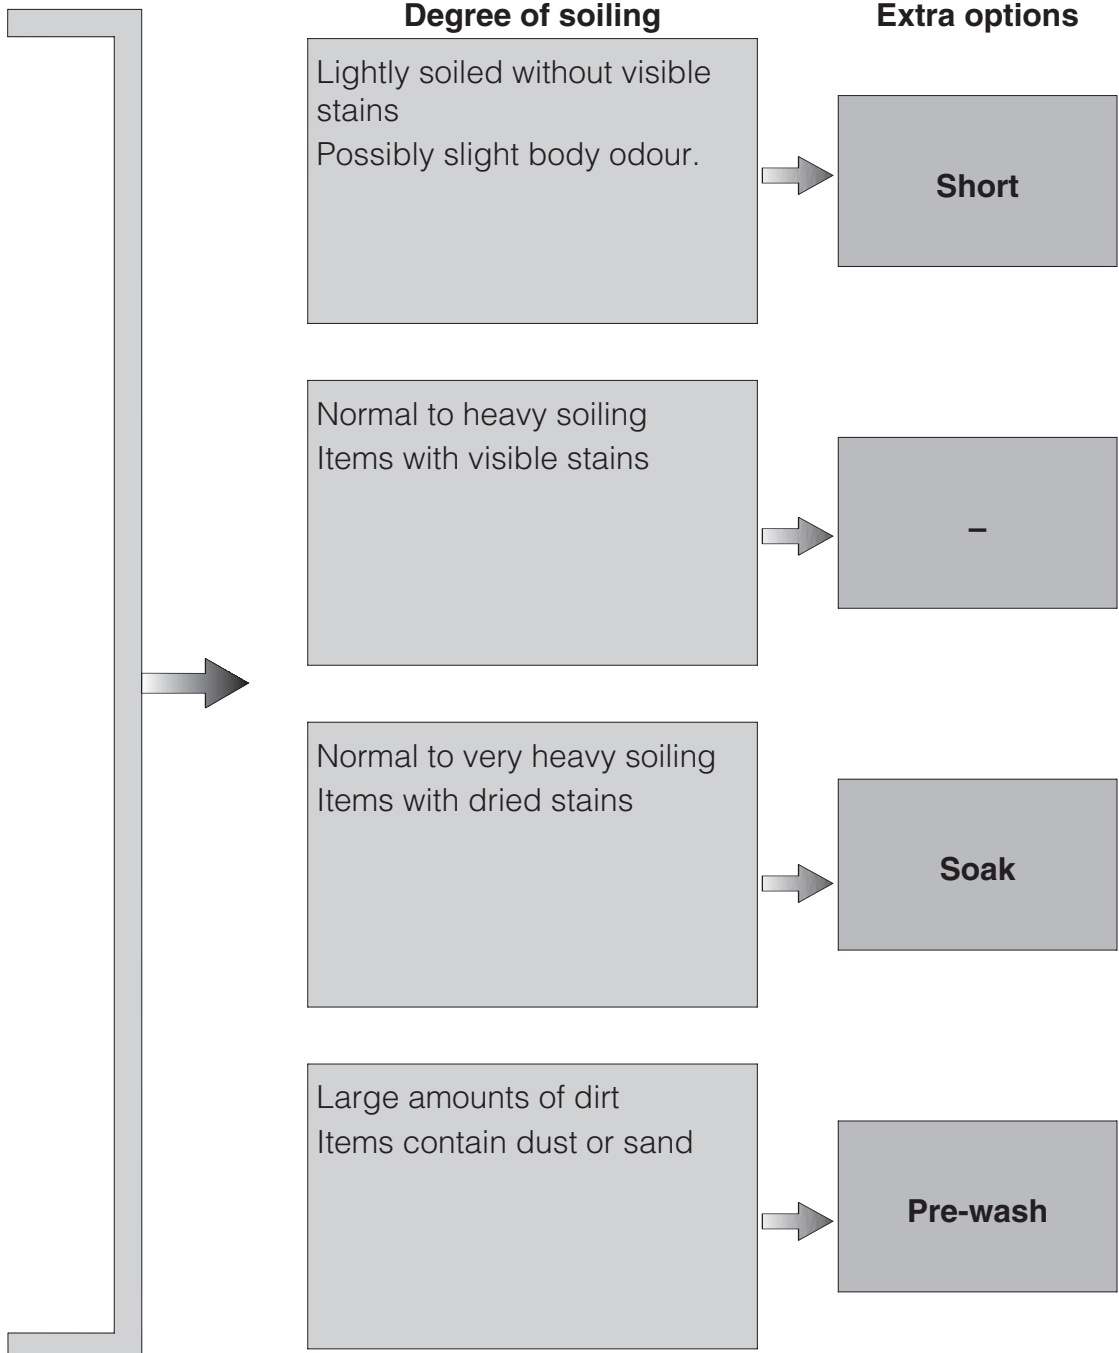

Extra options

Short

For light to nomal soiling with no visible staining.

The duration of the main wash is reduced.

Soak

For heavily soiled and stained items with protein stains (e.g. blood, fats and oils, cocoa).

- The soaking time can be programmed to between 30 minutes and two hours in 30-minute steps.
- The factory default setting is one hour.

See "Soak" in the "Settings" chapter.

Water plus


The water level in the main wash and the rinses will be increased if the Water plus option is selected.

However, you can select other settings for *Water plus*. These are described in "Settings menu".


Pre-wash

For laundry with large amounts of dirt e.g. dust, sand.

Selectable Extra options:

	Short	Soak	Water plus	Pre-wash
Cottons	X	X	X	X
Minimum iron	X	X	X	X
Delicates	X	X		X
Dark garments	X			X
Woollens 				

Final spin speed

Programme	rpm
Cottons	1400
Minimum iron	1200
Delicates	400
Darks and denim	1200
Woollens 	1200
Separate rinse/Starch	1400
Drain/Spin	1400

You can reduce the final spin speed. However, you cannot select a final spin speed higher than that shown in the chart above.

Rinse and interim spin

There is a spin after the main wash and between the rinses. A reduction in the final spin speed will also reduce the interim spin speed. For the programme *Cottons* with a spin speed of 400rpm, an additional rinse is introduced.

To omit rinse and interim spin and the final spin (No spin)

- Select the setting *No spin* via the *Spin* button.

The water will drain away and the machine will go straight into the anti-crease stage. An additional rinse is introduced for the programmes *Cottons* and *Minimum iron* in this setting.

- Press the *Door* button and take out the wet garments.

or

- Turn the programme selector to *Drain/Spin*.
- Take note of the set spin speed.
- Press the *Start* button.


Delay start

Delay start allows you to delay the start of a programme from 15 minutes up to a maximum of 23 hours and 45 minutes. This allows you to make use of night-time economy electricity rates, for example.

Delaying the start of a programme

- Select the programme you want and then press the *Delay start* button.

The display shows:

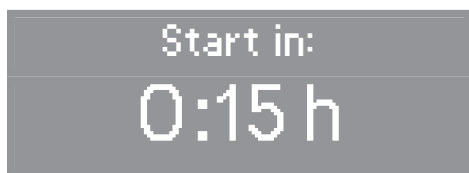

- Each press of the *Delay start* button extends the delay time by 15 minutes.

If the *Delay start* button is held in, the time is automatically set to 23 hours and 45 minutes.

Correct entered delay start time

- Turn the programme selector to *Finish*.
- Select the required wash programme again.
- Press the *Delay start* button and enter the time again.

Start delay start time

- Press the *Start* button.

The selected time will count down in the display and the wash programme will be started.

Delete delay start time


You can delete the delay start time and start the selected programme straight away.

- Press the *Delay start* button.

Programme chart

Cottons		95°C, 60°C, 40°C, 30°C	Max. load 7.5 kg
Item	Cottons, linens or cotton mixed fabrics, e.g. table linen, towelling, underwear, T-shirts etc.		
Note for test institutes: Short programme: 3.5 kg load and <i>Short</i> Extra option			
Minimum iron		60°C, 40°C, 30°C	Max. load 3.5 kg
Item	Synthetics, mixed fibres and easy care cottons.		
Note	Reduce the spin speed for fabrics which crease easily.		
Delicates		40°C, 30°C	Max. load 2.5 kg
Item	For delicate garments made of synthetic fibres, mixed fibres and rayon. Curtains, including net curtains, specified as machine-washable by the manufacturer.		
Notes	<ul style="list-style-type: none">– Dust in curtains usually makes using a programme with a pre-wash advisable.– For items which crease easily, deselect the spin.		
Dark garments		40°C	Max. load 3.0 kg
Item	Black and dark garments made from cotton, mixed fibres and denim.		
Notes	<ul style="list-style-type: none">– Wash inside out.– Denim often contains excess dye and will run during the first few washes. Wash light and dark coloured items separately.		

Programme chart

Woollens 		30°C	Max. load 2.0 kg
Item	Machine-washable or hand-washable wool or wool blend fabrics. If the care label does not specify a temperature, wash using the cold setting.		
Note	Reduce the spin speed for fabrics which crease easily.		
Separate rinse/Starch		Max. load 7.5 kg	
Item	<ul style="list-style-type: none">– For rinsing hand-washed items.– Table cloths, napkins and overalls that require starching.		
Notes	<ul style="list-style-type: none">– Reduce the spin speed for items which crease easily.– The laundry should be washed but not treated with fabric conditioner.		
Drain/Spin			
Notes	<ul style="list-style-type: none">– Drain only: Set spin speed to <i>No spin</i>.– Make sure you select the appropriate spin speed.		

Garment care label symbols

Washing

The figure quoted in the tub is the maximum temperature the garment can be washed at.

	No bar under the symbol = normal agitation
	One bar under the symbol = reduced agitation
	Two bars under the symbol = much reduced agitation
	Hand wash (If no temperature is specified, use the lowest temperature or cold)
	Do not wash

Examples of programme selection

Programme	Care label
Cottons	
Minimum iron	
Delicates	
Dark garments	
Woollens	

Drying

The number of dots indicates the drying temperature

	Normal temperature
	Low temperature
	Do not tumble dry

Ironing

The number of dots indicates the ironing temperature

	approx. 200°C
	approx. 150°C
	approx. 110°C
	Do not iron













Professional cleaning

	Dry clean only. The letters indicate the type of cleaning agent required.
	Professional Wet Clean only
	Do not dry clean

Bleaching

	Any oxidising bleaching agent can be used
	Only use an oxygen-based bleach or a non-chlorine bleach
	Do not bleach

Programme sequence

	Main wash		Rinses		Spinning	
	Water level	Wash rhythm	Water level	Rinses	Interim spin	Final spin
Cottons		Ⓐ		2-3 ²⁾	✓	✓
Minimum iron		Ⓒ		2-3 ³⁾	✓	✓
Delicates		Ⓓ		3	–	✓
Darks and denim		Ⓑ		3	–	✓
Woollens 		Ⓕ		2	✓	✓
Separate rinse/Starch	–	–		2	–	✓
Drain/Spin	–	–	–	–	–	✓
See the next page for legend.						

 = Low water level

 = Medium water level

 = High water level

Ⓐ = Intensive rhythm

Ⓑ = Normal rhythm

Ⓒ = Gentle rhythm

Ⓓ = Sensitive rhythm

Ⓔ = Ultra sensitive rhythm

Ⓕ = Handwash rhythm

This machine has fully electronic controls with automatic load recognition. It takes in the right amount of water required for the programme depending on the amount of laundry and its absorbency rate. This means that programme cycles and durations can vary.

The programme sequences outlined in the chart are based on the basic programme with a full load. Extra options which can be selected have not been taken into account.

The display shows the stage the programme has reached.

Special features in the programme sequences:

Anti-crease:

The drum will continue to rotate for up to 30 minutes after the programme end to avoid creasing. Exceptions: There is no crease protection in the *Woollens* programme.

The washing machine door can be opened at any time.

2) A third rinse is carried out if:

- there is too much foam in the drum
- a spin speed lower than 700 rpm has been selected
- *Without spin* has been selected

3) A third rinse is carried out if:

Without spin has been selected

Changing the programme sequence

Cancelling a programme

You can cancel a programme at any time after it has started.

- Turn the programme selector to *Finish*.

The suds will be pumped away.

If you want to remove the laundry:

- Press the *Door* button.

If you want to select a different programme:

- Switch the machine off with the ① button.
- Switch the washing machine back on again.
- Check if there is still detergent in the detergent dispenser drawer. If necessary, refill detergent.
- Turn the programme selector to the required programme.
- Press the *Start* button to start the programme.

Interrupting a programme

- Switch the machine off with the ① button.

To continue with the same programme:

- Switch the machine on again with the ① button.

Change

Programme and temperature

After the start of a programme, it is no longer possible to select a different programme.

Spin speed

Once a programme has started, you can change the spin speed up until the final spin begins.

Extra options

It is possible to select or deselect the *Short* and *Water plus* Extra options up to 5 minutes after the programme has started.

Adding or removing laundry after a programme has started

- Press the *Door* button to open the drum door.
- Add or remove items.
- Close the drum door.

The programme will continue automatically.

Please note:

Once a programme has started, the machine cannot recognise any adjustment to the load.

For this reason, if laundry is added or removed after the start of a programme, the machine will always complete the programme cycle assuming a full load.

This can increase the programme running time shown in the display.

The door cannot be opened if:

- the suds temperature is above **55°C**.
- the water is above a certain level.
- the programme has reached the *Spin* stage.


If you press the *Door* button when the above conditions are present, the following will appear in the display:


🔒 **Door locked**

Detergent

The correct detergent

All modern detergents produced for automatic front loading washing machines are suitable. Refer to the manufacturer's label on the packaging to get information on the use and the dosage.

	Detergent for universal fabrics*	Detergent for coloured fabrics*	Detergent for delicates	Special detergent *	Proofing agent**	Fabric softener
Cottons	X	X	–	–	–	X
Minimum iron	X	X	–	–	–	X
Delicates	X	X	X	–	–	X
Darks and denim ¹⁾	X	X	X	–	–	X
Woollens 	–	–	–	X	–	X
Separate rinse/Starch	–	–	–	X	–	X
Drain/Spin	–	–	–	–	–	–

- 1) Use liquid detergent
- 2) Use powder detergent
- * Miele special detergents:
Washing detergents which were specifically designed for certain programmes or items (e.g. Miele CareCollection).
- ** Only use proofing agents which are stated by the manufacturer as being "suitable for use on membrane textiles" as these consist of fluorochemical compounds. **Do not** use proofing agents which contain paraffin. Fill the detergent drawer  with proofing agent.

All modern detergents produced for automatic **front loading** washing machines are suitable. Use dispensing aids, e.g. balls, if these are supplied with the detergent. Tablets are suitable for full loads, but note that it may be impractical to reduce tablets for smaller loads. Some tablets do not dissolve as rapidly as others, and may not be suitable for programmes with short durations.

Do not use biological detergents on silk as the enzymes may damage the silk! Instructions for use and recommended dosage amounts are given on the detergent packaging.

For programmes without Pre-wash or Delay start, liquid detergent can either be dispensed placing a ball-shaped container (commonly provided by the detergent manufacturer) straight onto the laundry load or alternatively dispensed through the detergent dispenser drawer. For programmes with Pre-wash or Delay start (where applicable), an additional liquid detergent dispenser insert (Material number 6134691) is available from Miele.

Detergent

The right amount to dispense will depend on the following:


- The quantity of the laundry
- The soiling level of the laundry
 - Lightly soiled
No visible dirt or stains. Possibly slight body odour.
 - Normally soiled
Visibly dirty and/or just a few slight stains.
 - Heavily soiled
Stains and soiling clearly visible.
- The water hardness level.
Check with your local water supplier if you do not know the hardness level in your area.

Water softener

A water softener can be used to cut down on the use of detergents in hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.

Use a quantity of detergent as for soft water.

Washing with several components

If you wash using several components (e.g. special application detergents), we recommend always dispensing the agents into compartment  in the following order:

1. Detergent
2. Water softener
3. Stain remover

This way the agents are distributed more evenly.

Fabric conditioners and liquid starch


Fabric conditioners

make garments soft to handle and help prevent static cling when tumble drying.

Starch

stiffens and gives body to items of laundry, e.g. shirts, tablecloths and bed linen.

Automatic dispensing of fabric conditioner or liquid starch to laundry at the end of a programme

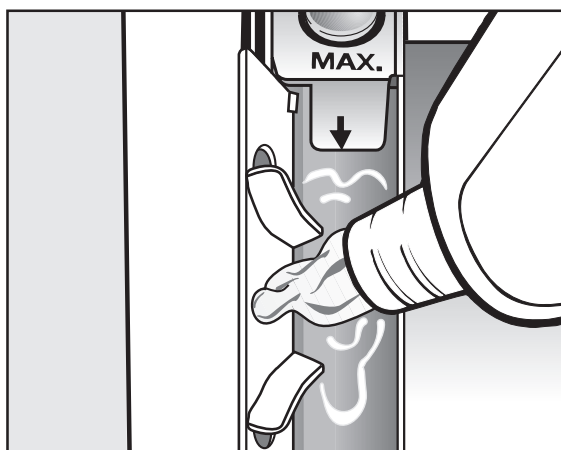

- Add the fabric conditioner or the liquid starch to compartment ☼. **Do not exceed the maximum level mark.**

It will be automatically dispensed in the last rinse. At the end of the programme a small amount of water remains in the fabric conditioner compartment ☼.

If starching frequently, thoroughly clean the dispenser compartment, especially the siphon tube and fabric conditioner channel, regularly. See "Cleaning the detergent dispenser drawer". Do not use powder starch formulations or viscous liquid starch in the compartment as it will clog up.


Adding fabric conditioner or starch separately


- Dispense in accordance with manufacturer's instructions on the packaging.
- Add powder or viscous starch to compartment U. Add the fabric conditioner or liquid starch to compartment ☼.
- Turn the programme selector to *Separate rinse/Starch*.
- Select a spin speed.
- Press the *Start* button.

Colour run and dye removers/dyes

- Do not use colour run or dye removers in this machine.
- Dyes suitable for use in domestic washing machines can be used. However, please note that the salt used in the dyeing process can cause corrosion to stainless steel components in the machine if you dye frequently. Follow the manufacturer's instructions carefully.


Cleaning and care

 Disconnect the machine from the mains electricity supply and withdraw the plug from the socket before cleaning the machine.

 The washing machine must not be hosed down.

External casing and fascia panel

- Clean the casing with a mild non-abrasive cleaning agent or soap and water using a well wrung-out cloth. Wipe dry with a soft cloth.
- The drum can be cleaned using a suitable proprietary stainless-steel cleaning agent following the manufacturer's instructions on the packaging.

 Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaning agents. These might damage plastic surfaces and other components because of the chemicals they contain.


Extra cleaning

Carry out a hot wash (70°C or above) with powder detergent approx. every 6 weeks to help prevent deposits building up in the machine. These can occur when washing is mainly done at low temperatures, and also lead to unpleasant smells. If you have no reason to wash occasionally at this high temperature, then run a Cottons 95°C programme with detergent but no laundry at regular intervals.


Cleaning the detergent dispenser drawer

The two main detergent compartments of the dispenser drawer are self-cleaning.


The drawer should be removed and cleaned regularly for hygiene reasons.

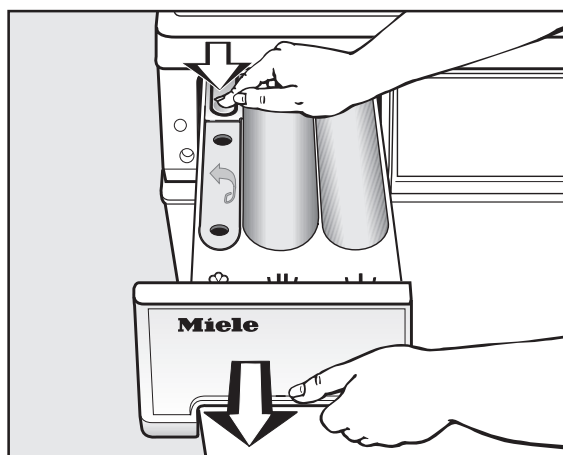

- Pull out the detergent dispenser drawer until a resistance is felt. Press down the release catch and at the same time pull the drawer right out of the machine.
- Clean the detergent drawer with warm water.

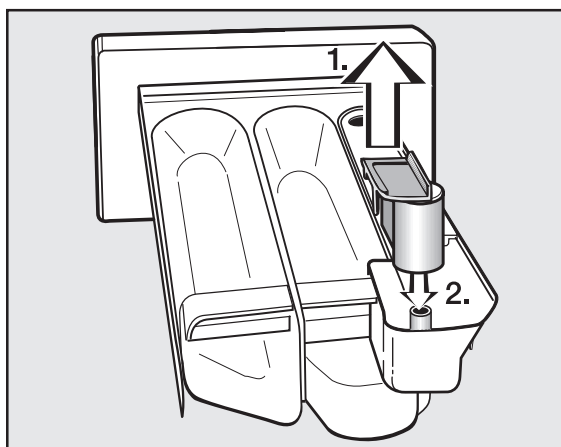


■ Clean the siphon.

 1. Remove the siphon from compartment  and rinse under warm running water. Clean the siphon tube in the same way.
2. Replace the siphon.

If starching frequently, thoroughly clean the siphon and siphon tube regularly. A build-up of starch will cause them to get clogged.

Cleaning the detergent dispenser drawer housing

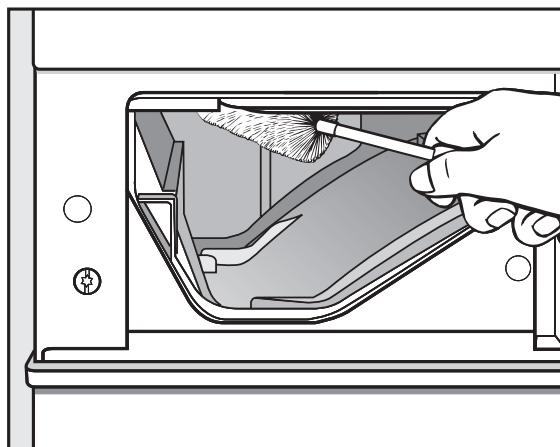

- Use a bottle brush to remove detergent residues and limescale from the jets inside the detergent dispenser drawer housing.


Cleaning and care

Cleaning the filter in the water inlet

The washing machine has a filter to protect the water inlet valve.

The accessible filter in the union in the open end of the inlet hose should be checked every six months, or more often if there are frequent interruptions to the external water supply.

- First turn off the tap.
- Unscrew the threaded union connecting the free end of the inlet hose to the tap.

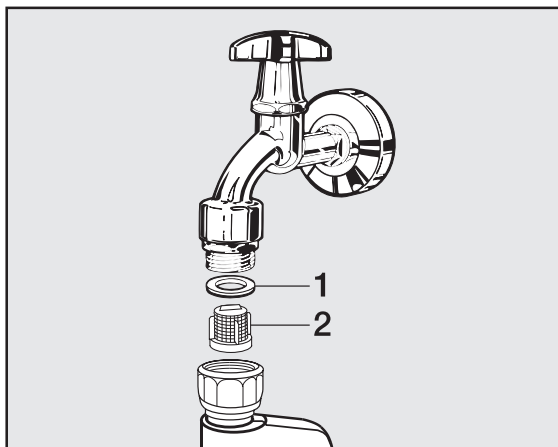

- Remove the rubber seal **1** from the recess.
- Using pointed pliers, take hold of the plastic filter bar **2** and remove.
- Clean the plastic filter.
- Put the filter and seal back in the reverse order and reconnect the hose.


Turn on the tap and check the connection is watertight. If water drips out, tighten the connection.

Never forget to put the filter back in place after cleaning.

What to do if . . .

With the aid of the following guide, minor problems can be easily corrected without contacting Miele. Please note that a call-out charge will be applied for unnecessary service visits where the problem could have been rectified as described in these Operating instructions.





Please note:

 Repair work to electrical appliances must only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

The programme does not start

Problem	Possible cause	Remedy
The display remains dark and the indicator lights for the programme buttons are not lit up.	There is no power to the machine.	Check whether <ul style="list-style-type: none">– the mains plug is plugged in and switched on.– the fuse or circuit breaker has tripped.
You are asked to enter a code.	Access via a code has been activated.	Enter the code and confirm the entry. Deactivate the code if you do not wish this message to appear in the display the next time the machine is switched on.
The display is dark.	The display has switched off automatically to save energy (Standby mode).	Press any button. Standby comes to an end.


Problem solving guide

Fault messages in the display		
Problem	Possible cause	Remedy ①
 Fault Check drainage system	<ul style="list-style-type: none"> – The water outlet is blocked or restricted. – The drain hose has been fixed too high. 	<ul style="list-style-type: none"> – Clean the drain filter and the drain pump. – The maximum delivery head is 1 m.
 Fault Water intake Open stopcock	<ul style="list-style-type: none"> – The water inlet is blocked or restricted. 	Check whether <ul style="list-style-type: none"> – the tap is opened wide enough. – the inlet hose is kinked.
 Waterproof activated Close stopcock	The water protection system has reacted.	Call Miele
 Technical fault Call the Service Department	There is a fault.	Start the programme again. If the fault message appears again, contact Miele.
The following will flash in the display: Anti-crease alternately with Chk detergent	Excessive foam has built up during washing.	Use less detergent next time and follow the manufacturer's instructions on dosage given on the packaging.

① To switch off the fault message: Switch the washing machine off with ① button.

General problems		
Problem	Possible cause	Remedy
The machine shakes during the spin cycle.	The machine feet are not level.	Level the machine (see "Installation").
The laundry has not been spun properly and is still wet.	The machine detected an imbalance during the final spin and reduced the spin speed automatically.	Include both large and small items in the load as this will give better distribution.
The laundry has not been spun satisfactorily.	The spin speed selected was too low.	Select a higher spin speed next time.
The pump makes strange noises.	This is not a fault! These noises occur at the end of a pump sequence as a normal part of the operation.	
Large amounts of detergent residue remain in the detergent dispenser drawer.	The water pressure is too low.	<ul style="list-style-type: none"> – Clean the filter in the water inlet. – Select Water plus.
	Powder detergent used with water softeners can be sticky.	Add washing powder and then add the water softener.
Fabric conditioner is not completely dispensed or too much water remains in the  compartment.	The siphon tube is not correctly positioned, or is clogged up.	Clean the siphon, (see "Cleaning and care - Cleaning the detergent dispenser drawer").
The display is in a different language.	A different language has been selected in "Settings/ Language  .	Set the language you want. The flag symbol will guide you.
When laundry is dry, it feels hard to the touch.	Too vigorous wash action.	Programme in gentle action and more water.
	Not enough detergent used.	Increase detergent dose to prevent limescale build up in laundry.
	No fabric conditioner used.	Use fabric conditioner in last rinse.
Power cut	Once power has been restored to the appliance, push the  button to continue the programme.	

Problem solving guide

An unsatisfactory wash result		
Problem	Possible cause	Remedy
Liquid detergent does not give the required result.	Liquid detergents do not contain bleaching agents. They do not remove fruit, coffee and tea stains.	<ul style="list-style-type: none">– Use a general purpose detergent containing a bleaching agent.– Add stain remover to the compartment .– Never put stain removers and liquid detergent together in the dispenser drawer.
Grey, greasy particles cling to washed laundry.	Insufficient amounts of detergent were used. The laundry was heavily soiled with grease.	<ul style="list-style-type: none">– Use more detergent.– Before washing the next load, run a Cottons 60°C programme with liquid detergent but without a load.
White residues which look like powder detergent are seen on dark textiles after washing.	The detergent contained compounds (zeolites) to aid water softening which are not soluble in water. These have stuck to fabrics.	<ul style="list-style-type: none">– Try and brush off the residues with a soft brush once the laundry is dry.– Wash dark textiles using a detergent which contains no zeolites. Liquid detergents usually contain no zeolites.– Use the <i>Dark garments</i> programme.

The drum door does not open when you press the Door button

Possible cause	Remedy
The machine is not connected to the electricity supply and/or is not switched on.	Insert the plug in the socket and switch on and / or switch the machine on with the ① button.
Access via a code has been activated.	Deactivate the code as described in the " <i>Settings</i> menu".
Power outage	Open the drum door as described in the next section.
The door was not correctly engaged.	Press hard against the lock side of the drum door and then press the <i>Door</i> button.
There is still water in the drum and the machine is unable to drain.	Clean the drain filter and drain pump as described in the next section.


For safety reasons, the drum door cannot be opened if the suds temperature is higher than 55°C.

Problem solving guide


Opening the drum door in the event of a blocked drain outlet and/or power failure

- Switch the washing machine off.

There is a filter flap opener behind the detergent drawer fascia panel.

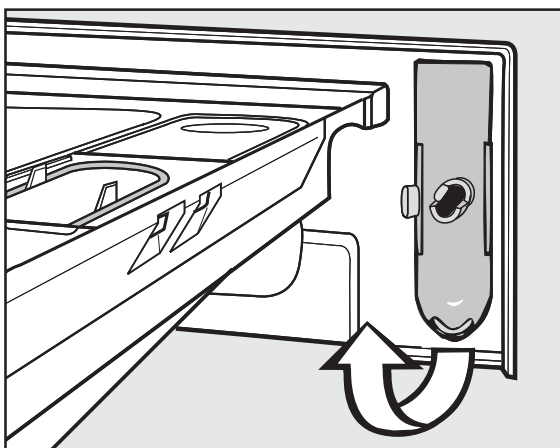


- Remove the opener.

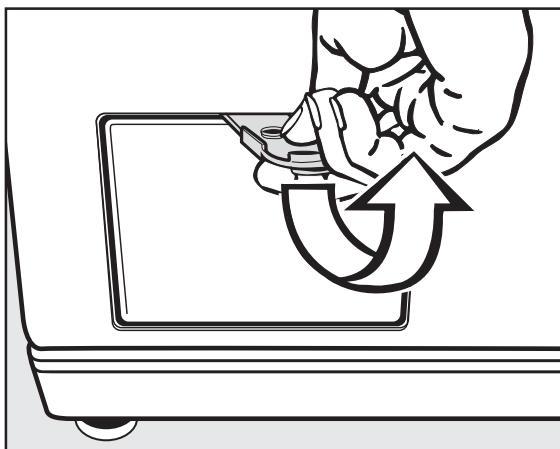

- Use it to open the access flap.

Blocked drain outlet

If the drain outlet is clogged, more water will be retained in the machine (**up to 25 litres**).

 **Caution:** If laundry has been washed at a high temperature, water draining out of the machine will still be hot. Danger of scalding!

Procedure for draining the machine

- Place a suitable container under the access flap.

When draining water from the machine, do **not** unscrew the drain filter completely or take it right out.




- Turn the drain filter lid round until water runs out.

To interrupt the flow of water:


- Tighten the drain filter back up again.

Problem solving guide

Once the flow of water ceases:

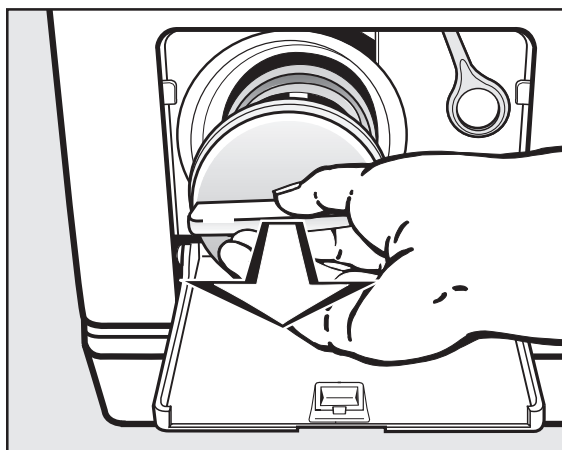

- Remove the drain filter completely.
- Clean the drain filter thoroughly.

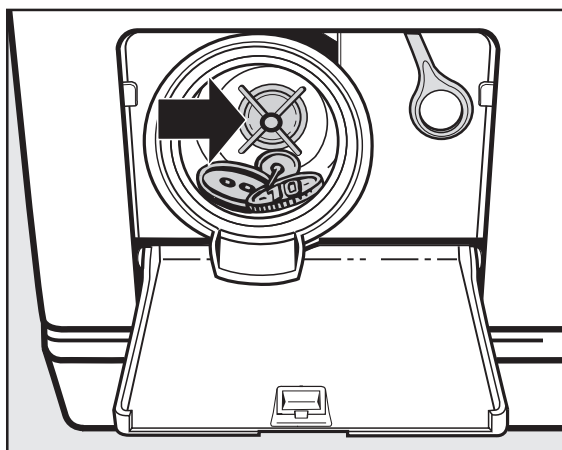


- Remove any foreign objects (e.g. buttons, coins, etc.) and fluff. Turn the impeller by hand to check that it rotates freely. Any foreign object causing an obstruction should be removed.
- Put the drain filter back in place and secure.

⚠ Make sure the drain filter is securely tightened. Otherwise there is a risk of water leakage during use.

To activate the ball valve and prevent a loss of washing detergent, pour approx. 2 litres of water through the detergent dispenser drawer after cleaning the drain filter.

Opening the drum door

⚠ Always make sure that the drum is stationary before reaching into the machine to remove laundry. Reaching into a moving drum is extremely dangerous.

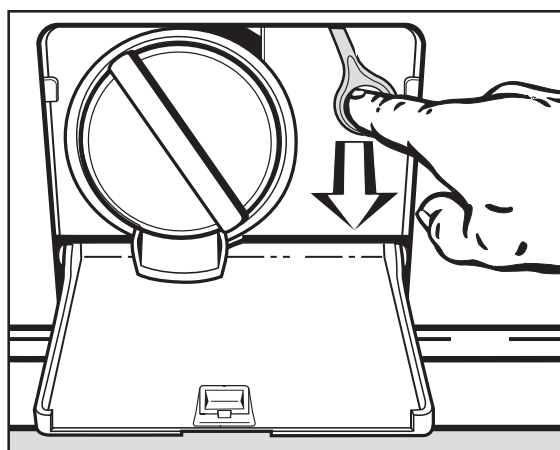


- Pull the emergency release downwards (see illustration). The drum door will open.

After sales service

In the event of any faults which you cannot remedy yourself, please contact:

- your Miele Chartered Agent or
- Miele (see back cover for contact details).

When contacting Miele, please quote the model and serial number of your appliance, both of which are shown on the data plate visible at the top inside the door above the porthole glass when the door is open.

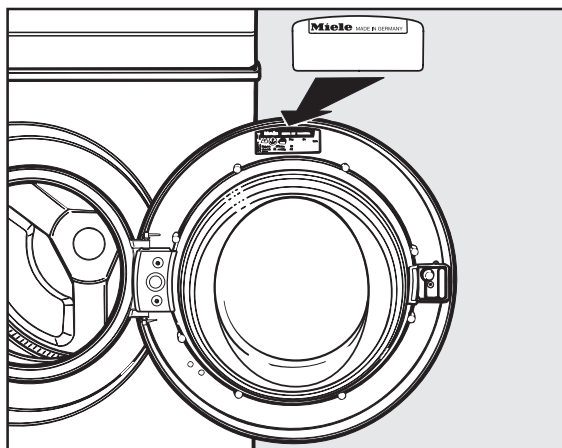

Future updates (PC)

The indicator light marked PC allows a service technician to update your machine in future years.

If, for example, new programmes are developed or new fabrics are introduced, a Miele service technician will be able to modify existing programme cycles accordingly.

Miele will provide information when such developments become available.

Appliance warranty

The appliance has a manufacturer's warranty of 2 years.


See the warranty card supplied with the machine for further details.

Optional accessories

Optional accessories for these washing machines are available from Miele.

Please note that telephone calls may be monitored and recorded to improve our service.

Front view

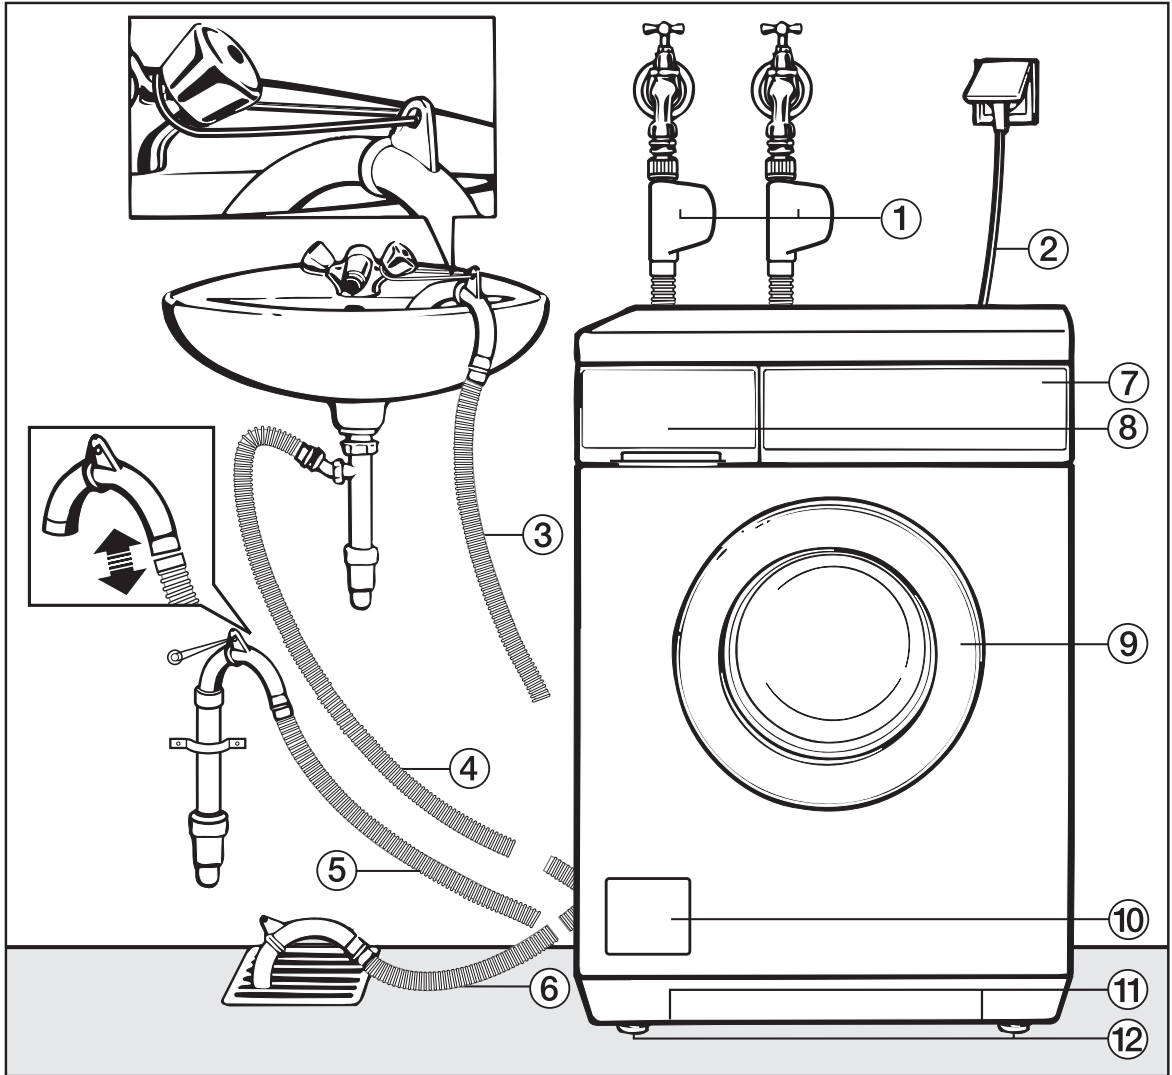

① Inlet hoses with "Waterproof system" for cold water and hot water connection

② Electrical connection

③ - ⑥ Flexible drain hose (with detachable swivel elbow)

⑦ Fascia panel with controls

⑧ Detergent dispenser drawer

⑨ Drum door


⑩ Flap for fluff filter, drain pump and emergency release

⑪ Handle recesses for moving the machine

⑫ Four height adjustable screw feet

Installation and connection

Rear view

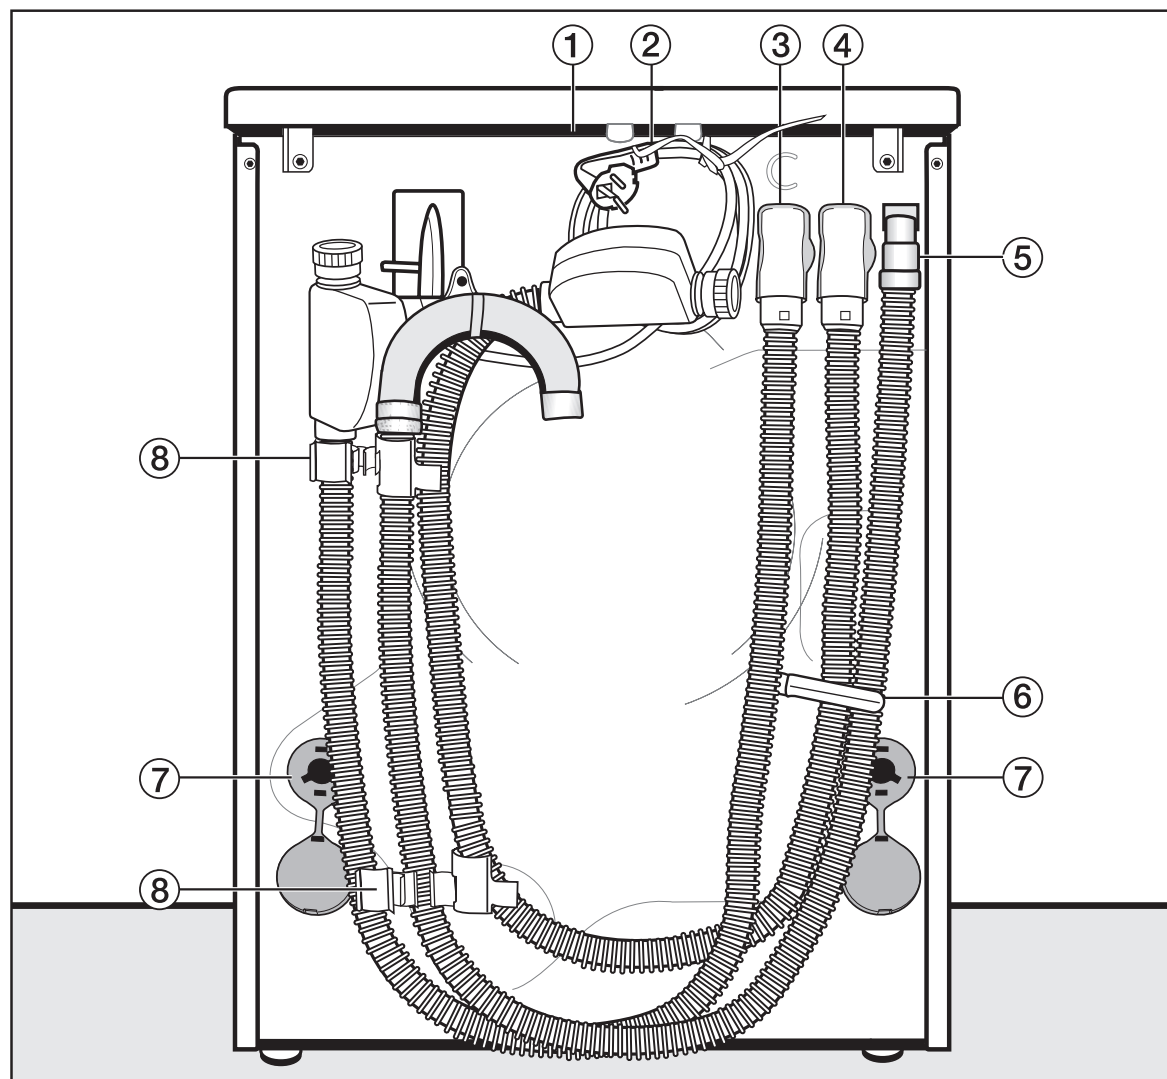

- ① Protruding lid for holding when moving the machine
- ② Electrical connection
- ③ Inlet hoses with "Waterproof system" for cold water
- ④ Inlet hoses with "Waterproof system" for hot water
- ⑤ Drain hose
- ⑥ Transport brackets for inlet and drain hoses
- ⑦ Transit bar covers
- ⑧ Transport brackets for inlet and drain hose and restraining clips for transit bars

Installation surface

A concrete floor is the most suitable installation surface for a washing machine, being far less prone to vibration during the spin cycle than wooden floorboards or a carpeted surface.

Please note:

- The machine must be level and securely positioned.
- To avoid vibrations during spinning, the machine should not be installed on soft floor coverings.

If installing on a wooden joist floor:

- We recommend a plywood base (at least 59x52x3 cm). The base should span several joists and be bolted to the joists and not only to the floorboards. Check for the presence of pipes and cables first.

If possible, install the machine in a corner as this is usually the most stable part of the floor.


⚠ If the machine is installed on a raised plinth, it **has to be secured** against slippage during spinning using retaining clips (available from Miele).

Installing the washing machine

To manoeuvre the machine out of its packing case to its installation site, hold it by the edge of the lid where it protrudes to the rear of the washing machine as well as by the handle recesses at the front.


⚠ Ensure that the machine feet and the floor are dry to prevent the machine from slipping during the spin cycle.

Removing the transit bars

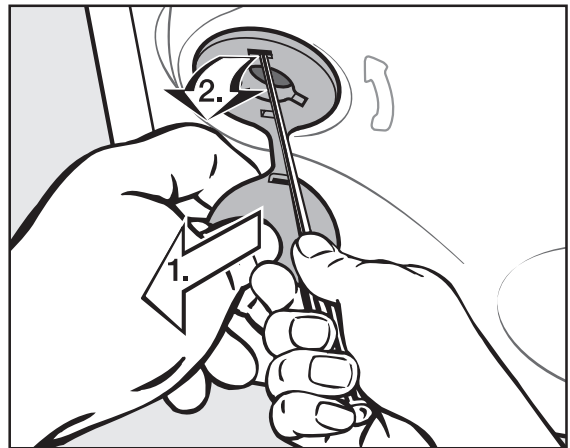


- To remove the left and right covers
 1. Pull off the transit bar covers and
 2. use a screwdriver to prise out the covers.


Installation and connection

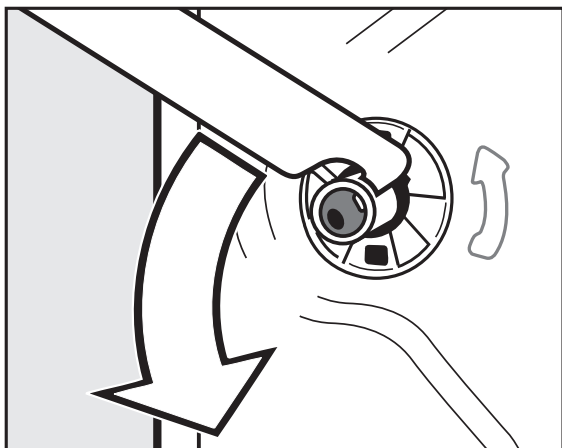


- Using the spanner supplied, turn the left-hand transit bar 90°, then

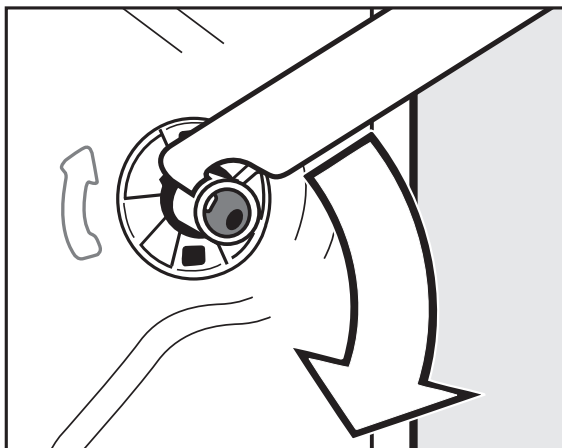


- Turn the right-hand transit bar 90°, then

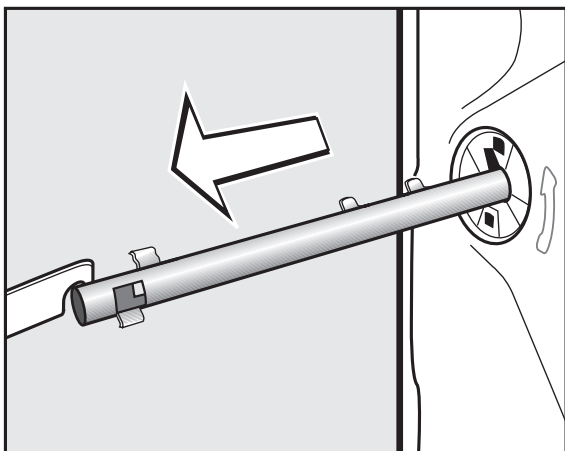


- withdraw the transit bar.

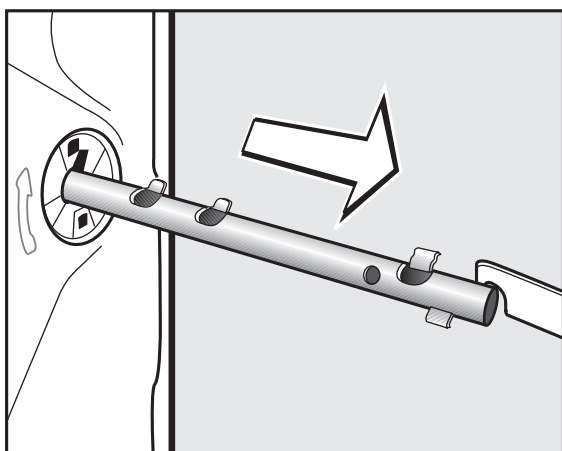


- withdraw the transit bar.


 To avoid the risk of injury, the holes for the transit bars must be covered after the transit bars have been removed.

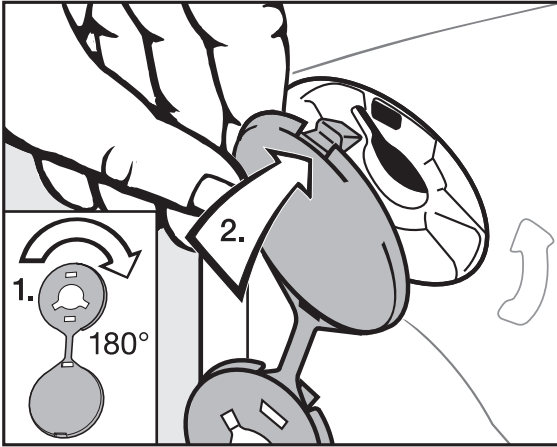

- Fit the covers onto the two holes.

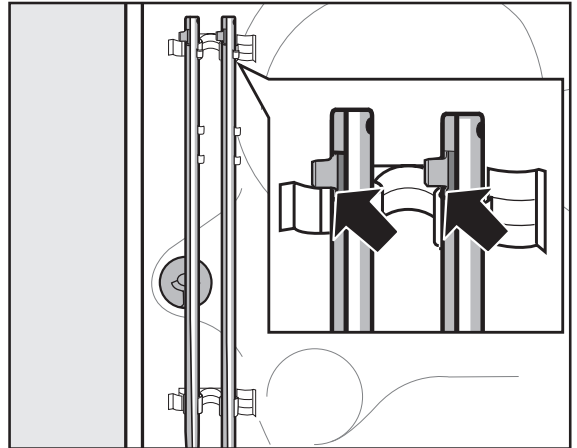

- Secure the transit bars to the back of the washing machine. Make sure that the upper hooks are above the retainers.

 The machine must not be moved without the transit bars in place. Store them as shown or keep them in a safe place for future use. They must be re-fitted if the machine is to be moved again (e.g. when moving house).

Re-fitting the transit bars

Re-fitting is carried out by reversing the procedure.

Installation and connection


Levelling the machine

The machine must stand perfectly level on all four feet to ensure safe and proper operation.


Failure to level the machine can result in the machine "banging" in the spin cycle or "walking" across the floor during operation.

Screwing out and adjusting the feet


The four adjustable screw feet are used to level the machine. All four feet are screwed in when the machine is delivered.

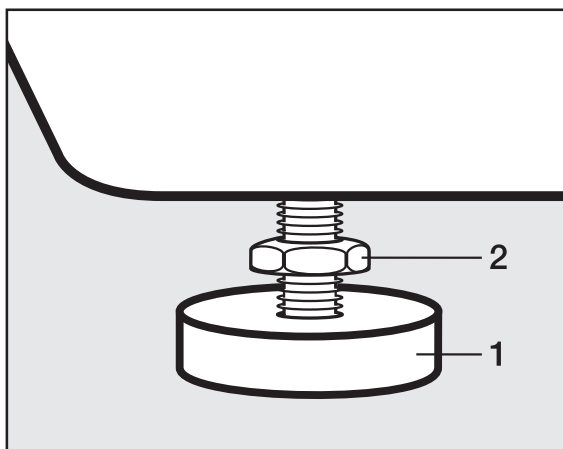

- Using the spanner supplied, turn counter nut **2** in a clockwise direction. Then turn counter nut **2** together with foot **1** to unscrew.

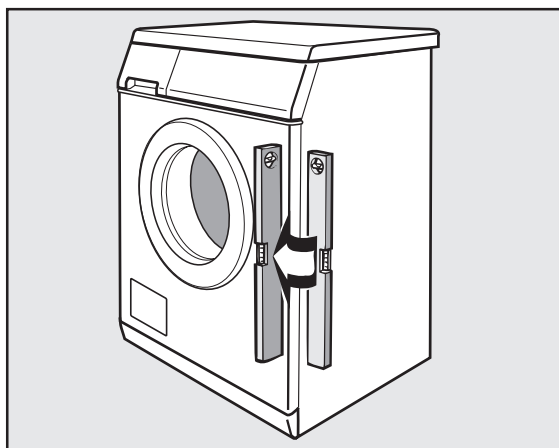

- Use a spirit level to check the machine is standing level.
- Hold foot **1** securely with a pipe wrench. Turn counter nut **2** again using the spanner supplied until it sits firmly up against the housing.

 All four counternuts must be firmly up against the housing. Please also check this for the feet which did not need adjustment. Otherwise there is the danger of the machine moving about.

Building under a continuous worktop / in a kitchen run

- A special building under conversion kit* is required.
The machine lid must be replaced by a cover plate. To ensure electrical safety, the cover plate must be fitted. **

N.B.**

If you wish to push your machine under a worktop and there is space to do this **without removing the lid**, the conversion kit is not necessary. Otherwise the conversion kit is essential.

- For installation under a work surface 900/910 mm from the floor, a raising kit* is required.
- Connections for electricity, water and drainage should be installed in such a way that they remain accessible when the machine is in place.

Fitting instructions are supplied with the conversion kit.


All parts marked* are available from Miele.

The fitting of cover plates and stacking kits must only be undertaken by qualified and competent persons, in accordance with the instructions supplied with the kit.

Washer and Dryer stack

A Miele tumble dryer can be stacked with the washing machine. A stacking kit* is necessary and can be purchased from Miele.

Please note

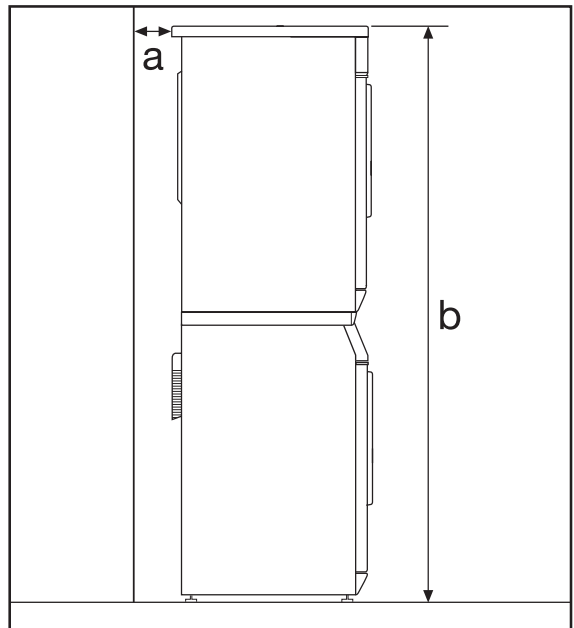

a Safety distance to wall:
at least 2 cm

b Height:
Stacking kit with pull-out shelf:
approx. 169 cm
Stacking kit without pull-out shelf:
approx. 170 cm

⚠ A washer and dryer should never be stacked without using the proper stacking kit. Doing so is extremely dangerous as the dryer may vibrate off of the washing machine during use.

Installation and connection

The Miele Waterproof system

The Miele Waterproof system protects all parts of the washing machine from water damage.

The system consists of three main components:

- 1) the inlet hoses
- 2) the electronic unit and the washing machine housing
- 3) the drain hose

1) Inlet hoses

- The inlet hoses are fitted with additional electrical safety valves which work like automatic taps and are housed in the inlet hose connection boxes.
- They are pressure proof to between 7000 and 10000 kPa.
- The inlet hoses have a protective sleeve.

Any leaking water from the inlet hose is fed into the sump through the protective covering which surrounds the inlet hose as a "second skin". The float switches off the safety valves, preventing water flowing into the machine and water in the suds container is pumped away.

2) Electronic unit and washing machine housing

- Sump

Any leaking water is collected in a sump in the base of the appliance. A float switches off the water inlet valves, preventing water flowing into the machine and water in the suds container is pumped away.

- Overflow protection

This prevents the washing machine taking in too much water. If the water level exceeds a certain level, the drain pump switches on and pumps the water away.


3) Drain hose

The drain hose is protected by a ventilation system which prevents the washing machine from being emptied completely.


Connection to the water supply

⚠ The plastic casing of the safety valve contains electrical components. The Waterproof system must only be connected to its own tap. It must not be connected to mixer taps or similar and must not be fitted in areas where there is the risk of water or other liquids reaching it. A flexible metal extension hose, available from Miele as an optional extra, should be used if necessary.

Do not dip into any liquid.

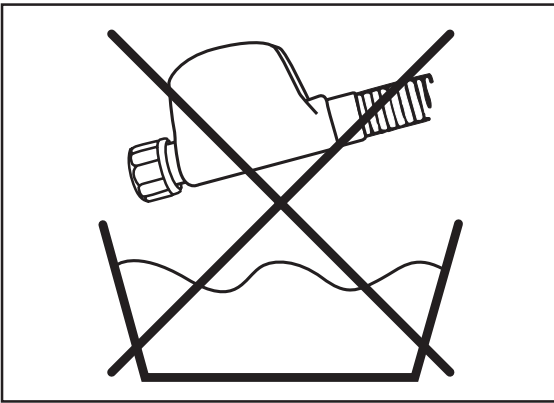

The protective sleeve of the hose

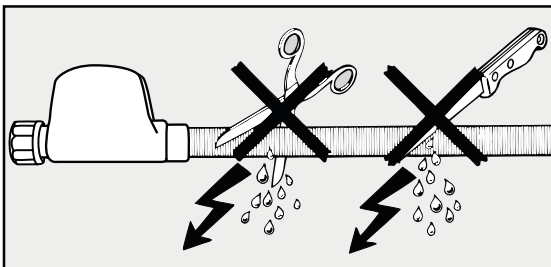

must not be damaged or kinked.

The machine should be connected to a mains water supply in accordance with local and national safety regulations. Connection to a household water softener is not recommended.

The machine is designed to operate with a flow pressure of between 100 and 1000 kPa. If it is higher than 1000 kPa, it is essential to fit a reducer valve.

Connection to the mains water supply should incorporate a mains tap with $\frac{3}{4}$ " thread. The tap should be fitted by a qualified plumber.

⚠ The connection points are subject to mains water pressure. Turn on the taps slowly and check for leaks. Correct the position of the washer and union if appropriate.

Maintenance and care

Only use a **Miele Waterproof system** hose should you need a replacement.

In order to protect the water inlet valve, the dirt filter in the water inlet valve connection must not be removed.

Extension hose

A 1.5 metre long (metal) extension hose is available from Miele as an optional extra.

This hose is tested to withstand pressures of up to 14000 kPa and can be used as a flexible extension to the water supply.

Installation and connection

The washing machine is programmed on cold water at the time of delivery. To run the machine with hot water, it needs to be reprogrammed. This is described under section "Settings menu".

The washing machine must always be connected to the mains water supply (inlet hose with blue dots).

Cold water connection (mains water supply)

The inlet hose with blue dots is used for mains water connection.

Hot water connection

The inlet hose with red dots is used for connection to the hot water supply.

Useful hints when connecting to the hot and cold water supply.

- The maximum temperature at the tap must not exceed 60°C. The ideal temperature is 55°C.
- When connected to the hot (and cold) water supply, after some time the washing machine will switch over to the mains (cold) water supply if no hot water is being supplied. However, this can lead to a poor washing result.

The conditions for connection are described on the following pages.

This appliance incorporates backflow protection complying with ATS 5200.101.
No further backflow protection required for connection to the water supply.

Connection to the drainage system

The machine drains via a drain pump with a delivery head of 1 metre*. The drain hose must not be kinked as this restricts drainage. The swivel elbow at the end of the hose can be turned in either direction, or can be detached if required, with a sharp twist and pull.

If required, the drain hose can be extended to a length of 5 m. The necessary parts can be purchased from Miele.

* For a delivery head more than 1 m (up to a max. of 1.8 m), a second duo-drain pump is available with the corresponding kit from Miele.


Drain hose connection:

1. Direct into a sink or basin:

Please note the following:

- Hook the hose over the edge and secure.
 - Make sure that the water can drain away freely without hindrance. Otherwise there is a risk of water overflowing or of some of the drained water being sucked back into the machine.
2. Connected securely to a plastic drain pipe with a rubber nipple. There is no need to use a non-return valve.
 3. Connected securely to a standpipe.
 4. Connected securely to a floor gully.

Please note:

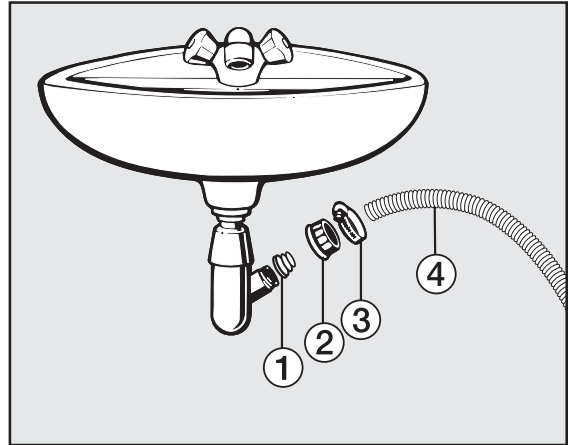

① Adapter

② Nut

③ Hose clip

④ End of the hose

- Fit adapter ① to the sink drain outlet using nut ②.
- Attach the end of the hose ④ to adapter ①.
- Use a screwdriver to tighten hose clip ③ up close to the nut.

Installation and connection

Electrical connection

The washing machine is supplied with a mains cable with moulded plug for connection to a 230V mains supply.

The voltage, rated load and plug rating are given on the data plate. Please ensure these match the household mains supply.

The accessibility of the plug must always be ensured in order to separate the washing machine from the mains.

All electrical work should be carried out only by a suitably qualified and competent person, in strict accordance with national and local safety regulations.

For extra safety, it is advisable to install a residual current device (RCD), with a trip current of 30 mA.

Ensure power is not supplied to the appliance until after installation work has been carried out.

Connection should be made via a suitable switching socket which is easily accessible after installation in order to separate the washing machine from the mains.

Do not connect via an extension lead. Extension leads do not guarantee the required safety of the appliance (e.g. danger of overheating).

**WARNING: THIS APPLIANCE
MUST BE EARTHED**

Technical data

Height	850 mm
Width	595 mm
Depth	615 mm
Depth with door open	993 mm
Height for building under	820 mm*
Width for building under	600 mm
Depth for building under	650 mm
Weight	98 kg
Capacity	7.5 kg dry laundry
Voltage	See data plate
Rated load	See data plate
Fuse rating	See data plate
Consumption data	see "Consumption data"
Water flow pressure minimum	100 kPa (1 bar)
Water flow pressure maximum	1000 kPa (10 bar)
Inlet hose length	1.60 m
Drain hose length	1.50 m
Connection cable length	1.60 m
Drain pump head max.	1.00 m
Drain pump length max.	5.00 m
Test certificates awarded	See data plate

* Including building under kit. See "Installation and connection".

Consumption data

Consumption data for the nominated energy labelling programme according to AS/NZS 2040.1 & AS/NZS 2040.2 Standard


	Load	Consumption data			
		Energy in kWh	Water in litres	Duration Normal Cold Water	
Cottons	40°C	7.5 kg	0.56	62	2 h 24 min

Notes for test institutes:

- Detergent **must** be dispensed via the detergent dispenser drawer.

Consumption data can vary from the nominal values given depending on water pressure, water hardness, water inlet temperature, room temperature, type and volume of load, fluctuations in the electricity supply and any Extra options selected.

Consumption data

		Load	Consumption data		
			Energy in kWh	Water in litres	Duration
Cottons	95°C	7.5 kg	2.20	55	2 h 19 min
	60°C	7.5 kg	1.05	55	2 h 09 min
	60°C	3.5 kg	0.64	45	
	40°C ¹⁾	7.5 kg	0.56	62	2 h 24 min
	40°C	3.5 kg	0.45	45	59 min
Minimum iron	40°C	3.5 kg	0.50	50	1 h 05 min
Delicates	30°C	2.0 kg	0.38	69	59 min
Darks and denim	40°C	3.0 kg	0.60	52	1 h 12 min
Woollens 	30°C	2.0 kg	0.23	39	39 min

Note for test institutes:

¹⁾ AS/NZS 2040.1 & AS/NZS 2040.2

Consumption data can vary from the nominal values given depending on water pressure, water hardness, water inlet temperature, room temperature, type and volume of load, fluctuations in the electricity supply and any additional options selected.

Settings menu

The programmable functions are used to alter the machine's electronics to suit changing requirements. Programmable functions can be altered at any time.

To open the Settings menu

- Close the washing machine.
- Set the programme selector to *Finish*.
- Place the display fascia onto the panel.
- Switch on the washing machine.
- Press both buttons ► and **OK** simultaneously until the following appears in the display:



You are now in the *Settings* menu.

Selecting settings

- Press the ► button until the desired setting appears in the display.
- Press the **OK** button to select the setting.

Select option

- Press the ► button until the desired option appears in the display.
- Press the **OK** button to select the option.

A tick ✓ will appear beside the option to show that it has been set.

Changing values

Some settings have no options but the set value can be changed.

Each press of the ► button increases the set value. Once the maximum setting has been reached, the value jumps at the next press of the button to the minimum setting.

The set value is confirmed by pressing the **OK** button.

To leave selected setting

In settings with options you can find the point **back** ↶.

To close the Settings menu

- Switch off the washing machine.

Language 🚩

The display can be set to appear in one of several different languages.

You can change the language for the display via the "Language" sub-menu. The flag after the word *Language* acts as a guide if a language you do not understand has already been set. The set language will be marked with a tick ✓.

Gentle action

Activating gentle action reduces the drum action and is suitable for washing slightly soiled items more gently.

Gentle action can be activated for the *Cottons* and the *Minimum iron* programmes.

The machine is delivered with the Gentle action setting deactivated.

A tick ✓ will appear beside the option to show that it has been set.

Soak

You can set a soaking time with the *Soak* button from between 30 minutes and two hours (in 30 minutes steps).

The selected soaking time will precede the actual wash programme by selecting the extra function "Soak".

The *Soak* button is delivered with a soaking time of one hour.

A tick ✓ will appear beside the soaking time to show that it has been set.

Water plus

This programmable function is used to select the water intake setting for the *Water plus* Extra option.

There are three different options:

Water +

(the machine is delivered with this option selected as standard)

The water level is increased in the wash and rinse stages.

Extra rinse

An extra rinse is introduced.

Water+ & Extra rinse

The water intake is increased in the wash and rinse stages and an extra rinse is carried out.

A tick ✓ will appear beside the option to show that it has been set.

Longer pre-wash

The pre-wash for the *Cottons* programme can be extended by 6, 9 or 12 minutes.

The default setting for the pre-wash is 25 minutes.

If you require a longer pre-wash, this can be extended.

A tick ✓ will appear beside the option to show that it has been set.

Settings menu

Suds cooling

When this is activated, additional water flows into the drum at the end of the main wash to cool the suds down. Hot suds can damage plastic drainage pipes.

Suds cooling takes place when temperatures of 95°C and 75°C are selected.

Suds cooling should be activated:

- to prevent the danger of scalding if the drain hose is hooked over the edge of a sink or basin.
- where the drainage pipes do not comply with DIN 1986.


The machine is delivered with Suds cooling deactivated.

Lock code

The code prevents your machine being used without your knowledge.


When the code has been activated, you have to enter a code after switching the washing machine on. Otherwise the washing machine cannot be operated.

To activate the code

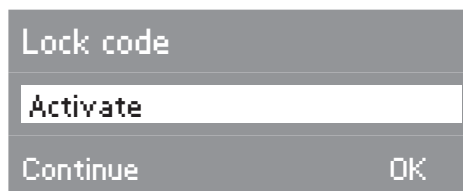

- Press the **OK** button.
- You are asked to enter a code. The code is **125** and cannot be altered.

To enter the lock code

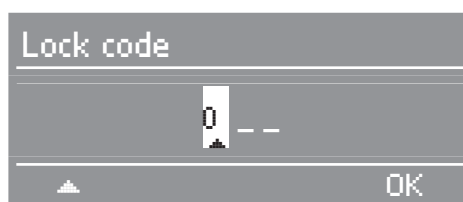

- Enter the first number with the ► button. Confirm by pressing the **OK** button. Now enter the second number.
- Repeat the process until all three numbers have been entered.



- Confirm the lock code by pressing the **OK** button or, if you want to correct it, press the ► button.

The following will appear in the display:




Once the machine is switched off, it can only be used again if the code is entered.

To use the washing machine when the code is activated

When the machine is switched on again, the display will request the lock code.

- Enter code 125 as described above and confirm the entry.

The following will appear in the display:

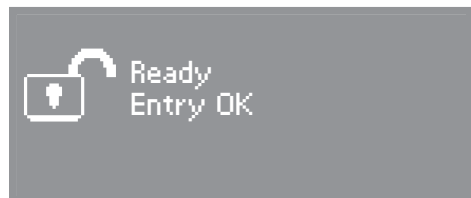

The washing machine is now unlocked and ready for use.

To deactivate the code

Proceed as for activating the lock code.

The following will appear in the display:



Buzzer

When the buzzer function has been activated, an audible tone sounds at the end of the programme.

There are two volumes:

Off

(the machine is delivered with this option selected as standard)

The buzzer is switched off.

Normal

The buzzer sounds at *normal* volume at the end of the programme.

Loud

The buzzer sounds at *loud* volume at the end of the programme.

A tick ✓ will appear beside the option to show that it has been set.

Settings menu

Keypad tone

An audible tone sounds each time a button is pressed.

The machine is delivered with the keypad tone switched off.

A tick ✓ will appear beside the option to show that it has been set.

Display brightness

There are ten different display brightness settings.

The machine is delivered with the display brightness on setting 5.

The bar chart shows you the setting.

This will change as soon as a different setting is chosen.

Display contrast

There are ten different display contrast settings.

The machine is delivered with the display contrast on setting 5.

The bar chart shows you the setting.

This will change as soon as a different setting is chosen.

Text brightness

There are ten different brightness settings for the lights (Start, Delay start, Extras and Spin speed).

The machine is delivered with the lights brightness on setting 5.

The bar chart shows you the setting.

This will change as soon as a different setting is chosen.

Standby display

To save energy, the display and the lights will go out and the indicator light for the *Start* button will start flashing slowly.

The display will always go out

- if a programme is not selected within 10 minutes of the machine being switched on.
- 10 minutes after the end of a programme.

Pressing one of the buttons switches the display and the lights back on again.

You can also choose whether the display and the lights remain on or off during the course of a programme.

On

The standby function is switched on . The display and the lights will be switched off 10 minutes after the start of the programme.

Not in current programme

(the machine is delivered with this option selected as standard)

The standby function is switched off. The display and the lights remain switched on during the course of the programme.

Memory

If an Extra option has been selected for a programme, or the recommended temperature or spin speed has been altered, the machine will store the changes in memory at the start of a programme.

When this programme is chosen again, these settings will appear in the display.

The machine is delivered with the memory function deactivated.

Anti-crease

Anti-crease helps prevent creasing if the laundry is not normally removed immediately after the end of a programme.

The drum will continue to rotate for up to 30 minutes after the programme end. The washing machine door can be opened at any time.

On

(the machine is delivered with this option selected as standard)

Anti-crease is activated.

Off

Anti-crease is deactivated.

Settings menu

Water intake

You can choose between cold water and hot water intake.

Cold

(The machine is delivered with this option selected as standard)

The washing machine will be operated with cold water.

Hot + cold

To save energy, warm water will be used during the main wash if a temperature of 40°C or higher is selected. Exceptions: The programme *Woolens*, only use cold water.

You can heat up your water with cheaper, energy saving options, e.g. gas, solar power, oil. The temperature has to be below 60°C.



For hygienic reasons, the intake hose with the blue marking **must be connected** to the cold water main.

Miele washing machines offer perfect care for your laundry and feature a wide range of special programmes designed to suit the fabric being washed. And now Miele have developed a range of specialist CareCollection detergents and conditioning products to offer you a complete package for cleaning and caring for your laundry.

The Miele CareCollection detergents and conditioning products are listed below. You can order these and many other useful products via the internet at:



All the products can also be ordered from Miele (see back cover for contact details).

CareCollection

Miele specialist detergents

Fabric softener

Miele's fabric softener will give your laundry a fresh, natural fragrance. It makes garments soft to handle and prevents static build-up during tumble drying.

For delicates

This liquid detergent is ideal for the gentle treatment of delicate fabrics, such as wool and silk. Its special formulation cleans effectively at temperatures as low as 20°C, while protecting the colour of your delicate garments.

UltraWhite

This multi-purpose powder detergent has excellent stain removal properties and is suitable for white and light coloured laundry as well as heavily soiled coloured items.

Sensitive skin

Miele's sensitive skin laundry detergent has been specifically tested and formulated for consumers with sensitive skin and allergies. This detergent is powerful and deep cleaning for optimal stain removal, even at 40°C, leaving your laundry with a fresh, mild fragrance.

Optional accessories

UltraColor

Available in a liquid and powder form, this detergent is particularly suitable for cleaning coloured and dark garments. The special formulation offers effective stain removal, even at low temperatures, while helping to prevent colours fading.

Sportswear

The Miele sportswear detergent is designed to clean sportswear whilst taking care of the special microfibres used in these garments. It will help to neutralise and remove odours whilst protecting the colour of the fabric and preventing static build-up.

Down Items

This special-purpose detergent contains a mild tenside and has been specially formulated to keep down-filled items supple and to give them bounce.



Miele Australia Pty. Ltd.

ABN 96 005 635 398

Melbourne:

1 Gilbert Park Drive

Knoxfield, VIC 3180

Telephone: 1300 464 353

Fax: (03) 9764 7149

Sydney:

3 Skyline Place

Frenchs Forest, NSW 2086

Telephone: 1300 464 353

Fax: (02) 8977 4249

Brisbane:

39 Harvey Street North

Eagle Farm, QLD 4009

Telephone: 1300 464 353

Fax: 1800 799 578

Adelaide:

83-85 Sir Donald Bradman Drive

Hilton, SA 5033

Telephone: 1300 464 353

Fax: 1800 799 578

Perth:

205-207 Stirling Highway

Claremont, WA 6010

Telephone: 1300 464 353

Fax: 1800 799 578

www.miele.com.au



Miele New Zealand Limited

Unit L, 10-20 Sylvia Park Road

Mt. Wellington, 1060, Auckland

New Zealand

Telephone: 0800 264 353

Fax: 0800 463 453

www.miele.co.nz

Germany

Miele & Cie. KG

Carl-Miele-Straße 29

33332 Gütersloh