

Caring for your Scale

Clean the scale with a slightly damp cloth. Do not use a corrosive cleaner.

The scale is not waterproof. Do not immerse directly into water.

Store your scale in a clean, dry location. Dust, dirt and moisture can accumulate on the weighing sensors and cause the scale to malfunction.

Do not attempt to dismantle the scale. It does not contain parts that may be repaired by the user.

Do not subject the scale to extreme temperatures.

Maximize battery life, by turning the scale off immediately after use.

Remove the batteries if the scale is not being used for a long period of time.

Specifications

Model 1341

Capacity: 5000g / 11lb:0.4oz / 5000ml / 176.4 fl.oz.

Graduation: 1g / 0.1lb:oz / 1ml / 0.1fl.oz

Tare weigh function

Measures water volume in ml or fl.oz

Countdown timer with alarm

Blue backlit LCD readout

Brushed stainless steel surface, 1 inch thick

Touch sensors

Auto Off

Battery: 3 x AAA alkaline Batteries (not included)

Battery Warning

BATTERY WARNING:

INTERNAL BURNS / CHOKING HAZARD

Swallowing batteries may lead to serious injury or death (severe burns can occur within 2 hours).

IMMEDIATELY SEE A DOCTOR

Emergency Telephone Numbers

AUSTRALIA 000 NEW ZEALAND 111

Poisons Information Centre

AUSTRALIA 13 1126 NEW ZEALAND 0800 764 766

KEEP BATTERIES OUT OF REACH OF CHILDREN

Dispose of batteries immediately and responsibly

- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Remove exhausted batteries from the product.
- Remove batteries from the battery compartment when not in use.
- Never throw batteries in a fire or attempt to open up their outer casing.

Made in China for

Proper Housewares



A division of
SUPERTEX INDUSTRIES PTY LTD
- a wholly-owned Australian company
ABN 85 003 833 029

For further information -

website: www.supertex.com.au

Email: customerservice@supertex.com.au

Telephone: (02) 8756 3000

Facsimile: (02) 9748 6622

N2853



PLEASE DO NOT
LITTER



RECYCLABLE
PAPER

V2.1305

proper[®]
5kg
slimline digital
kitchen scale

In your home since 1920

Model 1341

Name: Easyhang



 
Operating Instructions

Instructions for use


Remove all packaging before first using the scale.

1. Purchase three AAA alkaline batteries. After removing the battery compartment cover underneath the scale, insert the batteries, making sure the positive (+) and negative (-) terminals are correctly positioned.


Replace the battery compartment cover and turn the scale the correct way up.




FUNCTION SYMBOLS

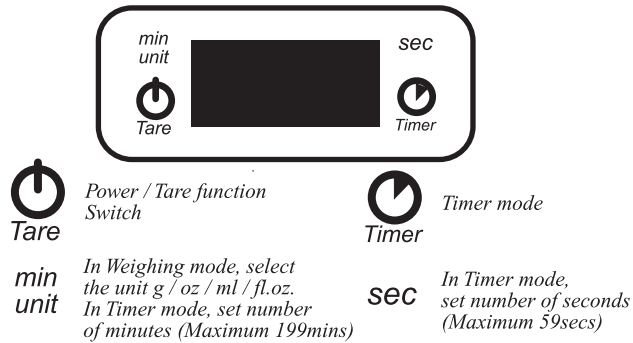 


1. Place the scale on a hard, level surface. If you intend using a bowl or container, place it on the platform first before switching it on.

2. To turn the scale on, touch . The scale defaults to weighing mode and the display is backlit.

 
3. The full display appears for about 2 seconds before it 'zeroes' indicating it is now ready for use.

4. To select your preferred unit measure, touch . The screen displays in the following sequence - g...oz...ml...fl oz

Note: In 'oz' unit, if the item being weighed is more than 16oz, the display changes to lb:oz.


5. Place the object or ingredients directly onto the platform, or in the bowl or container placed securely on the platform. Ensure the scale readout displays zero before weighing, otherwise, touch  to reset it.


6. The scale displays the weight and if left idle, the backlight, then the scale will automatically switch off.

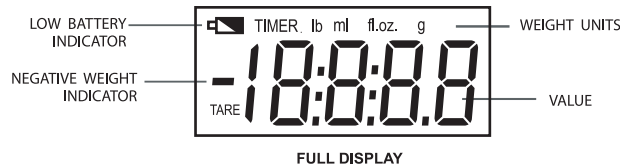


To use the tare weighing function

This scale allows the separate weighing of items as they are added onto the scale. No need to empty the bowl or container!

- After weighing the first item and with this first item still on the scale, touch  to reset the display to zero.
- Add the second item to the scale. The scale will now display the weight of the second item only.
- If you have additional items to weigh, repeat Steps 1. and 2. The total weight of all the items on the scale, (including the bowl or container if using one), must not exceed the capacity of the scale, which is 5000g / 11lb:0.4oz / 5000ml / 176.4 fl.oz.

4. The total weight of the items on the scale, (including the container or bowl if using one), can be obtained by first touching , then removing all items from the scale. The total weight will be displayed as a negative figure.

To turn the scale off

Turn the scale off at any time by holding down  for approximately 2 seconds. If left idle, the backlight, then the scale will automatically turn off.

Overloading

If the scale is overloaded, i.e. more than stated maximum capacity, 'EEEE', will be displayed. Remove the weight immediately or damage to the scale may occur.

 
Low battery indicator



The low battery symbol will appear on the readout indicating that the batteries need to be changed. Once shown, the scale will shut down completely. Replace the batteries with fresh, good quality Alkaline ones, making sure the positive (+) and negative (-) terminals are correctly positioned.

To measure water


1. Place the container or jug on the scale before switching it on.

2. After you have turned the scale on, touch  and select either the 'ml' or 'fl.oz' unit.

 3. The scale is ready for use when it is 'zeroed'





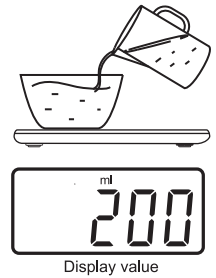



4. Begin pouring water into the container, checking the display at the same time. Stop when the volume reaches your need.

5. Tare feature functions as normal





Counting down timer function

(Maximum time span 199 mins 59 secs)

- Turn the scale on, then touch  to enter timer mode.
- Select  and/or  to set the amount of time required.
- If you wish to change the time setting, press and hold  for 3 seconds till the display shows '00:00', then reset.
- Touch  again to activate countdown.
- If you want to pause count down, touch  then again, to restart.
- When the time elapses, the alarm will sound off. Touch any button to silence it.
- During count down, should you wish to switch to weighing mode, touch . The scale will 'zero' for weighing.
- Touch  once to return to count down mode.

Backlight

The backlight automatically switches off to conserve battery life.

To re-activate the backlight, touch either  or  once only.