



User Manual



Mini Cooler
AWB-MCR
AWB-MHC


Please read this manual carefully before using the machine
Ensure the manual is kept in a safe place for future reference



User Manual

Identification	1
Attention.....	2
Operating Steps	3
Technical Parameters	3
Cleaning	4
Warranty Card	5

Mini Cooler AWB-MCR AWB-MHC

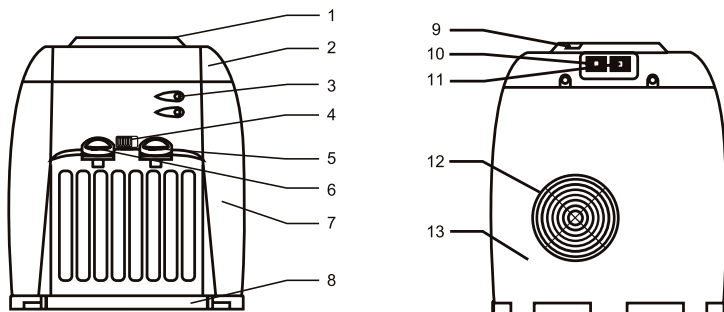

No	PART NAME	No	PART NAME
1	Bottle Supporter	8	Drip Tray
2	Upper Cover	9	Filter Cover
3	PCB Shell	10	Refrigeration Switch
4	Protect Key-Press	11	Hot Water Switch
5	Right Key-Press	12	Exhalist Meatus
6	Left Key-Press	13	Back Carapace
7	Front Carapace	14	Extra Ring for Larger Bottles

NOTE:

This machine is suitable for bottles of 1/2 litre to 12 litres and use of filtered or spring water.


This units operating temperature is from 10°C-38°C with relative humidity not higher than 90%.

CAUTION:

We adopt special airway design at the bottom of water dispenser. Don't block the airway or put the water dispenser on anything that touches against it's venting, such as carpet or a towel, or the refrigeration capacity will decline.

1. Keep this machine in a vertical position on a dry surface and place away from direct sunlight. The rear of the machine should be at least 25cm from the wall or solid object. Never put the machine on paper or foam, which could result in an unstable condition. Never put anything flammable beside the machine.
2. Don't plug in the power cord or turn on the heating switch until water runs out of the hot water tap (if applicable). Otherwise the machine could be damaged.
3. The machine must be located out of reach of young children.
4. In the case where the machine is not being used for a few days, turn off the cooling & heating switches in order to save energy.
5. In the case where the machine is not being used for a long period, unplug the power cord and drain the water from the tanks using the water outlet.
6. The machine must be connected to an earthed wall socket with a reliable creepage protection switch.
7. Clean the outside of the machine by wiping it with a clean dry cloth. Never use harsh abrasive cleaners or organic solvents on any part of the machine. Never disassemble or touch the inside structure of the machine.
8. Never pull out or plug in the unit to an ON wall power socket, always use the on/off switch on the machines control panel.
9. Regularly clean inside the tanks according to the cleaning instructions.
10. Never operate the a machine that has a damaged power cord. Return the machine to the nearest authorised service facility for repair. Do not try to repair the machine by yourself.
11. The A-weighted sound pressure level is below 70db.

1. Tear the label from the bottle
2. Vertically insert the bottle into the bottle supporter on top of the machine. Don't plug in the power cord or turn on the heating switch until water runs from the hot water tap.
3. Insert the plug into the wall socket, then turn the power switch ON.
4. Vertically pull out the water bottle with two hands when the bottle is empty, and replace it with another bottle, or refill your bottle.

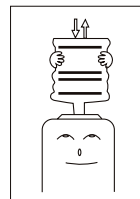

If you want to use a larger spring water bottle, remove the original grey neck attachment and attach (optional extra AWB-NEC, sold separately) for use with all bottles from 2 - 20 litres including springwater company bottles.

Technical Details

Model	Power Supply	Water Capacity		Fixed Power		Net Weight	Overall Dimensions
		Hot	Cold	Heating	Refrigeration		
AWB-MCR AWB-MHC	240V/50Hz	4 Lph >85°C	.7 Lph >15°C	420W	70W	5Kg	l 293 x w 270 x h 310mm

Switch off the power supply and unplug the power cord from the wall socket before following the instructions below.

Cleaning & Draining:

1. The machine was disinfected before departing from the factory. Cleaning the dispenser prior to installing a full bottle of water for the first time, is required.
2. Before cleaning, make sure the power switch is off and the cord is unplugged.
 - Vertically insert the bottle into the supporter on top of the machine.
 - Open the taps, let about 1 litre of water flow out into a container.
 - Remove the water bottle from the dispenser.
 - Place a large bucket beneath the drain outlet. Remove the drain cover and allow water to drain.
 - After draining, replace the drain cover.

Attention:

The machine heats water to a temperature of approximately 90°C, it can cause severe burns. Please operate the machine carefully.

Sanitation:

The machine should be sanitized with disinfectant commonly bought from a supermarket. Follow the instructions outlined for use of the disinfectant and thoroughly flush the machine as per the cleaning and draining instructions above, after disinfection. Generally this should be done every 3 months.

To Remove Mineral Deposits:

Mix 4 litres of water with 200g citric acid crystals, pour into machine and make sure the water can flow out of the hot tap. Switch on the power and heat for about 10 minutes. 30 minutes later, drain off the liquid and clean the machine with water 2 to 3 times. Generally this should be done every 3 months. Never disassemble the machine by yourself to avoid damaging the machine.

Your Aquawell 6 month replacement warranty (3 month commercial use) and water chiller warranty registration. Aquawell warrants this appliance to the first purchaser as follows and subject to the stated conditions: Any defect in the appliance occurring within the first 6 months from the date of purchase (3 month commercial use) will be replaced or repaired at our discretion.

Conditions of this Warranty:

1. This appliance must be installed in accordance with the User's Manual.
2. The Warranty extends only to repairing or replacing any component that proves to be defective in material or workmanship.
3. The Warranty does not cover defects occasioned by misuse, alterations or accident.
4. **In the unlikely event of malfunction of our product please phone our customer service line for advice on +61 8 8354 2488 outside Australia, or 08 8354 2488 in Australia.**

Thank you for your custom and we hope our product provides many years of fault free operation. To enable us to register your warranty and provide service should a problem occur, we recommend you fill out the section below and return it to us immediately.

Aquawell Warranty & Registration Card

Name ☐ commercial use ☐ domestic use

Address

Telephone (mob)

Email

Country..... Postcode

Model Serial Number

Purchase Date/...../..... Purchased From.....

.....

Do you authorise
Siena Foods to send
future promotional
material and special
offers via the supplied
email address?

☐ YES I DO (Please Tick)

Cut out and send your
registration to:
Siena Foods Pty Limited
77 - 79 Orsmond Street
Hindmarsh SA 5007



everyday well-being

Siena Foods Pty Limited
77 - 79 Orsmond Street
Hindmarsh SA 5007
Ph - +61 8 8346 9478
Fax - +61 8 8346 9181
Web - www.aquawell.com.au
Email - wellbeing@aquawell.com.au