


Scissor Lift – Operating Instructions:

Please Note: do not open or tamper with the electrics as this will void all warranty and or may cause serious injury to operators of the unit.

- 1) Check from the power indicator that the unit has sufficient charge and turn the unit ON using the key switch located on the control panel.
- 2) The lift function on the unit is operated by the up/down buttons
- 3) When ready to move pull down the steering handle, Forward/Reverse is operated by the speed control. Toggle forward to move forward & toggle backward to reverse. Steering is controlled by moving the steering handle in a sideways direction left/right
- 4) The unit is fitted with an emergency brake on the rear of the steering handle
- 5) There is a horn for attracting attention which is located directly above the emergency brake

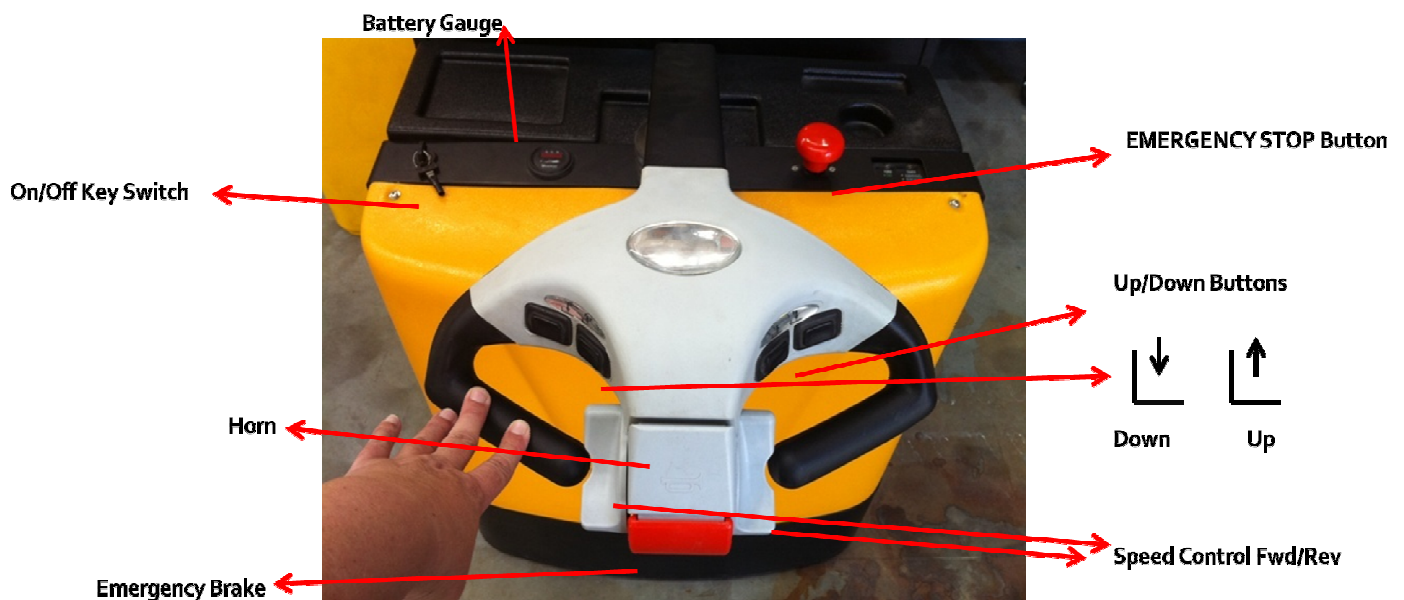

Faults:

Should you encounter any major concerns with your Scissor Lift please ensure you check the following items first:

1. Loss of drive - Ensure the battery is fully charged and or the Tiller handle has been placed back in the upright position which resets the unit, then try operating the unit and should this be successful continue operation. If not please contact your nearest Liftmaster Material Handling representative office for assistance.