

2170Pro-SS BROADCAST SPREADER

ASSEMBLY and OPERATING INSTRUCTIONS


EarthWay
EV-N-SPRED

PLEASE CALL IF YOU ARE MISSING ANY PARTS, HAVE ANY DIFFICULTY IN ASSEMBLY, OR HAVE ANY QUESTIONS REGARDING THE SAFE OPERATION OF THIS SPREADER. THIS MODEL INCLUDES **LIFETIME TECHNICAL SUPPORT**
SUPPORT HOT LINE: 574-848-7491 or 800-294-0671, EMAIL: TECHSUPPORT@EARTHWAY.COM SKYPE: EARTHWAY.TECH


HELPFUL HINTS:

- ☑ If your spreader does not spread evenly, be sure the FRONT on the gear box points to the front of the spreader. The impeller must turn clockwise. Reversing the gearbox will cause the impeller to turn counter clockwise. Clean the impeller after each use as some fertilizer may become stuck on the impeller blades and will cause uneven spreading.
- ☑ Your spreader is designed to be pushed at three miles per hour, which is a brisk walking speed. Slower or faster speeds will change the spread patterns. Wet fertilizer will also change the spread pattern and flow rate. Clean and dry your spreader thoroughly after each use. To prevent rust, please coat all metal surfaces, also inside tubes where possible, with a light oil or WD-40. Wash between the shut off plate and bottom of the hopper.
- ☑ Gears are permanently lubricated at the factory. Do not open the gearbox or dirt may enter.
- ☑ If you must use **Rock Salt** remove the agitator to prevent damage to the gearbox and remove salt from the hopper daily. **Rock Salt** will reconstitute back into a solid block over night with humidity and will damage your spreader.


IF YOUR SPREADER COMES SEMI ASSEMBLED, SKIP TO STEP #7

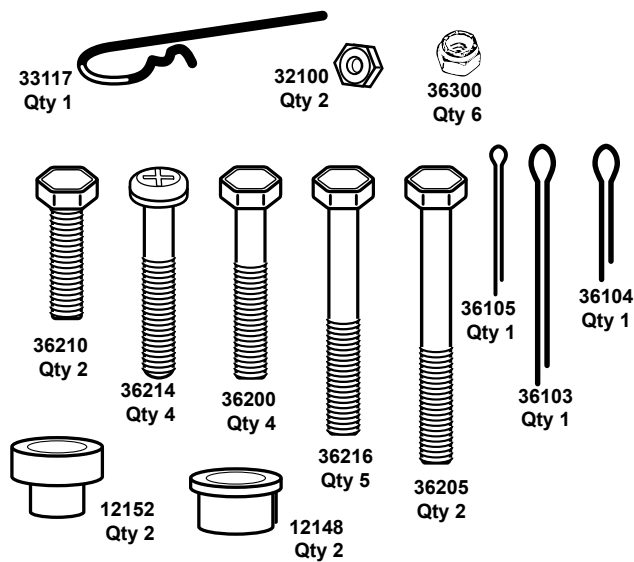

1. Remove and identify all loose parts from carton.

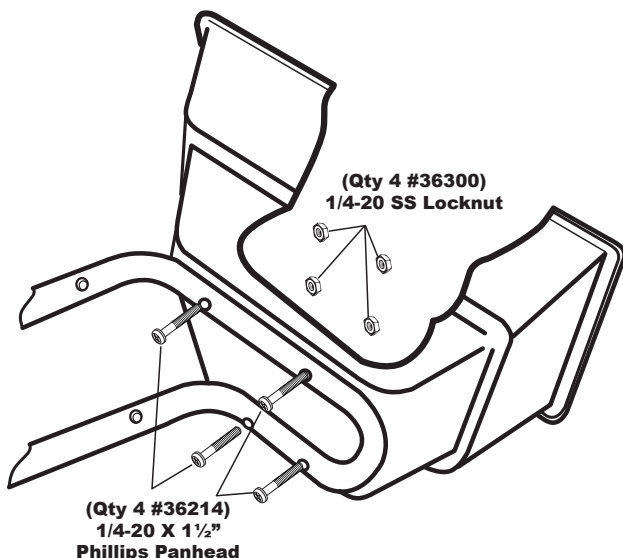


ROCK SALT and POWDERED MATERIALS should not be used in this spreader as it will damage gearbox and can void warranty.
Use only granular materials.

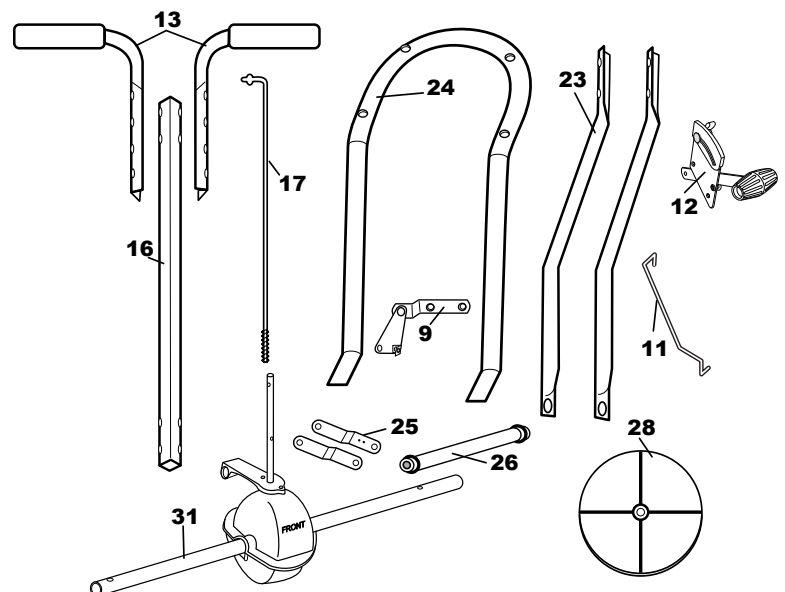


2. Position hopper on side. Install frame using (4) 1/4-20 x 1-1/2" Pan Head Phillips bolts and (4) 1/4-20 nylon insert locknuts. First put bolts through holes in frame then through holes in bottom of hopper. Secure with locknuts.
TIGHTEN THESE LOCKNUTS NOW


DO NOT TIGHTEN WITH POWER TOOLS

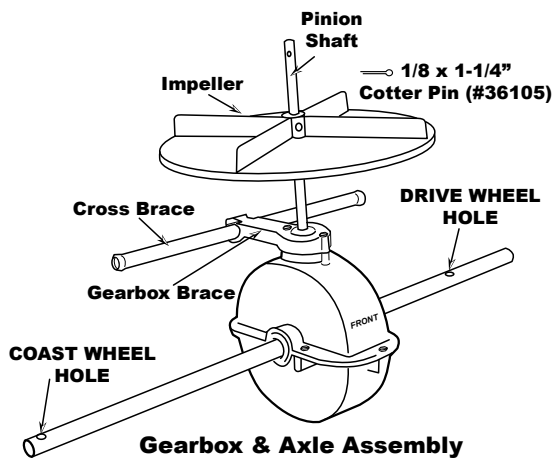


3. Install impeller onto pinion shaft. Insert 1/8" x 1 1/4" cotter pin through impeller then through pinion shaft. Use hole closest to the gear box. Spread cotter pin to prevent from falling out. Next insert Cross Brace thru the Gearbox Brace as shown above.

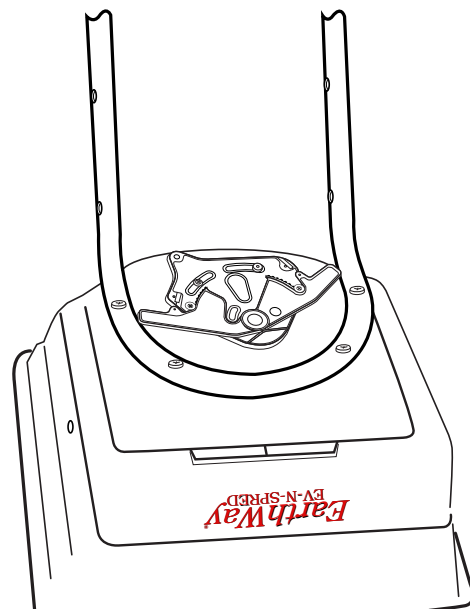

4. Install gear box by inserting the pinion shaft into hole in center of hoppers bottom. The word "FRONT" on the gearbox must point to Front of the hopper. Follow label instructions on hopper.

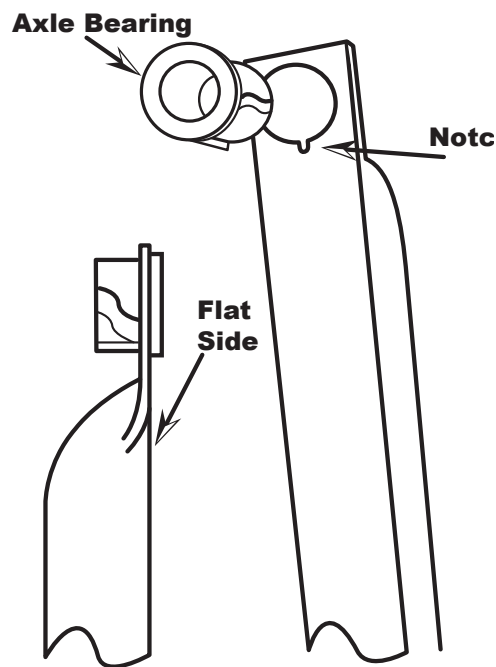


5. Install axle bearings to both lower handles. **NOTE:** Notch on bearings and lower handles. Bearings must go through flat side of lower handle.

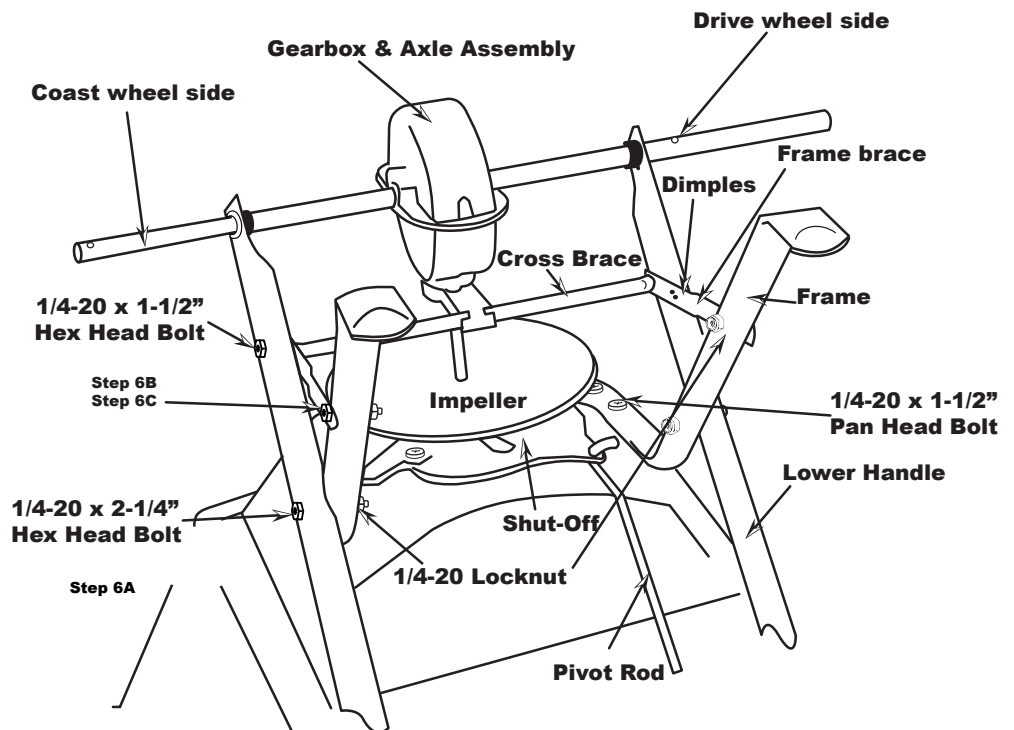

6. **A** - Install lower handles onto axle to both sides as shown. Insert 2 1/4" bolt through second hole in lower handle and through first hole in frame and install locknut. **DO NOT TIGHTEN.** **B** - Now insert 1 1/2" bolt through first hole in lower handle. Then through frame brace. **NOTE:** Dimples on frame brace must be facing toward gear box as shown. Next into threaded connector in cross brace. **DO NOT TIGHTEN.** **C** - Next insert 1 1/2" bolt through other end of frame brace and through second hole in frame install locknut.


NOW GO BACK AND TIGHTEN ALL NUTS AND BOLTS STARTING WITH FIRST STEP. DO NOT OVER TIGHTEN.

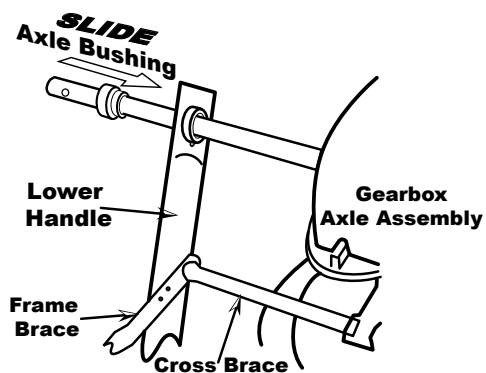


7. Slide axle bushing over axle and into axle bearing to both sides as shown.

8. Install drive wheel onto the axle and align with the cotter pin hole nearest to lower handles as shown. Insert 2" cotter pin through wheel and through axle. Bend with pliers to prevent pin from falling out.

9. Install coast wheel onto the axle fully, then using outside cotter pin hole, insert 1" cotter pin through axle (**not thru the wheel**). Bend with pliers to prevent pin from falling out.

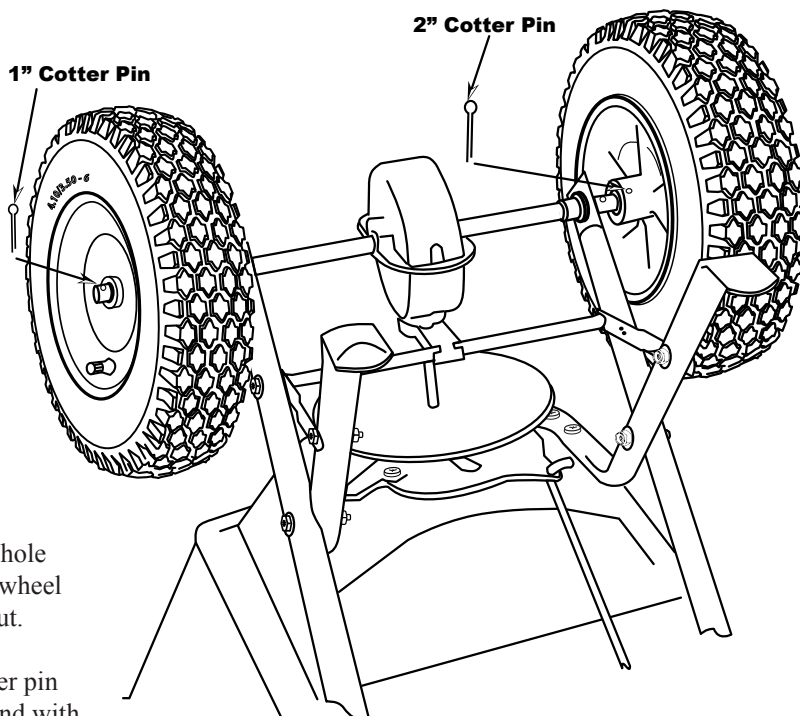

TURN SPREADER UPRIGHT ON TO WHEELS.

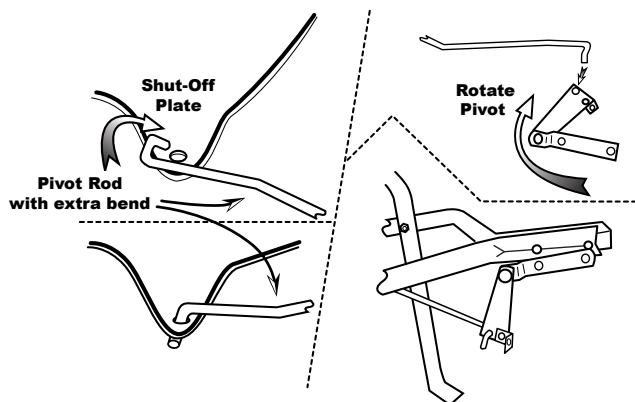

10. NOTE: BEFORE INSTALLING GAUGE AND UPPER HANDLES TO HANDLE SHAFT, UPPER HANDLES FEATURE THREE POSITIONS FOR OPERATOR'S COMFORT.

If operator chooses middle or upper positions, use handle spacer in hole nearest to handle grips.

Insert 2" bolt through upper handle, then through handle spacer through other upper handle and secure with locknut. **DO NOT TIGHTEN LOCKNUT YET. TIGHTEN THIS NUT LAST.**



Now slide the **UPPER HANDLE** assembly over the **HANDLE SHAFT** (on the end with the bolt holes closer to the end).

Install gauge & lever using (2) 2" bolts and locknuts. Be sure gauge is on left hand side. Tighten locknuts to gauge first.





TIGHTEN ALL HARDWARE NOW.

11. Insert **PIVOT ROD** into **SHUT-OFF PLATE** as shown. Turn to lock in place.

12. Insert other end of **PIVOT ROD** into **PIVOT AND BRACKET** assembly as shown. Turn to lock in place.

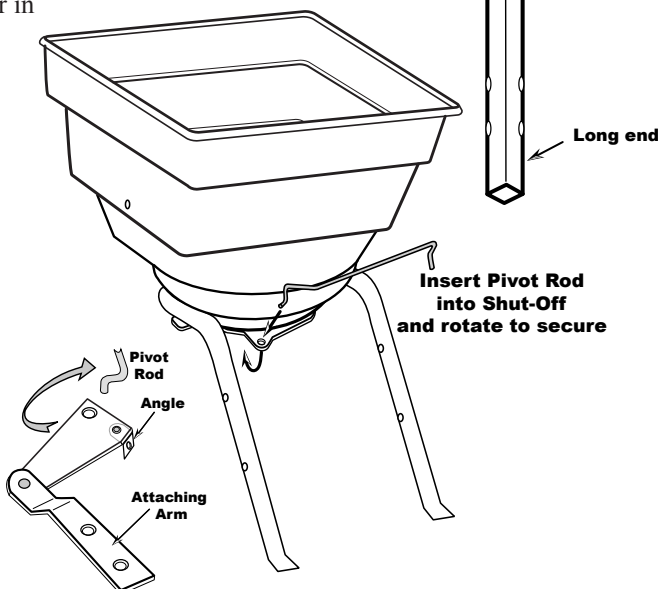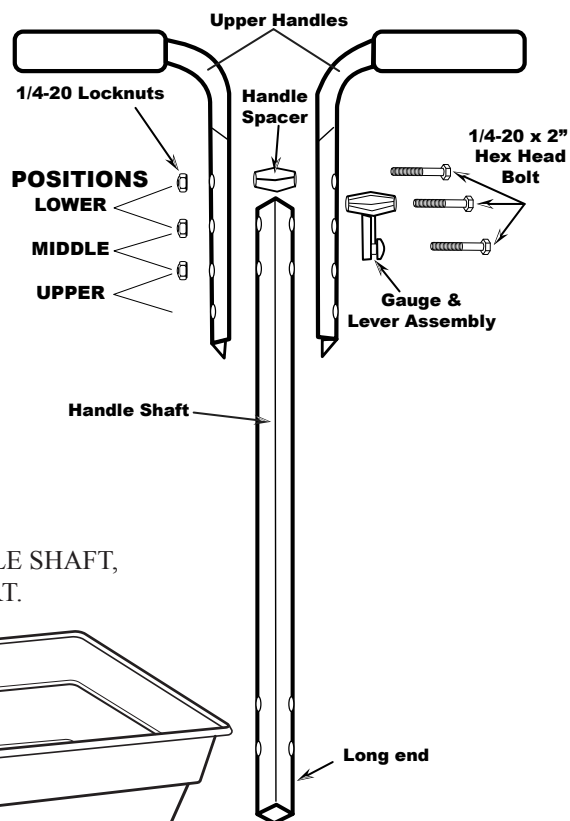


13. Install handle shaft to lower handles and pivot & bracket assembly as shown. Using 1/4-20 x 2" bolts and (as shown) and locknuts. **TIGHTEN BOLTS AND NUTS NOW.**

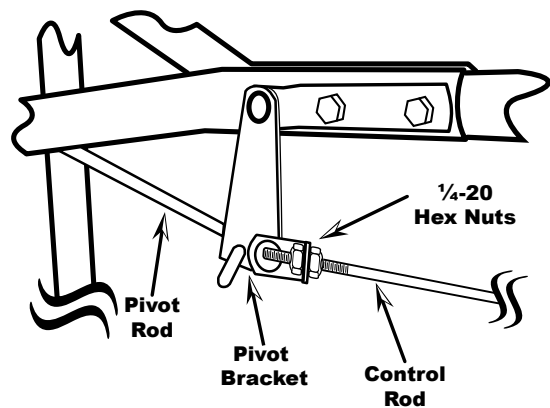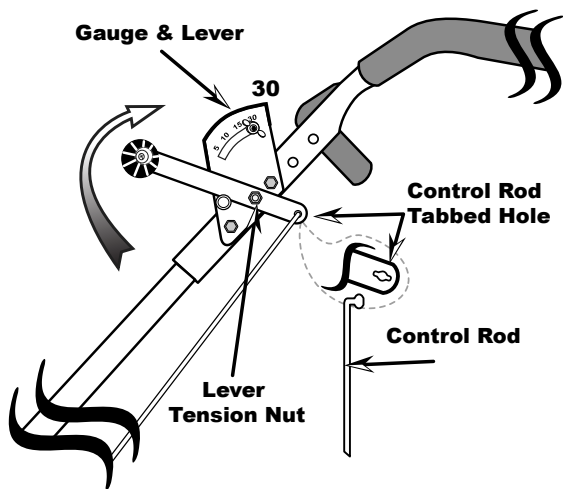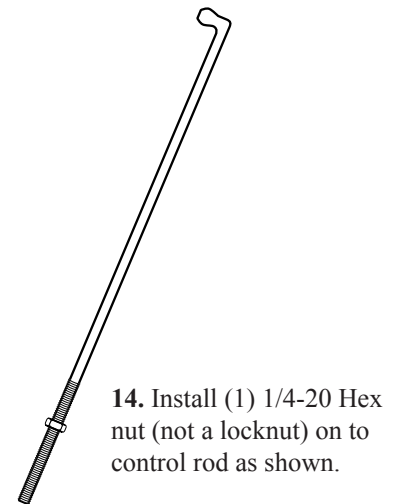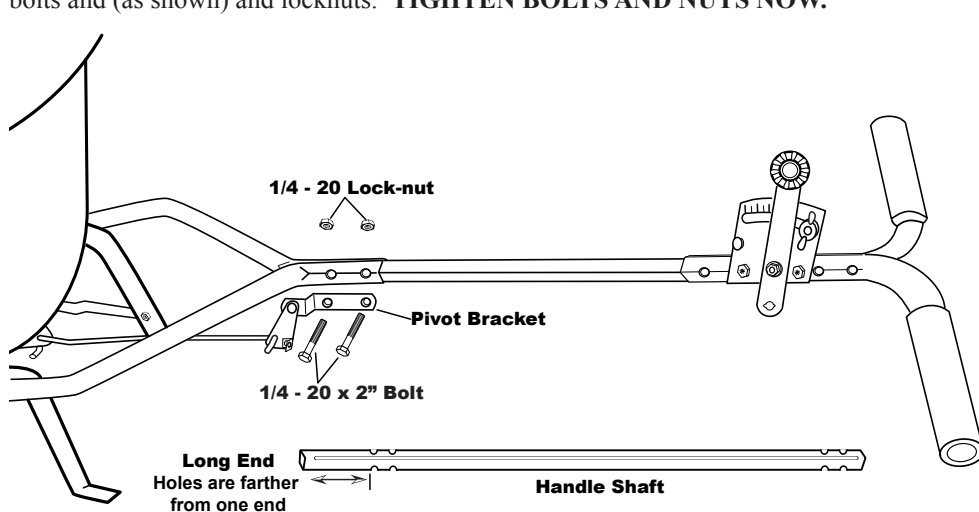


15. Install flattened end of control rod in to lever on gauge as shown. Turn to lock in place. Next push lever forward to setting "0". Align control rod with hole in pivot bracket, pull lever backward to insert control rod through hole in pivot bracket. Now install 1/4-20 Hex nut on to control rod.

16. Pull lever back to setting "30" as shown. Next push pivot & bracket forward so that the shut off plate in the hopper is in the full open position. **REMEMBER SETTING "30" ON THE FLOW CONTROL LEVER MUST PLACE THE SHUT-OFF PLATE IN THE FULL OPEN POSITION TO BE PROPERLY CALIBRATED.** Now tighten the nuts against the pivot bracket to prevent change in calibration.

17. Tension on the flow control lever may be adjusted by tightening or loosening the tension nut as shown.

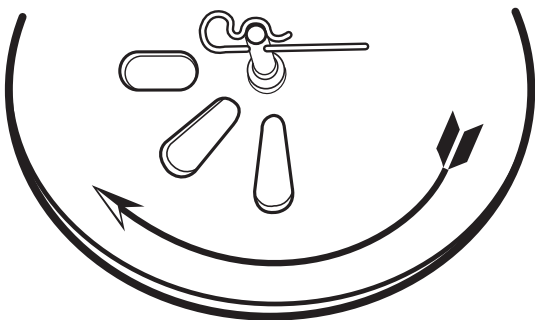

18. Insert agitator to pinion shaft on inside of hopper. **Note:** the position of flat side of the agitator. This pin should be installed as shown.


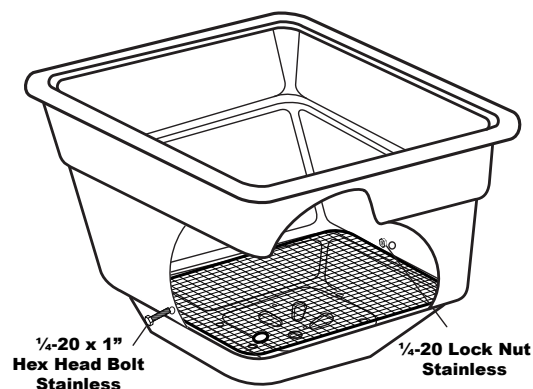


19. Install debris screen into hopper, then insert 1/4-20 x 1" Stainless Steel Hex Bolt thru the hole in the side wall of the hopper. Secure with Stainless Steel lock nut - **TIGHTEN WITH HAND TOOLS ONLY**

PRO SHUT-OFF ADJUSTMENTS:

For normal operation both doors should be fully opened. To reduce flow to the left side, partially or completely close the door over the rear (**LARGE**) hole. To reduce flow to the right side, partially or completely close the door over the front (**SMALL**) hole. Close both doors for a narrow center spread pattern.

WARNING: If the optional side deflector is being used in the down position, the plate over the rear (**LARGE**) hole **MUST BE CLOSED** or an over application of material will occur.

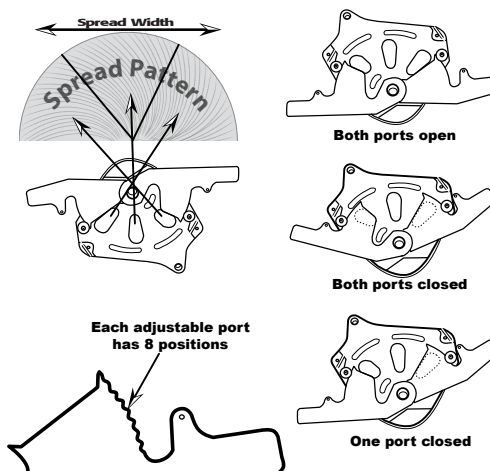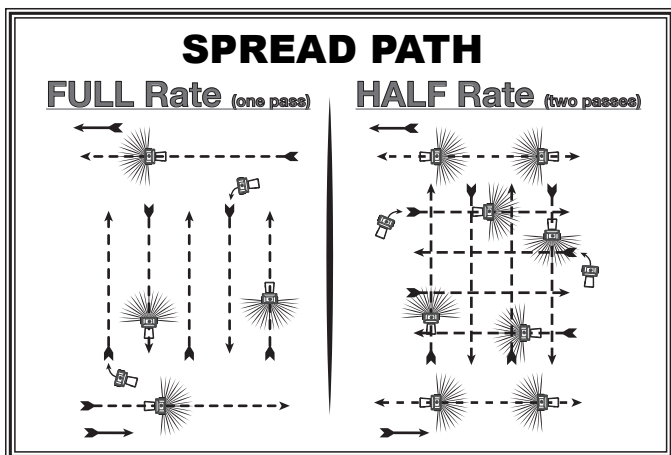

The settings furnished on the Setting Matrix are intended as a guide only. Variations in physical characteristics of material applied, walking speed, and roughness of ground surface may require slightly different spreader settings. Due to these conditions, Earthway Products, Inc. makes no warranty as to the uniformity of coverage actually obtained from the settings listed.

5-YEAR LIMITED WARRANTY

Earthway Products, Inc. warrants this product free of defects in original workmanship and materials for a period of 5-Years to the end user with the original purchase receipt. If a manufacturing non-conformance is found, Earthway Products, Inc. at its discretion will repair or replace the part(s) or product at no charge provided the failure is not the result of incorrect installation, mishandling, misuse, tampering, or normal wear and tear as determined by Earthway. Earthway at its discretion may require that the part(s) or product be returned along with the original purchase receipt at owners' expense for examination and compliance with the terms of this warranty. Do not return any product without first receiving authorization from Earthway Products, Inc. To seek remedy under this warranty, contact Earthway Products, Inc. at 574-848-7491, techsupport@earthway.com or write to Earthway Products, Inc. P.O. Box 547 Bristol, Indiana 46507 and describe the nature of the manufacturing defect. **SPECIFIC LIMITATIONS:** This warranty covers only the part(s) or product; any labor charges associated with repair or replacement of non-conformances are specifically excluded. Due to the corrosive nature of most fertilizers and ice melt products, Earthway Products, Inc. makes no warranty against and specifically excludes part(s) or product degradation or failure due to corrosion or its effects. Clean and dry your spreader thoroughly after each use, as a preventative measure, coat all metal parts with a light oil or silicon spray.

OPERATING INSTRUCTIONS

Before filling hopper, become familiar with the operation of this spreader.

- ☒ Obtain proper setting for material to be used from the enclosed SETTING MATRIX included with this spreader, or from our web site under the MANUALS SECTION.
- ☒ Move stop bolt on rate gauge assembly to the proper setting.
- ☒ While pushing spreader forward, pull control lever back to stop bolt.
- ☒ To stop, push lever forward to close flow holes before you stop moving.
- ☒ When finished, empty any remaining material from hopper.
- ☒ Thoroughly wash spreader and allow to dry before storing. A coating of light oil will help prevent corrosion.
- ☒ If you use Rock Salt, remove agitator to prevent damage to the gearbox.

Earthway Products, Inc.
1009 Maple Street, PO Box 547
Bristol, IN 46507
For Your Records

Date Purchased

Place of Purchase

HOW TO ORDER SPARE PARTS

All spare parts listed may be ordered direct from
Earthway Products, Inc.

Be sure to give the following information when ordering.


Model Number

Part Number

Part Description

Call (574) 848-7491, 800-294-0671, or email: parts@earthway.com
for current prices.

Earthway Products, Inc.
P.O. Box 547
Bristol, IN 46507
Phone: 800-294-0671
www.earthway.com

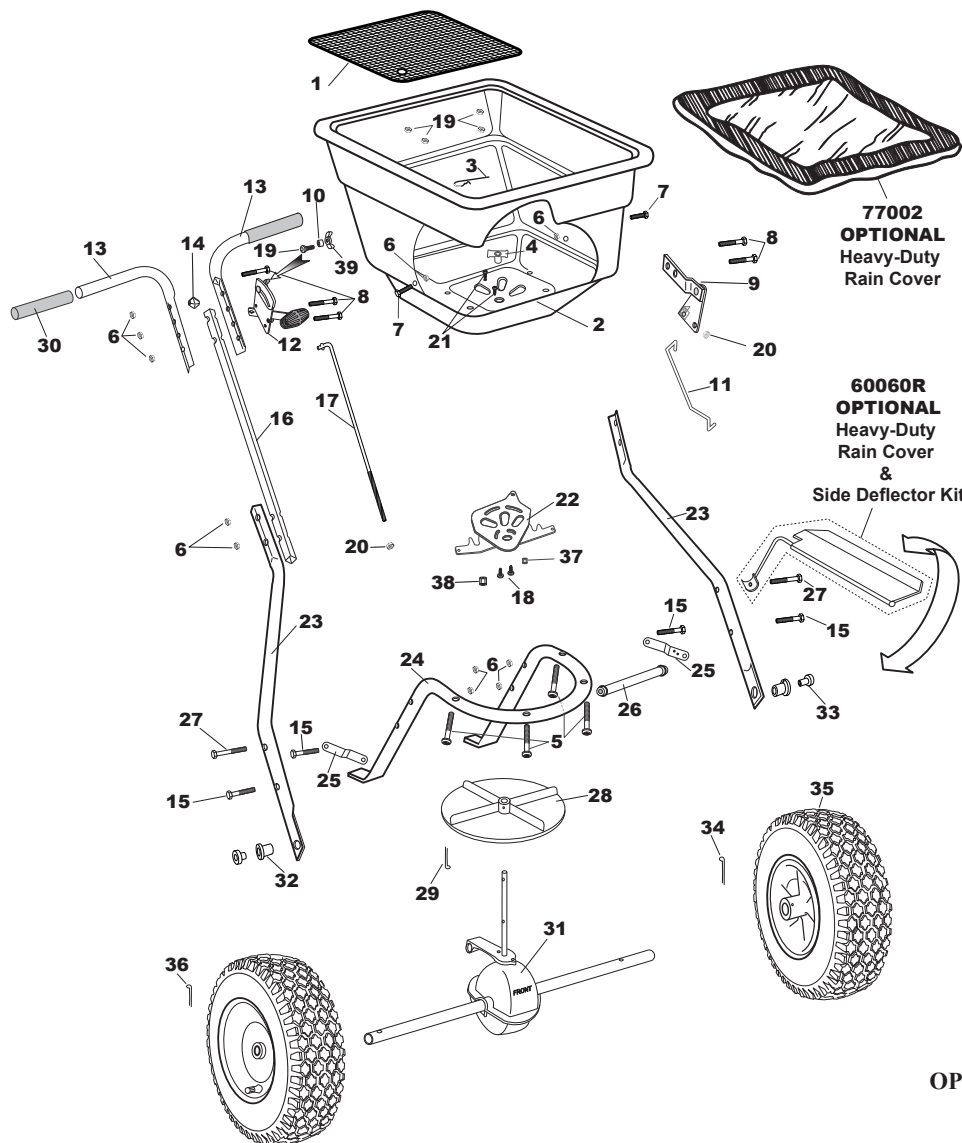

Standard Settings Gauge Overlay #12196 and
OPTIONAL Lesco Settings Gauge Overlay #12195

2170Pro-SS Broadcast Spreader ~ Parts List

Key #	Part #	Description	Key #	Part #	Description
1	40003	SQUARE SCREEN	22	12278	SHUT OFF PLATE ASSEMBLY - COMMERCIAL
2	60219	HOPPER ASSEMBLY	23	25222-SS	LOWER HANDLE
3	33117	AGITATOR	24	25106-SS	FRAME
4	12209	HOPPER BUSHING	25	42237	FRAME BRACE
5	36214	1/4-20 X 1 1/2" PHPMS S.S.	26	24704	CROSS BRACE
6	36300	1/4-20 NYLON INSERT LOCKNUT S.S.	27	36205	1/4-20 X 2 1/4" HHCS S.S.
7	36210	1/4-20 X 1" HHMS S.S.	28	12109	IMPELLER (9" DIA)
8	36216	1/4-20 X 2" HHCS S.S.	29	36105	1/8" X 1 1/4" COTTER PIN S.S.
9	60300	PIVOT & BRACKET ASSEMBLY	30	12274	GRIP
10	12147	SPACER (PIVOT LINK)	31	60334	GEAR BOX & AXLE ASSEMBLY
11	44251	PIVOT ROD	32	12148	AXLE BEARING
12	60298	GAUGE & LEVER ASSEMBLY	33	12152	AXLE BUSHING
13	60175-SS	UPPER HANDLE W/GRIP	34	36103	3/16 X 2" COTTER PIN S.S.
14	12344	HANDLE SPACER	35	70138	PNEUMATIC DRIVE WHEEL
15	36200	1/4-20 X 1 1/2" HHCS S.S.	36	36104	3/16 X 1" COTTER PIN S.S.
16	25223-SS	HANDLE SHAFT	37	11926	SHUTOFF SUPPORT- SMALL
17	42256	CONTROL ROD	38	11927	SHUTOFF SUPPORT- LARGE
18	31138	#8 X 3/8" PMT #8 HD COARSE BLACK	39	60027	WING NUT ASSEMBLY BLACK
19	37100	1/4-20 X 1" CARRIAGE BOLT ZINC			
20	36305	1/4-20 HEX NUT STAINLESS STEEL	OPTIONAL	60060R	SIDE DEFLECTOR AND RAIN COVER
21	36208	#6 X 3/8" TYPE 25 PHPS S.S.	OPTIONAL	77002	HEAVY DUTY RAIN COVER PLAIN 19"X19"

Broadcast Setting Matrix

EV-N-SPRED® Calibration Techniques

How to ensure your spreader is properly calibrated

Make sure the drop holes in the bottom of the hopper are fully open when the Rate Control handle is on #30. If not, please adjust control cable or control rod to allow for a full open hopper position at #30.


Rod Type Adjustment

1. Open the shut-off so that the drop holes are completely open as illustrated to the right.
2. Review the Control Lever position - if it is set so that the forward edge is at #30, you are calibrated. If not you need to adjust the control rod at the pivot bracket shown in Fig 1.
 - A. If your shut-off is not able to open fully as in step #1. Loosen the top nut a few turns, then loosen the lower nut so that it allows you to push the shut-off open fully. Next tighten each nut so that they contact the pivot bracket without moving it, and then carefully tighten each nut fully so they do not loosen during use. Recheck adjustment as outlined in #1 above.
 - B. If your shut-off is able to open fully as in step #1, but the Control Lever is not at #30. Loosen the top nut a few turns, then loosen the lower nut so that it allows you to push the Control Lever to #30. Next tighten each nut so that they contact the pivot bracket without moving it. Carefully tighten each nut fully so they do not loosen during use. Recheck adjust as outlined in #1 above.

Cable Type Adjustment

1. Open the Control Lever so that the shut-off and drop holes are completely open as illustrated above right.
2. Review the Control Lever position so that the indicator is pointed to #30, if it is your calibration is correct. If not you need to adjust the control cable at the cable clamp on the underside of the hopper as shown in Fig 2.
 - A. If your shut-off is not able to open fully as in step #1. Loosen the cable clamp screw slightly so that you can slide the outer cable out so that the shut-off is fully open. Next tighten the cable clamp screw securely. Recheck adjustment as outlined in #1 above.
 - B. If your shut-off is able to open fully as in step #1, but the Control Lever is not at #30. Loosen the cable clamp screw slightly so that you can slide the outer cable in so that the Control Lever opens to #30. Next tighten the cable clamp screw securely. Recheck adjustment as outlined in #1 above.

If you have any questions regarding the operation or assembly of your spreader please call us at 800-294-0671 or 574-848-7491 Monday - Friday 9:00am - 4:00pm Eastern. Accessories and Repair Parts are also available at these numbers.

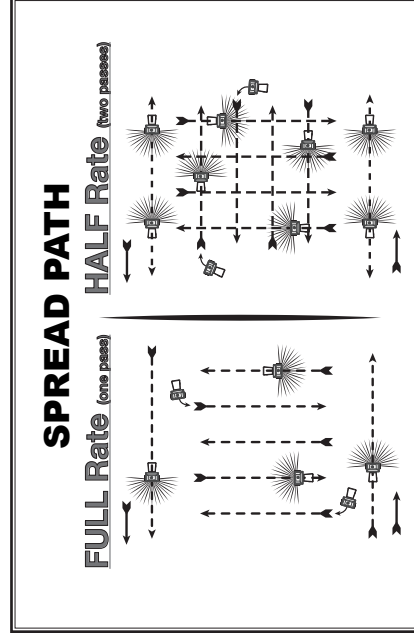

Drop holes shown fully open.

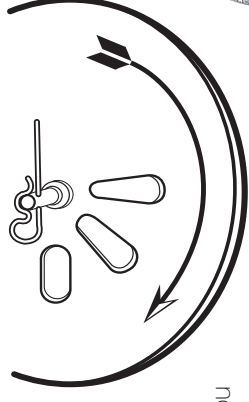


Fig 1


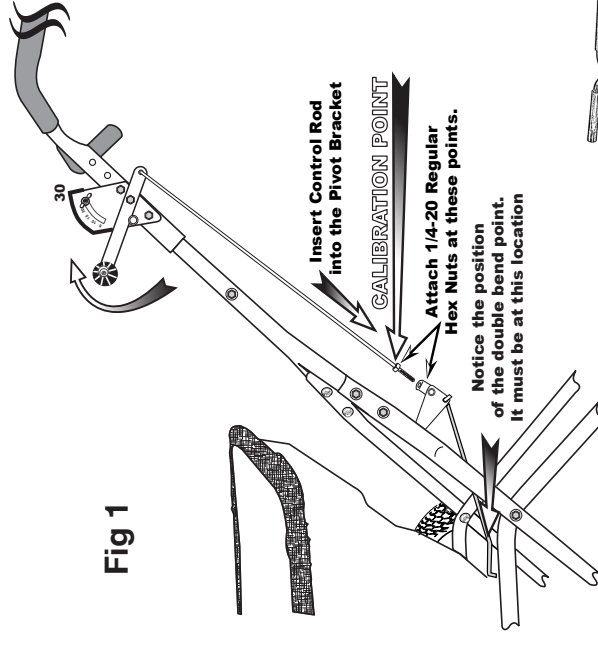


Fig 2

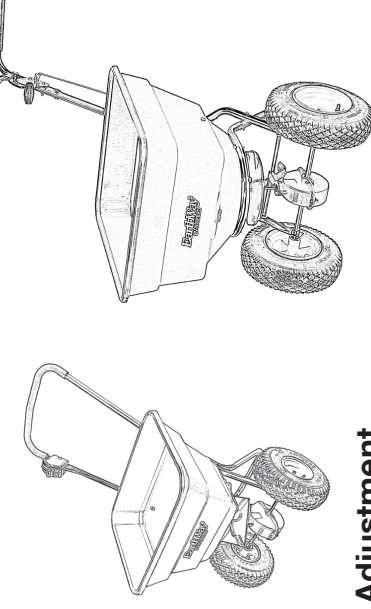

Cable Type Adjustment

Loosen/tighten screw on cable clamp then slide outer cable in/out for calibration

ESTABLISHING A SETTING RATE



Step 1: Use Chart 1 to estimate the number of LBS/1,000 square feet of coverage (Example: 20 LB bag with 10,000 square foot coverage = 2.0 LBS/1,000 square feet)

Step 2: Find the closest LBS/1,000 square feet in Chart 2 that you estimated using Chart 1 (Example: 2.0 LBS/1,000 square feet = Spreader Setting of 13)

CHART 1		BAG COVERAGE IN SQUARE FEET			
		5,000	10,000	15,000	
B A G W E I G H T	5 LBS.				
	10 LBS.				
	15 LBS.				
	18 LBS.				
	20 LBS.				
	25 LBS.				
	30 LBS.				
	35 LBS.				
	40 LBS.				
	45 LBS.				
	50 LBS.				

CHART 2			
GRAMS/SQ METER	LBS./1,000 SQ FT	SPREADER SETTING	
5 Grams	1.0 LBS.	11	
10 Grams	2.0 LBS.	13	
15 Grams	3.0 LBS.	14	
20 Grams	4.0 LBS.	16	
25 Grams	5.0 LBS.	17	
30 Grams	6.0 LBS.	18	
35 Grams	7.0 LBS.	19	
40 Grams	8.0 LBS.	20	
45 Grams	9.0 LBS.	22	
50 Grams	10.0 LBS.	23	

GRASS SEED		
GRAMS/SQ METER	LBS./1,000 SQ FT	SPREADER SETTING
10 Grams	2 LBS.	13
15 Grams	3 LBS.	14
20 Grams	4 LBS.	16
25 Grams	5 LBS.	17

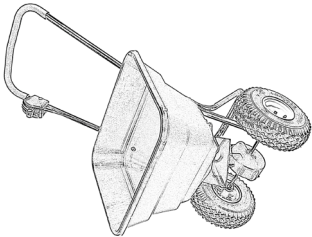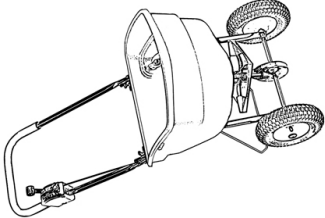

METRIC RATE SETTING

Determining a Setting Rate

Use chart below to determine the Setting Rate based on Grams/Square Meter of coverage as directed on the bag.

All spread widths are determined by the particle size and density.
Below will give approximate spread widths.

SPREAD WIDTHS FOR DIFFERENT PARTICLE SIZES			
Particle Size		English	Metric
	Small/Fine (Sand)	5-7ft.	1.5-2.1m
	Medium (Half BB)	7-9ft.	2.1-2.7m
	Large (Full BB)	9-12ft.	2.7-3.7m

SPREAD WIDTH FOR DIFFERENT SIZE GRASS SEED			
Seed Size		English	Metric
	Fine	5-7ft.	1.5-2.1m
	Coarse	7-10ft.	2.1-3.1m

The settings furnished on the Rate Setting Matrix are intended as a guide only. Variations in physical characteristics of material applied, walking speed, and roughness of ground surface may require slightly different spreader settings. Due to the above conditions, EPI makes no warranty as to the uniformity of coverage actually obtained from the settings listed.