

mistral[®] Shake Maker

2 Speed Milkshake Maker



MSM50

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you feel that you are familiar with the appliance.

- To protect against the risk of electric shock, DO NOT IMMERSE the motor end of this appliance, cord set or plug in water or any other liquid.
- This appliance is not intended for use by children or infirm persons without supervision. Never leave an appliance unattended when in use.
- Children should be prevented from playing with the appliance.
- Operate on a dry level surface. Operating on sinks, drainboards or uneven surfaces must be avoided.
- Switch off the power outlet and remove the plug when the appliance is not in use; before assembling or disassembling parts; and before cleaning. To unplug, grasp the plug and pull from the power outlet. Never pull the cord.
- Do not operate any appliance with a damaged cord or plug; after the appliance malfunctions; or if it has been dropped or damaged in any manner.
- The use of attachments or accessories not recommended or sold by the manufacturer can cause fire, electric shock or injury.
- Do not use outdoors.
- Store the unit indoors in a dry location.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- Do not operate or place any part of this appliance on or near any hot surfaces (such as a gas or electric burner, or in a heated oven).
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not use this product for anything other than its intended use. This product is intended for household use only.
- This appliance is intended to be plugged in a 240v outlet only.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- Avoid contact with moving parts. Keep hair, clothing and utensils away from the appliance while it is in operation to avoid damage to the appliance and injury to persons.
- Do not add ingredients to the cup while the appliance is operating.
- Ensure the cup is properly in place before operating the appliance.
- Care should be taken when handling this appliance as it contains a sharp mixing blade.
- Do not use this appliance with an extension lead.
- DO NOT MOVE this appliance when it is in operation.
- Ensure the packaging of this appliance is disposed of properly. Keep plastic bags away from babies and children.
- NEVER reach for an appliance that has fallen into water. Switch off the power outlet and unplug the appliance immediately.
- Do not switch this appliance on without the cup in place.
- Do not tamper with the cup-interlocking switch.


COMPULSORY WARNING

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or a similarly qualified person, in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of your Shake Maker

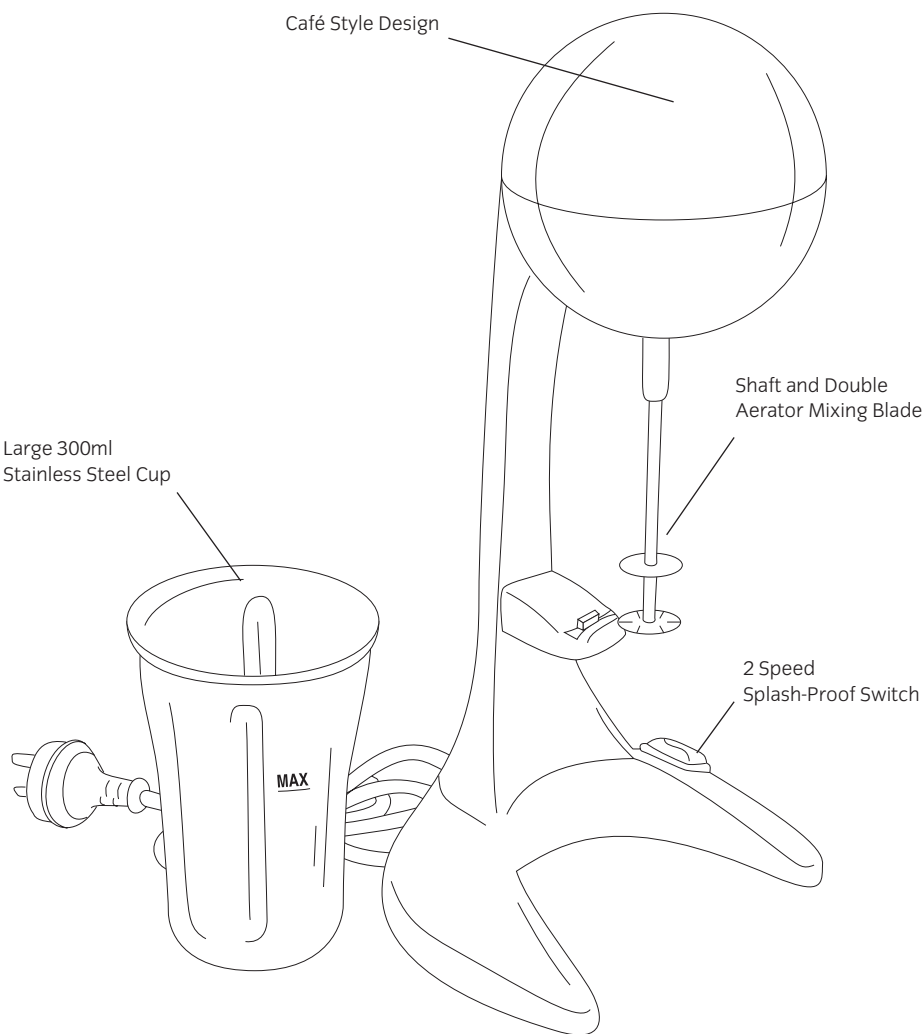

Getting to know your Shake Maker

Congratulations on the purchase of your new Mistral Shake Maker.

You can now make milk shakes in minutes for you and your friends. Let your imagination run wild creating an endless variety of milk, fruit and diet drinks.

Before first using your new Shake Maker, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Before first use

Carefully unpack the Shake Maker and remove all packaging material.

Wash the stainless steel cup in warm soapy water. Clean the mixing blade and shaft with a damp cloth and dry thoroughly before use.

Note: Do not immerse the motor housing in water or any other liquid.

How to use your Shake Maker

Place the Shake Maker on a dry level surface and plug it into a standard domestic power outlet.

Ensure that the 2 speed switch is in the “0” position.

Place ingredients to be mixed in the stainless steel cup, being careful not to fill above the “MAX” mark.

Place the stainless steel cup onto the Shake Maker, ensuring the top of the cup is located behind the top support. The base of the stainless steel cup should rest on the bottom bracket. The interlocking tabs on the base of the stainless steel cup fit into the bottom bracket.

Press the 2-speed switch to either “I” or “II” to start mixing the drink.

Note: If ingredients splash out of the stainless steel cup, reduce the speed or liquid level.

When mixing is complete, press the 2 speed switch back to the “0” position.

Remove the stainless steel cup by lifting it up and out of the Shake Maker. Pour the drink into a cold glass or cup and serve immediately.

Note: Do not run the Shake Maker continuously for more than 5 minutes at a time, as doing so will overheat the motor and reduce the life of the appliance.

Care and Cleaning

Ensure the Shake Maker is switched off and disconnected from the power outlet.

To clean the mixing blade, fill the stainless steel cup with 1 cup of warm water. Operate the Shake Maker on “1” speed for 30 seconds before removing the stainless steel cup and drying the mixing blade and shaft thoroughly with a dry cloth.

The stainless steel cup should be hand washed in warm soapy water.

Note: Do not put the stainless steel cup in the dishwasher.

To clean the Shake Maker, wipe with a damp cloth. Ensure the cloth is not excessively wet and that no moisture enters the motor housing. Do not use abrasive cleaners.

Note: DO NOT IMMERSE the motor end of this appliance, cord set or plug in water or any other liquid.

Handy Hints

Most drinks can be mixed in less than two minutes.

Whole fruit should not be used when making fruit drinks. Mash or puree fruit before adding it to the stainless steel cup.

For best results, all liquid ingredients should be well chilled. Milk drinks will taste best if the milk is ice cold. The colder the milk, the thicker and more frothy the drink.

All syrups and powdered mixes should be added just before mixing to prevent them from sinking to the bottom of the stainless steel cup.

The Shake Maker will not crush ice. Use pre-crushed ice if the recipe calls for ice.

Notes

Notes

Warranty

The benefits conferred by this warranty are in addition to all implied warranties, other rights and remedies in respect of the product which the consumer has under the Trade Practices Act and similar State and Territory Laws.

The original purchaser of this Mistral product is provided with the following warranty, subject to the following conditions.

Mistral International Pty Ltd warrant this product for a period of 3 years from the date of purchase for all parts defective in workmanship or materials. The product or defective parts will be replaced free of charge.

WARRANTY CONDITIONS

1. This warranty is only valid for appliances used according to the manufacturer's instructions.
2. This appliance must not be modified or changed in any way.
3. Connection must be to the voltage requirements as specified in the ratings label located on the product.
4. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.
5. Warranty will only be given where proof of purchase is provided, e.g. original invoice.
6. Not designed or warranted for industrial or commercial use.

DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

RETAIN & FILE WITH YOUR RECEIPT.

Your Purchase Receipt/Invoice is proof of date of purchase. You must be able to present it at the place of purchase to obtain a replacement or service under warranty.

Mistral International Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation. Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from: _____

Co. Name: _____

Address: _____

Date of Purchase: _____

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.

Cat. No. MSM50
July 2003

Product of Mistral International Pty Ltd ABN 25 006 680 315
324 Frankston-Dandenong Road
Dandenong South, Victoria, Australia 3175
Telephone 03 9212 1333 **Facsimile** 03 9212 1340
Customer Service 1300 654 488
Internet Address: www.mistral.com.au

RINGGRIP (NZ) Pty Ltd ACN 006 771 922
PO Box 51317, Pakuranga, Auckland NZ
Telephone 0800 328 280 **Facsimile** 0800 328 238

Manufactured by Mistral International Pty Ltd

Mistral is a registered trademark of Mistral International Pty Ltd
© 2003 Mistral International Pty Ltd

