

JEMI 988 CENTRIFUGAL JUICER

Operating instructions



FEATURES:

The Jemi 988 Centrifugal Juicer extracts delicious fresh juice from fruits and vegetables. The unique blade design and powerful 750-Watt motor enables effortless juicing. Further features are...

- " Continuous juice production
- " Automatic pulp ejection
- " Simple, quiet & safe to operate
- " All parts in contact with juice are made of stainless steel
- " Easy to dismantle & clean
- " Produces up to 1.5L of juice in 30 seconds
- " 8 different juice spout positions
- "

SPECIFICATIONS:

- " Height 46cm
- " Diameter of base 30cm
- " 29kg weight
- " 2800 rpm 750 watt motor
- " Supply Voltage 240 volts 50 Hz

ASSEMBLY INSTRUCTIONS

WARNING: Do not switch on the machine until it is properly assembled. Unplug power cable from wall during assembly.

- 1) Ensure the machine is positioned on a clean, flat surface
- 2) The juice bowl should be sitting correctly in one of eight positions.
- 3) Fit the basket onto the drive block with both drive pins and motor shaft protruding through the holes in the bottom of the basket.
- 4) Carefully fit the bottom blade so that the drive block pins protruding through the bottom of the basket fit into the holes on the back of the blade. Make sure the bottom of the basket is clean before fitting the blade.
- 5) Make sure the blade-securing nut is securely fastened. Use a 22mm spanner to tighten this nut.
- 6) The top cover may be fitted in two positions. Ensure that the two pins from the bottom latch assembly slot into the holes in the top cover before clamping the latches down. The latches should be firm but not over tight. The latches can be tightened by turning the hooks clockwise and loosened by turning them anti-clockwise.
- 7) Insert the pulp ejection duct into position at the side of the lid. Fasten using the pulp duct fixing screw.

HOSPITALITY EQUIPMENT 2020 Pty. Ltd. Unit 6/ 6 Tennyson Street, Clyde, NSW
Tel: (02) 9637 3737 Fax: (02) 9637 3434 Website: www.he2020.com.au E-mail: info@he2020.com.au

CLEANING INSTRUCTIONS

WARNING: Before disassembling the juicer for cleaning, switch power off and remove plug from wall

- 1) Undo the latches and remove the top cover
- 2) Remove the blade securing nut by turning anti-clockwise with a 22mm spanner
- 3) Remove the bottom blade, basket and juice bowl
- 4) Soak in dish washing detergent mixture. 4 tablespoons of dish washing detergent for 5 litres of hot water. Rinse parts before they are re-used.

**DO NOT HIT BASKET ON EDGE OF SINK AFTER CLEANING
ENSURE PARTS ARE CLEAN BEFORE USE
DO NOT CLEAN THE JEMI 988 JUICER IN A DISHWASHER**

OPERATING INSTRUCTIONS

WARNING: Only use the plunger provided to push fruit and vegetables down the main top cover opening. Keep hands clear of top cover openings. Never operate the juicer unless the top cover is correctly fitted.

- 1) Once the Centrifugal Juicer is properly assembled, switch the juicer on and off with the power switch located on the juicer base. Always ensure the switch is in the off position before the power cord is plugged into the wall.
- 2) Fruit and vegetables are fed into the machine through the large opening in the top cover and pushed down onto the blade using the plunger. Turn the machine on before putting fruit or vegetables down the opening in the top cover.
- 3) The juice is extracted through the tube protruding from the juice bowl. Pulp is ejected via the pulp duct.
- 4) After each juicing the machine should be rinsed by pouring water through the large opening in the lid to remove any residue in the basket.

In the event that the machine vibrates, stop the machine, remove the lid and clean the basket to remove any residue.

Cut fruit and vegetables to a size that can easily fit into the main top cover opening. Remove hard seeds from fruit or vegetables before juicing (eg. mangoes & peaches)

FOOD GUIDE

CARROTS:	Wash clean, trim off stem ends, feed one at time.
ORANGES:	Peel rind from fruit, slice in two and feed into chute.
APPLES:	Quarter apples, peel, discard core and seeds.
CABBAGE:	Cut portions to fit machine and feed rapidly.
PINEAPPLE:	Trim away husk and top, cut segments to fit easily
PITTED FRUITS:	Peel skins and REMOVE PITS.

HE2020

Dare to compare...

HOSPITALITY EQUIPMENT 2020 Pty. Ltd.

Unit 6/ 6 Tennyson Street, Clyde, NSW

Tel: (02) 9637 3737

Fax: (02) 9637 3434

Website: www.he2020.com.au

E-mail: info@he2020.com.au

TROUBLE SHOOTING GUIDE

Problem: No power to the juicer

Check plugged into wall and power switched on

If machine has been in prolonged use, the thermal cut-out switch may have been tripped. Turn off machine for 15 minutes and try again.

Problem: Juicer vibrates when operating

Remove the top cover and clean the basket of any residue.

Ensure that the basket and bottom blade securing nut is securely fastened.

NOTE: ALL SERVICE SHOULD BE CARRIED OUT BY AUTHORISED JEMI SERVICE AGENTS.

2020-SERVICE

TO FIND YOUR NEAREST AGENT CALL 1300-13-5364

