

READ THESE WARNINGS FIRST

- Read all instructions before attempting to use this appliance.
- Any damaged cord or plug must be replaced only by a suitably qualified technician.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Never touch heated surfaces. Use handles and knobs provided.
- Exercise extreme caution when moving any appliance containing hot water.
- Empty the contents of the appliance before attempting to lift or move it.
- Never immerse the appliance, cord or plug in water or any other liquid.
- Never operate an appliance with a damaged power cord or plug.
- Always unplug the appliance from power when not in use and before cleaning.
- Do not allow to boil dry.
- Do not allow power cord to touch hot surfaces or hang over table or counter edge.
- Never place the appliance on or near a hot burner or in a heated oven.
- Always plug cord into power outlet before turning on any controls.
- Always turn off any controls before removing plug from power outlet.
- Never use appliance for any purpose other than its intended use.
- Never overfill the appliance.
- Beware of scalding steam when lifting urn lid.

OPERATING INSTRUCTIONS

1. Place the appliance on a level surface (with sufficient strength to carry the weight when full) and within easy reach of a power outlet.
2. Make sure there is enough room above the appliance to allow for filling.
3. Position the appliance to ensure easy and safe use.
4. Fill the urn with water to the desired level and replace the lid. (Take the water to the urn, do not lift or carry an urn filled with water).
5. Plug the cord into the power outlet and switch on.
6. For maximum heating, turn the control knob to the highest position. A pilot light will signal that the appliance is on and is heating. When the water has boiled, turn the control knob down until the pilot light turns off. The urn will then cycle on and off to keep water close to the selected temperature. To re-boil the water or after adding cold water, turn the control knob back to the maximum position.
7. When not in use, turn the control knob and power outlet switch off.
8. To clean, use fresh water and a clean cloth.
9. Do not use cleaning chemicals, scourers or pressurised water.

ADDITIONAL CHARGES APPLY FOR: CLEANING, DAMAGED, MISSING OR LOST EQUIPMENT.

Any additional charges are payable upon return.

No negotiation will be entered into and the equipment will remain on hire (additional daily charges) until the account is paid in full.