

RC-6 Operating Instructions

Universal Learning Remote Control



PROGRAMMING INSTRUCTIONS

Any of the Selector's inputs may be chosen via remote control commands. An ARC-40 remote control is supplied with each Input Selector.

The ARC-40 remote control has four input selection buttons (1,2,3,4) which will also power up the A-BUS system if it is on standby. There are two 'OFF' buttons. The left hand button turns off power modules equipped with individual power switching. The right hand button turns the whole system off.

To Learn Infrared Codes

1. Point the RC-6 and the original Handset towards each other, about 50mm apart.
2. Select one of the six Bank buttons at bottom of RC-6 (Tuner, CD, Pay, VCR, DVD or TV)
3. Press the "Learn" button on the RC-6. The Learn LED will illuminate.
4. Press and hold both the button to be taught on the RC-6 and the relevant button on the original handset until "Tx" LED illuminates.
5. Repeat as necessary
6. Pressing any of the bank buttons or the "Learn" button will turn the Learn mode off. Leaving the RC-6 for 32 seconds will also turn off the Learn mode.

Sequence Buttons

The RC-6 remote handset comes with four coloured Sequence buttons. Sequences can be made from any functions on any of the banks of the RC-6.

One sequence could for example, turn on the Sound system, turn on the TV, select the correct channel and start a movie playing. Another could turn the whole system off at the end.

Care should be taken with long sequences as it can take several seconds for all of the infrared commands to be sent. During this time the RC-6 will need to be pointed at the infrared eye. Failure to do so can lead to some commands being skipped.

To Program Sequence Buttons

1. Press the "Learn" button on the RC-6. The Learn LED will illuminate.
2. Press one of the Sequence buttons. The Error LED will illuminate.
3. Press one of the Bank buttons then one of the Function buttons.
4. Repeat this to a maximum of eight times.
5. Press the sequence button again. The Error LED will go out.

To Delete Functions

1. Press one of the Bank buttons
2. Press and hold the "Learn" key and the Function key to be deleted.
3. Release the keys after the Learn LED has flashed twice.

INPUTS

INPUT	RC-6*
1	Tuner
2	CD
3	Pay
4	VCR
5	DVD
6	TV

* The SELECT button must be pressed after the required BANK button to change input or power up the Andrew's Audio system and/or individual power module.

Note: When "Batt" LED is illuminated.

Change the batteries as soon as possible.

LEARN BUTTON

Used to learn infrared codes and to program Sequence buttons

SEQUENCE BUTTONS

Execute a consecutive series of functions

BANK BUTTONS

Select source devices

FUNCTION BUTTONS

Control operation of source devices

OVERVIEW

Pressing any of the six Bank buttons at the bottom of the RC-6 is the equivalent of picking up that remote control.

Example:

To play a CD

1. Press the CD Bank button. This will set the RC-6 to control your CD player.
2. Press the Select button. This will tell the sound system that you want to listen to the CD.
3. Use the Function buttons for Stop, Play, Pause, Volume up and Volume down.

At any time another Bank button can be pressed to control another component. Unless the Select button is pressed the previous source will continue to play. This feature will allow you to control any component without interrupting the current selected input. To switch to another source the Select button must be pressed.

Sequence buttons

The sequence buttons can be used to turn the power of the whole Audio System On or Off. Care should be taken when programming the Sequence buttons. We recommend that you ask your dealer for assistance.