 


OPERATING INSTRUCTIONS



Palsonic

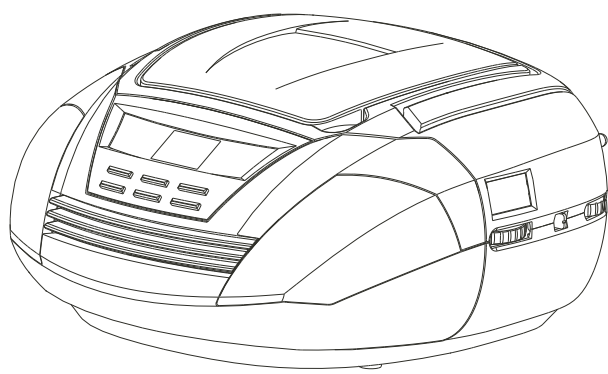

COMPACT
disc
DIGITAL AUDIO

PORTABLE
CD-RADIO PLAYER
MODEL : CD6600



	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.	WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.	The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.

NOTE: CAUTION SYMBOLS ARE PRINTED ON THE REAR OF UNIT. PLEASE REFER TO INSTRUCTION MANUAL.

 **CAUTION**
DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!

CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTION SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

VORSICHT: UNSICHTBARE LASERSTRAHLUNG TRITT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN!

 
WARNING: OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAND. STRÅLEN ÄR FARLIG.

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDS/ETTELSE FOR STRÅLING.


ATTENZIONE: RADIONS LASER INVISIBILE. NON GUARDARE DIRETTAMENTE NELLA SORGENTE DEL LASER.

ACHTUNG: LASERLINSE NICHT BERÜHREN UNSICHTBARER LASERSTRAHL.

AVISO: A LENTE NUNCA DEVE SER TOCADA.

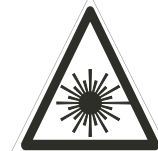

 CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LASER DE CLASSE
LASER DI PRIMA CLASSE
KLASSE 1 LASER
LASER PRIMERA CLASE
LASER CLASSE 1
KLASSE 1 LASER PRODUKT

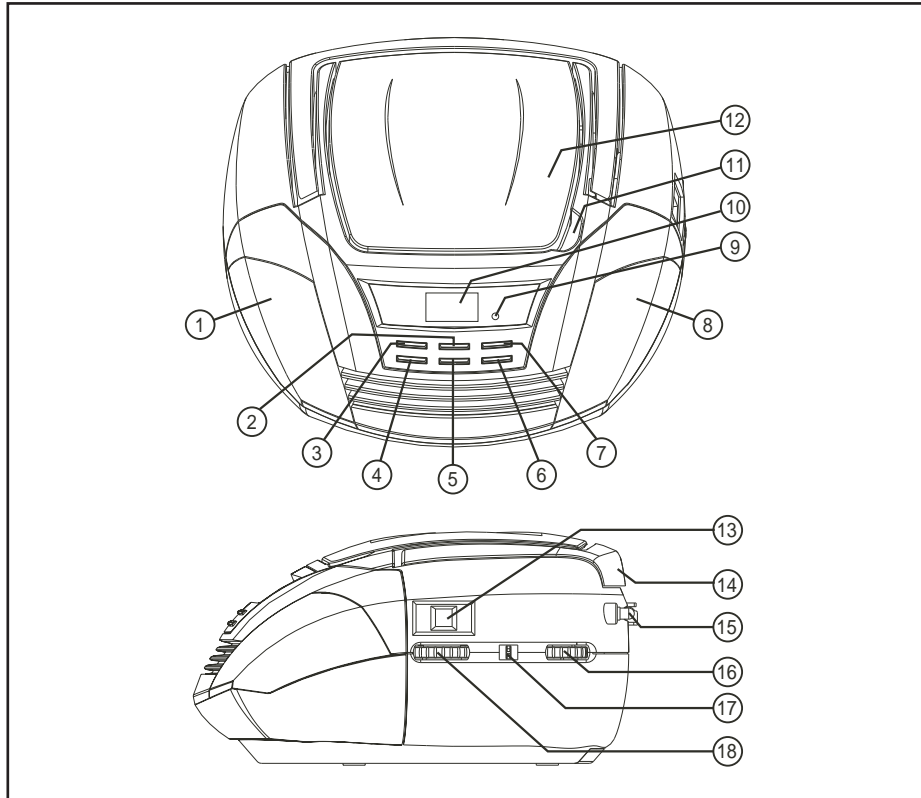


LOCATION OF CONTROLS

- | | |
|-----------------------|---------------------------------------|
| 1. SPEAKER (LEFT) | 10. CD DISPLAY |
| 2. CD PLAY/ PAUSE KEY | 11. CD-DOOR OPENING RECESS |
| 3. CD BACK KEY | 12. CD-DOOR |
| 4. CD PROGRAM KEY | 13. RADIO DIAL SCALE WINDOW |
| 5. CD STOP KEY | 14. HANDLE |
| 6. CD REPEAT KEY | 15. TELESCOPIC ANTENNA (FM) |
| 7. CD NEXT KEY | 16. VOLUME CONTROL KNOB |
| 8. SPEAKER (RIGHT) | 17. FUNCTION SWITCH (OFF/ CD/ AM/ FM) |
| 9. POWER LED LIGHT | 18. RADIO TUNING CONTROL KNOB |

POWER SUPPLY BATTERY OPERATION

- OPEN THE BATTERY DOOR AND INSERT 6 PCS "C-CELL" (UM-2/LR14 TYPE) BATTERIES. PLEASE OBSERVE CORRECT BATTERY POLARITIES OR THE SET WILL NOT WORK.
- IMPORTANT: WHEN THE SET IS ONLY USED WITH "AC", OR IS NOT USED FOR 4 WEEKS OR MORE, PLEASE REMOVE THE BATTERIES, TO AVOID DAMAGE TO THE SET FROM LEAKAGE OF BATTERIES.

 BOTTOM VIEW

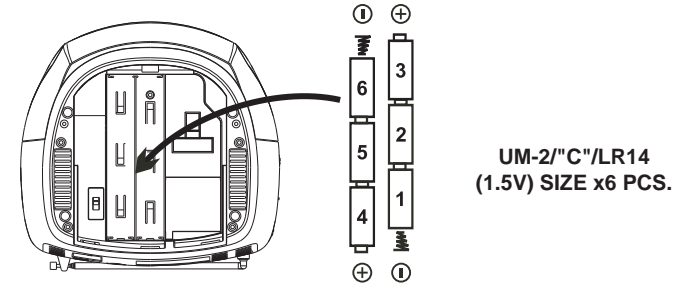

AC OPERATION (BUILT-IN TRANSFORMER)

- MAKE SURE THE SET VOLTAGE OF THE UNIT MATCHES YOUR LOCAL HOUSEHOLD VOLTAGE.
- INSERT THE PLUG OF THE AC-CORD INTO A WALL OUTLET WITH AC-POWER.

IMPORTANT!

PLEASE MAKE SURE TO SET THE FUNCTION SWITCH TO "OFF" POSITION WHEN UNIT IS NOT IN USE TO CONSERVE POWER.

OPERATION OF RADIO

- SET THE FUNCTION SWITCH TO THE DESIRED BAND (AM OR FM).
- ROTATE TUNING KNOB TO TUNE-IN THE DESIRED STATION.
- ADJUST THE TELESCOPIC ANTENNA (FOR "FM") AND POSITION OF THE SET (FOR "AM") TO OBTAIN THE BEST RECEPTION.
- ADJUST THE VOLUME KNOB TO THE DESIRED LEVEL.
- TO TURN OFF THE RADIO, SLIDE THE FUNCTION SWITCH TO "OFF".







HEADPHONE JACK

- THIS UNIT IS EQUIPPED WITH A STEREO HEADPHONE JACK (3.5MM DIAMETER) WHICH ACCEPTS MOST STANDARD HEADPHONES (OR EARPHONES) (NOT INCLUDED).
- WHEN THE PLUG OF A STANDARD HEADPHONES (OR EARPHONES) IS INSERTED INTO THIS JACK, THE BUILT-IN SPEAKERS WILL AUTOMATICALLY BE DISABLED.
- WHEN THE HEADPHONES/ EARPHONES IS DISCONNECTED, THE SPEAKERS WILL BE REACTIVATED.

INSERTION & REMOVAL OF DISCS

- WHEN OPENING THE CD-DOOR, ALWAYS ENSURE THE DISC IS NOT IN MOTION (NOT SPINNING) WHEN YOU OPEN THE CD-DOOR. ALWAYS PRESS "STOP" BUTTON TO STOP THE DISC SPINNING FIRST.
- PLACE A CD INTO THE COMPARTMENT WITH THE LABEL-SIDE (PRINTED SIDE OF DISC) FACING UPWARDS. PRESS DOWN IN THE CENTRE PART OF DISC UNTIL THE DISC "LOCKS" ONTO THE CENTRE SPINDLE.
- WHEN THE CD HAS BEEN PLACED ONTO THE CENTRE SPINDLE, GENTLY LOWER THE CD-DOOR DOWNWARDS UNTIL IT LOCKS SHUT.
- THE CD IS NOW READY TO BE PLAYED.
- TO REMOVE A DISC, FOLLOW THE SAME PROCEDURE AS DESCRIBED ABOVE, EXCEPT TO REMOVE THE CD INSTEAD OF INSERTING IT INTO THE COMPARTMENT, BY PLACING ONE FINGER AT THE MIDDLE OF DISC (CENTRE SPINDLE) & THE OTHER AT THE EDGE OF THE DISC & GENTLY PULLING UPWARDS.
- IMPORTANT : ALWAYS HOLD A CD BY ITS EDGES. AVOID GETTING ANY FINGER PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC. IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.

NORMAL CD OPERATION

- INSERT A CD AS DESCRIBED.
- SLIDE THE FUNCTION SWITCH TO "CD".
- THE CD WILL SPIN MOMENTARILY AND THEN THE DISPLAY WILL SHOW THE TOTAL NUMBER OF TRACKS (SONGS) OF THE DISC.
- PRESS THE PLAY/PAUSE KEY  . THE DISK WILL START SPINNING & THE FIRST SONG (TRACK) WILL START PLAYING. THE DISPLAY WILL INDICATE THE CURRENT TRACK NO. ("01" IF IT IS THE FIRST TRACK).
- AT ANYTIME DURING PLAYBACK, PRESS THE "PLAY/PAUSE" KEY  TO PAUSE OPERATION OF THE UNIT. PRESS THE "PLAY/PAUSE" KEY TO RESUME OPERATION AT THE SAME TRACK & POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE "STOP" KEY TO STOP OPERATION OF THE SET. THIS WILL RESET THE CD-PLAYER TO THE FIRST TRACK (IF YOU PRESS PLAY AFTER STOP, THE FIRST TRACK WILL ALWAYS START PLAYING).
- AT ANYTIME DURING PLAYBACK, "PRESS AND RELEASE" THE BACK/ NEXT KEYS :  OR  TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK, AS DESIRED.
- AT ANYTIME DURING PLAYBACK, "PRESS AND HOLD" THE BACK/ NEXT KEYS :  OR  TO FAST-REVERSE (REVIEW) OR FAST-FORWARD (CUE) THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.

REPEAT PLAYBACK FUNCTION

- AT ANYTIME DURING PLAYBACK, PRESS THE "REPEAT" KEY AS FOLLOWS :




PRESS ONCE, DISPLAY SHOWS :
= TO REPEAT THE CURRENT TRACK



PRESS TWICE, DISPLAY SHOWS :
= TO REPEAT ALL TRACK (FULL CD)



PROGRAMMING THE CD-PLAYER

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UP TO 20 TRACKS, AS DESIRED.
- ALWAYS PRESS THE STOP KEY BEFORE STARTING THE PROGRAMMING.
- PRESS THE PROGRAM KEY, THE DISPLAY WILL SHOW "P" AND THE "01" WILL FLASH, TO INDICATE THAT THE SET IS NOW IN "MEMORY PROGRAMMING MODE", AT THE FIRST MEMORY POSITION.
- PRESS THE BACK/ NEXT KEYS  OR  TO SELECT THE TRACK (SONG) NUMBER YOU WISH TO BE STORED IN THE FIRST MEMORY (PROGRAM) POSITION, AND PRESS THE PROGRAM KEY TO CONFIRM YOUR SELECTION.
- WHEN YOU PRESS THE PROGRAM KEY THE DISPLAY WILL ADVANCE TO THE NEXT MEMORY POSITION (eg. "02").
- REPEAT THE PREVIOUS 2 STEPS, EACH TIME SELECTING ANY TRACK NUMBER OF YOUR CHOICE TO BE STORED IN THE SUCCESSIVE MEMORY (PROGRAM) POSITIONS.
- AFTER EACH TRACK NUMBER, REMEMBER TO PRESS THE PROGRAM KEY.
- AFTER A MAXIMUM OF 20 SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED ABOVE, PRESS THE PROGRAM KEY.
- THE DISPLAY WILL NOW SHOW THE EXACT SONG SEQUENCE IN MEMORY BY DISPLAYING ALL THE SONG NUMBERS RAPIDLY.
- ALSO, THE "P" SYMBOL WILL REMAIN "ON" TO INDICATE THAT YOU HAVE SAVED A PROGRAM-MEMORY (SEQUENCE).
- PRESSING PLAY  WILL NOW PLAY BACK THE "SAVED SEQUENCE" IN THE PROGRAM MEMORY.
- TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS "STOP" TWICE, OR SWITCH "OFF" THE SET.

SPECIFICATION

POWER SUPPLY : AC 230V~50Hz
DC 9V (6 x C-CELL/ UM-2/ LR14 SIZE)
(BATTERIES NOT INCLUDED)
POWER CONSUMPTION : 15W
OUTPUT POWER PER CHANNEL : 1W
FREQUENCY : AM 530 - 1600 kHz
FM 88 - 108 MHz

THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.

THE MARKING AND RATING LABEL IS LOCATED AT REAR ENCLOSURE OF THE APPARATUS.

THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO BE COMPLETELY DISCONNECTED THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS SHALL BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.

UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.

EXCESSIVE SOUND PRESSURE FROM EARPHONES AND HEADPHONES CAN CAUSE HEARING LOSS.

BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.

ELECTROSTATIC DISCHARGE (ESD) PRECAUTION

WHEN ELECTROSTATIC DISCHARGE (ESD) OCCURS AT THE FRONT SURFACE (WHETHER METAL OR PLASTIC) OR NEAR ANY PART OR ANY BUTTON OF THIS UNIT, OR AT THE USB PORT AND/ OR SD-CARD SLOTS (IF THEY EXIST ON THIS PRODUCT), THERE MAY BE A POSSIBILITY THAT THE PRODUCT MAY STOP OPERATION AND/ OR SHUT DOWN IMMEDIATELY. THIS IS A NORMAL CONDITION AND INTENDED TO PROTECT THE UNIT AND INTERNAL COMPONENTS AGAINST DAMAGE.

IN SUCH A CASE, PLEASE RESET THE UNIT (BY DISCONNECTING AND RECONNECTING AC-POWER SOURCE) TO REVERT THE UNIT TO NORMAL OPERATION.

PALSONIC CORPORATION PTY LTD
1 JOYNTON AVENUE
WATERLOO NSW 2017 AUSTRALIA
TEL: (02) 9313 7111
FAX: (02) 9313 7555
www.palsonic.com.au

**PALSONIC CUSTOMER SERVICE
TELEPHONE
AUSTRALIA: 1300 657 888**